

Instruction Manual



8400A / FM
AN / GSM.6A



JOHN FLUKE mfg. co., inc.
SEATTLE, WASHINGTON



WARRANTY

JOHN FLUKE MFG. CO., INC.

P. O. Box 7428
Seattle, Washington 98133

8400A/FM
AN/GSM-64B

WARRANTY

The JOHN FLUKE MFG. CO., INC.* warrants each instrument manufactured by them to be free from defects in material and workmanship. Their obligation under this Warranty is limited to servicing or adjusting an instrument returned to the factory for that purpose, and to making good at the factory any part or parts thereof; except tubes, fuses, choppers and batteries, which shall, within one year after making delivery to the original purchaser, be returned by the original purchaser with transportation charges prepaid, and which upon their examination shall disclose to their satisfaction to have been thus defective. If the fault has been caused by misuse or abnormal conditions of operation, repairs will be billed at a nominal cost. In this case, an estimate will be submitted before work is started, if requested.

If any fault develops, the following steps should be taken:

1. Notify the John Fluke Mfg. Co., Inc.* giving full details of the difficulty, and include the Model number, type number, and serial number. On receipt of this information, service data or shipping instructions will be forwarded to you.
2. On receipt of the shipping instructions, forward the instrument prepaid, and repairs will be made at the factory. If requested, an estimate of the charges will be made before the work begins, provided the instrument is not covered by the Warranty.

SHIPPING

All shipments of John Fluke Mfg. Co., Inc.* instruments should be made via **Railway Express**** prepaid. The instrument should be shipped in the original packing carton; or if it is not available, use any suitable container that is rigid. If a substitute container is used, the instrument should be wrapped in paper and surrounded with at least four inches of excelsior or similar shock-absorbing material.

CLAIM FOR DAMAGE IN SHIPMENT

The instrument should be thoroughly inspected immediately upon receipt. All material in the container should be checked against the enclosed packing list. The manufacturer will not be responsible for shortages against the packing sheet unless notified immediately. If the instrument fails to operate properly, or is damaged in any way, a claim should be filed with the carrier. A full report of the damage should be obtained by the claim agent, and this report should be forwarded to John Fluke Mfg. Co., Inc.* Upon receipt of this report you will be advised of the disposition of the equipment for repair or replacement. Include the model number, type number, and serial number when referring to this instrument for any reason.

The John Fluke Mfg. Co., Inc.* will be happy to answer all application questions which will enhance your use of this instrument. Please address your requests to: JOHN FLUKE MFG. CO., INC., P.O. BOX 7428, SEATTLE, WASHINGTON 98133.*

*For European customers: **FLUKE (Nederland) N.V.**
Ledeboerstraat 27, P.O. Box 5053
Tilburg, The Netherlands

**For European customers Air Freight prepaid.

FACTORY AUTHORIZED SERVICE CENTERS

ARIZONA

PHOENIX

Arizona Standards Laboratory
4428 N. 19th Avenue
Phoenix, AZ 85000
Tel. (602) 264-9351

CALIFORNIA

LOS ANGELES

Fluke Western Technical Center
1109 So. Central Avenue
Glendale, CA 91204
Tel. (213) 245-6716
Twx. 910-497-2086
Contact Mr. Don McCook

SAN FRANCISCO

Instrument Specialists, Inc.
2359 De La Cruz Blvd.
Santa Clara, CA 95050
Tel. (408) 244-1505
Twx. 910-338-0121
Contact Mr. Tom Tierney

COLORADO

DENVER

Ball Bros. Research Corp.
P.O. Box 1062
Standardization Laboratory
Denver, CO 80201
Tel. (303) 441-4786
Twx. 910-940-3241
Contact Mr. Jim Leaney

FLORIDA

ORLANDO

Fluke Southeastern Technical Center
P.O. Box 6578
940 N. Fern Creek Avenue
Orlando, FL 32803
Tel. (305) 843-6740
Twx. 810-850-0185
Contact Mr. Jesse Morse

HAWAII

HONOLULU

Industrial Electronics
P.O. Box 135
646 Queen Street
Honolulu, HI 96800
Tel. (808) 506-6095
Twx. 63238

ILLINOIS

CHICAGO

Fluke Midwestern Technical Center
9501 West Devon Avenue
Rosemont, IL 60018
Tel. (312) 825-1144
Twx. 910-253-1820
Contact Mr. Bruce Hunt

MARYLAND

KENSINGTON

Electronic Marketing Associates
11501 Huff Court
Kensington, MD 20795
Tel. (301) 881-5300
Twx. 710-825-9645
Contact Mr. John Hines

MASSACHUSETTS

ARLINGTON

Instrument Representatives, Inc.
1046 Massachusetts Avenue
Arlington, MA 02174
Tel. (617) 646-1034
Contact Mr. Dick Zemba

NEW JERSEY

SADDLEBROOK

Sirvess, Inc.
50 Markel Street
Saddlebrook, NJ 07662
Tel. (201) 843-6051
Contact Mr. Vic Nafz

NEW MEXICO

ALBUQUERQUE

Missouri Research Labs
630 Haines N.W.
Albuquerque, NM 87107
Tel. (505) 243-6772
Contact Mr. Levi Martinez

NEW YORK

ROCHESTER

Sirvess, Inc.
4515 Culver Road
Rochester, NY 14622
Tel. (716) 266-0460
Twx. 510-253-6145
Contact Mr. Roger Preece

OHIO

CLEVELAND

Honeywell Metrology Service
4501 W. 160th
Cleveland, OH 44135
Tel. (216) 433-4810
Contact Mr. Tony Martinich

DAYTON

Honeywell Metrology Service
598 East Dayton Drive
Fairborn, OH 45324
Tel. (513) 878-2551
Contact Mr. Woody Winkhart

TEXAS

DALLAS

Tucker Electronics Company
1717 S. Jupiter Road
P.O. Box 22512
Garland, TX 75040
Tel. (214) 348-8800

HOUSTON

Linear Standards Laboratory, Inc.
8207 Milliet
Houston, TX 77012
Tel. (713) 923-2796

UTAH

SALT LAKE CITY

Stabro Laboratories, Inc.
25 Kensington Avenue
Salt Lake City, UT 84115
Tel. (801) 467-8011

CANADA

TORONTO

Allen Crawford Associates Ltd.
6427 Northam Drive
Mississauga, Ontario
Tel. (416) 678-1500
Twx. 610-492-2119
Contact Mr. Herb Duval

Table of Contents

TITLE	PAGE
INTRODUCTION AND SPECIFICATIONS	1
Introduction	1
Description	1
Specifications	1
OPERATING INSTRUCTIONS	3
Introduction	3
Repackaging for Shipment	3
Input Power Requirements	3
Installation	3
Options and Accessories	4
Operating Features	4
Operating Notes	7
Initial Operation	7
DVM Operation	9
Options	12
THEORY OF OPERATION	17
Introduction	17
Block Diagram Analysis	17
Introduction	17
Basic Instrument	18
Basic Instrument, VDC Mode	18
Basic Instrument, Ratio Mode	18
Options	18
Circuit Descriptions	18

MAINTENANCE	22
Introduction	22
General Maintenance	22
Performance Test	28
Calibration Procedure	31
Compensating Component Selection	37
Troubleshooting	38
LIST OF REPLACEABLE PARTS	42
Introduction	42

SCHEMATIC DIAGRAMS

Interconnect Diagram	8400A/FM-1100
Wiring Diagram	8400A/FM-1000
A11 Buffer	8400A/FM-1005
A9 A to D Converter	8400A/FM-1003
A2 Range Delay	8400A/FM-1006
A14 Display (Sheets 1 and 2)	8400A/FM-1002
A3 Ratio Input	8400A/FM-1009
A18 Decimal Logic	8400A/FM-1021

List of Illustrations

FIGURE	TITLE	PAGE
1.	AN/GSM-64B Outline Drawing	2
2.	Chassis Slide Installation	4
3.	Controls, Terminals, and Indicators	5
4.	Suggested Guard Connections for Reduction of Common Mode-To-Normal Mode Signal Conversion	8
5.	Operational Test Connections	8
6.	Condensed Measurement Instructions	9
7.	Ratio Overrange Limits	11
8.	Remote Control Unit Trigger Requirements (External Command Entry) . . .	13
9.	Data Output Unit Trigger Requirements	14
10.	Sample Sync Signal Timing	17
11.	Model AN/GSM-64B Block Diagram	19
12.	Assembly Locations	23
13.	Disassembly Steps a Through m	25
14.	Disassembly Steps n Through u	26
15.	Function Switch Assembly	28
16.	Range Switch Assembly	28
17.	Ratio Check Equipment Connection	30
18.	Adjustment and Test Point Locations	32
19.	Equipment Connection for VDC Calibration	33

(Continued on page iv)

LIST OF ILLUSTRATIONS, *continued*

FIGURE	TITLE	PAGE
20.	Assembly Test Point Location	39
21.	Model 8400A Digital Voltmeter	45
21A.	Power Supply PCB Assembly	47
22.	Range Delay PCB Assembly	50
23.	Ratio Input Assembly	54
24.	Logic PCB Assembly	58
25.	A to D Converter PCB Assembly	62
25A.	Active Filter PCB Assembly	64
26.	Buffer Amplifier PCB Assembly	68
27.	Display	72
28.	Decimal Logic Assembly	74
29.	Front Panel Assembly	75
30.	Rear Panel Assembly	77

MODEL AN/GSM-64B SUPPLEMENT

INTRODUCTION AND SPECIFICATIONS

INTRODUCTION

This supplement modifies the Model 8400A instruction manual to cover operation and servicing of the AN/GSM-64B (John Fluke Model 8400A/FM). The information is arranged in the same order as the instruction manual. If no reference is made to a particular paragraph, that information is considered applicable.

DESCRIPTION

The AN/GSM-64B is a special version of the 8400A. It is designed for use as a digital dc voltmeter or a digital dc voltage ratiometer. The mainframe accepts analog or system options that may be installed in the field at any time, in any sequence, for expanding the capabilities of the AN/GSM-64B.

Basic DVM

The information in Section 1, paragraph 1 - 5, is applicable with the following changes:

DC voltages applied to either the front panel or rear panel INPUT terminals are measured on three ranges with up to 100 microvolts of resolution.

DC voltage ratio measurements are measured on three ranges with a readout in % ratio. The speed of the readout is controlled by the Sample Rate control as in dc voltage measurements. The range of the external reference is from ± 1 to $\pm 100V$ dc.

Analog Options

Disregard information contained in paragraphs 1 - 8 through 1 - 11 in the standard 8400A manual and substitute the following.

The AN/GSM-64B can accommodate an AC Voltage option (AC Converter). With this option installed ac voltages up to 1100 volts are measured on four ranges over a frequency domain of 10 Hz to 100 KHz with up to 10 microvolts resolution. A zero control is not needed to maintain the extremely low "percent of range" portions of the specifications.

SPECIFICATIONS

Mainframe

DC VOLTS

Ranges	$\pm 10V, \pm 100V, \pm 1000V$
Polarity	Automatic, instantaneous selection and display
Resolution	$\pm 0.001\%$ of range
Overrange	20%, $\pm 1100V$ maximum input on 1000V range
Overload	$\pm 1100V$ dc or rms ($\pm 1500V$ Peak) may be continuously applied to any range without damage.

Accuracy

$\pm 10V, \pm 100V, \pm 1000V$ Ranges	$\pm 0.01\%$ of reading or ± 1 digit.
---	---

NOTE!

Periodic use of front panel DC ZERO control is necessary, typically once every 8 to 24 hours, for long term accuracy.

Temperature Coefficient
±10V, ±100V, ±1000V ranges ±0.0007% of reading /°C.

Input Impedance
±10V range 10,000 megohms
±100V, ±1000V ranges 10 megohms

Noise Rejection
Normal Mode (filtered) 60 db @ 60 Hz
Common Mode (with up to 1k unbalance in either lead)
DC 140 db
AC 120 db @ 60 Hz

Balancing Time 2 seconds

Auto Range Automatically select

DC RATIO

Ranges

EXT V REF	INPUT VOLTAGE RANGES		
	10V	100V	1000V
1V	100% @ 1V in	1000% @ 10V in	10,000% @ 100V in
10V	100% @ 10V in	1000% @ 100V in	10,000% @ 1000V in
100V	10% @ 10V in	100% @ 100V in	1,000% @ 1000V in

Accuracy 0.005% of reading or ±1 digit.
Temperature Coefficient ±0.0007% of reading /°C.

Input Impedances Greater than 50 kilohms at external dc voltage ratio input.

GENERAL

Temperature Range, Operating +32°F to +122°F.
Non-Operating -65°F to +160°F.

Humidity Range Meets requirements of MIL-STD-810, Procedure 11, Method 507.

Altitude Range Meets requirements of MIL-STD-810, Procedure 1, Method 500.

Vibration Meets requirements of MIL-STD-810, Part 1, Procedure IX, Method 514.

Operating Power 115/230V ac ±10% 50 to 400 cycles, single phase.

Size 5-½" High x 17" Wide x 19" Deep.

Warm-up Time 30 minutes

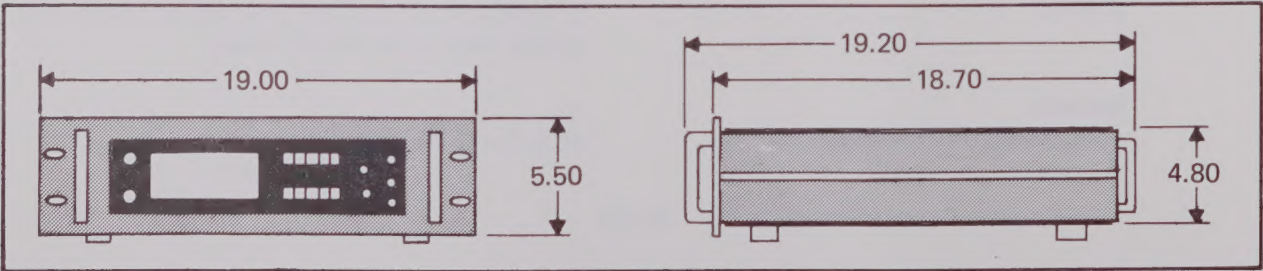


Figure 1. AN/GSM-64B OUTLINE DRAWING

Options

In Section 1 paragraph 1-18 disregard the option specifications for RESISTANCE, ISOLATED DC EXTERNAL REFERENCE, AC EXTERNAL REFERENCE, PARALLEL REAR INPUT as the Model AN/GSM-64B does not accept these options.

Accessories

Disregard the listing of MOS-203-601 Rack Ears as this accessory is not applicable.

OPERATING INSTRUCTIONS

INTRODUCTION

This section of the supplement replaces the entire Section 2 of the 8400A manual. Contained within this section is information pertaining to the operating instructions for the AN/GSM-64B. If any problem is encountered in operating the instrument, contact the nearest John Fluke Sales Representative or write directly to the John Fluke Mfg. Co., Inc. Please include the instrument serial number when writing.

REPACKAGING FOR SHIPMENT

This instrument was packed and shipped in a foam-packed cardboard carton. If reshipment is required, use the original container or request a new container from the John Fluke Mfg. Co., Inc. Please include the instrument model number with your request.

INPUT POWER REQUIREMENTS

The AN/GSM-64B operates on 115 or 230 volts; 50 Hz to 400 Hz ac power. Before applying power to the instrument, note the position of the 115/230 volt slide switch at the rear of the instrument (Figure 2). If the switch does not indicate the desired operating voltage, place it in the correct position.

WARNING!

Ensure that the instrument case is connected to a high quality earth ground, either through the polarized line plug or through a separately connected ground wire.

INSTALLATION

The AN/GSM-64B is supplied with rubber nonskid feet. A rack-slide kit (FLUKE MEE-8088) is available for installation of the instrument in a standard 19-inch rack. Rack mounting is done by referring to Figure 1 and performing the following steps:

- a. Attach the chassis section (A) to the side panels with the screws (B) provided in the kit.
- b. Install the cabinet sections (D) and center sections (C) into equipment rack. The extension angle brackets, which are part of section (D), are mounted at the rear of the cabinet.
- c. Slide the center sections (C) toward the front of the cabinet until they lock in place.

- d. Depress the spring locks on the chassis sections (A) and insert the digital voltmeter between the extended center sections (C) on the cabinet.
- e. Slide the digital voltmeter completely into the equipment rack and secure it in place with fasteners through the front panel.

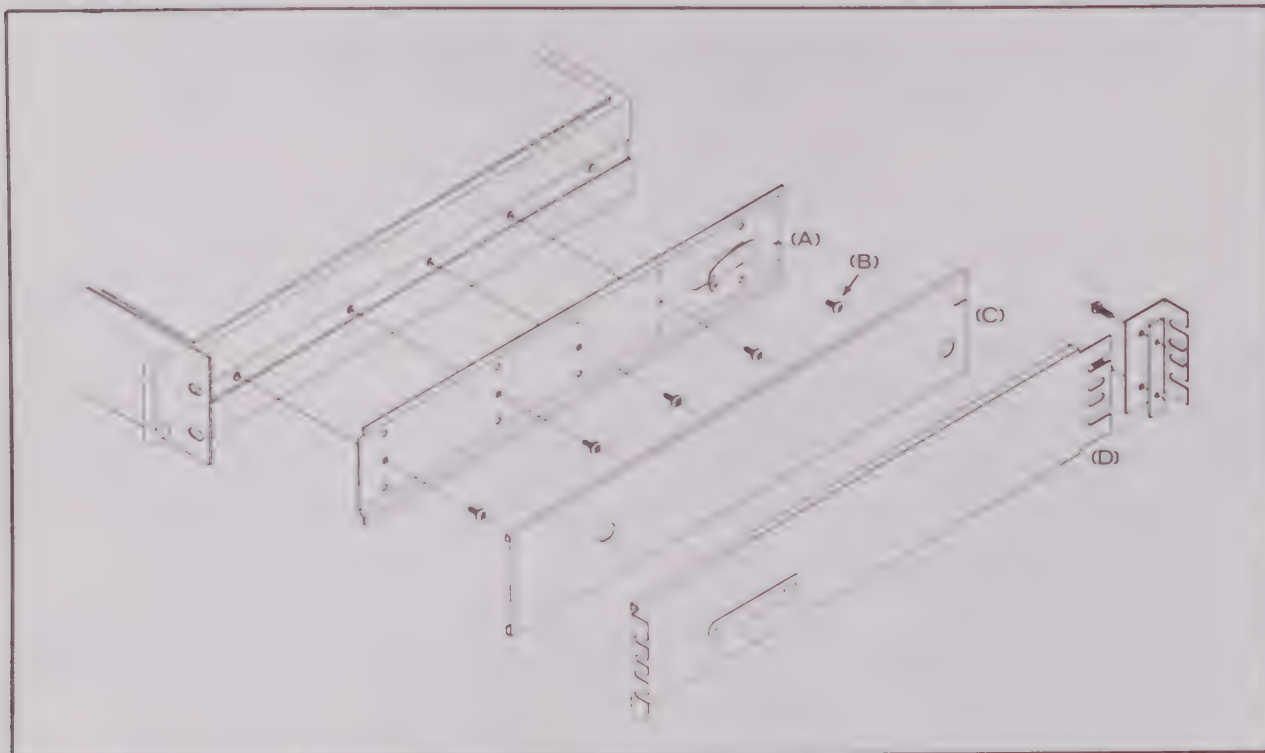


Figure 2. CHASSIS SLIDE INSTALLATION

OPTIONS AND ACCESSORIES

Model AN/GSM-64B options and accessories are listed in Table 1. These options and accessories are not installed in the basic AN/GSM-64B unless a special order is received.

Table 1. OPTIONS AND ACCESSORIES

OPTION NO.	NAME	ACCESSORY NO.	NAME
8400A-01	AC Converter	MEE-8088 (JF-309864)	18 inch Rack Slides
8400A-03	Data Output	A90	Current Shunts
8400A-04	Remote Control	80F-5	High Voltage Probe 5000VDC
		80F-15	High Voltage Probe 15,000VDC
		80RF	High Frequency Probe
		298265	Extender Assembly (Required for servicing pcb's)

OPERATING FEATURES

The name and function of front and rear panel controls, terminals, and indicators are shown in Figure 3.

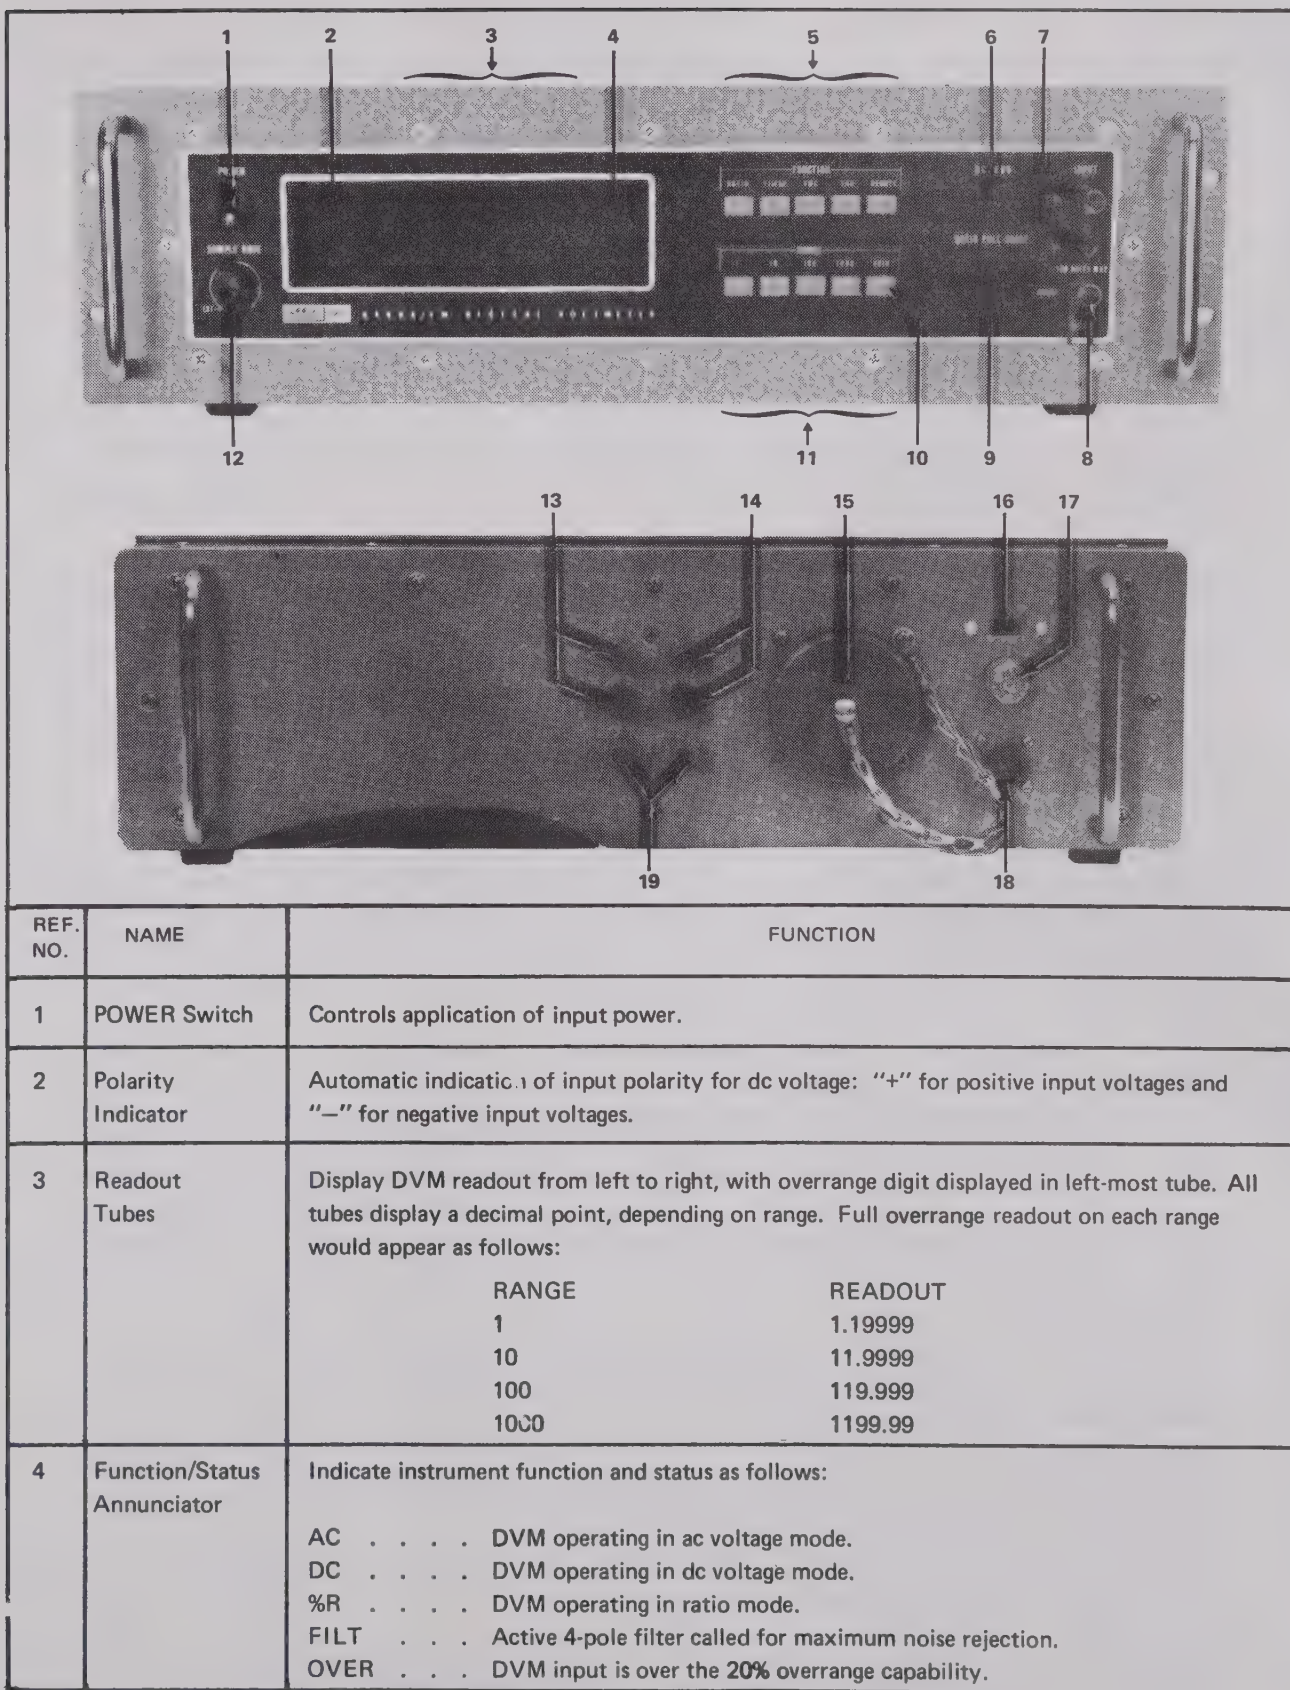


Figure 3. CONTROLS, TERMINALS, AND INDICATORS (Sheet 1 of 3)

REF. NO.	NAME	FUNCTION
5	FUNCTION Switches	Select desired DVM operating mode: RATIO . . . Places DVM in ratio mode with full-scale ranges of 10, 100, and 1000. FILT . . . Controls 4-pole active input filter to provide desired noise rejection. Functional for dc voltage, ac voltage, and resistance measurements. VDC . . . Places DVM in dc voltage mode with full-scale ranges of 10, 100, and 1000. VAC . . . Places DVM in ac voltage mode with full-scale ranges of 1, 10, 100, and 1000. REMOTE . . Places DVM in remote mode, enabling DVM function and range to be controlled remotely via the Remote Control Unit.
6.	DC ZERO Control	Adjusted for .00000 ± 1 with VDC, Filter, and 10 Range called and INPUT terminals shorted.
7	INPUT Terminals	HI, LO input connections for dc and ac voltage measurement.
8	GUARD Terminal	Connects to internal guard chassis. When properly connected externally, provides maximum common mode rejection.
9	RATIO FULL SCALE Control	Adjusted for minimum readout with VDC, FILT, RATIO, and 10 buttons depressed and equal voltage applied to EXT REF and INPUT Terminals.
10	AUTO RANGE Switch	Places DVM in autorange mode, providing automatic ranging for each function and its range complement.
11	Manual RANGE	Enable manual selection of DVM range. Not calling a range or incorrect range selection automatically places DVM in autorange mode.
12	SAMPLE RATE Control	Permits variation of DVM sample rate from 2 readings per second to 1 reading per 4.5 seconds. In EXT position (fully counterclockwise), sample rate control is transferred to remote control point via the Data Output Unit. If the Data Output option is not installed and the control is turned to EXT, the DVM will read out and display from its internal storage circuitry indefinitely, with readout corresponding to value of last measurement sample.
13	Rear INPUT Terminals	Provides connections for rear input to DVM.
14	EXTERNAL REFERENCE Ratio Terminals	Provides connections for $\pm$ external reference voltage input for dc voltage ratio measurements.
15	Data Output Connector	Provides access to data drive signals.
16	115/230 Volt Input Power Switch	Selects either 115 or 230 Volt ac line operation.

Figure 3. CONTROLS, TERMINALS, AND INDICATORS (Sheet 2 of 3)

17	Line FUSE	Protects DVM from overloads. Fuse rating is AGC ½ ampere.
18	AC Line Voltage Connector	Mates with polarized 3-wire power cord for connection to 115/230 Volt, 50 Hz to 400 Hz, single phase, AC Line.
19	Guard Terminals	Connects to each other and to internal guard chassis. When properly connected externally, provides maximum common mode rejection.

Figure 3. CONTROLS, TERMINALS, AND INDICATORS (Sheet 3 of 3)

OPERATING NOTES

Overload Protection

The AN/GSM-64B is protected against overload in each function and on all ranges. In the VDC function, $\pm 1100\text{V}$ dc or rms ($\pm 1500\text{V}$ peak) can be continuously applied on any ranges without damage to the instrument. The optional VAC function is protected up to 1100V rms on any range. $\pm 150\text{V}$ dc can be applied to the EXT REF terminals continuously without damage to the instrument.

Guarded Measurements

The AN/GSM-64B employs a system of shields and guards that function (when properly connected) to minimize common mode-to-normal mode signal conversion and induction noise; thereby providing the user with a versatile systems DVM capable of fully-floating measurements without significant degradation of accuracy. Non-floating measurements will likely be the usual case. Under these conditions, it is normal procedure to connect the front panel guard terminal to the LO input terminal using the shorting link provided. In general, guarded voltage measurements will be necessary under the following conditions:

- When long signal leads are used and signal source impedance is high.
- When floating measurements are made and the common mode voltage is a high potential, high frequency, or both.
- When the DVM is operating in the presence of high-level radiated noise, of which the most common example is stray fields at the power line frequency.

Figure 4 shows two methods for making guarded voltage measurements where reduction of common mode-to-normal signal conversion is desired.

CAUTION!

If guarded measurement is not needed, the DVM guard terminal should be connected to the INPUT LO terminal at the front panel to preclude possible damage to the instrument.

INITIAL OPERATION

Turn On

Initial turn-on of the digital voltmeter is done as follows:

- Set the 115/230 slide switch to the appropriate power line voltage.

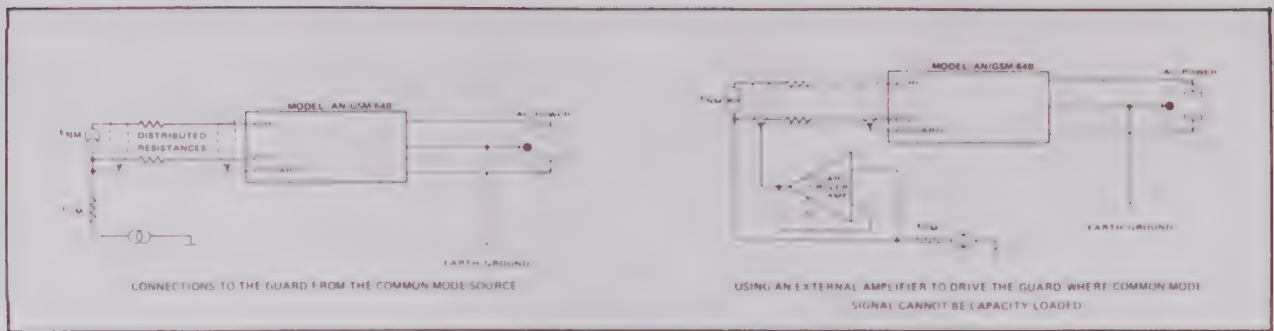


Figure 4. SUGGESTED GUARD CONNECTIONS FOR REDUCTION OF COMMON MODE-TO-NORMAL MODE SIGNAL CONVERSION

- b. Connect power cord to line power. Refer to INPUT POWER REQUIREMENTS paragraphs previously described in this supplement for grounding information.
- c. Depress VDC and 10 buttons on AN/GSM-64B.
- d. Set SAMPLE RATE control fully clockwise.
- e. Set POWER control to the ON position.
- f. Short INPUT terminals.
- g. Readout 00.0000V $\pm$ 0.0003V.
- h. Adjust DC ZERO for readout of zero.

Operation Test

The following test can be used to initially verify operation of the digital voltmeter. Required test equipment is as follows:

1. DC Voltage Calibrator

JF343-A

- a. Perform the steps in Turn-On paragraph.
- b. Set the AN/GSM-64B front panel controls as follows:

FUNCTION
RANGE
SAMPLE RATE

VDC
AUTO
Full cw

- c. Connect equipment as shown in Figure 5.

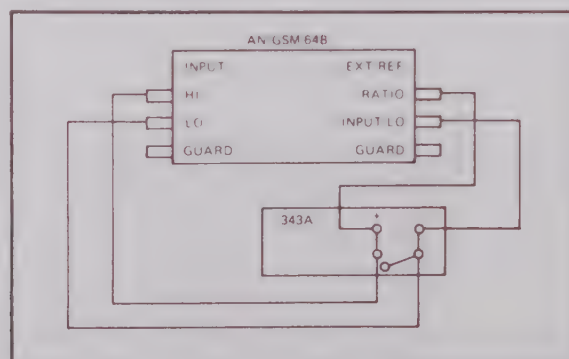


Figure 5. OPERATIONAL TEST CONNECTIONS

- d. Set dc voltage calibrator output to zero volts and observe the AN/GSM-64B readout is 00.0000.
- e. Set calibrator output to +10V dc.
- f. Observe that the readout on AN/GSM-64B is $+10.0000 \pm .002V$.
- g. Depress RATIO button on AN/GSM-64B.
- h. Set the readout on AN/GSM-64B to +100.000% using the RATIO FULL SCALE control.
- i. Reverse the polarity of the voltage on the AN/GSM-64B INPUT and EXT REF terminals and observe that the readout is +100.000% or can be set to +100.000% using the RATIO FULL SCALE control.
- j. Disconnect leads to INPUT terminals of AN/GSM-64B and then short INPUT terminals. The readout should be 000.000%.

If the preceding test conditions were obtained, the digital voltmeter can be considered fully operational. Disconnect test equipment.

DVM OPERATION

The following paragraphs describe the basic measurement and operating procedures associated with each of the DVM functions:

DC Voltage Measurement
DC Voltage Ratio Measurement

The measurement instructions are summarized briefly in Figure 6.

MEASUREMENT	MODEL AN/GSM-64B			REMARKS
	FUNCTION	RANGE	INPUT CONNECTIONS	
$\pm$ DC Voltage	VDC	10v, 100v, 1000v, AUTO	Front or rear panel HI, LO terminals	Autoranges automatically if range is not manually selected.
DC/DC Ratio X10	VDC RATIO	0 $\pm$ 10 0 $\pm$ 100 0 $\pm$ 1000	External reference voltage applied to rear input terminals. Input voltage applied to front panel HI, LO terminals.	External reference input ± 1 to ± 100 Vdc.

Figure 6. CONDENSED MEASUREMENT INSTRUCTIONS.

DC Voltage Measurement

The basic DVM provides dc voltage measurement capability in three full-scale ranges of 10, 100, and 1000 volts, with automatic or manual ranging, autopolarity, a fully buffered three-pole active filter, and fully guarded input. The filter

and automatic or manual range functions are selected at the front panel. The following steps describe the basic dc voltage measurement procedure:

- Place the Model AN/GSM-64B in operation by connecting it to line power and operating the front panel POWER switch.
- Select dc voltage mode by pressing the VDC function switch.
- Select the desired range by pressing the corresponding range switch or, if autoranging is desired, press the AUTO RANGE switch. In autorange, the instrument will automatically accommodate any voltage within the range of the selected function.
- Select increased noise rejection by operating the FILTER switch (see filter specifications in Section 1).
- Connect the GUARD terminal to the LO input terminal or, if desired, disconnect the GUARD terminal from the LO terminal and drive the GUARD by applying a separate GUARD potential.
- Connect the voltage to be measured to the HI, LO INPUT terminals. The readout will correspond to the input voltage with the decimal point positioned according to the range. The polarity indicator will register DC+ if the HI terminal is positive with respect to the LO terminal and DC- if the HI terminal is negative with respect to the LO terminal.
- Adjust the SAMPLE RATE control for the desired sample rate.

DC Voltage Ratio Measurements

The AN/GSM-64B is capable of measuring an external voltage ratio to its internal reference voltage. In this mode of operation the AN/GSM-64B is used for both voltage ratio measurements: f dc to f dc, ac to f dc (with AC Converter option installed). The following steps describe the basic operating procedure for ratio measurements:

- Connect the external reference voltage to the rear panel EXT REF terminals.
- Select the Model AN/GSM-64B range according to the external reference and input voltage values as shown in Table 2. Figure 7 shows the overrange limit of input voltage to external reference voltage.

Table 2. RATIO RANGES

MODE	EXTERNAL REFERENCE (V_{REF})	INPUT VOLTS (V_{INPUT})	RANGE CALLED	READOUT (%)
DC/DC (V_{INPUT}/V_{REF})	$\pm 1V$ to $\pm 10V$	0 to $\pm 1.2 \times V_{REF}$ 0 to $\pm 12 \times V_{REF}$ 0 to $\pm 120 \times V_{REF}$ 0 to $\pm 120 \times V_{REF}$	10 100 1000 AUTO	0 to ± 119.999 0 to ± 1199.99 0 to ± 11999.9 0 to ± 11999.9
	$\pm 10V$ to $\pm 100V$	0 to $\pm .12 \times V_{REF}$ 0 to $\pm 1.2 \times V_{REF}$ 0 to $\pm 12 \times V_{REF}$ 0 to $\pm 12 \times V_{REF}$	10 100 1000 AUTO	0 to ± 11.9999 0 to ± 119.999 0 to ± 1199.99 0 to ± 1199.99

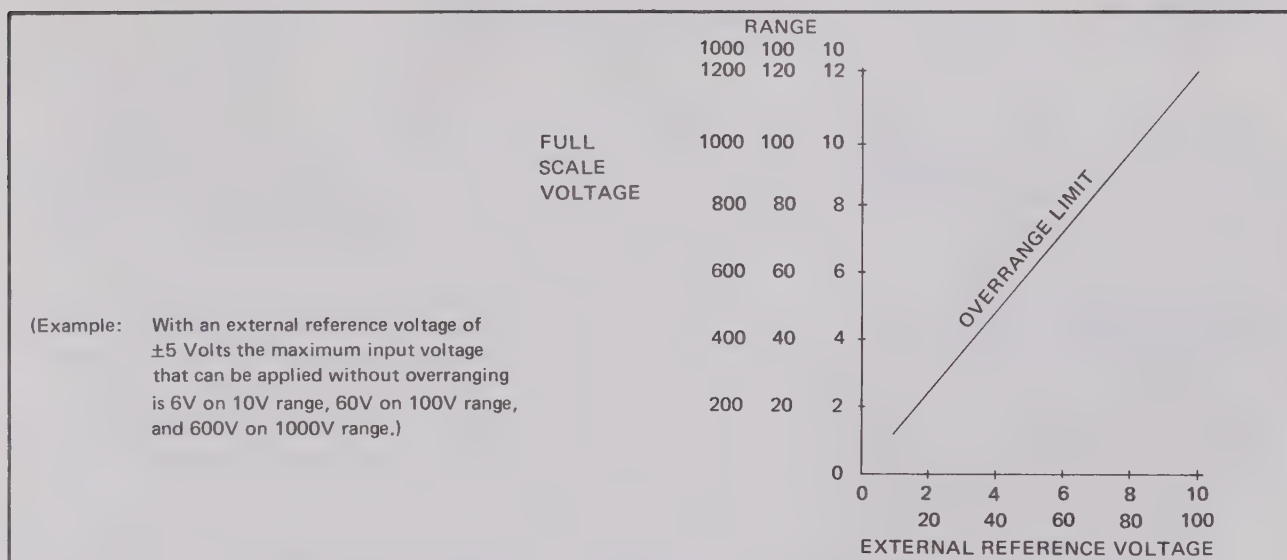


Figure 7. RATIO OVERRANGE LIMITS

Printer Output

The AN/GSM-64B has data drive signals available at J40. These signals must be isolated and guarded before they can be utilized. Interface between the external equipment and the data drive signals available at J40 requires an MS 3106R-36-10P mating connector. This mating connector is not supplied with the instrument.

Table 3 lists the pin location of these drive signals on J40.

Table 3. DATA DRIVE SIGNALS

J40 PIN #	LOGIC OR FUNCTION
A	SIG NO 1
B	CCO
C	POL MEM
D	FILT
E	EXT TRIG
F	FUNCTION REMOTE BUSS
G	cmv
H	C
J	VAC INTERLOCK
K	K Ω
L	bmV
M	F
N	a
O	B
P	+5V
Q	Ω
R	INT REF DISABLE
S	E
T	A
U	M
V	LOGIC COMMON
W	ZERO
X	VAC DN ENABLE
Y	D
Z	GUARD

For external use of these signals an option is available which when installed allows direct connections for printer usage.

OPTIONS

The AN/GSM-64B is capable of receiving three options. These options are as follows:

AC CONVERTER (-01)
 DATA OUTPUT (-03)
 REMOTE CONTROL (-04)

The following paragraphs describe the operation of AN/GSM-64B with these options installed.

AC Voltage Measurement

The DVM provides ac voltage measurement capability in four full-scale ranges of 1, 10, 100 and 1000 volts, when the optional AC Converter is installed. The basic frequency coverage is 10 Hz to 100 kHz. Selection of manual ranging or autoranging is made at the front panel. The following steps describe the basic ac voltage measurement procedure:

- Select the ac voltage mode by pressing the VAC function switch.
- Select the desired range by pressing the corresponding RANGE switch or if autoranging is desired, press the AUTO switch. In autorange, the instrument will automatically accommodate any voltage within the range of the selected function.
- Connect the GUARD terminal to the LO input terminal or, if desired, disconnect the GUARD terminal from the LO terminal and drive the GUARD by applying a separate GUARD potential.
- Connect the voltage to be measured to the HI, LO INPUT terminals. The readout will correspond to the input voltage, with the decimal point positioned according to the range.

AC Voltage Ratio Measurements

The AN/GSM-64B is capable of ac to dc voltage ratio measurements when the optional AC Converter is installed. The following steps describe the basic operating procedure for ac to dc voltage ratio measurements.

- Connect the external reference voltage to the rear panel EXT REF terminals.
- Depress the VAC and RATIO FUNCTION switches.
- Select the proper range on the AN/GSM-64B according to the external reference and input voltages shown in Table 4.

Table 4. AC VOLTAGE RATIO RANGES

MODE	EXTERNAL REFERENCE (V _{REF})	INPUT VOLTS (V _{INPUT})	RANGE (CALLED)	READOUT (%)
AC/DC (V _{INPUT} /V _{REF})	±1V to ±10V	0 to ±12 × V _{REF}	1	0 to ±11.9999
		0 to ±1.2 × V _{REF}	10	0 to ±119.999
		0 to ±12 × V _{REF}	100	0 to ±1199.99
		0 to ±120 × V _{REF}	1000	0 to ±11999.9
		0 to ±120 × V _{REF}	AUTO	0 to ±11999.9
	±10V to ±100V	0 to ±.012 × V _{REF}	1	0 to ±1.19999
		0 to ±.12 × V _{REF}	10	0 to ±11.9999
		0 to ±1.2 × V _{REF}	100	0 to ±119.999
		0 to ±12 × V _{REF}	1000	0 to ±1199.99
		0 to ±12 × V _{REF}	AUTO	0 to ±1199.99
In Auto Range the readout will process thru the different ranges to the proper readout.				

- d. Apply ac volts to the INPUT terminals and readout % ratio on AN/GSM-64B.

Remote Control Unit

The optional Remote Control Unit (RCU) enables the AN/GSM-64B to be programmed or controlled remotely through connector J40. Interface between the external equipment and the data drive signals available at J40 requires an MS 3106R-36-10P mating connector. This mating connector is not supplied with this instrument. RCU inputs are designed to interface directly with DTL/TTL logic. Control by discrete transistors or contact switches is also possible. Operating power for the RCU must be supplied from an external +5 volt source having a current capability of at least 150 milliamperes. Power may be obtained from the Data Output Unit option if the DVM is so equipped. The RCU provides the capability of controlling all DVM functions and ranges, with logic interlocking provided so that incompatible function or simultaneous ranges cannot be called. Acceptable combinations are shown in Table 5.

RCU COMMAND TRIGGERING. The RCU has two operating modes which control entry of external commands into the unit: continuous command mode and triggered command mode. In continuous command mode, the RCU requires no external triggering. The instrument always reflects present state of command inputs in continuous mode. To achieve this mode of operation, hold J40 pin O (Auto Command Entry Defeat) and J40 pin P. In triggered command mode, the RCU will only respond to programming inputs after application of an external trigger. It will memorize input commands within 10 microseconds of trigger application. Following the storage operation, programming inputs may be changed or removed without affecting stored information. To achieve this mode of operation, hold J40 pin O (Auto Command Entry Defeat) low by application of logic "0" or contact closure and apply the external trigger to J40 pin P (External Command Entry). RCU connector location is shown in Figure 2, Item 15. Pin assignments and function are given in Table 6. Trigger requirements (External Command Entry) are given in Figure 8.

Table 5. REMOTE CONTROL UNIT LOGIC INTERLOCKING

FUNCTION CALLED	RANGE CALLED				NONE	FILTER	RATIO
	1	10	100	1000			
VDC	10	10	100	1000	AUTO	YES	YES
RATIO	10	10	100	1000	AUTO	YES	—
VAC (OPTIONAL)	1	10	100	1000	AUTO	YES	YES

NOTE: 1. If function and range are not called, DVM goes to VDC mode and autoranges (providing REMOTE button is pressed).

Table 6. REMOTE CONTROL UNIT PIN ASSIGNMENTS

FUNCTION	P19 PIN NO.	J40 PIN NO.	FUNCTION	P19 PIN NO.	J40 PIN NO.
Common	2	Z	VAC	17	V
			1 Range	25	U
			100 Range	27	s
+5V Input	9	y	External Reference	29	w
1000 Range	11	T	Filter	31	x
			External Command Entry	33	p
10 Range	15	t	Auto Command Defeat	35	o
Spare Pins: 1, 3, 5, 10, 12, 14, 16, 18, 20, 21, 22, 24, 26, 28, 30, 32, 34, 36					

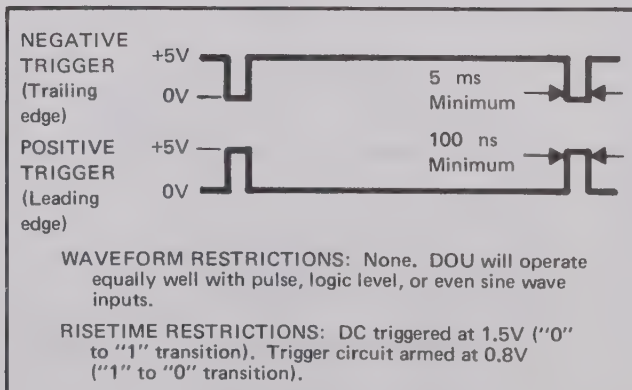


Figure 8. REMOTE CONTROL UNIT TRIGGER REQUIREMENTS (EXTERNAL COMMAND ENTRY)

OPERATION. To place DVM in remote operation, proceed as follows:

- a. Press REMOTE FUNCTION switch to transfer control of DVM function and range to the remote control point.
- b. If remote control of DVM sample rate is desired, turn SAMPLE RATE control to its extreme CCW position (EXT). In EXT position, the internal sample rate oscillator is disabled and the DVM sample command is applied via the Data Output Unit. If the Data Output Unit is not installed and the control is turned to EXT, the DVM will readout and display from analog storage indefinitely. The readout will correspond to the value of the last measurement.
- c. Command a function or range via a contact closure or a zero volt logic level between the appropriate pin and common. For example, to program 100V ac operation, command pins S, V via contact closure or zero volts to J40 pin Z (common).

Installation, theory of operation, and maintenance instructions for the Remote Control Unit are covered in Section 6 of the 8400A manual.

Data Output Unit

DOU access is by means of two card-edge connectors wired to J40 at the rear of the instrument (Figure 2). Interface between the external equipment and the data drive signals available at J40 requires an MS 3106R-36-F0P mating connector. This mating connector is not supplied with this instrument. Data may be acquired in parallel BCD format. The Programmed One-Shot (POS) line enables automatic time delays that allow for full settling of analog input circuitry prior to data transfer. The DOU is self powered and provides +5V (150 milliamperes maximum) output for operation of the Remote Control Unit (Option -04) or other logic circuitry. DOU truth tables and logic levels are given in Table 7. Functional pin connections for the DOU connections to J40 from the DOU are given in Table 8.

CONTROL SIGNALS. DOU control inputs consist of External Trigger, External Trigger Inhibit, and Programmed One-Shot. The External Trigger may be a positive or negative going signal, as shown in Figure 8. The External Trigger Inhibit input must be a logic "0" to inhibit and a logic "1" to enable. The Programmed One-Shot input must be a logic "1" for fast operation (timeouts defeated) and a logic "0" for normal operation (programmed timeouts).

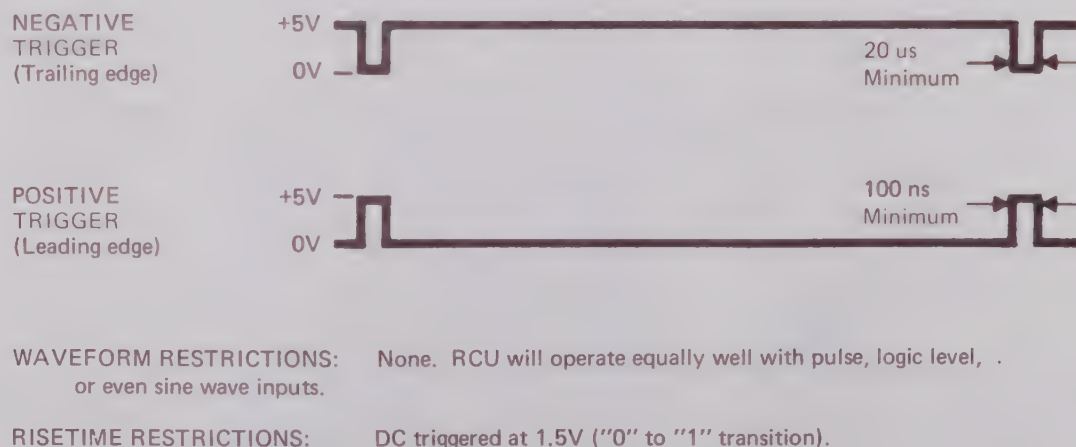


Figure 9. DATA OUTPUT UNIT TRIGGER REQUIREMENTS

Table 7. DATA OUTPUT UNIT TRUTH TABLES AND LOGIC LEVELS

OUTPUTS	LINES	OUTPUT LOGIC LEVELS																						
		0 to +0.5V	+5V																					
Primary Function: VDC, VAC	4	Function inactive	Function operative at last sample																					
Secondary Function: Polarity, Filter, External Reference, Remote	4																							
5 Digits, Binary-coded Decimal 8-4-2-1	21	Logic 0	Logic 1																					
Range (coded) <table><tr><th rowspan="2">RANGE</th><th colspan="3">LINE</th></tr><tr><th>a</th><th>b</th><th>c</th></tr><tr><td>1000</td><td>0</td><td>0</td><td>1</td></tr><tr><td>100</td><td>0</td><td>1</td><td>0</td></tr><tr><td>10</td><td>0</td><td>1</td><td>1</td></tr><tr><td>1</td><td>1</td><td>0</td><td>0</td></tr></table>	RANGE			LINE			a	b	c	1000	0	0	1	100	0	1	0	10	0	1	1	1	1	0
RANGE		LINE																						
	a	b	c																					
1000	0	0	1																					
100	0	1	0																					
10	0	1	1																					
1	1	0	0																					
Sample Sync	1	—	—																					
Flags Busy Overload Trigger	3	Not Busy No Overload Not Triggered Externally	Busy Overload Triggered Externally																					
INPUTS	LINES	INPUT LOGIC LEVELS																						
		0 to +0.5V	+5V																					
External Trigger	1	+5V Pulse or Logic Level																						
External Trigger Inhibit	1	Inhibit	Enable																					
Programmed One-Shot	1	Normal (Programmed timeouts)	Fast (timeouts defeated)																					

Table 8. DATA OUTPUT UNIT FUNCTIONAL PIN CONNECTIONS

DATA	J40 PIN NO.	CARD EDGE CONNECTOR PIN NO.		REMARKS
		DOU NO. 1	DOU NO. 2	
Primary Function Indicators				
VDC	Z		6	
VAC	a		4	
Secondary Function Indicators				
Polarity	b		18	
Filter	c		20	
Ext. Ref.	d		16	
Remote	e		14	
1st Decade				Logic "0" = 0v Logic "1" = +5V
a	E	27		
b	F	29		
c	G	28		
d	H	30		
2nd Decade				
a	J	21		
b	K	23		
c	L	22		
d	M	24		
3rd Decade				Bit weight code
a	N	15		a = 8
b	O	17		b = 4
c	P	16		c = 2
d	Q	18		d = 1
4th Decade				
a	R	9		
b	S	11		
c	T	10		
d	U	12		
5th Decade				
a	V	3		
b	W	6		
c	X	2		
d	Y	4		
Range (coded)				
a	C	33		
b	B	31		
c	A	32		
Overtime "1"	D	34		
Control Inputs				
Ext. Trig.	k		3	
Ext. Trig.	m		1	
Inhibit				
Programmed One-Shot	n		2	
Sample Sync			31	
Flags				
Busy	g		8	
Overload	h		13	
Trigger	i		15	

The Sample Sync signal corresponds in timing to the DVM sample periods occurring in each measurement period, as shown in Figure 10. During the time the DVM is busy processing a request for data, the time of occurrence of the second or final sample period is subject to a number of delays, depending on DVM operating mode, autoranging delays, etc. The purpose of the Sample Sync signal is to inform the DVM input signal acquisition device (scanner) when the final sample is taken by the DVM. This information is useful when the DVM is used in a scanning system, where it is desirable that inputs be changed at the earliest possible time without altering the previous sample.

Programmed One-Shot

The response of the Data Output Unit to a data request consists of a function-dependent series of delays. When enabled, the Programmed One-Shot circuit in the DOU automatically sequences the delay series to provide data within specified accuracy in the minimum possible time. If settling time is not a problem in specific applications, convenience is en-

hanced by provision for defeat of the POS, allowing sample rates as high as 30 per second. Application of +5V logic level or open circuit to J40 pin N defeats the POS (Fast Sample); application of logic zero or contact closure to J40 pin N enables the POS (Normal Sample).

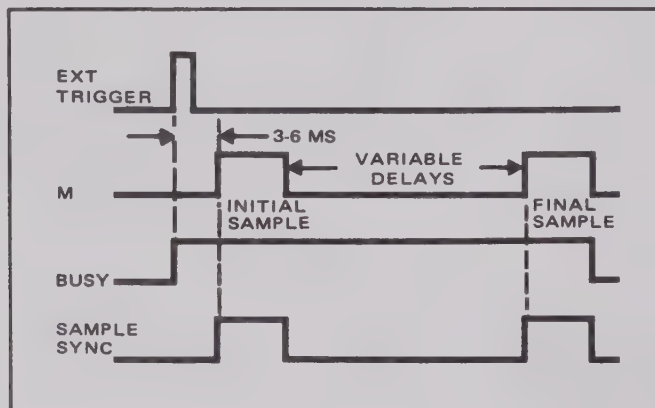


Figure 10. SAMPLE SYNC SIGNAL TIMING

Parallel Data Acquisition

For parallel data acquisition, perform the following steps:

- 8-4-2-1 BCD is supplied in AN/GSM-64 B.
- Acquire full digits data by connection to the decade outputs. Leave inhibit lines associated with each decade open.
- Acquire function, range, overrange and polarity data as desired. Leave associated inhibit lines open.
- If data output is to be applied to a printer, the foregoing data could be grouped for presentation in several printer columns, with each column weighted as desired.
- Acquire busy, overload, and trigger flags for use as desired.

THEORY OF OPERATION

INTRODUCTION

Most of the information contained in Section 3 of the Model 8400A manual pertains to the Model AN/GSM-64B. Notable differences are described in the following paragraphs.

BLOCK DIAGRAM ANALYSIS INTRODUCTION

Disregard the information contained in paragraphs 3-5 and 3-6 of Section 3 of the 8400A manual. Substitute the following paragraphs in their place.

The basic Model AN/GSM-64B has two functions: VDC and RATIO. In the VDC function, the AN/GSM-64B measures dc voltages from 0 to $\pm 1000\text{V}$. In the RATIO function, it performs $\pm\text{dc}$ to $\pm\text{dc}$ voltage ratio measurements from 0 to $\pm 1199.9\%$. Five readout tubes plus an overrange tube display the measured value. Additional features include autoranging, auto polarity, switched filtering, variable sample rate, and options. The options allow ac voltage measurements from 0 to 1000V , ac to $\pm\text{dc}$ voltage ratio measurements from 0 to $\pm 1199.99\%$, remote control, and BCD data output.

The following paragraphs describe the basic circuit functions using the block diagram shown in Figure 11. First, the operation of the basic instrument involving dc measurement is discussed. Next, the operation of the basic instrument involving dc to dc voltage ratio measurement is discussed. Finally, the operation of each option is discussed to describe the total instrument capability.

BASIC INSTRUMENT

Disregard the title in paragraph 3-7. In its place substitute the following:

BASIC INSTRUMENT, VDC MODE

Disregard information in paragraph 3-9 pertaining to Buffer configuration in .1 and 1V ranges. The following information after paragraph 3-15 is to be discussed for the AN/GSM-64B.

The A18 Decimal Logic processes range commands from the range counter and produces the correct decimal placement in the A14 Display.

BASIC INSTRUMENT, RATIO MODE

The A3 Ratio receives an external $\pm\text{dc}$ voltage, from 1 to 100 volts, determines the polarity and range, then applies this voltage to a difference amplifier, the output of which is buffered and presented for use as a reference voltage internally. The circuitry consists of a polarity detector, range detector, difference amplifier, and a buffer. The polarity detector senses the polarity of the applied external reference voltage and applies a fixed polarity voltage to the difference amplifier. The range detector senses the voltage level of the external reference and conditions the difference amplifier accordingly. The difference amplifier processes the input signal and achieves a reference voltage $+0.7$ to $+7\text{V dc}$. This voltage is then buffered and applied in place of the internal reference voltage throughout the instrument when the AN/GSM-64B is in the Ratio mode.

OPTIONS

Disregard information contained in paragraphs 3-19, 3-22, 3-23, 3-24 and Figure 3-2 as they do not pertain to the Model AN/GSM-64B.

CIRCUIT DESCRIPTIONS

A11 Buffer

Disregard information contained in paragraph 3-28 and substitute the following:

The A11 Buffer (Drawing No. 8400A/FM-1005) provides a full-scale dc voltage of 10V dc . It consists of three basic elements: input voltage divider, amplifiers, and control logic. In the 100 and 1000 volts range input attenuation occurs, while in the 10 volts range the input is processed without attenuation or amplification. This mode is shown in block form in Figure 3-3B of the standard 8400A manual. Disregard 3-3A as it does not pertain to the AN/GSM-64B.

Disregard paragraphs 3-30, 3-31, and the first sentence of paragraph 3-33.

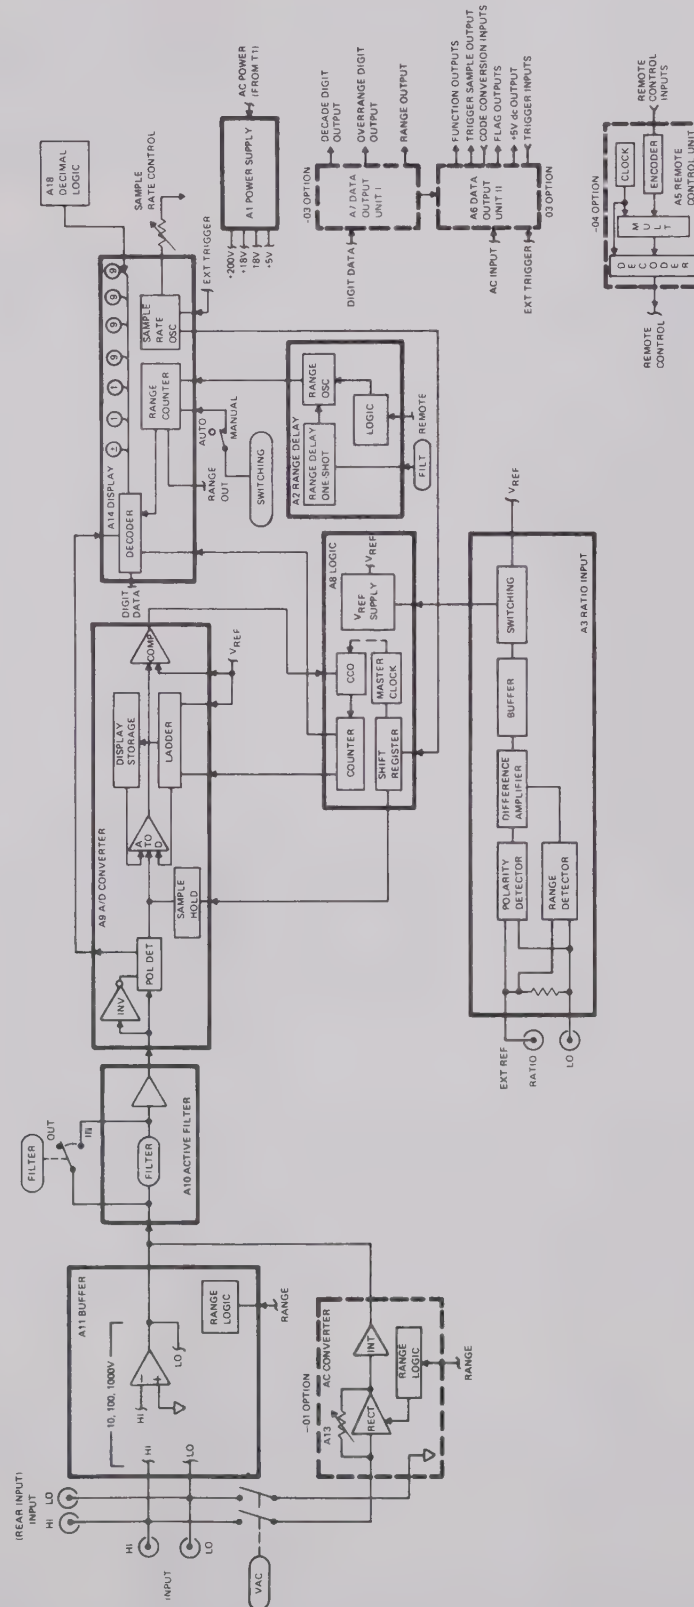


Figure 11. MODEL AN/GSM-64B BLOCK DIAGRAM

A9 A-to-D Converter and A8 Logic

Reference to Drawing No. 8400A-1003 is incorrect for the AN/GSM-64B. The drawing number which replaces it is 8400A/FM-1003.

In paragraph 3-43 reference to +7 volts reference should be changed to +7 volts internal reference voltage or the variable reference voltage output from the Ratio Input assembly and differential stage Q33. Q34 outputs to the CCO.

In paragraph 3-54 reference to required options does not pertain to the AN/GSM-64B as the basic Model AN/GSM-64B contains an external reference assembly.

A14 Display

The drawing number for the A14 Display assembly is 8400A/FM-1002 for the AN/GSM-64B. The reference to 8400A-1002 in paragraph 3-56 does not pertain to the AN/GSM-64B.

In paragraph 3-57 disregard the last sentence as the AN/GSM-64B does not contain those parts on the A14 Display assembly.

A2 Range Delay

Disregard the information in paragraph 3-67 in the 8400A manual as most of that information does not pertain to the AN/GSM-64B. Substitute the following:

The gates are U2A, U2B, U2C, U3A, and U3B. Gates U2C and U3A are up-range stops which pull down on the range-up enable line. Gate U2C stops the internal ranging from going above a 10,000 range while gate U3A prevents autoranging above the 1000 range on the VDC function. Gates U2A and U2B are down range stops which pull down on the range-down enable line. Gate U2A prevents autoranging below the 10 range in the VDC function, while gate U2B prevents autoranging below the 1 range in any function. Gate U3B is the master up-range control. It enables the range oscillator only if an up-range is to be expected.

Miscellaneous Circuitry

In paragraph 3-79 of the 8400A manual, Section 3 reference to Drawing No. 8400A-1000 and 8400A-1100 does not pertain to the AN/GSM-64B. These drawing numbers are substituted as follows:

Interconnect Diagram - Drawing No. 8400A/FM-1000

Wiring Diagram - Drawing No. 8400A/FM-1100

Add the following information:

A3 Ratio Input

The purpose of the ratio assembly is to supply an internal reference voltage from an external reference source. The A3 Ratio Input circuits (Drawing No. 8400A/FM-1009) consists of a polarity detector, a range detector, a difference amplifier, and a buffer amplifier.

The polarity detector applies a fixed polarity signal to the difference amplifier circuitry. The polarity detector consists of operational amplifier U2 transistor, Q2, relay K1 and associated circuitry. The operational amplifier senses the polarity of the external reference signal and controls the base voltage of Q2. Transistor Q2 will activate relay K1 when the base is driven positive. The signal at the external reference terminals is applied to the difference amplifier through the contacts of relay K1.

The range detector senses the external reference voltage and conditions the difference amplifier for operation in one of two ranges: 1V to 10V; 10V to 100V. The range detector consists of operational amplifiers U1, U3, U4, U5, U6, transistor Q1 and relay K2 and associated circuitry. A portion of the external reference signal is applied to the range detector circuitry through high impedance follower for isolation from the range detector circuitry. U3 is wired as a difference amplifier with a unity gain. U4 and U5 (combined) are an absolute value amplifier. The output of the absolute value amplifier is equal to the input in value but is always positive polarity whereas the input may be positive or negative. Operational amplifier U6 controls the base of Q1 which in turn controls the activity of relay K2. Relay K2 energizes when the external reference voltage exceeds 10.5 volts.

The purpose of the difference amplifier circuitry is to convert the external reference signal to a dc voltage between +0.7 to +7V dc. The difference amplifier consists of operational amplifier U7, resistors R1 through R12, and relay contacts K2 A and B. The gain of U7 is .7 which is set through resistors R1, R2, R3 and R4 with an external reference of 1 to 10.5V. Resistors R5 and R6 parallel R4 when relay K2 is energized, thereby changing the gain of U7 to 0.07 when the external reference voltage is between +10.5 and 100V dc. Resistors R7, R8, R9, R10 and R11 and R12 are the reference leg for U7 positive terminal.

The buffer amplifier is an impedance device used to isolate the ratio input circuitry. The buffer amplifier consists of FET Q5, operational amplifier U8, transistor Q6 and associated circuitry. Q5 and Q6 control the input terminals of U8. R21, R23 and R24 are used in conjunction with R22 to correct an offset voltage on the input terminals of U8.

RATIO FULL SCALE potentiometer, transistors Q3 and Q4 provide a full scale adjustment of + and - 50 digits in the readout on the AN/GSM-64B. The conduction of Q3 is subsequently varied by adjustment of the FULL SCALE RATIO control.

A18 Decimal Logic

The purpose of the A18 Decimal Logic assembly is to properly position the decimal in the readout. Transistors Q8 and Q9 and range command signals c and $\bar{c}$ control NOR GATES U1A through U1D such that two low signals appear on the inputs to only one NOR GATE at a given time. The NOR GATE outputs are applied to transistors Q1 through Q7 and Q10. Range command signals $\bar{a}$, b , and $\bar{b}$, plus the output of the NOR Gates, determine which transistor (Q1 through Q7 and Q10) will be turned on, thereby controlling selection of which display tube will display a decimal. Table 9 is a truth table for NOR GATES U1A through U1D. Table 10 shows conditions necessary to turn on Q1 through Q7 and Q10.

Table 9. NOR GATE TRUTH TABLE



A	B	C
0	0	1
1	0	0
0	1	0
1	1	0

0 = LO
1 = HI

Table 10. DECIMAL LOGIC CONDITION TABLE

AN/GSM-64B CONDITION							
FUNCTION	EXT REF VOLTAGE	RANGE CALLED	COLLECTOR		c	$\bar{c}$	ON XSISTR
			Q8	Q9			
VAC *		1	1	0	0	1	Q1
VDC, VAC		10	1	0	1	0	Q2
VDC, VAC		100	1	0	0	1	Q3
VDC, VAC		1000	1	0	1	0	Q4
RATIO	$\pm 1V$ to $\pm 10.5V$	1	0	1	0	1	Q10
RATIO		10	0	1	1	0	Q5
RATIO		100	0	1	0	1	Q6
RATIO		1000	0	1	1	0	Q7
RATIO	$\pm 10.6V$ to $\pm 100V$	1	1	0	0	1	Q1
RATIO		10	1	0	1	0	Q2
RATIO		100	1	0	0	1	Q3
RATIO		1000	1	0	1	0	Q4

NOTES: *AC Converter (-01 Option) installed
CODE: 1 = HI
0 = LO

MAINTENANCE

INTRODUCTION

Most of the information contained in Section 4 of the 8400A manual pertains to the AN/GSM-64B. Notable differences are described in the following paragraphs.

Disregard the information contained in paragraph 4-3. Substitute the following:

A calibration interval of 6 months is recommended to ensure instrument operation within the specifications stated in this supplement under the heading "SPECIFICATIONS".

Disregard reference to and information contained within Table 4-1. The following Table 11 is the required test equipment for the AN/GSM-64B.

EQUIPMENT NOMENCLATURE	RECOMMENDED EQUIPMENT	FUNCTION
DC Voltage Calibrator	Fluke Model 343A	Performance Test Calibration Troubleshooting
Differential Voltmeter (Battery Powered)	Fluke Model 885AB	Performance Test Calibration Troubleshooting
Oscilloscope	Tektronic Model 504	Troubleshooting
Resistor, 1 Megohm, ¼W, 5%		Calibration Troubleshooting
Capacitor, .22µf, Polystyrene		Calibration Troubleshooting

Table 11. REQUIRED TEST EQUIPMENT

GENERAL MAINTENANCE

Access/Disassembly

Reference to Figure 4-1 in paragraph 4-10b is to be disregarded. Figure 12 is assembly locations for the AN/GSM-64B.

Lamp and Tube Replacement

In paragraph 4-17c, disregard information that pertains to serial number and location of an extra lamp as this does not apply to the AN/GSM-64B.

Switch Maintenance

GENERAL

Add paragraph e. as follows:

- e. Remove knobs from the DC ZERO and RATIO FULL SCALE potentiometers.

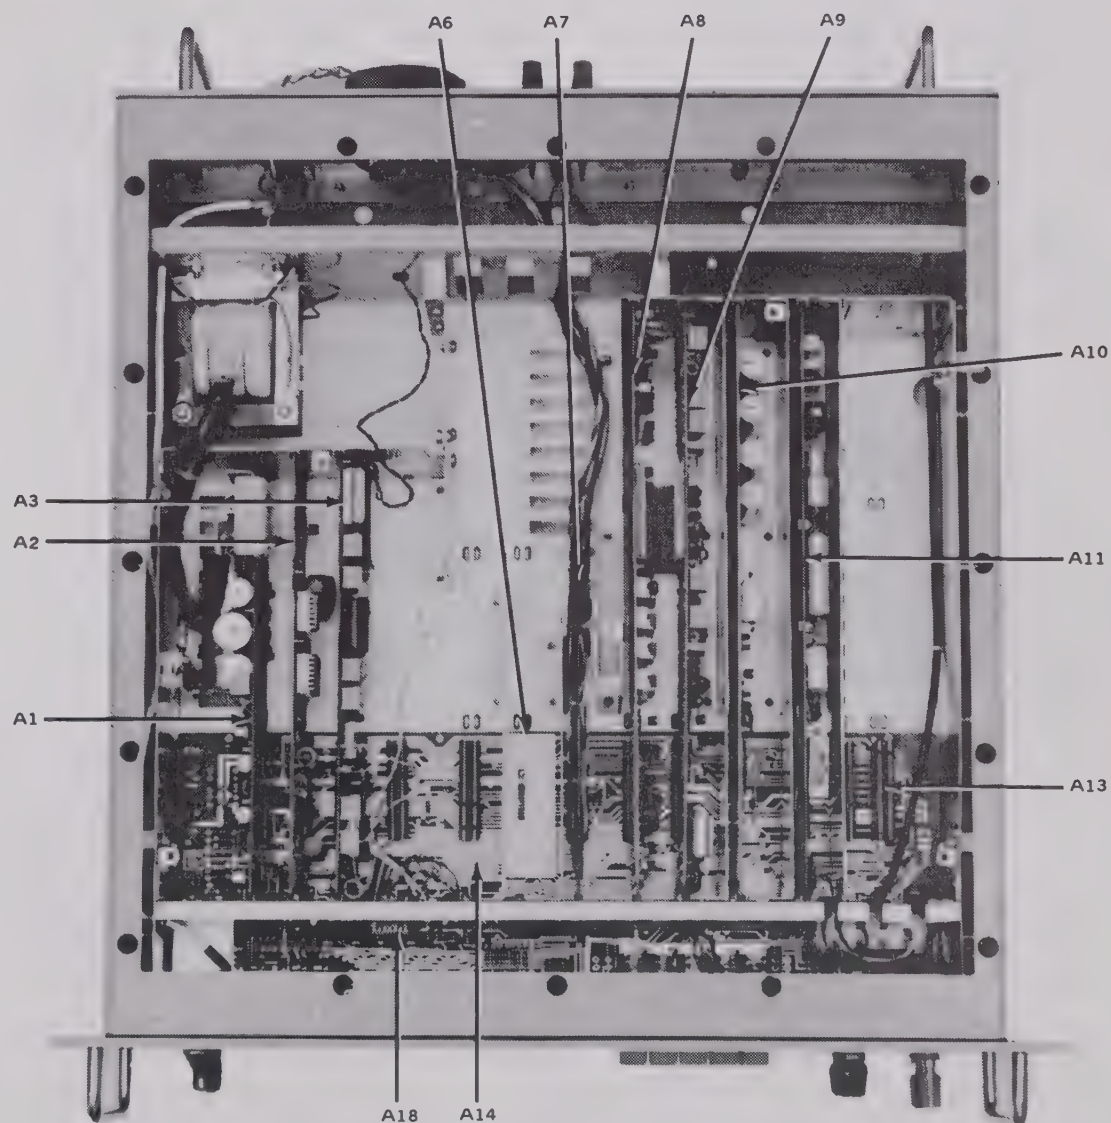


Figure 12. ASSEMBLY LOCATIONS

REMOVAL OF DISPLAY PCB

Disregard information contained in paragraph 4-24 and substitute the following procedure. Refer to Figure 13 for steps a. thru m. Figure 14 is for use with steps o. thru u.

- a. Remove knobs and seal nuts from front panel controls.
- b. Unsolder lead from front panel GUARD terminal to front sub-panel.
- c. Unplug connections from front panel INPUT terminals to TB1 at TB 1.
- d. Remove front panel by removing the 12 mounting screws on front panel. While pulling the front panel away from the mainframe, periodically pull the boot of each pushbutton.

NOTE!

Access is now gained for servicing the POWER ON switch, DEFIMATE LOGIC Assembly (ALS), DC ZERO and RATIO FULL SCALE potentiometers.

- e. Unplug all plug-in circuit boards and remove all but the PRINTER OUTPUT pcb from the instrument.
- f. Cut cable clamps at four locations:
 - 1) Rear inner panel, securing rear INPUT harness.
 - 2) Inner chassis, securing transformer secondary harness.
 - 3&4) Inner chassis, securing POWER ON harness.
- g. Unplug transformer connections to TB2 and pull harness out and away from inner chassis.
- h. Unsolder rear panel INPUT harness from rear panel terminals.
- i. Unsolder guard wire from rear panel GUARD terminal to inner chassis at inner chassis connection point.
- j. Remove 12 hex head screws which secure the inner chassis to the mainframe via mounting blocks.
- k. Pull EXT REF leads from inner chassis.
- l. Slide inner chassis forward while tilting the rear portion of the inner chassis up.

NOTE!

Cable clamp on right side, rear portion securing rear input harness to side, will slide under mounting block and stop any upward direction of the rear portion of the inner chassis. Make sure that the cable clamp stays on the side facing the rear of the instrument.

- m. Pull rear portion of the inner chassis up and towards the rear of the mainframe just before the RANGE buttons and SAMPLE RATE potentiometer shaft bottoming out against the mainframe.

NOTE!

A slight upward pressure on the front portion of the inner chassis will stop the RANGE buttons and SAMPLE RATE shaft from bottoming out against mainframe.

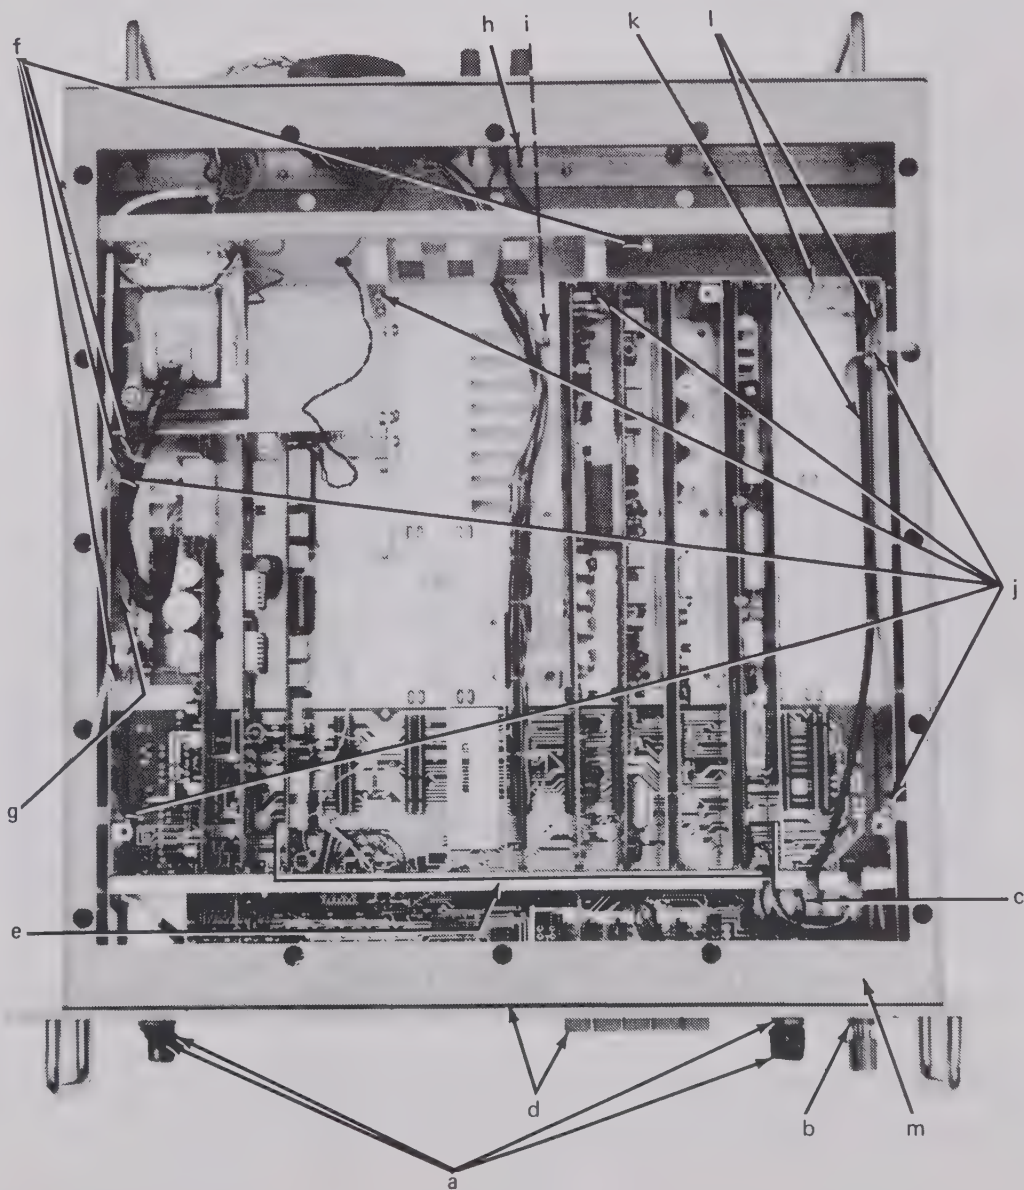


Figure 13. DISASSEMBLY STEPS A THROUGH M

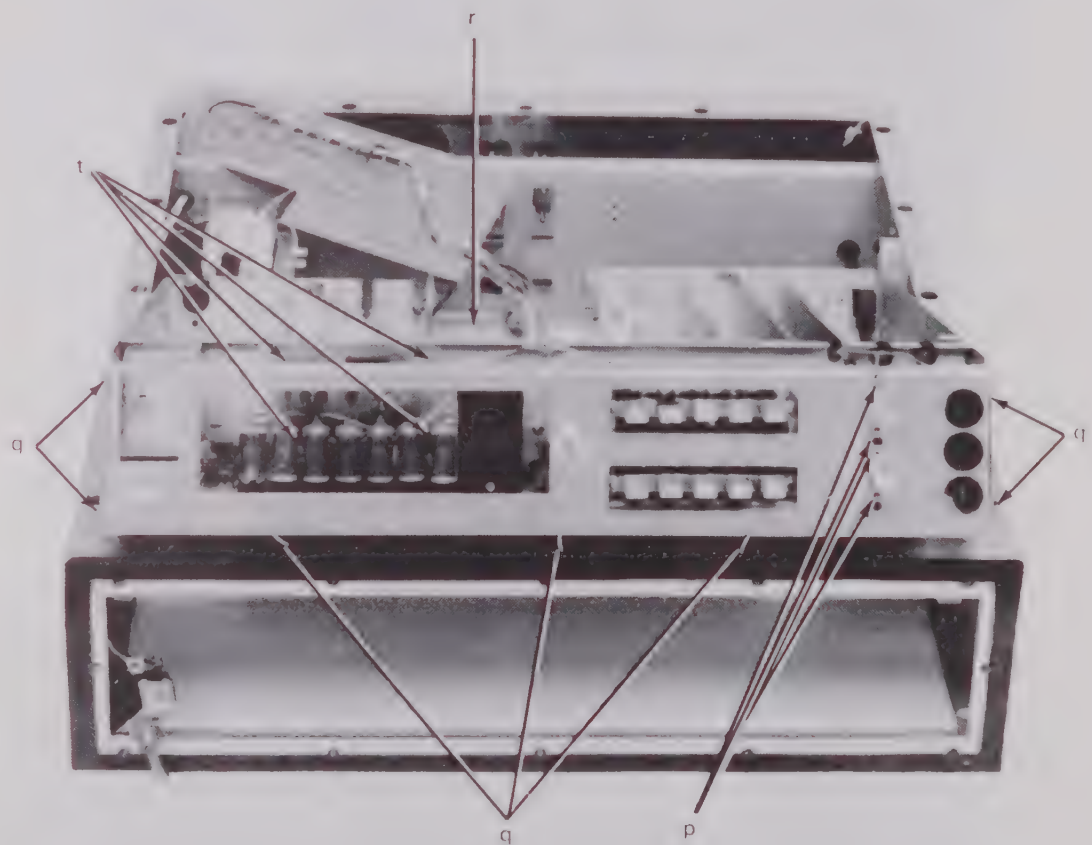


Figure 14. DISASSEMBLY STEPS O THROUGH U

- n. Pull inner chassis out of mainframe. Access is now gained to the front sub-panel.
- o. Set rear portion of inner chassis inside mainframe with the front portion of inner chassis setting on the top of the mainframe.
- p. Straighten DC ZERO and RATIO FULL SCALE potentiometer locking tabs and then remove them from front sub-panel.
- q. Remove seven screws which secure front sub-panel to inner chassis sides and DISPLAY pcb.
- r. Remove four screws which secure the DISPLAY pcb to inner chassis. These screws are located on the rear of the DISPLAY pcb.
- s. Lower the DISPLAY pcb enough so access to mounting screws on DECIMAL LOGIC is available.
- t. Remove four mounting screws on DECIMAL LOGIC pcb.
- u. Pull DISPLAY pcb out of the inner chassis. Access is now gained for servicing the RANGE and FUNCTION switches.

DISASSEMBLY—FUNCTION SWITCHES (EXCEPT EXT REF, FILT)

Reference to EXT REF switch does not pertain to the AN/GSM-64B. This position is the RATIO switch. Disregard information in paragraph 4-25a since the AN/GSM-64B does not contain J14 and P14. The FUNCTION switches are wired to the DISPLAY pcb; therefore the first step is to unsolder these wires.

In step e. the reference to Figure 4-2 is not true for the AN/GSM-64B. Figure 15 is used in place of Figure 4-2.

DISASSEMBLY—RANGE SWITCHES

Information in paragraph 4-26a. is not correct for AN/GSM-64B usage. The following step is a direct substitute.

- a. Unsolder wires from FUNCTION switches to DISPLAY pcb at the DISPLAY pcb.

Disregard paragraph 4-26e. as it does not pertain to the AN/GSM-64B.

In steps f. and h., the reference to Figure 4-4 does not pertain to the AN/GSM-64B. This is also true of Figure 4-4. The reference in these two sub-paragraphs should be to Figure 16.

SWITCH MODULE REPLACEMENT—FUNCTION ASSEMBLY (EXCEPT EXT REF, FILT)

Disregard reference to EXT REF in paragraph 4-27 heading. This function is the RATIO function for the AN/GSM-64B.

Disregard paragraph 4-27b, and caution note and use the following:

Desolder wires from defective switch.

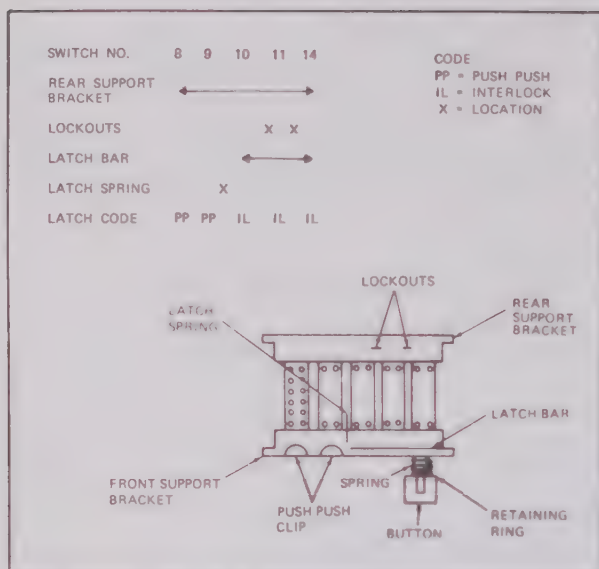


Figure 15. FUNCTION SWITCH ASSEMBLY

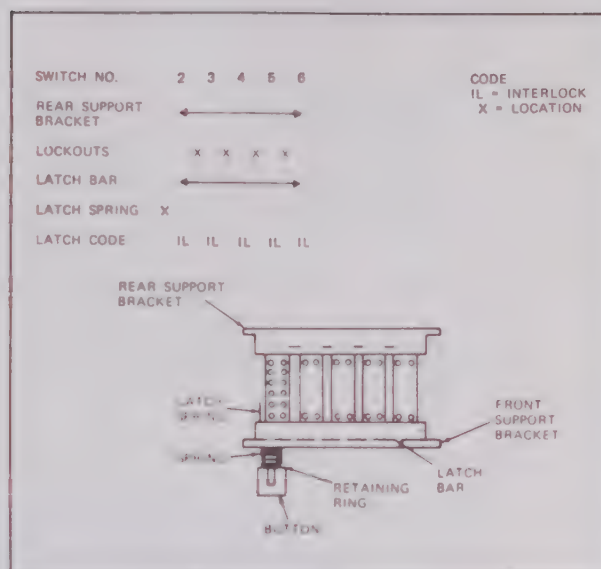


Figure 16. RANGE SWITCH ASSEMBLY

DISASSEMBLY—EXT REF, FILT SWITCH

Disregard reference to EXT REF in paragraph 4-29 heading. The AN GSM-64B function switch in this position is **RATIO**.

PERFORMANCE TEST

Disregard the information contained in paragraph 4-31 and substitute the following:

The performance test in this section compares the basic instrument performance to the accuracy specifications in this supplement, under the heading SPECIFICATIONS, to determine if the instrument is in calibration. Two functions are checked: VDC and RATIO. In the VDC function, known dc voltages are applied to the instrument input terminals on each of three dc voltage ranges and proper operation of the manual range and autorange circuitry is verified. In the RATIO function known dc voltages are applied to the INPUT and EXT REF terminals concurrently, and the proper operation of the manual and autoranging is verified. The performance test should be conducted prior to any instrument maintenance or calibration attempts. This test is also suited to receiving inspection of new instruments. The performance test should be conducted under the following conditions: Ambient Temperature $73^{\circ}\text{F} \pm 9^{\circ}\text{F}$; Relative Humidity less than 70%.

Disregard note to paragraph 4-32 and substitute the following:

NOTE!

Tolerances for dc voltage and ratio measurements are derived from the accuracy specifications contained in this supplement under the heading SPECIFICATIONS.

Disregard information contained in paragraphs 4-33 through 4-35. Replace with the following procedure:

The following procedure checks the performance of the AN/GSM-64B in the VDC function. DC voltages are applied to the instrument at 10% and 100% of full scale on the 10, 100 and 1000 volt ranges.

Preliminary Operation

Connect the Model AN/GSM-64B to the ac line and set the controls as follows:

POWER	ON
FUNCTION	VDC, FILT
RANGE	10
SAMPLE RATE	Full cw
DC ZERO	Midrange
RATIO FULL SCALE	Midrange

Readout Checks

- Connect a shorting jumper between the INPUT terminals.
- Adjust the front panel DC ZERO control for a readout on the AN/GSM-64B of $00.0000 \pm .0001$.
- Connect calibrator to the INPUT terminals of the AN/GSM-64B, observing polarity.
- Apply each of the input voltages shown in Table 12 to the INPUT terminals. The AN/GSM-64B readout must be as indicated.

INPUT (Volts DC)	MODEL AN/GSM-64B		
	RANGE	READOUT LIMITS	READOUT TOLERANCES
± 1.0000	10	+00.9999 to 01.0001	$\pm .0001$
10.0000	10	+09.9990 to 10.0010	$\pm .0010$
10.0000	100	+009.999 to 010.001	$\pm .0010$
100.000	100	+099.990 to 100.010	$\pm .010$
100.000	1000	+0099.99 to 0100.01	$\pm .010$
1000.00	1000	+999.90 to 1000.10	$\pm .10$

Table 12. READOUT CHECKS

- Repeat step d. with negative input voltages. The DVM readout must be the same as for positive inputs, except that the polarity indication will be negative (–).
- Apply zero volts to the INPUT terminals of the DVM and depress the AUTO RANGE switch. The readout must be $00.0000 \pm .0001$.
- Apply +10000.00 volts dc to the INPUT terminals. The DVM must range automatically and the readout must be $+10000.00 \pm .10$.

The following procedure checks the performance of the AN/GSM-64B in the RATIO function. DC voltages are applied to the INPUT and EXT REF terminals on 10, 100, and 1000 volt dc ranges with varying inputs.

Preliminary Operation

- Connect equipment as shown in Figure 17.

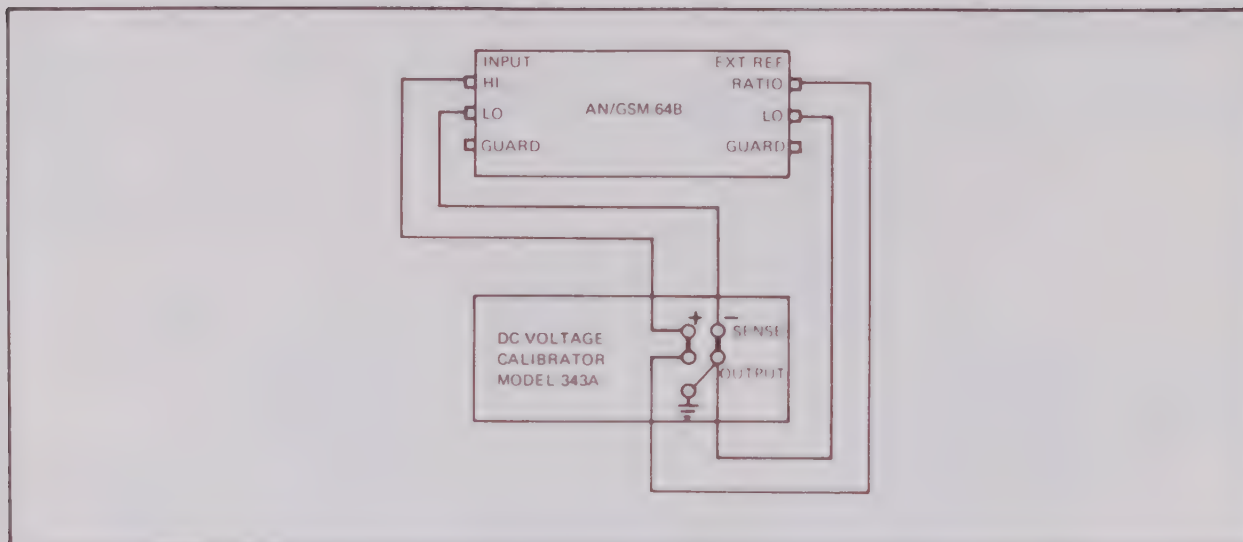


Figure 17. RATIO CHECK EQUIPMENT CONNECTION

- b. Set the AN/GSM-64B controls as follows:

FUNCTION	VDC, FILT, RATIO
RANGE	10
SAMPLE RATE	Full CW
RATIO FULL SCALE	Mid position

- c. Set calibrator output to 5.0000V.
- d. Readout +100.000% R $\pm$.050.
- e. Adjust RATIO FULL SCALE control for a readout of +100.000 $\pm$.001.
- f. Remove connections to AN GSM-64B INPUT terminals. Connect a shorting jumper between INPUT terminals.
- g. Readout 00.0000 % R. The last digit may flash for a readout of 00.0000/1.
- h. Reverse the polarity of the connections from the calibrator to the AN/GSM-64B.
- i. Readout +100.000 % R $\pm$.001. Adjust RATIO FULL SCALE control if required.

NOTE!

Ratio of two negative signals is positive.

- j. Connect equipment as shown in Figure 17.
- k. Set calibrator output to 50.000V.
- l. Readout +11.9999 % R.
- m. Depress 100 button and readout 100.00 % R $\pm$.001. Adjust RATIO FULL SCALE control if required.

CALIBRATION PROCEDURE

Introduction

The following procedure replaces entirely paragraphs 4-36 through 4-49. The basic Model AN/GSM-64B should be calibrated every 6 months in order to maintain rated accuracy or whenever repairs have been made. Calibration should be done under the following conditions: Ambient Temperature of $72^{\circ}\text{F} \pm 9^{\circ}\text{F}$; Relative Humidity less than 70%. Refer to Table 11 in this supplement under Maintenance INTRODUCTION for recommended test equipment. Adjustment and test point locations are labeled on the top inner guard cover. Figure 18 in this section of the supplement shows adjustment and test point locations with the top inner guard cover installed. Option calibration appears in Section 6 of the Standard 8400A manual.

Preliminary Operations

- a. Loosen the outer dust cover screws, but leave the top cover in place.
- b. Set the 115/230 volt switch on the rear panel to 115 and then connect line cord to the output of an autotransformer set to 115V ac.
- c. Turn on the Model AN/GSM-64B and allow it to warm-up for one-half hour.

Buffer Zero Adjustment

- a. Set the Model AN/GSM-64B controls as follows:

FUNCTION	VDC, FILT
RANGE	10
- b. Connect a shorting jumper between the INPUT terminals.
- c. Remove top guard cover.
- d. Connect the differential voltmeter between A10TP4 (LO) and A10TP3 (HI).
- e. Adjust front panel ZERO control for a reading of $\text{ZERO} \pm 10$ microvolts on the differential voltmeter.

Bias Current Adjustment

- a. Remove short between INPUT terminals and replace with 1 megohm 5% resistor in parallel with a .22 uf capacitor.
- b. Adjust BIAS (A11R17) on A11 for a zero ± 10 microvolt on the differential voltmeter.
- c. Repeat steps b, c, and d in Buffer Zero Adjustment, until both adjustments meet specifications.
- d. Install top guard cover.

Reference Voltage Adjustment

- a. Connect the differential voltmeter to LO SENSE (A9TP7) and HI SENSE (A9TP5).
- b. Connect shorting jumper between INPUT terminals.

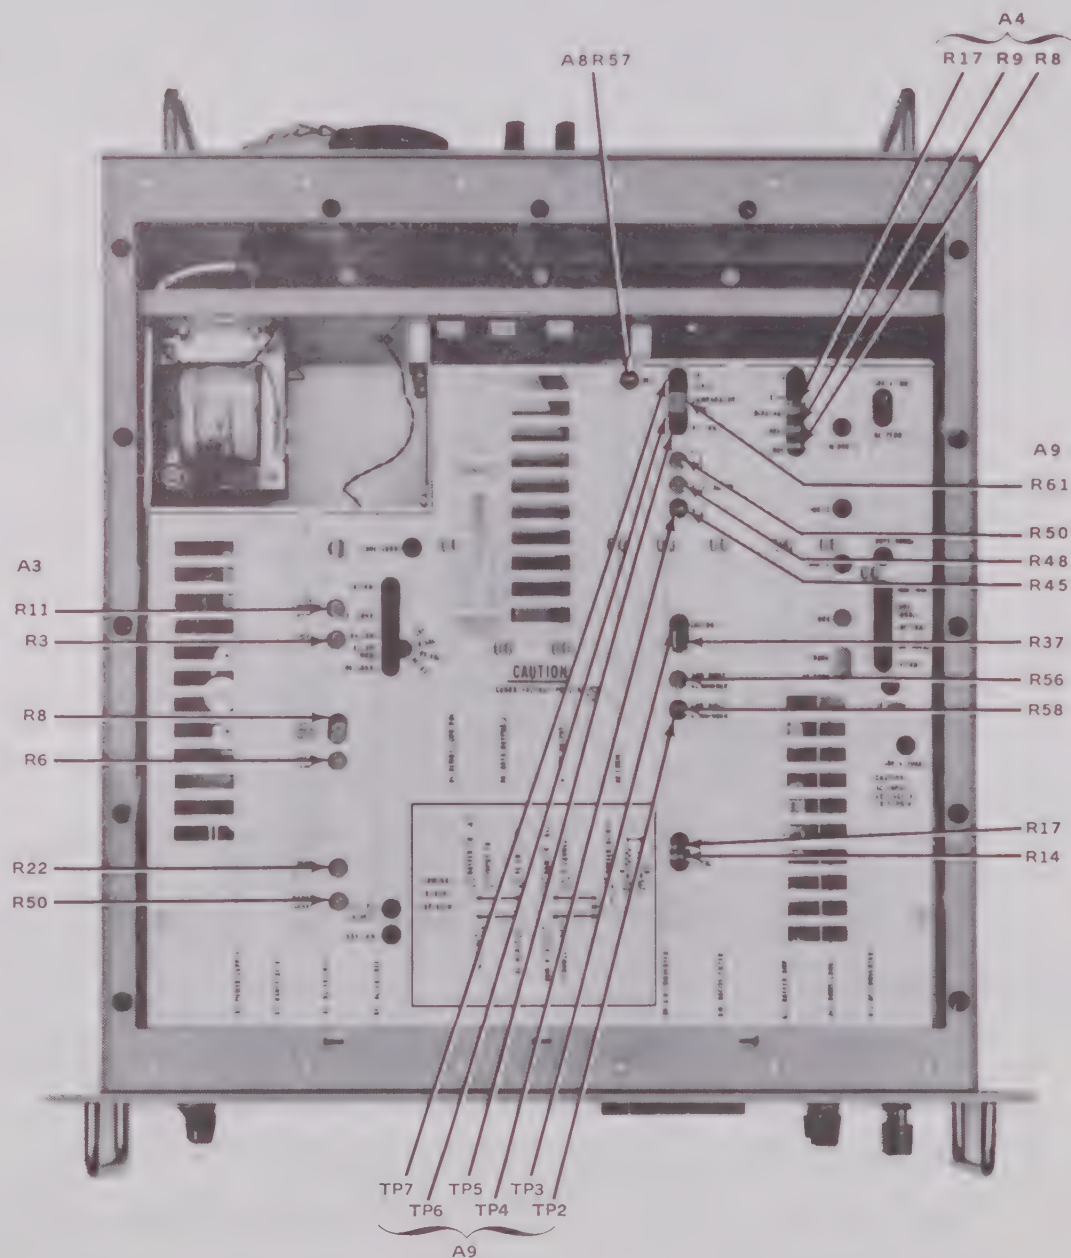


Figure 18. ADJUSTMENT AND TEST POINT LOCATIONS

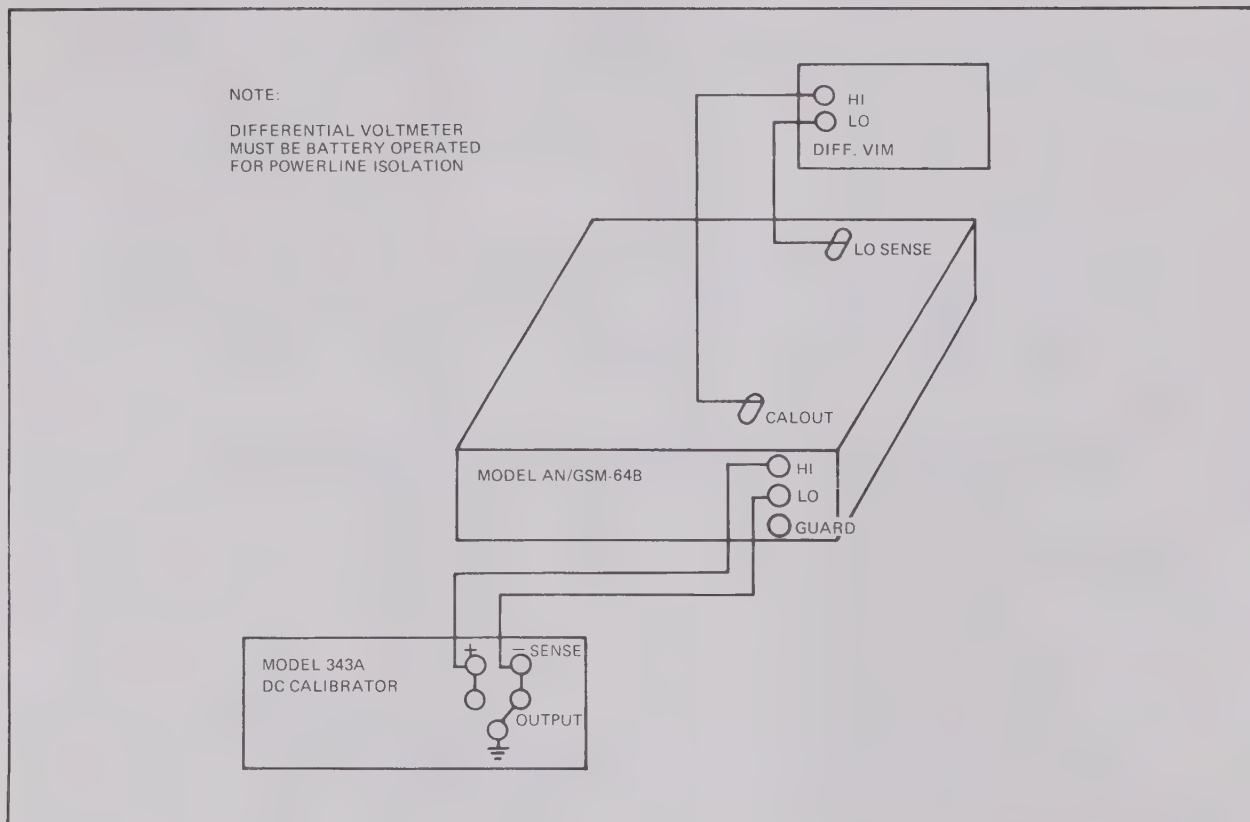


Figure 19. EQUIPMENT CONNECTION FOR VDC CALIBRATION

- c. Adjust Ref(A8R57) for a reading of $7.00000 \pm 25\mu\text{V}$ on the differential voltmeter. Remove short from the INPUT terminals.

A-D Zero Adjustment

- a. Connect test equipment as shown in Figure 19.
- b. Set the differential voltmeter as follows:

RANGE	1V
NULL SENSE	.1
READOUT	.550000

- c. Set the Model AN/GSM-64B as follows:

FUNCTION	VDC, FILT
SAMPLE RATE	Full CW
RANGE	10

- d. Connect the HI of the voltmeter to CALOUT (A9TP3).
- e. Set the calibrator to +0.00052 volts output on 10 volt range.
- f. Adjust A-D ZERO (A9R37) for a readout of +0.0005V on the Model AN/GSM-64B nixie display. Refine the adjustment for a null (zero) reading on the differential voltmeter. Reverse the input

to the AN/GSM-64B and observe $-0.0005V$ on the display and that the reading on the differential voltmeter changes less than ± 4 major divisions.

+ Cal Adjustment

- Connect equipment as shown in Figure 19.
- Set differential voltmeter as in step 6 of A-D Zero Adjustment.
- Adjust COMPARATOR LEVEL (A9R61) to full cw.
- Set calibrator output to $+8.00052$ volts.
- Adjust + CAL (A9R17) for a readout of $+8.0005$ on the Model AN/GSM-64B display.
- Refine the adjustment for a null (zero) on the differential voltmeter.

Ladder Cal

- Connect equipment as shown in Figure 19.
- Apply the input voltages given in Table 13 and perform the associated adjustments that produce the required readout on the Model AN/GSM-64B and the differential voltmeter.

LADDER NO.	CALIBRATOR OUTPUT	AN/GSM-64B		DIFF. V/M READOUT
		Adjustment	Readout	
4	$+4.00052V$	LADDER 4 (A9R45)	$+4.0005$	NULL
2	$+2.00052V$	LADDER 2 (A9R48)	$+2.0005$	NULL
1	$+1.00052V$	LADDER 1 (A9R50)	$+1.0005$	NULL

Table 13. LADDER CALIBRATION

Negative Cal Adjustment

- Set the calibrator output to $+8.00052$ volts.
- Reverse input to the AN/GSM-64B.
- Adjust $-$ CAL (A9R14) for a display readout of -8.0005 .
- Refine the adjustment for a null (zero) on the differential voltmeter.

Remainder Adjustment

- Set COMPARATOR LEVEL (A9R61) full ccw.

- b. Connect equipment as shown in Figure 19.
- c. Apply the input voltages given in Table 14 and perform the associated adjustments that produce the required readout on the Model AN/GSM-64B and differential voltmeter.

DIGIT NO.	CALIBRATOR OUTPUT	MODEL AN/GSM-64B		DIFF. V/M READOUT
		Adjustment	Readout	
2	+0.90052V	2nd Digit Remainder (A9R58)	+0.9005	NULL
3	+0.99052V	3rd Digit Remainder (A9R56)	+0.9905	NULL
4	+0.99952V		+0.9995	±2 Major Divisions

Table 14. COMPARATOR LEVEL ADJUSTMENT

Comparator Level Adjustment

- a. Connect equipment as in Figure 19, but do not connect the differential voltmeter.
- b. Set the calibrator output to +0.99995 volts.
- c. Adjust COMPARATOR LEVEL (A9R61) so display readout alternates between +0.9999 and +1.0000.
- d. Alternate a dc input to the AN/GSM-64B between +1.9999 volts and +2.0000 volts and verify that the display readout corresponds.

Buffer DC Calibration

- a. Apply the dc input voltages given in Table 15 and adjust the associated control for a corresponding readout.

DC INPUT VOLTAGE	RANGE	MODEL AN/GSM-64B	
		ADJUSTMENT	READOUT
+100.000	100	100V (A11R8)	+100.000
+10000.00	1000	1000V (A11R9)	+1000.00

Table 15. BUFFER CALIBRATION

Ratio Calibration

PRELIMINARY CALIBRATION

- a. Depress VDC, FILT, and 10 buttons on AN/GSM-64B.

- b. Connect a shorting jumper between INPUT terminals and readout 00.0000 on display. Adjust front panel DC ZERO control if required.
- c. Set the AN/GSM-64B controls as follows:

FUNCTION	VDC, RATIO
RANGE	10
SAMPLE RATE	Full CW
RATIO FULL SCALE	Midposition
RANGE LEVEL(A3R50)	Full CCW

ZERO OFFSET ADJUSTMENT

- a. Connect a shorting jumper between INPUT HI and LO terminals and EXT REF RATIO and LO terminals.
- b. Connect differential voltmeter LO to LO SENSE (A9TP7) and HI to HI SENSE (A9TP5).
- c. Adjust ZERO OFFSET (A3R22) for a reading of $-500\mu\text{V}$ on the differential voltmeter.

–RATIO CALIBRATION

- a. Apply -10.0000V dc to the EXT REF terminals of the AN/GSM-64B.
- b. Leave INPUT terminals shorted.
- c. Null out differential voltmeter.
- d. Adjust RATIO FULL SCALE control full CW and note reading on differential voltmeter.
- e. Set RATIO FULL SCALE control full CCW and note reading on differential voltmeter.
- f. Set RATIO FULL SCALE control for a differential voltmeter reading halfway between stops d and e readings.
- g. Adjust 10V CAL (A3R3) for a reading of $+7.0000\text{V} \pm 25\mu\text{V}$ on the differential voltmeter.

RATIO COMMON MODE

- a. Remove short across INPUT terminals.
- b. Apply -10.0000V dc to the INPUT and EXT REF terminals of the AN/GSM-64B.
- c. Adjust 10V COMMON MODE (A3R11) for a reading on the differential voltmeter of $+7.0000$ and a readout on the AN/GSM-64B display of $100.00\% R \pm 2$ digits.
- d. Reduce both inputs to -1.0000V dc at the EXT REF and INPUT terminals.
- e. Readjust ZERO OFFSET (A3R3) for a readout on the display of 100.000% .
- f. Increase inputs to -10.0000V dc at EXT REF and INPUT terminals. The readout should be $100.000\% \pm 0.005$.

- g. If the correct readout is not observed, repeat steps c, d, and e until a setting for the ZERO OFFSET is found that will give readouts of 100.000% with -1.0000V dc at the EXT REF and INPUT terminals and $100.000\% \pm 5$ digits when the inputs are -10.0000V dc.

100V RATIO CALIBRATION

- a. Apply -100.000V dc into the EXT REF terminals.
- b. Connect a shorting jumper between the INPUT terminals.
- c. Connect differential voltmeter LO to A9TP7 and HI to A9TP5.
- d. Adjust 100V CAL (A3R6) for a reading on the differential voltmeter of $+7.0000\text{V} \pm 25\mu\text{V}$.

100V RATIO COMMON MODE

- a. Depress 100 button on the AN/GSM-64B.
- b. Apply -100V dc to the EXT REF and INPUT terminals.
- c. Adjust 100V COMMON MODE (A3R8) control for a reading of $+7.0000\text{V} \pm 25\mu\text{V}$ on the differential voltmeter. Readout should give $100.00\% \pm 5$ digits.

RANGE LEVEL SETTING

- a. Apply -10.600V dc to the EXT REF and INPUT terminals of the AN/GSM-64B.
- b. Depress 100 button.
- c. Turn RANGE LEVEL (A3R50) fully CCW.
- d. Adjust RATIO FULL SCALE control for a readout on the display of 100.000%.
- e. Slowly turn RANGE LEVEL (A3R50) clockwise until the readout changes to $100.00\% \pm 50$ digits. Check setting by removing both inputs and reapplying -10.000V dc to both terminals (EXT REF and INPUT).
- f. Advance the input in steps of .1 volt. The readout should be 100.000% with -10.5V input and $100.00\% \pm 50$ digits with -10.6V dc inputs.

COMPENSATING COMPONENT SELECTION

Disregard the information given in paragraph 4-51 of the standard 8400A manual. The AN/GSM-64B contains a Buffer Assembly with selected, critical components. These components are R22 through R27, Q5, and U1. The following procedure is the selection process for R22, R23, R25 and R26 when U1, Q5, R24, R27, are replaced.

Buffer

- a. Depress VDC, 10, and FILT buttons on AN/GSM-64B.
- b. Center DC ZERO control on front panel.
- c. Short together the two input leads of the buffer with a clip lead.
- d. Short R22 and R25 and COURSE DC ZERO pot (A11R28).
- e. Using the following Table, select a resistor corresponding to the offset. If the polarity is positive, install the resistor in R25 and if negative, install in R22 position. Resistors are Mil Type RN60.


Table 16. OFFSET VOLTAGE CORRECTION RESISTORS

OFFSET VOLTAGE	ADD RESISTOR
.0000 - .0001	NONE
.0001 - .0002	6.98k
.0002 - .0004	21.0k
.0004 - .0006	35.7k
.0006 - .0008	51.1k
.0008 - .0010	64.9k
.0010 - .0012	80.6k
.0012 - .0014	95.3k
.0014 - .0016	110k
.0016 - .0018	124k
.0018 - .0020	140k
.0020 - .0022	154k
.0022 - .0024	169k
.0024 - .0026	187k
.0026 - .0028	200k
.0028 - .0030	215k
.0030 - .0032	232k
.0032 - .0034	249k
.0034 - .0036	267k
.0036 - .0038	280k
.0038 - .0040	301k
.0040 - .0042	316k
.0042 - .0044	332k
.0044 - .0046	348k
.0046 - .0048	365k
.0048 - .0050	383k

- f. Remove short from A11R28 and adjust R28 for a reading of 0.0000.

TROUBLESHOOTING

All references to Model 8400A are to be substituted by Model AN/GSM-64B. Figure 4-10 is replaced for the AN/GSM-64B by Figure 20.

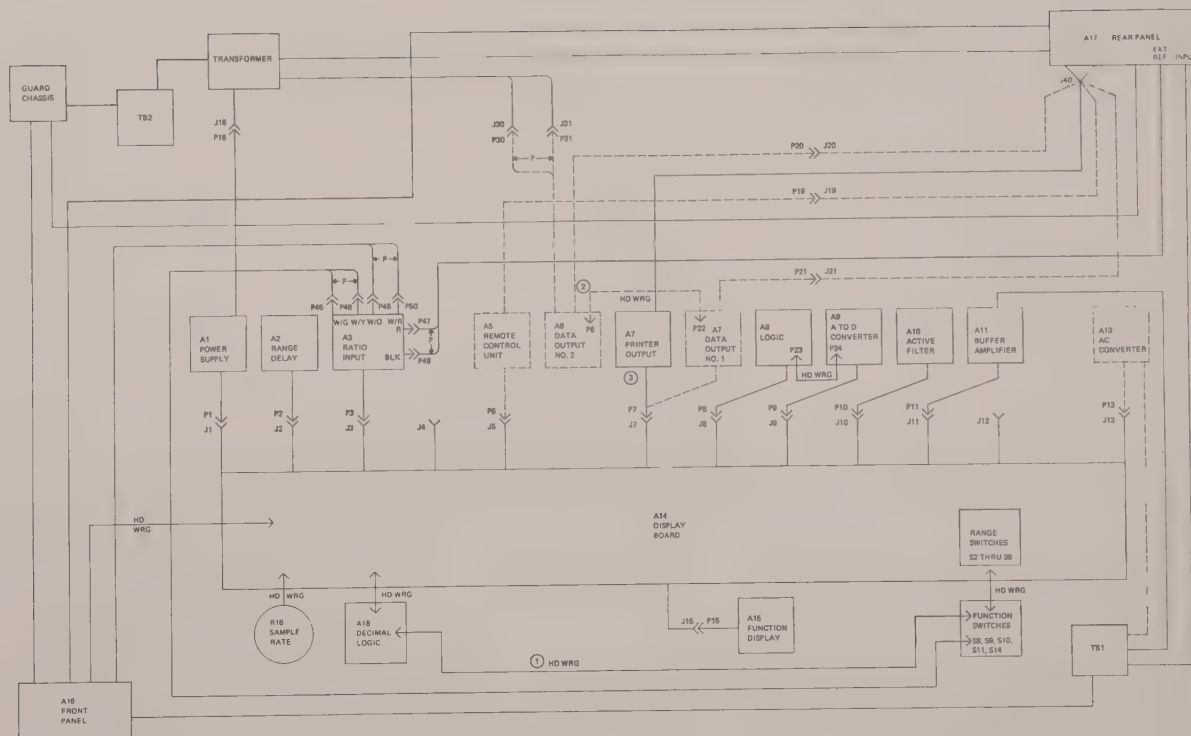

NOTES


- ① HD WRG HARD WIRING NOT TO BE DISCONNECTED.
- ② - - - - CONNECTIONS NECESSARY FOR OPTIONS
- ③ PRINTER OUTPUT MUST BE REMOVED WHEN DATA OUTPUT OPTION IS TO BE INSTALLED


FUNCTIONAL SCHEMATIC DIAGRAM


INTERCONNECTION DIAGRAM



B400A/FM-1100

JOHN FLUKE MFG. CO., INC.
P.O. Box 7470 Seattle, Washington 98133


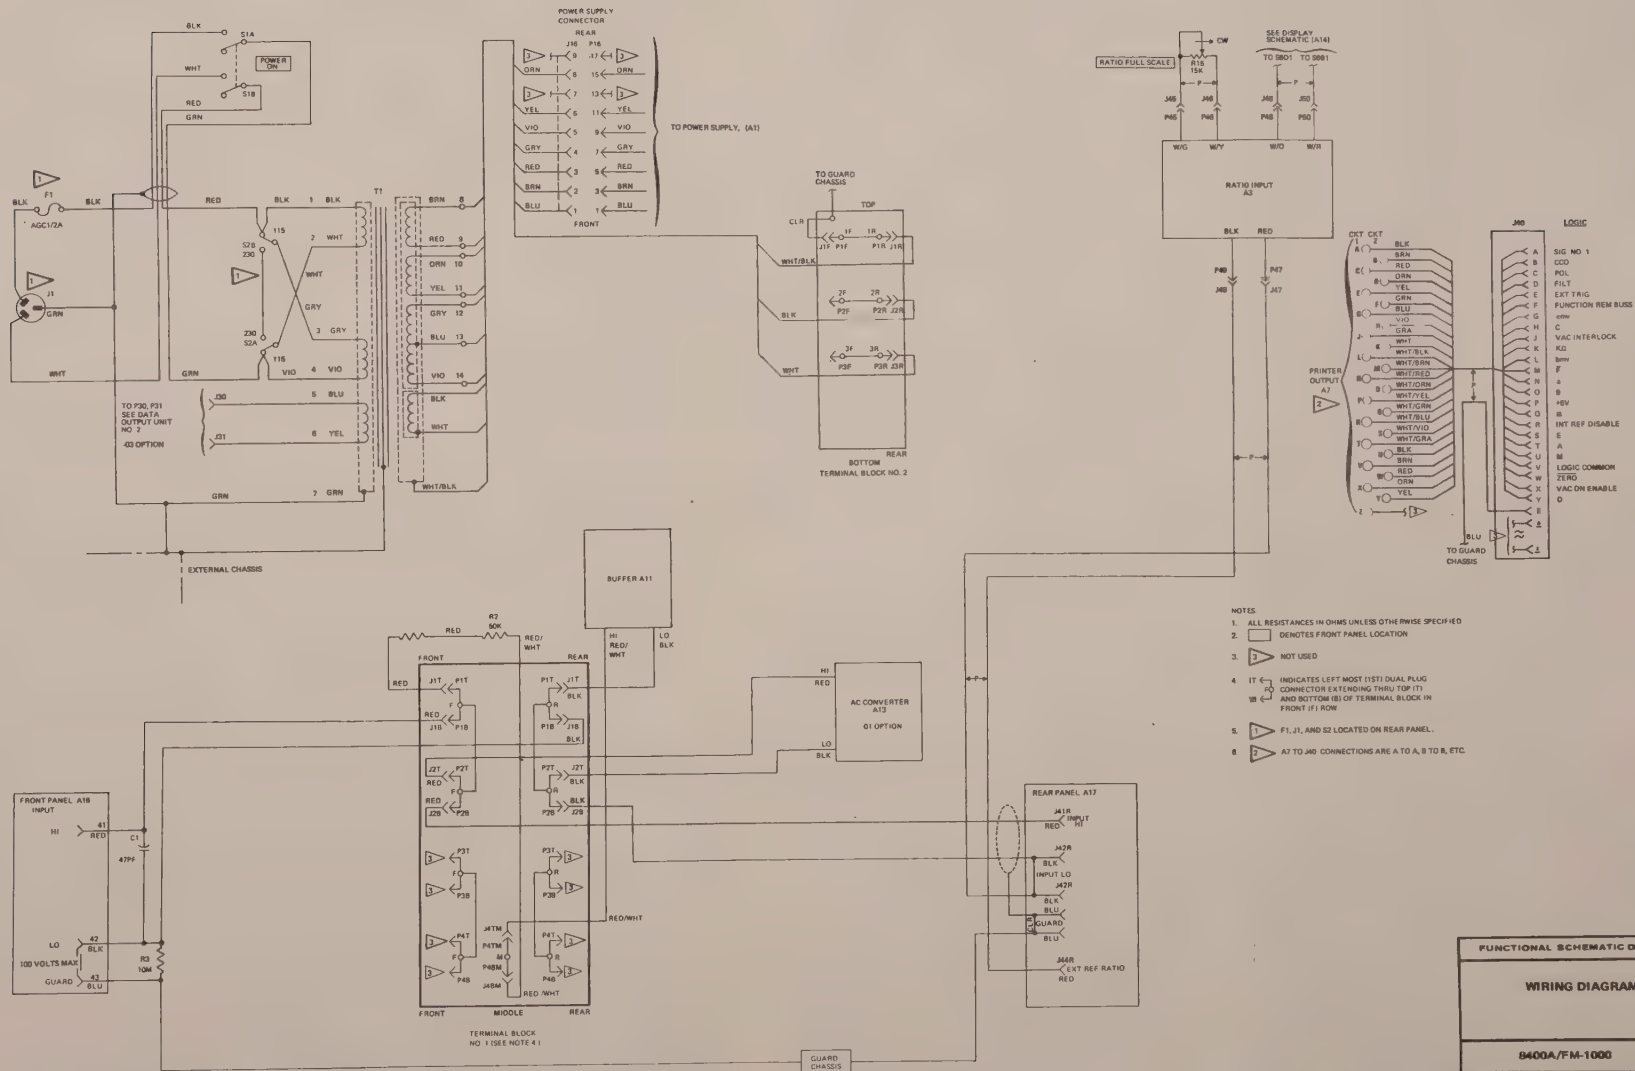


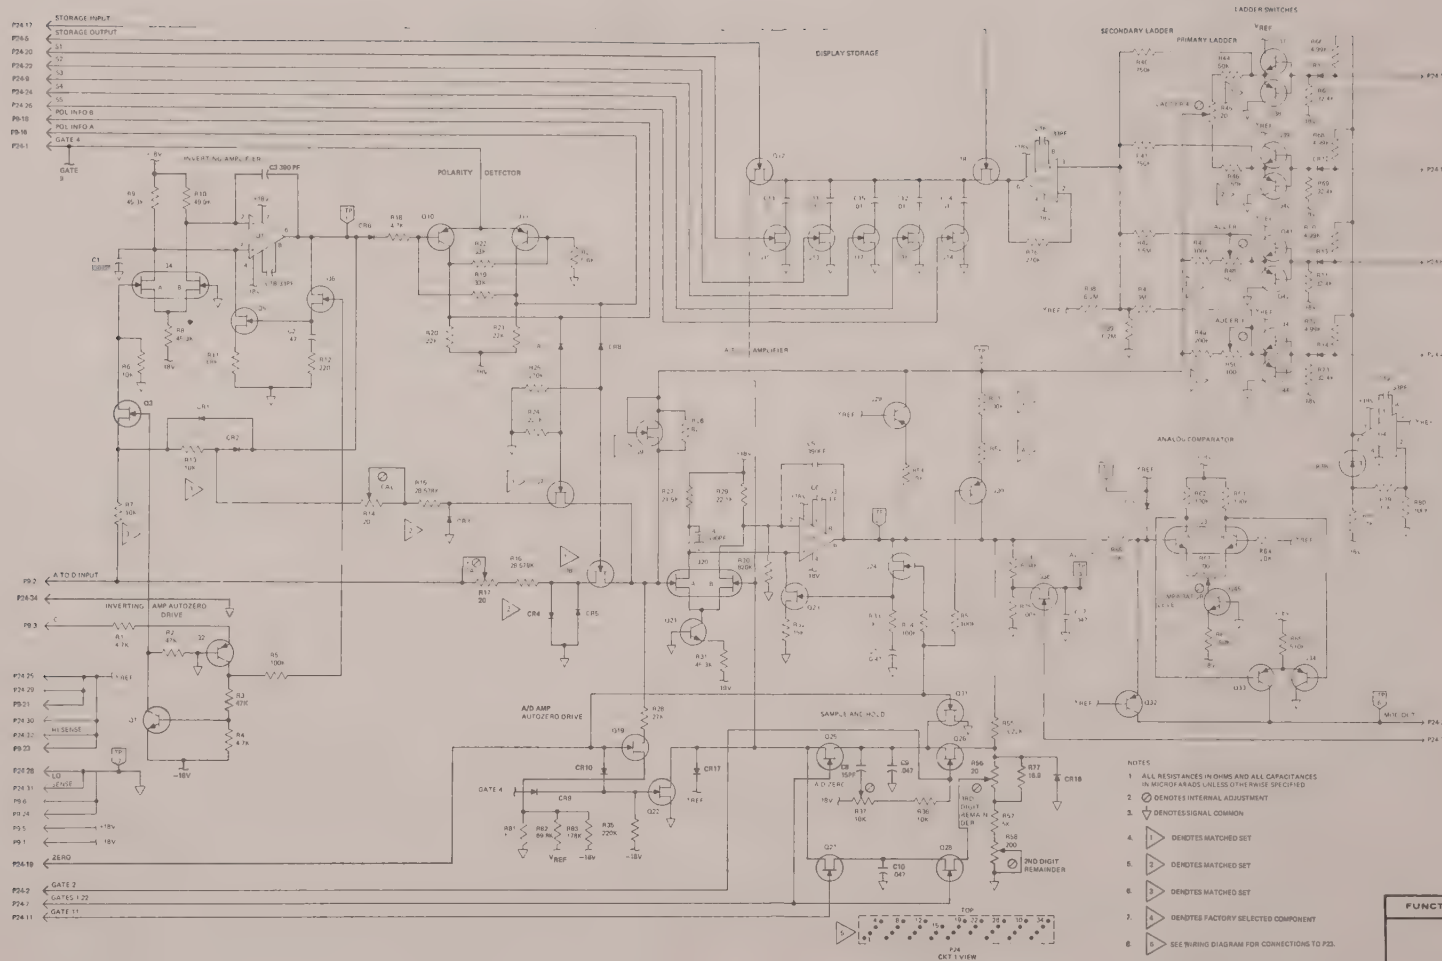

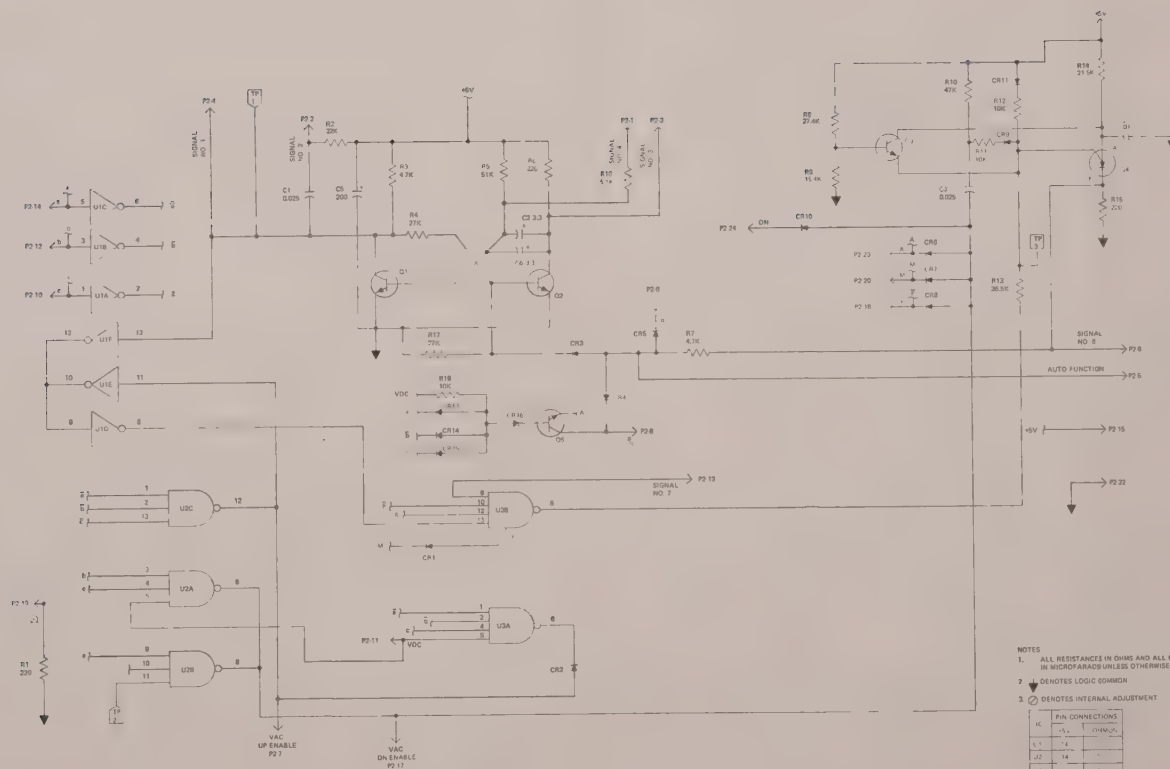


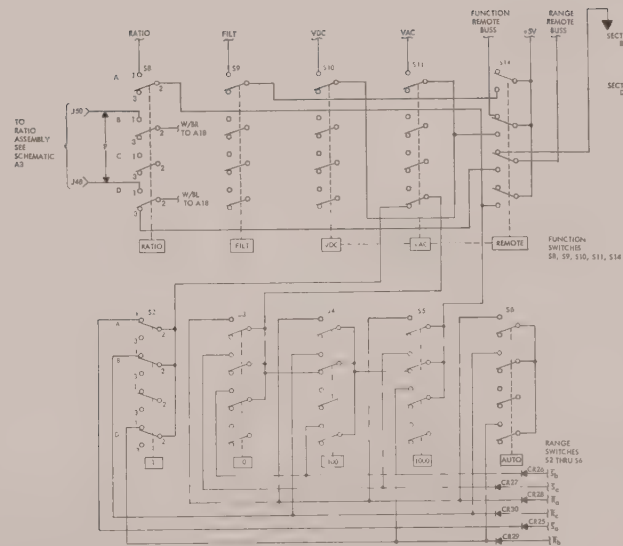


CONNECTOR LOCATION VIEWED FROM TOP FRONT OF INSTRUMENT

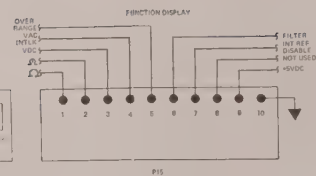


J11

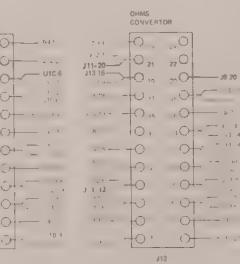


J12

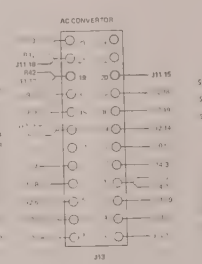


J13

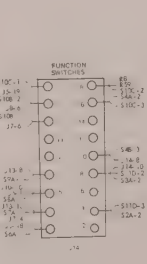

J14

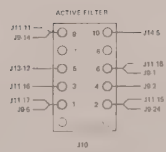


J10

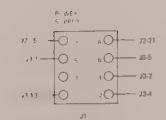


J1




J2

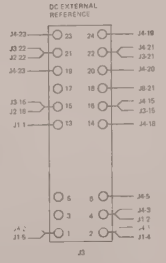


J3

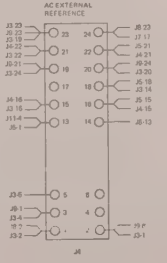


J4

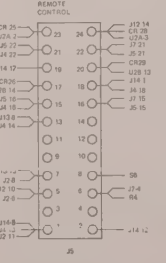

J5

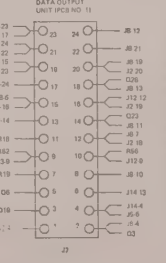

J6

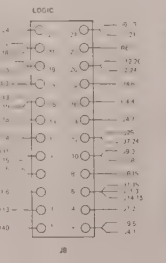

J7

NOTES

- ↓ DENOTES LOGIC COMMON
- DENOTES FRONT PANEL LOCATION

3 CONNECTORS J2, J3, AND J4 WIRE WITH PINS 22, 23, AND 24 RESPECTIVELY IN HARD WIRED NON-SEPARABLE CONFIGURATION SEE ASSY INTERCONNECT DIAGRAM


FUNCTIONAL SCHEMATIC DIAGRAM

**A14
DISPLAY**

SHEET 1 OF 2

8400A/FM-1002

JOHN FLUKE MFG. CO., INC.
P.O. Box 7428 Seattle, Washington 98133

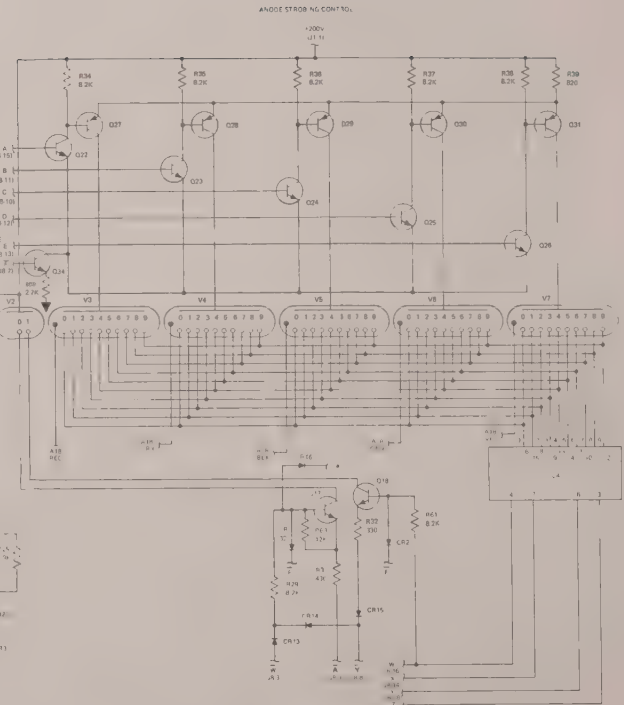


- NOTES
- 1 ALL RESISTANCES IN OHMS AND ALL CAPACITANCES IN MICROFARADS UNLESS OTHERWISE SPECIFIED
 - 2  DENOTES LOGIC COMMON
 - 3  DENOTES FRONT PANEL LOCATION

IC	PIN CONNECTIONS	
	+5V	COMMON
1	4	1
2	16	8
13	16	9
14	5	12

LOGIC TABLE

RANGE	a	b	c	a	b	c
1000	0	0	1	a	b	c
100	0	1	0	a	b	c
10	0	1	1	a	b	c
1	1	0	0	a	b	c

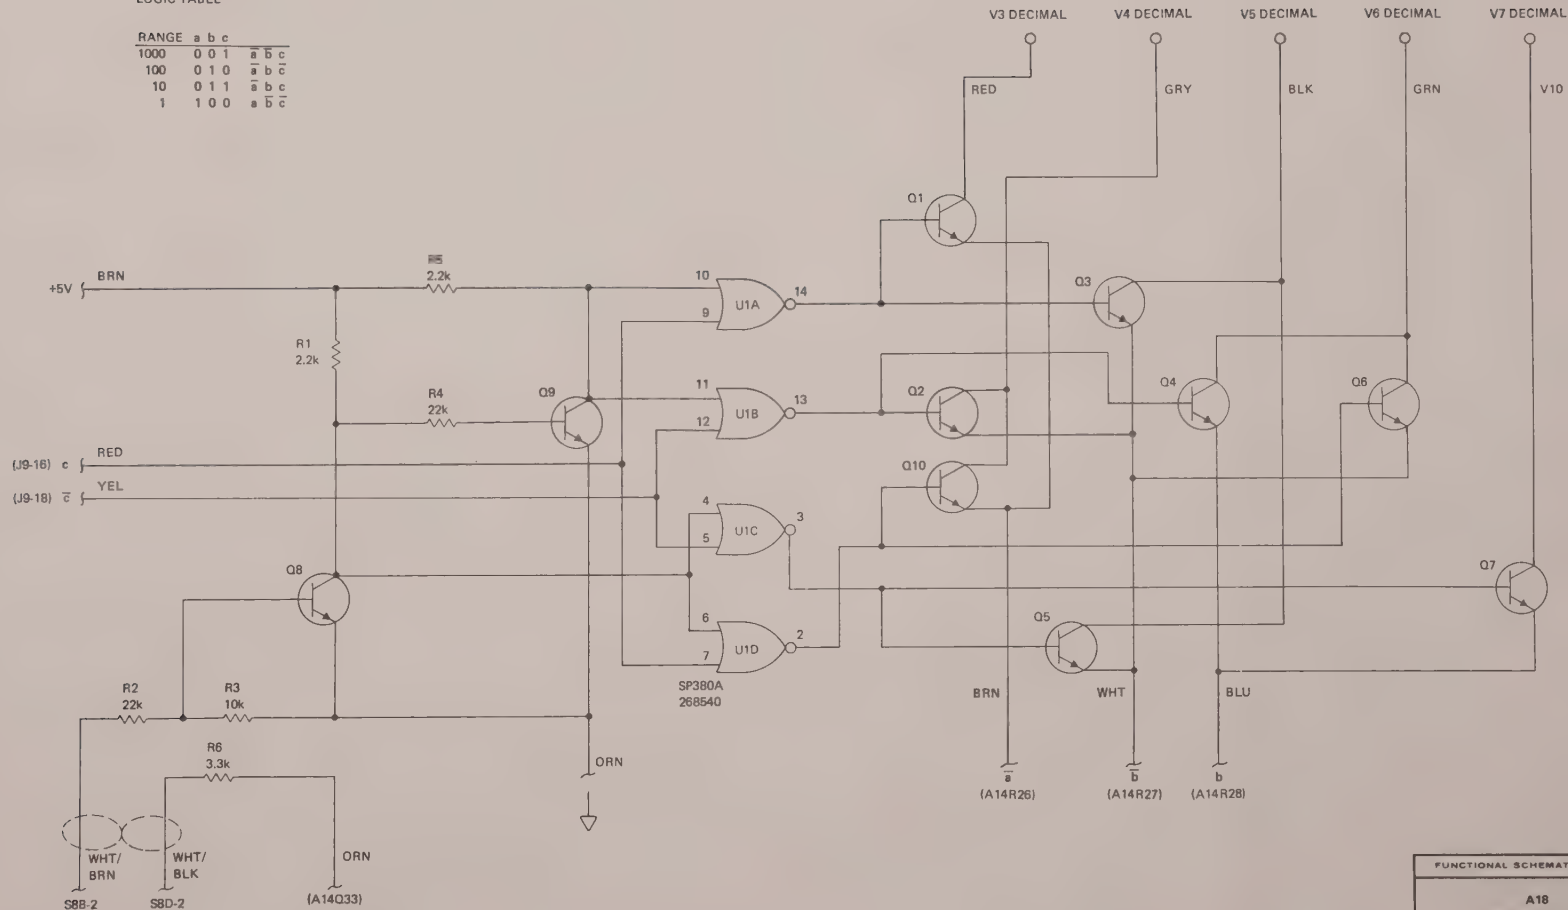

FUNCTIONAL SCHEMATIC DIAGRAM	
A18 DECIMAL LOGIC ASSEMBLY	
9400A/FM-1021	REV —
JOHN FLUKE MFG. CO., INC. P.O. Box 7428 Seattle, Washington 98133	

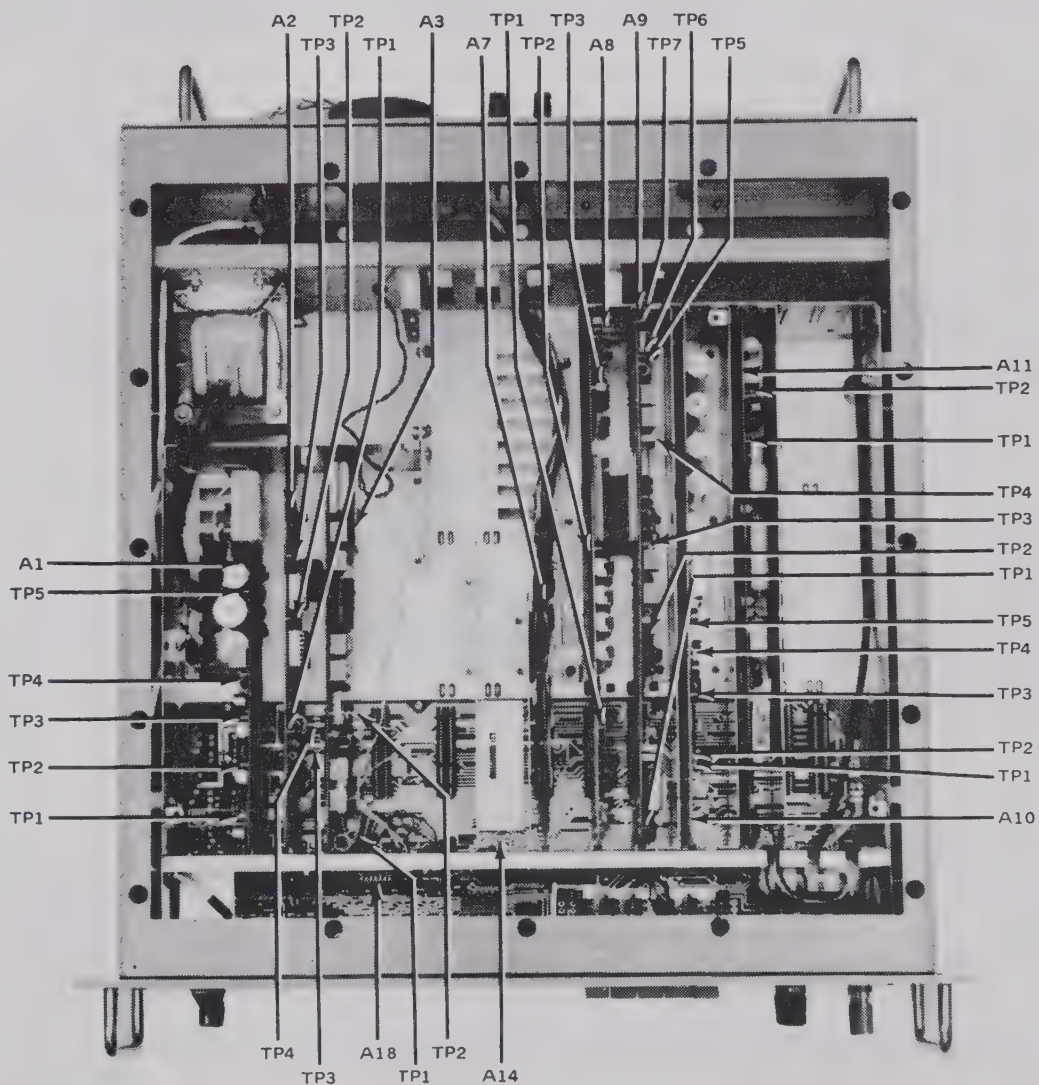


Figure 20. ASSEMBLY AND TEST POINT LOCATIONS

Section Localization

There are four sections to the Model AN/GSM-64B. These are the analog, digital, power supply and ratio. The ratio section utilizes the analog, digital, and power supply, plus a ratio assembly. The purpose of the ratio assembly is to replace the internal reference with an external voltage of $\pm 1V$ to $\pm 100V$.

Analog Section

Disregard information referring to -1 and $1V$ ranges in paragraph 4.66. **Note:** The AN/GSM-64B does not range to -1 or $1V$ in the dc mode.

BUFFER CHECKS

Disregard information contained in paragraphs 4.68 through 4.69 of the standard 8400A manual and substitute the following:

Overload Checks

- Depress the 10, VDC, FILT buttons and set SAMPLE RATE full cw on Model AN/GSM-64B.
- Apply $+30V \pm .1\%$ to INPUT terminals of AN/GSM-64B and observe a readout on the display of $+11.9999$.
- Reverse the input and observe a display of -11.9999 .

FAULT ANALYSIS

IF READINGS DO NOT CORRESPOND, THE PROBABLE CAUSE IS IN THE OVERLOAD CIRCUITRY. THE AMPLIFIER SECTION MAY BE A SECONDARY CAUSE.

Zero Check

- Connect a shorting jumper between the INPUT terminals.
- Depress 10, VDC, and FILT buttons.
- Vary DC ZERO front panel control from full CCW to full CW and observe display reaction shows $+3$ or 4 digits for CW position and -3 or 4 digits for CCW position.
- Connect a battery powered differential voltmeter as follows:

Differential Voltmeter LO to A10TP4

Differential voltmeter HI to A10TP3

- Adjust DC ZERO front panel control for a reading on the differential voltmeter of 0 ± 10 microvolts.

FAULT ANALYSIS

IF DC ZERO CONTROL WILL NOT SWING FROM -3 OR 4 DIGITS TO $+3$ OR 4 DIGITS, AND SWING THROUGH ABSOLUTE ZERO, ADJUSTMENT OF COURSE DC ZERO (A11R28) IS INDICATED. IF THIS IS NECESSARY, THE AMPLIFIER SECTION OF THE BUFFER COULD BE FAULTY.

Digital Section

Disregard reference to ohms converter in Figure 4-11 as the AN/GSM-64B does not contain, nor have the option of ohms converter.

NOTE!

The RATIO INPUT assembly might cause an improper operation of the VDC mode. To remove this possibility, remove the RATIO assembly from the instrument.

Ratio

In the RATIO mode of operation of AN/GSM-64B uses the digital, analog and power supply sections as in the VDC mode. The RATIO INPUT assembly is made up of four sections, polarity detector, range detector, difference amplifier and buffer amplifier.

FAULT ANALYSIS

IF THE RATIO MODE OF OPERATION IS FAULTY WHILE THE VDC MODE IS OPERATIONAL, THE RATIO INPUT ASSEMBLY IS FAULTY.

RATIO INPUT ASSEMBLY CHECK

- a. Connect battery powered differential voltmeter LO to A9TP7 (LO SENSE) and HI to A9TP5 (HI SENSE).
- b. Depress VDC, RATIO, AUTO buttons on AN/GSM-64B.
- c. Apply -10.0000 VDC to EXT REF Terminals and connect shorting jumper between INPUT terminals.
- d. Readout $+7.0000$ V on differential voltmeter.

FAULT ANALYSIS

IF DIFFERENTIAL VOLTMETER READS OTHER THAN 7V, THE DIFFERENCE AMPLIFIER AND/ OR BUFFER AMPLIFIER CIRCUITRY ON THE RATIO INPUT PCB MAY BE FAULTY.

- e. Reverse input voltage to EXT REF terminals and note that differential voltmeter reads $+7.0000$ V.

FAULT ANALYSIS

IF READING ON DIFFERENTIAL VOLTMETER CHANGES, THE POLARITY DETECTOR CIRCUITRY MAY BE THE CAUSE OF TROUBLE.

- f. Remove short across INPUT terminals.
- g. Depress 100 button on AN/GSM-64B.
- h. Apply -10.500 V dc to EXT REF and INPUT terminals on AN/GSM-64B.

- i. Observe display readout of 100.00%.
- j. Increase inputs to -10.600V dc and observe readout of $100.000\% \pm 50$ digits.

FAULT ANALYSIS

IF READOUT DOES NOT CORRESPOND, THE FAULT MAY LIE IN THE RANGE DETECTOR CIRCUITRY.

LIST OF REPLACEABLE PARTS

INTRODUCTION

The following parts listings are AN GSM-64B assemblies that are not covered in the 8400A manual, Section 5. The parts listings are in the same format as the 8400A.

REF DESIG	DESCRIPTION	STOCK NO	TOT QTY	REC QTY	USE CODE
	DIGITAL VOLTMETER Figure 21	8400A/FM			
A1	Power Supply (Figure 21A)	288159	1		
A2	Range Delay (Figure 22)	324772	1		
A3	Ratio Input (Figure 23)	324780	1		
A5	Remote Control (Optional)	290296	1		
A6	Data Output No. 2 (Optional)	290312	1		
A7	Data Output No. 1 (Optional)	290304	1		
A7	Printer Output				
A8	Logic (Figure 24)	288183	1		
A9	AD Converter (Figure 25)	288175	1		
A10	Active Filter (Section 5, Figure 5-6)	290346	1		
A11	Buffer (Figure 26)	324764	1		
A13	AC Converter (Optional)	290262	1		
A14	Display (Figure 27)	324756	1		
A16	Front Panel (Figure 29)	324962	1		
A17	Rear Panel (Figure 30)	324970	1		
A18	Decimal Logic (Figure 28)	324806	1		
J30, J31	Jack, teflon, ins (Mounted on T1)	295287	2		
R1, R2	Res, ww, 50k $\pm$ 25%	307298	2		
R4	Res, var, ww, 5k $\pm$ 10%, 1 1/2w	326199	1		
R15	Res, var, ww, 10k $\pm$ 20%, 1 1/2w	326181	1		
T1	Transformer, power	326538	1		
	Cover, top guard	324145	1		
	Cover, bottom	324061	1		
	Knob, black	190249	1		
	Lens	297903	1		
	Line, cord and plug	325027	1		
	Shorting Link	190728	3		
	Terminal, double	301382	4		
	Terminal, single	301390	4		
	Terminal strip, ins, light grey	297846	6		

REF DESIG	DESCRIPTION	STOCK NO	TOT QTY	REC QTY	USE CODE
	Accessories: Extender Card	298265			

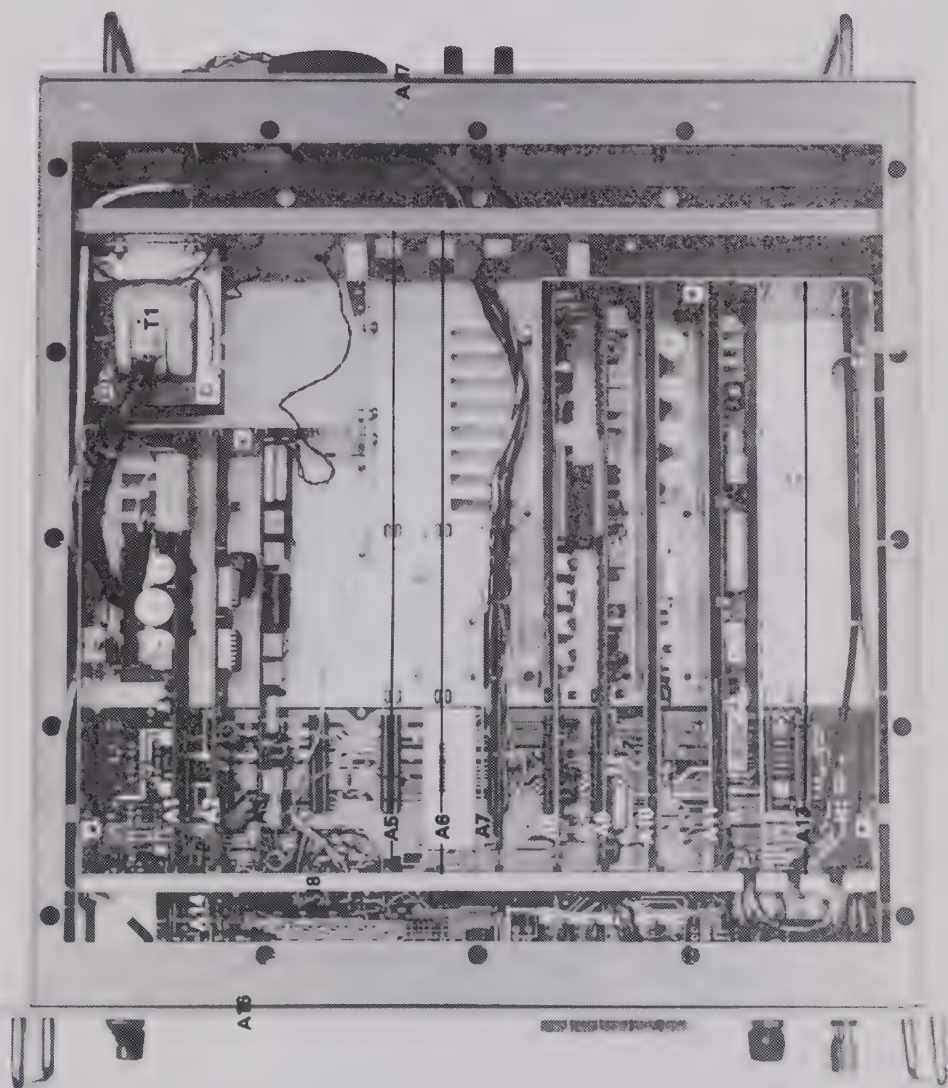


Figure 21. MODEL 8400A DIGITAL VOLTMETER

REF DESIG	DESCRIPTION	STOCK NO	TOT QTY	REC QTY	USE CODE
A1	POWER SUPPLY Figure 21A	288159	REF		
C1	Cap, elect, 8 uf +50/-10%, 350V	275792	1		
C2, C5	Cap, elect, 250 uf +50/-10%, 40V	178616	2		
C3, C7	Cap, mica, 33 pf $\pm 5\%$, 500V	160317	2		
C4, C6	Cap, elect, 50 uf +50/-10%, 25V	168823	2		
C8	Cap, elect, 7100 uf +75/-10%, 10V	295196	1		
CR1 thru CR4	Diode, silicon, 1 amp, 600 piv	112383	4		
CR5 thru CR8, CR10 thru CR13	Diode, silicon, 1 amp, 100 piv	116111	8		
CR9	Diode, zener, 12V	249052	1		
Q1, Q2	Tstr, silicon, NPN	218511	2		
Q3, Q8	Tstr, silicon, NPN	150359	2		
Q4	Not used				
Q5	Tstr, silicon, PNP	269076	1		
Q6	Tstr, silicon, NPN	288381	1		
Q7	Tstr, silicon, NPN	218396	1		
R1	Res, comp, 510 Ω $\pm 5\%$, 1/2w	108951	1		
R2	Res, comp, 68k $\pm 5\%$, 1/4w	148171	1		
R3	Res, met flm, 383k $\pm 1\%$, 1/8w	288498	1		
R4, R15	Res, met flm, 40.2k $\pm 1\%$, 1/8w	235333	2		
R5, R8	Res, comp, 51 Ω $\pm 5\%$, 1/2w	144717	2		
R6	Res, ww, 7.2k $\pm 0.1\%$, 1/4w	295121	1		
R7	Not used				
R9	Res, ww, 4.02k $\pm 0.1\%$, 1/4w	240937	1		
R10, R12	Res, met flm, 10k $\pm 1\%$, 1/8w	168260	2		
R11	Res, var, cer met, 500 Ω $\pm 10\%$, 1w	291120	1		
R13, R16	Res, comp, 5.6k $\pm 5\%$, 1/4w	148080	2		
R14	Res, met flm, 9.53k $\pm 1\%$, 1/8w	288563	1		
R17	Res, comp, 220k $\pm 5\%$, 1/4w	160937	1		
U1, U2,	IC, operational amplifier	271502	2		

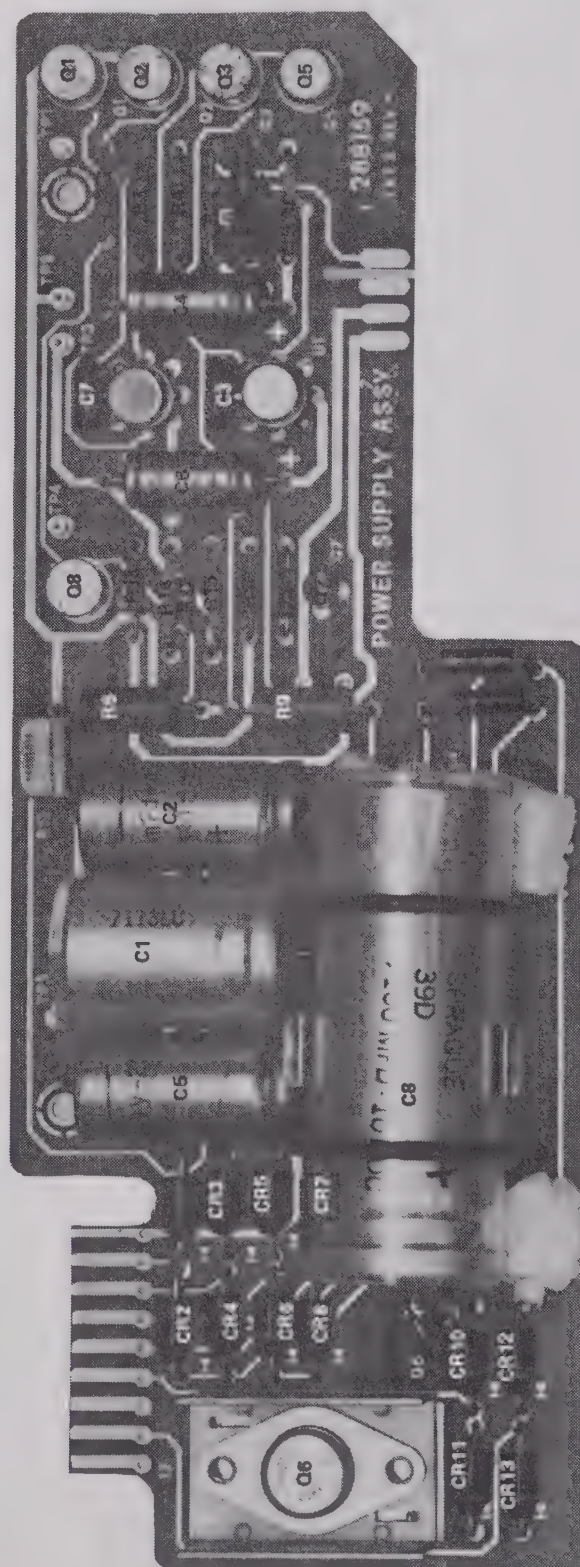


Figure 21A. POWER SUPPLY PCB ASSEMBLY

REF DESIG	DESCRIPTION	STOCK NO	TOT QTY	REC QTY	USE CODE
A2	RANGE DELAY — Figure 22	324772	REF		
C1, C3	Cap, cer, 0.025 uf $\pm 20\%$, 100V	168435	2		
C2, C6	Cap, Ta, 3.3 uf $\pm 5\%$, 20V	271320	2		
C4	Cap, mica, 0.01 uf $\pm 1\%$, 300V	152470	1		
C5	Cap, elect, 200 uf $+50/-10\%$, 10V	236935	1		
CR1, CR3, CR9, CR11, CR16	Diode, silicon 150 mA	203323	8		
CR2, CR6, CR7, CR8, CR10	Diode, germanium, 80 mA, 100 piv	149187	5		
CR4, CR5	Diode, fast switching germanium, 50 piv	180505	2		
CR13, CR14, CR15	Diode, germanium, 80 mA, 100 piv	149187	8		
Q1, Q2	Tstr, silicon, NPN	168708	2		
Q3	Tstr, silicon, NPN	218396	2		
Q4	Tstr, silicon, unijunction	268110	1		
Q5	Tstr, silicon, NPN	218396	1		
R1, R6, R15	Res, comp, 220 Ω $\pm 5\%$, 1/4w	147959	3		
R2	Res, comp, 22k $\pm 5\%$, 1/4w	148130	1		
R3, R7	Res, comp, 4.7k $\pm 5\%$, 1/4w	148072	2		
R4, R17	Res, comp, 27k $\pm 5\%$, 1/4w	148148	2		
R5	Res, comp, 51k $\pm 5\%$, 1/4w	193334	1		
R8	Res, met flm, 27.4k $\pm 1\%$, 1/8w	241471	1		
R9	Res, met flm, 15.4k $\pm 1\%$, 1/8w	261651	1		
R10	Res, comp, 47k $\pm 5\%$, 1/4w	148163	1		
R11	Res, comp, 10k $\pm 5\%$, 1/4w	148106	1		
R12	Res, met flm, 10k $\pm 1\%$, 1/8w	168260	1		
R13	Res, met flm, 36.5k $\pm 1\%$, 1/8w	235309	1		
R14	Res, met flm, 16.9k $\pm 1\%$, 1/8w	267146	1		
R16	Res, comp, 5.1k $\pm 5\%$, 1/4w	193342	1		

REF DESIG	DESCRIPTION	STOCK NO	TOT QTY	REC QTY	USE CODE
R18	Res, var cermet 10k $\pm$ 10%, 1/2w	285171	1		
R19	Res, comp, 10k $\pm$ 5%, 1/4w	148106	1		
U1	IC, DTL, Hex Inverter	268367	1		
U2	IC, DTL, Tripple 3-Input Nand Gate	266312	1		
U3	IC, DTL, dual 4-Input Nand	268383	1		
	Socket, IC, 14 contact, U1, U2, U3	276527	3		

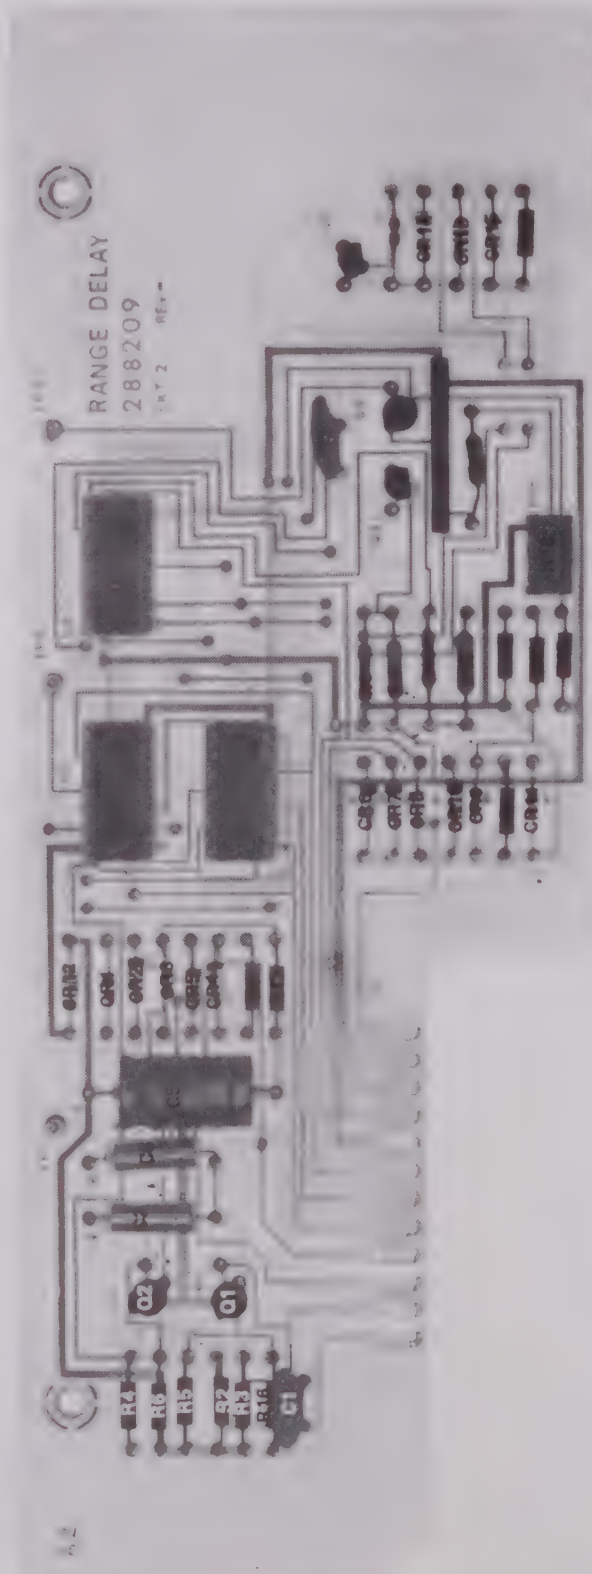


Figure 22. RANGE DELAY PCB ASSEMBLY

REF DESIG	DESCRIPTION	STOCK NO	TOT QTY	REC QTY	USE CODE
A3	RATIO INPUT ASSEMBLY Figure 23	324780	REF		
C1	Cap, met poly, 0.047 uf $\pm 10\%$, 400v	273037	1		
C2	Cap, met poly, 2 uf $\pm 10\%$, 50v	284687	1		
C3	Cap, met poly, 1 uf $\pm 10\%$, 50v	271619	1		
C4	Not used				
C5 thru C10, C12	Cap, mica, 33 pf $\pm 5\%$, 500v	160317	7		
C11	Cap, mica, 100 pf $\pm 5\%$, 500v	148494	1		
C13, C14	Cap, mica, 390 pf $\pm 5\%$, 500v	148437	2		
C15	Cap, plstc, 0.47 uf $\pm 10\%$, 250v	184366	1		
CR1, CR2, CR5, CR6, CR10	Diode, silicon, 150 mA, 125 piv	272252	5		
CR3, CR4, CR7, CR8, CR9, CR11, CR14, CR15, CR17, CR18	Diode, silicon, 150 mA	203323	10		
CR12, CR13	Diode, silicon, 75 mA, 90 piv	260554	2		
CR16, CR19	Diode, germanium, 80 mA, 100 piv	149187	2		
K1	Relay, 4 PDT, 5v coil	272716	1		
K2	Relay, reed switch	289850	REF		
K2	Coil, relay	272070	1		
K3	Relay, reed switch	289850	1		
K3	Coil, relay	269019	1		
Q1, Q2	Tstr, silicon, NPN	272237	2		
Q3, Q4, Q6	Tstr, silicon, NPN	218396	3		
Q5	Tstr, FET, Dual, N-channel, selected	287623	1		
Q7	Not used				
Q8	Tstr, silicon, PNP	195974	1		

REF DESIG	DESCRIPTION	STOCK NO	TOT QTY	REC QTY	USE CODE
R1, R9 R2, R10 R4, R12 R5, R7	Res, bobbin, 900k $\pm 1\%$, 1w Res, bobbin, 100k $\pm 1\%$, 1w Res, bobbin, 700.6k $\pm 1\%$, 1w Res, bobbin, 77.69k $\pm 1\%$, 1w	323865	1		
	Matched set				
R3, R11	Res, var, cermet, 5k $\pm 10\%$, 1/2w	288282	2		
R6, R8, R50	Res, var, cermet, 500 Ω $\pm 10\%$, 1w	291120	3		
R13	Res, comp, 5.1 Ω $\pm 5\%$, 1/4w	281832	1		
R14	Res, met flm, 3.09k $\pm 1\%$, 1/8w	235150	1		
R15	Not used				
R16	Res, met flm, 6.04k $\pm 1\%$, 1/8w	285189	1		
R17, R18	Res, comp, 62k $\pm 5\%$, 1/4w	220053	2		
R19, R20	Res, met flm, 23.2k $\pm 1\%$, 1/8w	291351	2		
R21	Res, met flm, 28.7 Ω $\pm 1\%$, 1/8w	272823	1		
R22	Res, var, cermet, 20 Ω $\pm 20\%$, 1w	285114	1		
R23	Res, met flm, 13.7 Ω $\pm 1\%$, 1/8w	272815	1		
R24	Res, comp, 6.2 Ω $\pm 5\%$, 1/4w	272831	1		
R25	Res, met flm, 43.2k $\pm 1\%$, 1/8w	272153	1		
R26	Res, comp, 120k $\pm 5\%$, 1/4w	193458	1		
R27, R28	Res, met flm, 150k $\pm 1\%$, 1/8w	241083	2		
R29	Res, comp, 27M $\pm 5\%$, 1/4w	221994	1		
R30	Res, comp, 4.7k $\pm 5\%$, 1/4w	148072	1		
R31	Res, met flm, 1.21k $\pm 1\%$, 1/8w	229146	1		
R32, R52	Res, met flm, 1.82k $\pm 1\%$, 1/8w	293670	2		
R33	Res, met flm, 150k $\pm 1\%$, 1/2w	247213	1		
R34	Res, met flm, 28.7k $\pm 1\%$, 1/8w	235176	1		
R35, R36, R37, R39	Res, matched set				
R38	Res, met flm, 35.7k $\pm 1\%$, 1/8w	288480	1		
R40	Res, met flm, 665 Ω $\pm 1\%$, 1/8w	320028	1		
R41	Res, met flm, 2.43k $\pm 1\%$, 1/8w	312637	1		
R42, R46	Res, met flm, 4.99k $\pm 1\%$, 1/8w	168252	2		
R43, R44, R45, R47	Res, met flm, 10k $\pm 1\%$, 1/8w	168260	4		

REF DESIG	DESCRIPTION	STOCK NO	TOT QTY	REC QTY	USE CODE
R48	Res, met flm, 3.4k $\pm$ 1%, 1/8w	260323	1		
R49	Res, met flm, 15.8k $\pm$ 1%, 1/8w	293688	1		
R51	Res, met flm, 1.87k $\pm$ 1%, 1/8w	267229	1		
R53	Res, comp, 220k $\pm$ 5%, 1/4w	160937	1		
R54	Res, comp, 15k $\pm$ 5%, 1/4w	148114	1		
R55	Res, comp, 1k $\pm$ 5%, 1/4w	148023	1		
U1, U3 thru U6	IC, Operational amplifier, selected	225961	5		
U2, U8	IC, Operational amplifier	271502	2		
U7	IC, Operational amplifier	288928	1		
	Factory selected at time of installation				

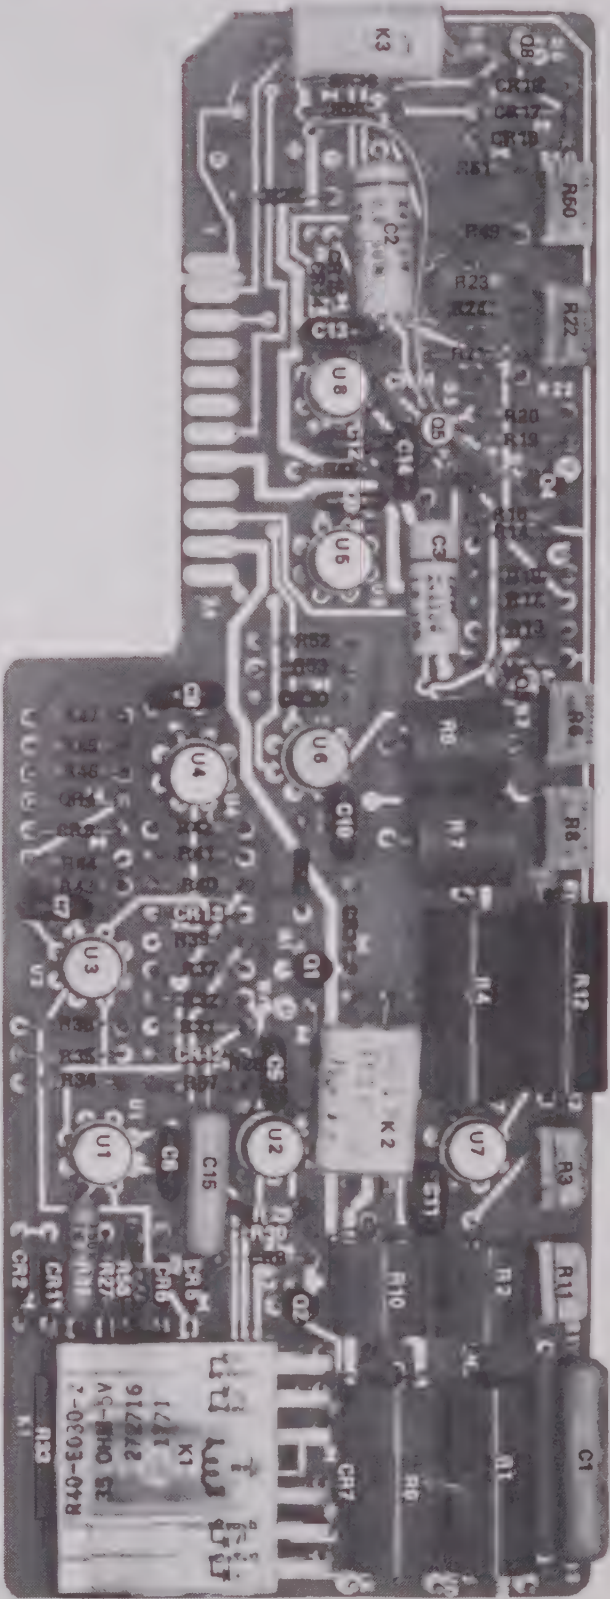


Figure 23. RATIO INPUT ASSEMBLY

REF DESIG	DESCRIPTION	STOCK NO	TOT QTY	REC QTY	USE CODE
A8	LOGIC — Figure 24	288183	REF		
C1	Cap, mica, 5600 pf $\pm 2\%$, 500V	182873	1		
C2	Cap, mica, 1500 pf $\pm 5\%$, 500V	148361	1		
C3	Cap, cer, 180 pf $\pm 10\%$, 1 kV	105890	1		
C4	Cap, mica, 470 pf $\pm 5\%$, 500V	148429	1		
C5	Cap, cer, 0.025 uf $\pm 20\%$, 100V	168435	1		
C6	Cap, mica, 33 pf $\pm 5\%$, 500V	160317	1		
C7	Cap, mica, 270 pf $\pm 5\%$, 500V	148452	1		
CR1, CR2, CR5, CR6, CR7	Diode, silicon, 150 mA	203323	5		
CR3	Diode, silicon, 1 amp, 100 piv	116111	1		
CR4, CR8	Diode, germanium, 80 mA, 100 piv	149187	2		
P23	Connector, PCB to Cable, 34 contact	295337	1		
Q1	Tstr, silicon, unijunction	268110	1		
Q2 thru Q5, Q19 thru Q22, Q24	Tstr, silicon, NPN	218396	9		
Q6 thru Q17	Tstr, silicon PNP	195974	12		
Q18	Tstr, germanium, PNP	148619	1		
Q23	Tstr, silicon, NPN	168716	1		
Q25	Tstr, silicon, NPN	168708	1		
R1	Res, met flm, 750k $\pm 1\%$, 1/2w	155192	1		
R2	Res, met flm, 110k $\pm 1\%$, 1/8w	234708	1		
R3	Res, comp, 47 Ω $\pm 5\%$, 1/4w	147892	1		
R4	Res, met flm, 46.4k $\pm 1\%$, 1/8w	188375	1		
R5, R19	Res, comp, 2.7k $\pm 5\%$, 1/4w	170720	2		
R6, R21, R28, R29, R31, R32, R33	Res, comp, 1.5k $\pm 5\%$, 1/4w	148031	7		
R7	Res, comp, 820 Ω $\pm 5\%$, 1/4w	148015	1		

REF DESIG	DESCRIPTION	STOCK NO	TOT QTY	REC QTY	USE CODE
R8, R59, R60	Res, comp, 10k $\pm 5\%$, 1/4w	148106	3		
R9	Res, comp, 27k $\pm 5\%$, 1/4w	148148	1		
R10	Res, comp, 1k $\pm 5\%$, 1/4w	148023	1		
R11, R20, R37	Not Used				
R12, R40, R41	Res, comp, 4.7k $\pm 5\%$, 1/4w	148072	3		
R13, R25, R26, R27	Res, comp, 8.2k $\pm 5\%$, 1/4w	160796	4		
R14 thru R18	Res, comp, 51k $\pm 5\%$, 1/4w	193334	5		
R22, R23	Res, comp, 2.2k $\pm 5\%$, 1/4w	148049	2		
R24, R64	Res, comp, 1.8k $\pm 5\%$, 1/4w	175042	2		
R30	Res, comp, 680 Ω $\pm 5\%$, 1/4w	148007	1		
R34, R35, R36, R38, R39	Res, comp, 22k $\pm 5\%$, 1/4w	148130	5		
R42	Res, comp, 33k $\pm 5\%$, 1/4w	148155	1		
R43	Res, comp, 47k $\pm 5\%$, 1/4w	148163	1		
R44, R50, R52	Res, comp, 220k $\pm 5\%$, 1/4w	160937	3		
R45, R46, R48, R49, R51, R65	Res, comp, 11k $\pm 5\%$, 1/4w	221580	6		
R47	Res, comp, 39k $\pm 5\%$, 1/4w	188466	1		
R53	Res, met flm, 182k $\pm 1\%$, 1/8w	241091	1		
R54	Res, met flm, 3.74k $\pm 1\%$, 1/8w	260547	1		
R57	Res, var, cer met, 20 Ω $\pm 20\%$, 1/2w	261180	1		
R58	Res, ww, 14k $\pm 0.1\%$, 1/4w	275321	1		
R61	Res, comp, 1.2k $\pm 5\%$, 1/4w	190371	1		
R63	Res, met flm, 3.74k $\pm 1\%$, 1/8w	272096	1		
U1, U3 thru U6	IC, TTL, dual J-K flip flop	268441	5		
U2	IC, DTL, dual 4-Input Nand	268383	1		

REF DESIG	DESCRIPTION	STOCK NO	TOT QTY	REC QTY	USE CODE
U7	IC, TTL, dual 4-Input Expandable Nor Gate	268557	1		
U8	IC, DTL, Quad 2-Input Nand Gate	268375	1		
U9, R55, R56, R62	Matched Reference Amplifier Set	290650	1		
U10	IC, operational amplifier	271502	1		
	Socket, IC, 14 contact, U2, U7, U8	276527	3		
	Socket, IC, 16 contact, U1, U3 thru U6	276535	5		

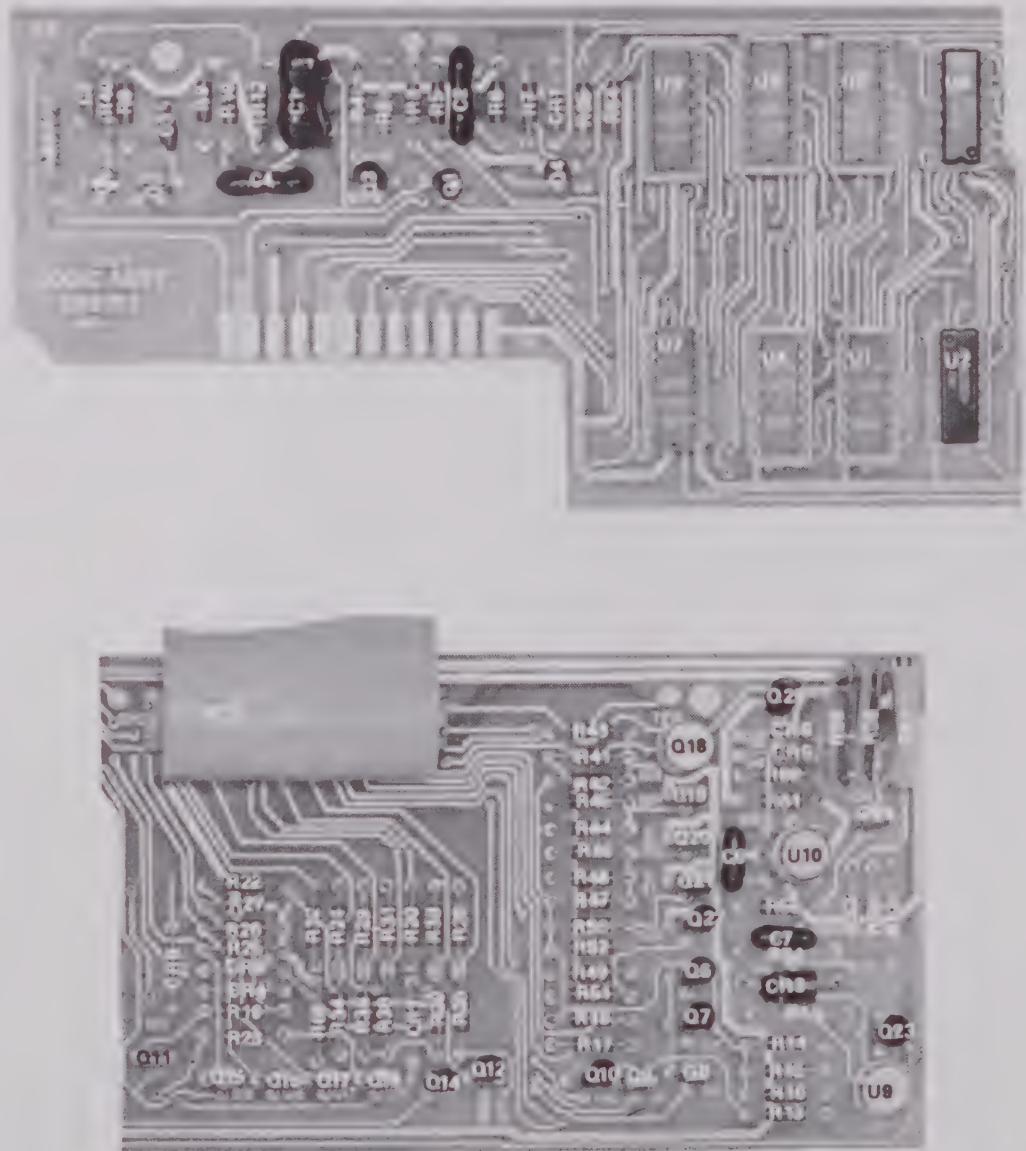


Figure 24. LOGIC PCB ASSEMBLY

REF DESIG	DESCRIPTION	STOCK NO	TOT QTY	REC QTY	USE CODE
A9	A/D CONVERTOR —Figure 25	288175	REF		
C1, C3, C4, C5	Cap, mica, 390 pf $\pm 5\%$, 500V	148437	4		
C2, C7	Cap, plstc, 0.47 uf $\pm 10\%$, 250V	184366	2		
C6, C16, C18, C19	Cap, mica, 33 pf $\pm 5\%$, 500V	160317	4		
C8	Cap, cer, 15 pf $\pm 10\%$, 500V	159947	1		
C9, C10	Cap, plstc, 0.047 uf $\pm 10\%$, 120V	260562	2		
C11 thru C15	Cap, cer, 0.01 uf $\pm 20\%$, 100V	149153	5		
C17	Cap, plstc, 0.047 uf $\pm 10\%$, 250V	162008	1		
CR1, CR2, CR16	Diode, silicon, 150 mA, 125 piv	272252	3		
CR3, CR4, CR5, CR7 thru CR15	Diode, silicon, 150 mA	203323	12		
CR6	Diode, germanium, 80 mA, 100 piv	149187	1		
CR17	Diode, silicon, 75 mA, 90 piv	260554	1		
CR18	Diode, zener, 6.8V	187195	1		
P24	Connector, PCB to cable, 34 contact	295337	1		
Q1, Q21, Q45	Tstr, silicon, NPN	218396	3		
Q2, Q32	Tstr, silicon, PNP	195974	2		
Q3, Q6, Q19, Q22, Q23, Q24	Tstr, FET, N-channel	271924	6		
Q4	Tstr, FET, dual, N-channel	257501	1		
Q5, Q13 thru Q17, Q36	Tstr, FET, N-channel	288324	7		
Q7, Q8, Q9	Tstr, FET, N-channel, Matched Set (must be replaced as a set)	274795	1		
Q10, Q11, Q29, Q30, Q33, Q34	Tstr, silicon, PNP	288761	6		

REF DESIG	DESCRIPTION	STOCK NO	TOT QTY	REC QTY	USE CODE
Q12, Q18, Q25 thru Q28, Q31	Tstr, FET, N-channel	261388	7		
Q20	Tstr, FET, dual, N-channel	267963	1		
Q35	Tstr, silicon, NPN, dual, monolithic	295717	1		
Q37, Q39, Q41, Q43	Tstr, germanium, NPN	306126	4		
Q38, Q40, Q42, Q44	Tstr, germanium, PNP	306118	4		
R1, R4, R18	Res, comp, 4.7k $\pm 5\%$, 1/4w	148072	3		
R2, R3	Res, comp, 47k $\pm 5\%$, 1/4w	148163	2		
R5, R34, R53, R62, R63, R80	Res, comp, 100k $\pm 5\%$, 1/4w	148189	6		
R6, R36, R59, R64	Res, comp, 10k $\pm 5\%$, 1/4w	148106	4		
R7, R13	Res, ww, 10k, Matched Set	291690	1		
R8, R9, R31	Res, met flm, 45.3k $\pm 1\%$, 1/8w	234971	3		
R10	Res, met flm, 49.9k $\pm 1\%$, 1/8w	268821	1		
R11	Res, comp, 68k $\pm 5\%$, 1/4w	148171	1		
R12	Res, comp, 220 Ω $\pm 5\%$, 1/4w	147959	1		
R14, R17, R45	Res, var, cer met, 20 Ω $\pm 20\%$, 1/2w	261180	3		
R15, R16 R44, R46 R47 R49, R51	Res, ww, 28.578k Res, ww, 50k Res, ww, 100k Res, ww, 200k	} Matched Set 285239	1		
R19, R22	Res, comp, 33k $\pm 5\%$, 1/4w				
R20, R21	Res, comp, 22k $\pm 5\%$, 1/4w				
R23	Res, comp, 5.6k $\pm 5\%$, 1/4w				
R24, R25, R35	Res, comp, 220k $\pm 5\%$, 1/4w	160937	3		
R26	Res, comp, 82 Ω $\pm 5\%$, 1/4w	149484	1		
R27	Res, met flm, 21.5k $\pm 1\%$, 1/8w	168278	1		
R28, R78	Res, comp, 27k $\pm 5\%$, 1/4w	148148	2		
R29	Res, met flm, 22.1k $\pm 1\%$, 1/8w	235234	1		
R30	Res, comp, 820k $\pm 5\%$, 1/4w	220541	1		

REF DESIG	DESCRIPTION	STOCK NO	TOT QTY	REC QTY	USE CODE
R32, R79	Res, comp, 15k $\pm 5\%$, 1/4w	148114	2		
R33	Res, comp, 1k $\pm 5\%$, 1/4w	148023	1		
R37	Res, var, cer met, 10k $\pm 10\%$, 1w	285171	1		
R38, R39	Res, comp, 6.2M $\pm 5\%$, 1/4w	221960	2		
R40, R41	Res, met flm, 750k $\pm 1\%$, 1/8w	271361	2		
R42	Res, met flm, 1.5M $\pm 1\%$, 1/4w	284976	1		
R43	Res, comp, 3M $\pm 5\%$, 1/4w	221952	1		
R48	Res, var, cer met, 50 Ω $\pm 10\%$, 1w	285122	1		
R50	Res, var, cer met, 100 Ω $\pm 10\%$, 1w	285130	1		
R52	Res, comp, (nominally 22 Ω $\pm 5\%$, 1/4w)	147884	1		
R54	Res, comp, 18k $\pm 5\%$, 1/4w	148122	1		
R55	Res, ww, 1.022k $\pm 0.05\%$, 1/4w	288654	1		
R56	Res, cer met, 20 Ω $\pm 20\%$, 1w	285114	1		
R57	Res, ww, 5k $\pm 0.05\%$, 1/4w	288647	1		
R58	Res, var, cer met, 200 Ω $\pm 20\%$, 1/2w	284711	1		
R60	Res, comp, 150k $\pm 5\%$, 1/4w	182212	1		
R61	Res, var, cer met, 200 Ω $\pm 10\%$, 1w	285148	1		
R65	Res, comp, 510k $\pm 5\%$, 1/4w	275685	1		
R66, R68, R70, R72	Res, met flm, 4.99k $\pm 1\%$, 1/8w	168252	4		
R67, R69, R71, R73	Res, met flm, 32.4k $\pm 1\%$, 1/8w	182956	4		
R74	Res, met flm, 6.04k $\pm 1\%$, 1/8w	285189	1		
R75	Res, met flm, 1k $\pm 1\%$, 1/8w	168229	1		
R76	Res, comp, 270k $\pm 5\%$, 1/4w	220061	1		
R77	Res, met flm, 16.9 Ω $\pm 1\%$, 1/8w	281790	1		
R81	Res, comp, 1 Ω $\pm 5\%$, 1/2 w	218693	1		
R82	Res, met flm, 69.8k $\pm 1\%$, 1/8w	291427	1		
R83	Res, met flm, 178k $\pm 1\%$, 1/8w	234989	1		
U1 thru U4	IC, operational amplifier	271502	4		

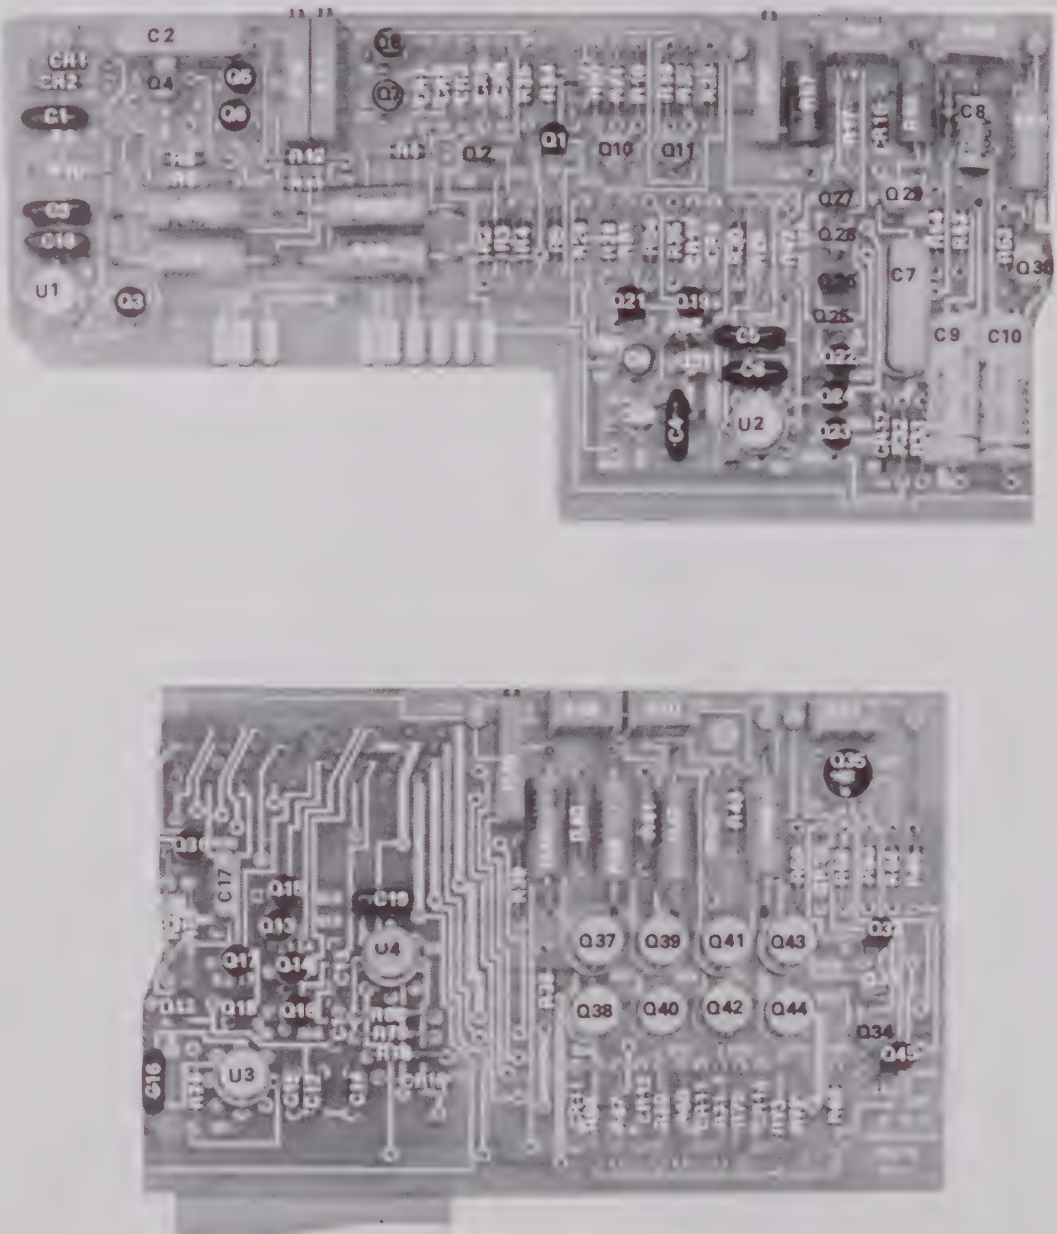


Figure 25. A TO D CONVERTOR PCB ASSEMBLY

REF DESIG	DESCRIPTION	STOCK NO	TOT QTY	REC QTY	USE CODE
A10	ACTIVE FILTER	290346	REF		
C1 thru C4	Cap, plstc, 0.47 uf $\pm 20\%$, 120V	190553	4		
C5, C8	Cap, mica, 33 pf $\pm 5\%$, 500V	160317	2		
C6, C7	Cap, mica, 150 pf $\pm 5\%$, 500V	148478	2		
CR1, CR2	Diode, silicon, 10 mA, 2 piv	180554	2		
CR3	Diode, silicon, 150 mA	203323	1		
K1	Relay, reed switch	219097	2		
	Coil, relay	272070	1		
Q1	Tstr, silicon, NPN, Super beta dual monolithic	284075	1		
Q2	Tstr, silicon, NPN	218396	1		
Q3	Tstr, silicon, PNP	195974	1		
R1, R2, R4, R5	Res, met flm, 46.4k $\pm 1\%$, 1/8w	188375	4		
R3	Res, comp, 6.8k $\pm 5\%$, 1/4w	148098	1		
R6	Res, met flm, 140k $\pm 1\%$, 1/8w	289439	1		
R7	Res, comp, 100k $\pm 5\%$, 1/4w	148189	1		
R8	Res, met flm, 8.66k $\pm 1\%$, 1/8w	260364	1		
R9, R10	Res, met flm, 215k $\pm 1\%$, 1/8w	289470	2		
R11, R12	Res, factory selected value				
R13	Res, var, cer met, 5k $\pm 20\%$, 1/2w	267872	1		
R14	Res, met flm, 100k $\pm 1\%$, 1/8w	248807	1		
R15	Res, met flm, 2.49k $\pm 1\%$, 1/8w	226209	1		
R16	Res, met flm, 82.5k $\pm 1\%$, 1/8w	246223	1		
R17	Res, met flm, 2k $\pm 1\%$, 1/8w	235226	1		
R18	Res, met flm, 7.15k $\pm 1\%$, 1/8w	260356	1		
U1, U2	IC, operational amplifier	271502	2		

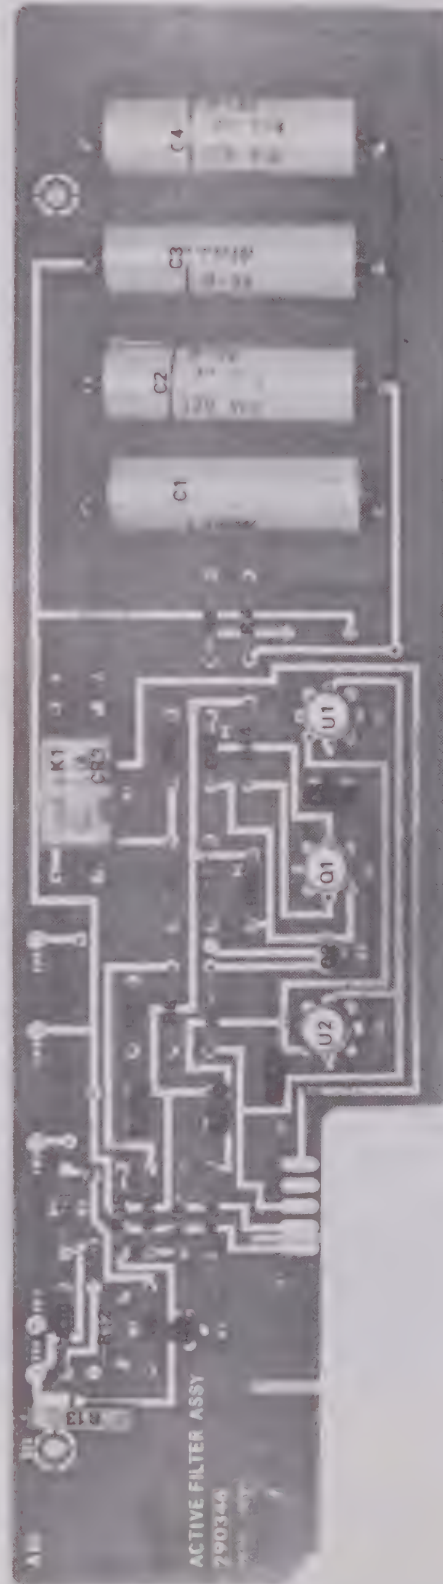


Figure 25A. ACTIVE FILTER PCB ASSEMBLY

REF DESIG	DESCRIPTION	STOCK NO	TOT QTY	REC QTY	USE CODE
A11	BUFFER — Figure 26	324764	REF		
C1, C3	Cap, mica, 100 pf $\pm 5\%$, 500V	148494	2		
C2	Cap, mica, 33 pf $\pm 5\%$, 500V	160317	1		
C4	Not used				
C5	Cap, mica, 270 pf $\pm 5\%$, 500V	148452	1		
C6, C7	Cap, cer, 0.05 uf $\pm 20\%$, 100V	149161	2		
C8, C9, C10	Not Used				
C11	Cap, mica, 2200 pf $\pm 5\%$, 500V	148346	1		
CR1	Diode, silicon, 10 mA, 2 piv	180554	1		
CR2	Not used				
CR3	Diode, zener, 6.8V	166199	1		
CR4 thru CR8	Diode, silicon, 200 mA, 25 piv	190272	5		
CR15, CR16	Diode, germanium, 80 mA, 100 piv				
CR9 thru CR14 CR17, CR18, CR21	Not used	149187	9		
CR19, CR20, CR22, CR23, CR24	Diode, silicon, 150 mA	203323			
K1, K6	Not used				
K2	Relay, reed switch	284091	2		
	Coil, relay	272070	1		
K3	Relay, reed switch	284091	REF		
	Coil, relay	269019	4		
K4, K5,	Relay, reed switch	289850	3		
	Coil, relay	269019	REF		
K7	Relay, 4 PDT, 5V coil	272716	1		
Q1, Q8	Tstr, silicon, PNP	195974	2		
Q2	Tstr, germanium, PNP	148643	1		
Q3	Tstr, silicon, NPN	168716	1		
Q4	Tstr, silicon, NPN, dual, monolithic	295717	1		
Q5	Tstr, silicon, NPN, Super beta dual monolithic	284075	1		
Q6, Q9, Q10	Not Used				
Q7	Tstr, silicon, PNP, selected	280198	2		
Q11	Tstr, selected	321638	1		
R1	Res, comp, 1M $\pm 5\%$, 1/4w	182204	1		
R2	Res, comp, 47k $\pm 5\%$, 1/2w	150219	1		

REF DESIG	DESCRIPTION	STOCK NO	TOT QTY	REC QTY	USE CODE
R3	Res, comp, 910k $\pm 5\%$, 2w	110171	1		
R4	Not Used				
R5, R6	Res, ww, 4.45M	284505	1		
R7	Res, ww, 899.55k				
R10	Res, ww, 99.95k				
	} Matched Input Divider Set				
R8	Res, var, cer met, 1k $\pm 20\%$, 1/2w	267856	1		
R9	Res, var, cer met, 100 Ω $\pm 20\%$, 1/2w	267823	1		
R11	Res, met flm, 10k $\pm 1\%$, 1/8w	168260	1		
R12	Res, met flm, 13.7k $\pm 1\%$, 1/8w	236752	1		
R13	Res, met flm, 34k $\pm 1\%$, 1/8w	261602	1		
R14	Res, met flm, 2.61k $\pm 1\%$, 1/8w	289983	1		
R15	Res, met flm, 232 Ω $\pm 5\%$, 1/8w	289975	1		
R16	Res, met flm, 100k $\pm 1\%$, 1/8w	248807	1		
R17	Res, var, cer met, 100k $\pm 20\%$, 1/2w	268581	1		
R18, R19	Res, comp, 100M $\pm 10\%$, 1/2w	190520	2		
R20, R33	Res, comp, 10k $\pm 5\%$, 1/4w	148106	2		
R21	Res, comp, 270k $\pm 5\%$, 1/4w	220061	1		
R22, R23, R25, R26	Res, met flm, factory selected value (may not be installed)				
R24, R27	Res, met flm, 2M, Matched Set	290320	1		
R28	Res, var, cer met, 10k $\pm 10\%$, 1w	285171	1		
R29	Res, met flm, 3.83M $\pm 1\%$, 1/2w	289660	1		
R30, R31, R32	Not used				
R34	Res, comp, 3.3k $\pm 5\%$, 1/4w	148056	1		
R35 thru R38	Not used				
R39	Res, met flm, 1k $\pm 1\%$, 1/2w	151324	1		
R40	Res, comp, 1 Ω $\pm 5\%$, 1/2w	218693	1		
R41	Res, met flm, 60.4k $\pm 1\%$, 1/8w	291419	1		
R42	Res, comp, 1k $\pm 5\%$, 1/4w	148023	1		

REF DESIG	DESCRIPTION	STOCK NO	TOT QTY	REC QTY	USE CODE
R43, R44	Res, comp, $330\Omega \pm 5\%$, 1/4w	147967	2		
U1	IC, operational amplifier	284760	1		
U2	Not used				
U3	IC, voltage follower	288365	1		
U4	IC, DTL, Quad 2-Input Nand Power Gate	288597	1		
	Socket, IC, U4	276527	1		
	Cover (not shown)	298893	1		

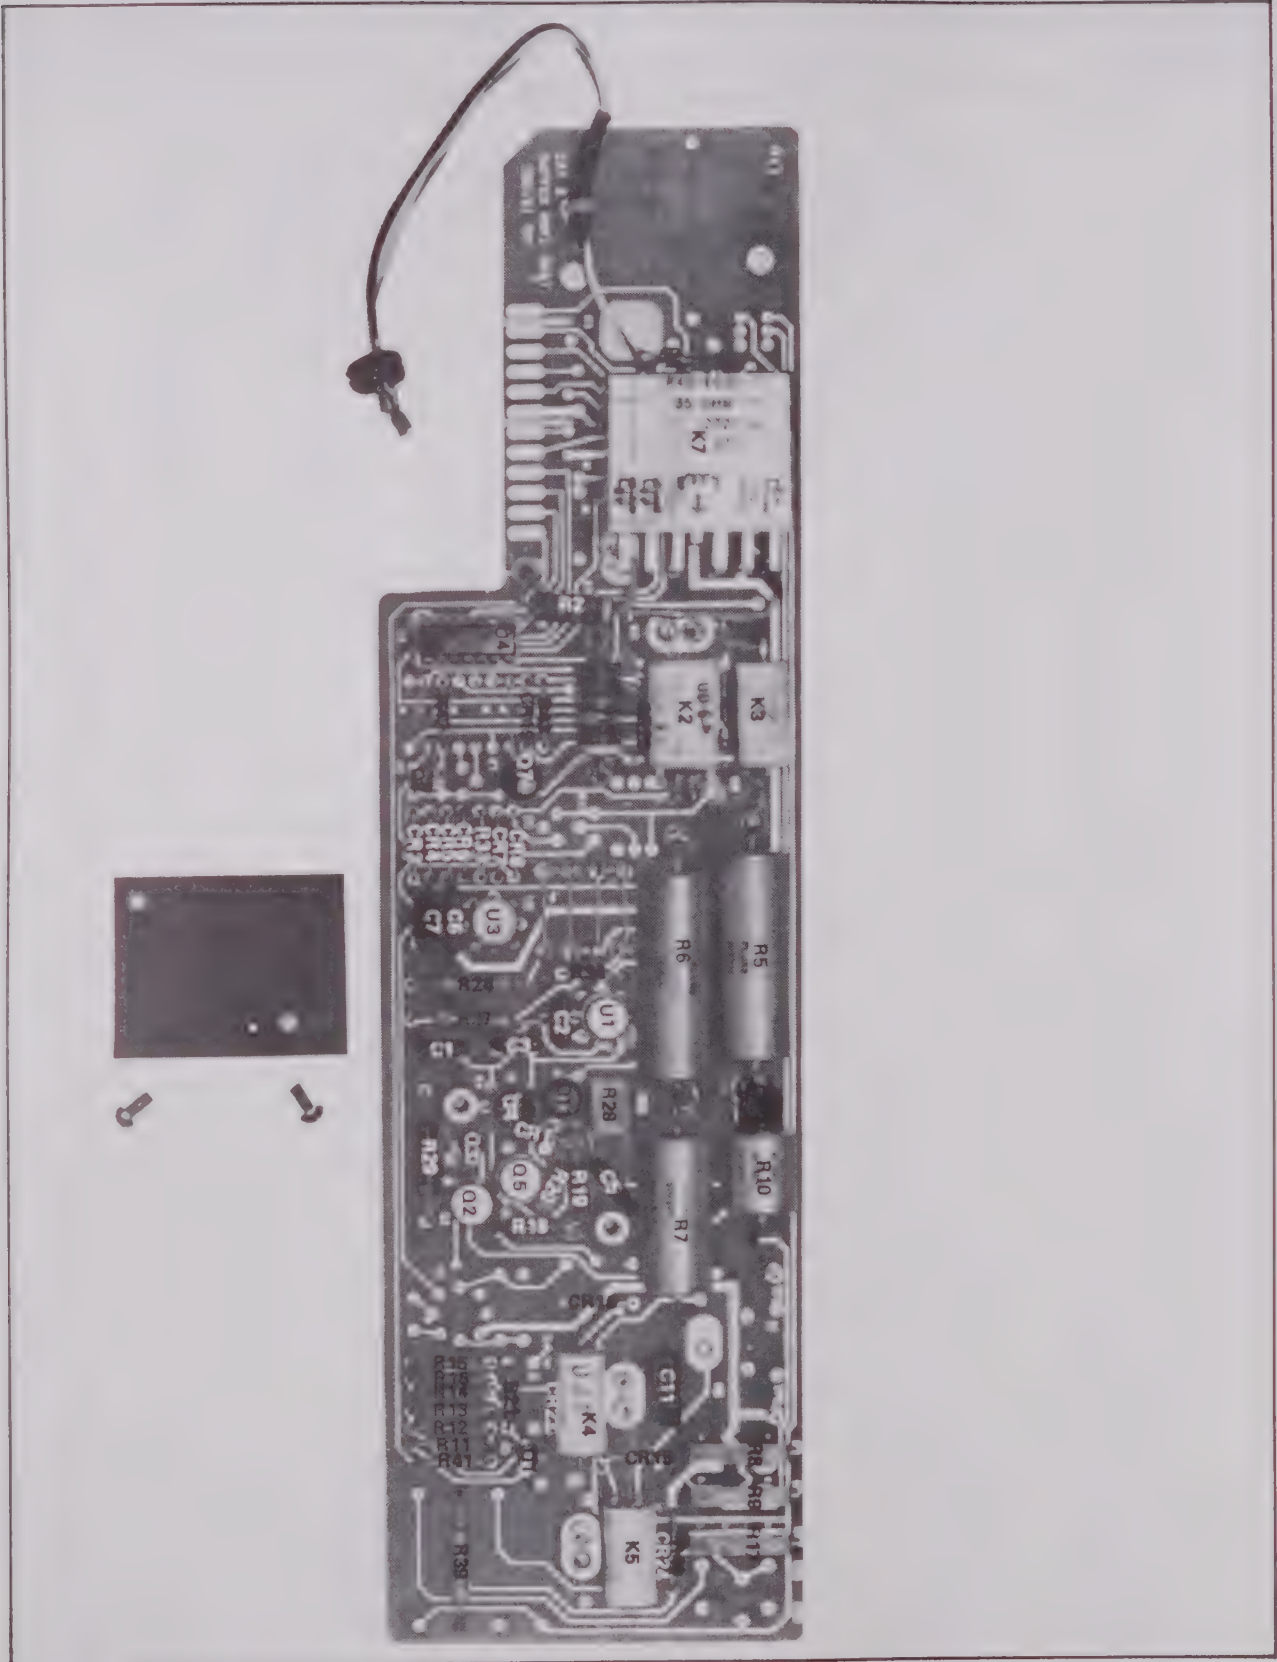


Figure 26. BUFFER AMPLIFIER PCB ASSEMBLY

REF DESIG	DESCRIPTION	STOCK NO	TOT QTY	REC QTY	USE CODE
A14	DISPLAY — Figure 27	324756	REF		
C1	Cap, cer, 0.05 uf $\pm 20\%$, 100V	149161	1		
C2	Cap, cer, 300 pf $\pm 10\%$, 500V	105734	1		
C3	Cap, elect, 20 uf $+50/-10\%$, 16V	241356	1		
C4	Cap, cer, 0.025 uf $\pm 20\%$, 100V	168435	1		
C5	Cap, cer, 0.005 uf $\pm 20\%$, 100V	175232	1		
C6	Cap, cer, 0.01 uf $\pm 20\%$, 100V (on bottom side of PCB)	149153	1		
CR1, CR2, CR7, CR16, CR18, CR19, CR25 thru CR30, CR32	Diode, germanium, 80 mA, 100 piv	149187	13		
CR3, CR4, CR17, CR20 thru CR24	Not used				
CR5, CR6, CR8, CR9, CR11, CR13 thru CR15, CR31, CR33 CR35	Diode, silicon, 150 mA	203323	11		
J1, J10	Connector, female, 12 contact	291898	2		
J2, J5, J7, J8, J11, J12, J13	Connector, female, 24 contact	295352	7		
J3, J4, J9	Connector, female, 24 contact with 6 removed	284240	3		
J14	Connector, female, 18 contact	291906	1		
Q1, Q21	Not used				
Q2, Q5	Tstr, silicon, PNP	195974	2		
Q3, Q6, Q7, Q19, Q20, Q34, Q35, Q36	Tstr, silicon, NPN	218396	8		
Q4, Q8	Tstr, silicon, unijunction	268110	2		
Q9, Q10, Q17, Q18	Tstr, silicon, NPN	245480	4		
Q22 thru Q26	Tstr, silicon, NPN	218511	5		

REF DESIG	DESCRIPTION	STOCK NO	TOT QTY	REC QTY	USE CODE
Q27 thru Q31	Tstr, silicon, PNP	266619	5		
Q33, Q33	Tstr, FET, N-channel	288324	2		
Q37	Tstr, silicon, NPN	168708	1		
R1, R3	Not used				
R2, R4	Res, comp, 82k $\pm 5\%$, 1/4w	188458	2		
R5	Res, comp, 6.8k $\pm 5\%$, 1/4w	148098	1		
R6, R11, R20, R25	Res, comp, 3.9k $\pm 5\%$, 1/4w	148064	4		
R7,	Res, comp, 470 Ω $\pm 5\%$, 1/4w	147983	1		
R8, R18, R41	Res, comp, 2.7k $\pm 5\%$, 1/4w	170720	3		
R9, R63	Res, comp, 12k $\pm 5\%$, 1/4w (R63 on bottom side of PCB)	159731	2		
R10	Res, comp, 1k $\pm 5\%$, 1/4w	148023	1		
R12	Res, comp, 75k $\pm 5\%$, 1/4w	220525	1		
R13, R30	Res, comp, 2.2k $\pm 5\%$, 1/4w	148049	2		
R14	Res, comp, 33k $\pm 5\%$, 1/4w	148155	1		
R15	Res, comp, 27 Ω $\pm 5\%$, 1/4w	160812	1		
R16	Res, var, comp, 150k $\pm 20\%$, 1/2w	256479	1		
R17	Res, comp, 1.8k $\pm 5\%$, 1/4w	175042	1		
R19, R48 thru R54, R64, R65, R66	Res, comp, 10k $\pm 5\%$, 1/4w (R64 on bottom side of PCB)	148106	10		
R21, R22, R59	Res, comp, 390 Ω $\pm 5\%$, 1/4w	147975	3		
R23, R24	Res, comp, 16k $\pm 5\%$, 1/4w	221606	2		
R26, R27, R28	Res, comp, 1.2k $\pm 5\%$, 1/4w	190371	3		
R29, R34 thru R38, R61	Res, comp, 8.2k $\pm 5\%$, 1/4w	160796	7		
R31	Res, comp, 430 Ω $\pm 5\%$, 1/4w	203869	1		
R32	Res, comp, 330 Ω $\pm 5\%$, 1/4w	147967	1		
R33	Not used				

REF DESIG	DESCRIPTION	STOCK NO	TOT QTY	REC QTY	USE CODE
R39	Res, comp, 820 Ω $\pm$ 5%, 1/4w	148015	1		
R40	Res, comp, 22k $\pm$ 5%, 1/4w	148130	1		
R42	Not used				
R43 thru R46, R55, R56, R62	Res, comp, 39 Ω $\pm$ 5%, 1/4w	193391	7		
R47	Res, comp, 3.3k $\pm$ 5%, 1/4w	148056	1		
	Switch Assembly	325035	1		
	Switch, Range S2 thru S6	325985	1		
	Switch, Function S8 thru S11, S14	325927			
	Flex circuit	307504	1		
U1	IC, TTL, Hex Inverter Buffer Driver	288605	1		
U2, U3	IC, TTL, dual J-K flip flop	268441	2		
U4	IC, Decoder Driver, DM/SN7441AN, NS8840N	267211	1		
V1	Tube, polarity indicator	272922	1		
V2 thru V7	Tube, neon readout	271494	6		
A15	Display, function assembly (lamp, P/N 242476 may be purchased separately)	324798	1		
	Socket, IC, 14 contact	291542	1		
	Socket, IC, 16 contact	291534	3		

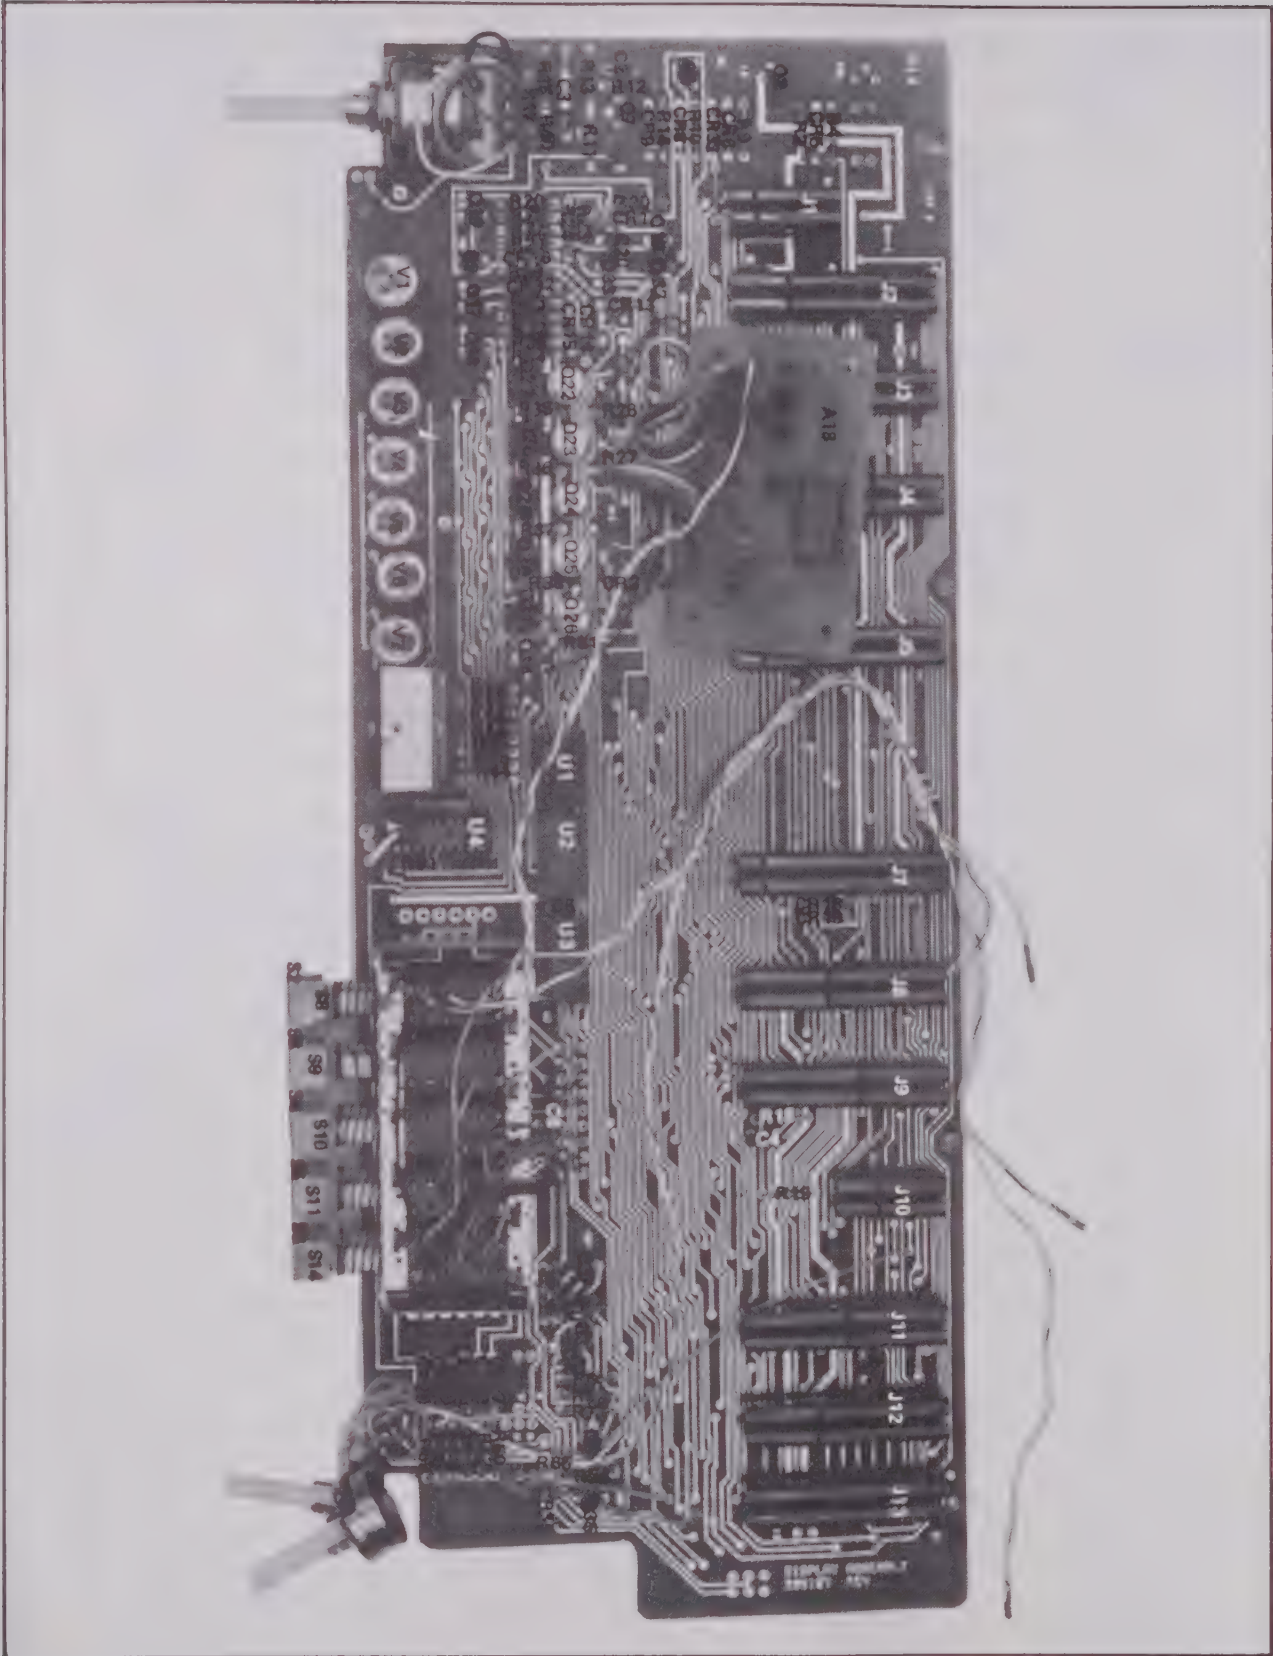


Figure 27. DISPLAY

REF DESIG	DESCRIPTION	STOCK NO	TOT QTY	REC QTY	USE CODE
A18	DECIMAL LOGIC ASSEMBLY (Figure 28)	324806	REF		
Q1 thru Q7, Q10	Tstr, silicon, NPN	245480	8		
Q8, Q9	Tstr, silicon, NPN	218396	2		
R1, R5	Res, comp, 2.2k $\pm$ 5% , 1/4w	148049	3		
R2, R4	Res, comp, 22k $\pm$ 5%, 1/4w	148130	2		
R3	Res, comp, 10k $\pm$ 5%, 1/4w	148106	1		
R6	Res, comp, 3.3k $\pm$ 5%, 1/4w	148056	1		
U1	IC, TTL, Quad 2 - Input Nor Gate	268540	1		
	Socket, IC, 14-Contact	291542	1		

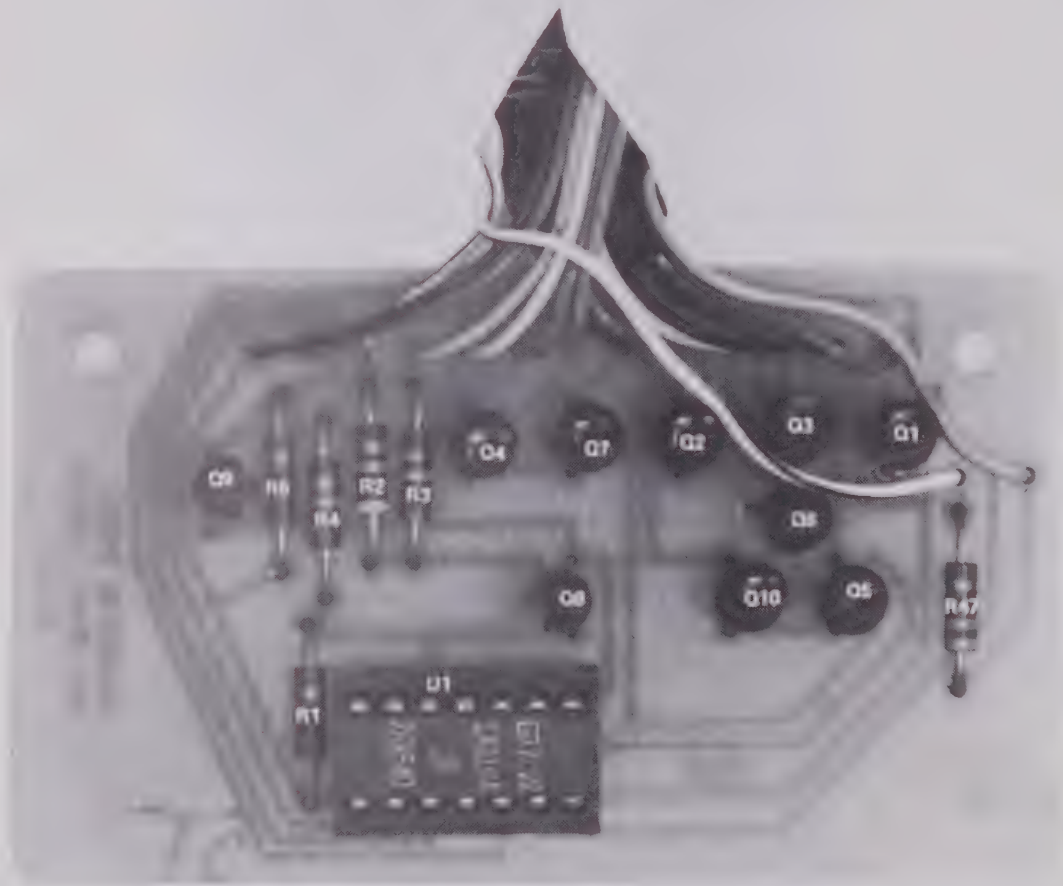


Figure 28. DECIMAL LOGIC ASSEMBLY

REF DESIG	DESCRIPTION	STOCK NO	TOT QTY	REC QTY	USE CODE
A16	FRONT PANEL ASSEMBLY (Figure 29)	324962	REF		
C1	Cap, cer, 47 pf $\pm 10\%$, 2kV/3.5kV (mounted on back of panel)	282145	1		
R3	Res, comp, 10M $\pm 10\%$, 1/2w (mounted on back of panel)	108142	1		
S1	Switch, toggle	326363	1		
	Binding Post, red	275552	1		
	Binding Post, black	275560	1		
	Binding Post, blue	275578	1		
	Boot, pushbutton switch	320283	1		
	Handle	288241	2		
	Link, shorting	190778	1		

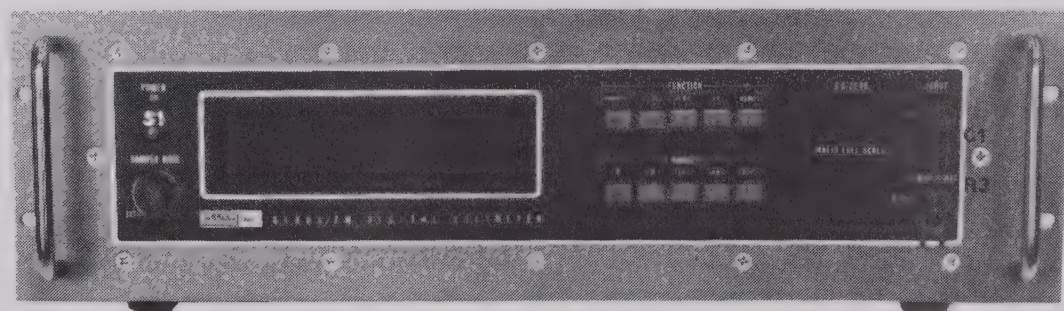


Figure 29. FRONT PANEL ASSEMBLY

REF DESIG	DESCRIPTION	STOCK NO	TOT QTY	REC QTY	USE CODE
A17	REAR PANEL ASSEMBLY (Figure 30)	324970	REF		
F1	Fuse fast acting, 1/2 amp, 250v	152858	1		
J1	Connector, box receptacle	267294	1		
J41, J44	Binding post, red	275552	2		
J42	Binding post, black	275560	2		
J43	Binding post, blue	275578	2		
S1	Switch, slide, DPDT	226274	1		
XF1	Fuseholder	212506	1		
	Cable assembly, AC	324988	1		
	Cable assembly, print out	325019	1		



Figure 30. REAR PANEL ASSEMBLY

MANUFACTURERS' CROSS REFERENCE LIST

FLUKE STOCK NO.	MFR.	MFR. PART NO.	FLUKE STOCK NO.	MFR.	MFR. PART NO.
105668	56289	C023B501J103M	148114	01121	CB1535
105692	71590	2DDH60N501K	148122	01121	CB1835
105734	71590	BB60301KW7W	148130	01121	CB2235
105890	71590	BB60181KS3N	148148	01121	CB2735
106732	71590	CF122	148155	01121	CB3335
108142	01121	EB1061	148163	01121	CB4735
108308	01121	EB4751	148171	01121	CB6835
108951	01121	EB5115	148189	01121	CB1045
110171	01121	HB9145	148346	14655	CD19F222J
110726	07910	1N964B	148361	14655	CD19F152J
112383	05277	1N4822	148429	14655	CD19F471J
113316	07910	1N748	148437	14655	CD15F391J
116111	05277	1N4817	148452	14655	CD15F271J
144717	01121	EB5105	148478	14655	CD15F151J
147892	01121	CB4705	148494	14655	CD15F101J
147926	01121	CB1015	148528	14655	CD15F560J
147934	01121	CB1515	148536	14655	CD15E470J
147959	01121	CB2215	148619	01295	2N1303
147967	01121	CB3315	148643	01295	2N1307
147975	01121	CB3915	149153	56289	C023B101F103M
147983	01121	CB4715	149161	56289	55C23A1
147991	01121	CB5615	149187	93332	1N270
148007	01121	CB6815	149484	01121	CB8205
148015	01121	CB8215	150359	95303	2N3053
148023	01121	CB1025	151324	91637	TYPE MFF 1/2
148031	01121	CB1525	152470	53021	D20F103F
148049	01121	CB2225	153858	71400	TYPE AGC
148056	01121	CB3325	155192	91637	TYPE MFF 1/2
148064	01121	CB3925	159731	01121	CB1235
148072	01121	CB4725	159947	00656	TYPE C1-1
148080	01121	CB5625	160226	05397	K2R2C20K
148098	01121	CB6825	160317	14655	CD15E330J
148106	01121	CB1035	160796	01121	CB8225
			160804	01121	CB2715

MANUFACTURERS' CROSS REFERENCE LIST

FLUKE STOCK NO.	MFR.	MFR. PART NO.	FLUKE STOCK NO.	MFR.	MFR. PART NO.
160812	01121	CB2705	182790	56289	150D684X9035A2
160937	01121	CB2245	182873	14655	CD19F562G
161810	03877	SG5658	182956	91637	TYPE MFF 1/8
161919	56289	196D105X0035	184366	73445	C280AE/A470K
161943	56289	196D475X0020	186296	73445	C426ARE125
161992	73445	C280AEA100K	187195	07910	CD36554
162008	73445	C280AEA47K	188375	91637	TYPE MFF 1/8
166199	07910	1N754			
			188458	01121	CB8235
168195	91637	TYPE MFF 1/8	188466	01121	CB3935
168229	91637	TYPE MFF 1/8	190249	89536	190249
168252	91637	TYPE MFF 1/2	190272	93332	1N456A
168260	91637	TYPE MFF 1/8	190371	01121	CB1225
168278	91637	TYPE MFF 1/2	190520	01121	EB1071
168435	56289	C128B101H253M	190553	84411	TYPE 863UW
168708	03508	2N3391	190728	89536	190728
168716	07263	S19254	190778	89536	190778
			193318	01121	CB9125
168823	73445	C426ARF50	193334	01121	CB5135
170423	14655	CD15F221J	193342	01121	CB5125
170720	01121	CB2725	193391	01121	CB3905
175042	01121	CB1825	193441	01121	CB1845
175224	14655	CD15E120J	193458	01121	CB1245
175232	56289	C023B101E502M	194803	73445	C280AEA220K
177998	14655	CD15E270J	194944	01121	CB1065
178616	73445	C437ARG250	195974	04713	2N3906
180406	07910	1N758	198390	01121	CB2255
180463	07910	1N968B	200030	91637	RN55D1820F
			203323	03508	DHD1105
180505	18927	1N276	203869	01121	CB4315
180554	07910	CD12599	208975	14655	CD19F472J
182204	01121	CB1055	212506	71400	TYPE FHN26G1
			218081	04713	MPS6520
182212	01121	CB1545	218396	04713	2N3904

MANUFACTURERS' CROSS REFERENCE LIST

FLUKE STOCK NO.	MFR.	MFR. PART NO.	FLUKE STOCK NO.	MFR.	MFR. PART NO.
218511	95303	60994	237297	91637	TYPE MFF 1/8
218693	01121	EB1065	240937	89536	240937
219097	15898	765972	241083	91637	TYPE MFF 1/8
220053	01121	CB6235	241091	91637	TYPE MFF 1/8
220061	01121	CB2735	241356	73445	C426ARE20
220525	01121	CB7535	241471	91637	TYPE MFF 1/8
220541	01121	CB8245	241497	91637	TYPE MFF 1/8
221580	01121	CB1135	245480	07263	S24496
221606	01121	CB1635	246066	04713	EL131
221903	01121	CB6215	246223	91637	TYPE MFF 1/8
221911	01121	CB6225	247213	91637	TYPE MFF 1/8
221952	01121	CB3055	248807	91637	TYPE MFF 1/8
221960	01121	CB6255	248906	95303	CA3046
221994	01121	CB2765	249052	07910	IN963B
225599	07263	S22650	249284	89536	249284
225961	89536	225961	256479	71450	TYPE 45
226134	14655	CD15F151F500	257501	17856	DN423
226209	91637	TYPE MFF 1/8	260323	91637	TYPE MFF 1/8
226274	82389	46256LFE	260356	91637	TYPE MFF 1/8
226316	00656	TYPE MFF C1-1	260364	91637	TYPE MFF 1/8
229146	91637	TYPE MFF 1/8	260547	91637	TYPE MFF 1/8
229492	91637	TYPE MFF 1/8	260554	07910	CD55105
229898	04713	MPS6522	260562	84411	863UW47391
229930	91293	JMC2951	261180	71450	190PC200B
234708	91637	TYPE MFF 1/8	261370	22767	S1330
234971	91637	TYPE MFF 1/8	261388	04713	SPF179
234989	91637	TYPE MFF 1/8	261602	91637	TYPE MFF 1/8
235150	91637	TYPE MFF 1/8	261651	91637	TYPE MFF 1/8
235176	91637	TYPE MFF 1/8	261842	01121	CB6205
235266	91637	TYPE MFF 1/8	261883	91637	TYPE MFF 1/8
235234	91637	TYPE MFF 1/8	266312	04713	MC862P
235309	91637	TYPE MFF 1/8	266619	07263	2N4888
235333	91637	TYPE MFF 1/8	267120	73445	C280AE/A27K
236752	91637	TYPE MFF 1/8	267153	04713	MC839P
236901	91637	C437ARF160	267211	89536	267211
236935	73445	C426ARD200	267229	91637	TYPE MFF 1/8
237206	91637	TYPE MFF 1/8			

MANUFACTURERS' CROSS REFERENCE LIST

FLUKE STOCK NO.	MFR.	MFR. PART NO.	FLUKE STOCK NO.	MFR.	MFR. PART NO.
267294	13511	97-3102A-10SL	272138	12040	DM8570
267617	00779	85863-5	272153	91637	TYPE MFF 1/8
267823	71450	190PC200B	272237	07263	2N4946
267856	71450	190PC102B	272252	07263	FD333
267872	71450	190PC502B	272716	77342	TYPE R40
267880	71450	190PC103B	272732	73445	C437ARD1600
267963	17856	DN503	272815	91637	TYPE MFF 1/8
268011	AMI	T-1483	272823	91637	TYPE MFF 1/8
268110	03508	2N6027	272831	01121	CB6205
268367	04713	MC836P	272922	83594	B585-6ST
268375	04713	MC846P	273037	73445	C280CFA47
268383	01295	SN15832N	273151	74970	273-1-2
268441	18324	C4312A	274795	89536	274795
268540	18324	C4319A	275321	89536	275321
268557	18324	C4321A	275362	89536	275362
268581	71450	190PC104B	275552	32767	820-65
268789	91637	TYPE MFF 1/8	275560	32767	820-45
268821	91637	TYPE MFF 1/8	275578	32767	820-55
268862	71590	J61993	275792	56289	39D805G350GE4
268904	84411	TYPE X663F	276527	23880	TSA-2900-14W
269019	71707	U-6-P	276535	23880	TSA-2900-16W
269076	95303	2N4037	277657	89536	277657
269092	89536	269092	277665	89536	277665
271320	56289	150D335X5020B2	277905	89536	277905
271361	91637	TYPE MFF 1/8	277913	89536	277913
271403	54294	TYPE SP22	278309	89536	278309
271411	54294	TYPE VA32	280198	89536	280198
271494	83594	B5853ST	281790	91637	TYPE MFF 1/8
271502	12040	LM301A	281832	01121	CB5105
271619	84411	X463UW1059-50	281865	12615	SL-841-777
271908	91637	TYPE MFF 1/8	282145	56289	HVD3-47
271924	07910	CFE13041	283697	91637	TYPE MFF 1/8
272070	71707	UD-6-P	284075	11726	QD200-78
272096	91637	TYPE MFF 1/8	284091	12617	TYPE MRR5
			284174	70903	KHS-7041
			284240	00779	TYPE 583650
			284505	89536	284505
			284687	84411	X463UW1059.50
			284711	71450	190PC201B
			284760	12040	LM308H

MANUFACTURERS' CROSS REFERENCE LIST

FLUKE STOCK NO.	MFR.	MFR. PART NO.	FLUKE STOCK NO.	MFR.	MFR. PART NO.
284807	91637	TYPE MFF 1/8			
284885	84411	863UW33351	288563	91637	TYPE MFF 1/8
284968	75042	TYPE MEH	288597	04713	MC858P
284976	91637	TYPE MFF 1/4	288605	01295	SN7416P
285031	75915	279.015	288639	91637	TYPE MFF 1/8
285114	71450	360S-200B	288647	89536	288647
285122	71450	360S-500A	288654	89536	288654
285130	71450	360S-101A			
285148	71450	360S201A			
			288761	49956	RS2048
285163	71450	360S-202A	288803	01295	SN158097N
285171	71450	360S-103A	288811	01537	MC856P
285189	91637	TYPE MFF 1/8	288837	01295	SN74100N
285213	71450	190PC253B	288845	01295	SN7402N
285239	89536	285239	288852	04713	MC8312P
285361	89536	285361	288928	12040	LM308AH
287623	89536	287623	289066	91637	TYPE MFF 1/8
288043	89536	288043	289439	91637	TYPE MFF 1/8
288159	89536	288159	289470	91637	TYPE MFF 1/8
			289637	72982	538-006D-9-35
288175	89536	288175	289660	00327	TYPE M12
288183	89536	288183			
288217	89536	288217	289850	12617	TYPE MRR2
288225	89536	288225	289975	91637	TYPE MFF 1/8
288233	89536	288233	289983	91637	TYPE MFF 1/8
288241	88245	1093-17	290130	89536	290130
288282	71450	360S-502A	290148	89536	290148
288308	71450	360S-104A	290155	89536	290155
288324	15818	U2412	290163	89536	290163
288365	12040	LM310H	290247	89536	290247
288381	95303	40372	290262	89536	290262
288480	91637	TYPE MFF 1/8	290270	89536	290270
288498	91637	TYPE MFF 1/8	290296	89536	290296
288555	91637	TYPE MFF 1/2			


MANUFACTURERS' CROSS REFERENCE LIST

FLUKE STOCK NO.	MFR.	MFR. PART NO.	FLUKE STOCK NO.	MFR.	MFR. PART NO.
290304	89536	290304	298810	89536	298810
			298919	89536	298919
			298893	89536	298893
290312	89536	290312	298992	89536	298992
290320	89536	290320	299610	89536	299610
290346	89536	290346			
290650	89536	290650	301382	89536	301382
291120	71450	360S501A			
291294	91637	TYPE MFF 1/8	301390	89536	301390
291351	91637	TYPE MFF 1/8			
291419	91637	TYPE MFF 1/8	303412	89536	303412
291427	91637	TYPE MFF 1/8			
291526	89536	291526	303461	89536	303461
291534	00779	583529	306118	01295	GA3938A
291542	00779	583527	306126	01295	GA3937A
291690	89536	291690	307298	89536	307298
291898	00779	583650-2	307504	89536	307504
291906	00779	583650-3	309633	77342	TYPE R40
292193	89536	292193	309849	72982	8131-050- 651-224M
292201	89536	292201			
292888	89536	292888	311746	89536	311746
292896	89536	292896	312637	91637	TYPE MFF 1/8
292904	89536	292904	320028	91637	TYPE MFF 1/8
292946	71785	133-59-02-011	320283	89536	320283
292953	01537	MC7400P	323865	89536	323865
292979	01295	SN7404N			
293670	91637	TYPE MFF 1/8	324061	89536	324061
293688	91637	TYPE MFF 1/8			
295121	89536	295121	324145	89536	324145
295196	56289	39D718G010JP4			
295287	12615	SL490-458	324194	89536	324194
295337	28213	SF3402			
295352	00779	583650-9	324756	89536	324756
295535	89536	295535	324764	89536	324764
295717	11726	QD101-78E	324772	89536	324772
296582	75915	281005	324780	89536	324780
297671	89536	297671			
297713	89536	297713	324798	89536	324798
297762	89536	297762	324806	89536	324806
297903	89536	297903	324962	89536	324962
			324970	89536	324970
298554	89536	298554	324988	89536	324988

MANUFACTURERS' CROSS REFERENCE LIST

JOHN FLUKE MFG. CO., INC.

P. O. Box 43210
Mountlake Terrace, Washington 98043

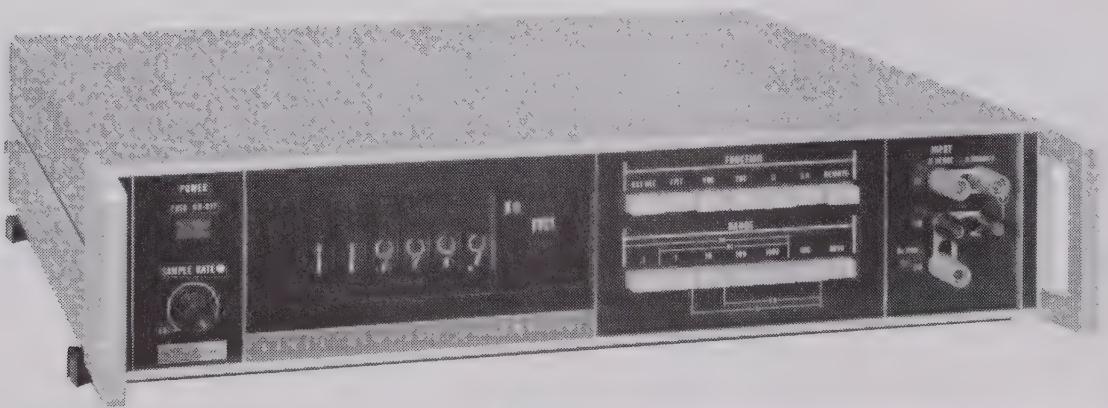

MODEL
8400A
DIGITAL VOLTMETER

Rev. 1 February 15, 1972

Rev. 2 May 26, 1972

Rev. 3 May 18, 1973

Rev. 4 Oct. 18, 1974

WARRANTY

The JOHN FLUKE MFG. CO., INC.* warrants each instrument manufactured by them to be free from defects in material and workmanship. Their obligation under this Warranty is limited to servicing or adjusting an instrument returned to the factory for that purpose, and to making good at the factory any part or parts thereof; except tubes, fuses, choppers and batteries, which shall, within one year after making delivery to the original purchaser, be returned by the original purchaser with transportation charges prepaid, and which upon their examination shall disclose to their satisfaction to have been thus defective. If the fault has been caused by misuse or abnormal conditions of operations, repairs will be billed at a nominal cost. In this case, an estimate will be submitted before work is started, if requested.

If any fault develops, the following steps should be taken:

1. Notify the John Fluke Mfg. Co., Inc.,* giving full details of the difficulty, and include the Model number, type number, and serial number. On receipt of this information, service data or shipping instructions will be forwarded to you.
2. On receipt of the shipping instructions, forward the instrument prepaid, and repairs will be made at the factory. If requested, an estimate will be made before the work begins, provided the instrument is not covered by the Warranty.

"The foregoing warranty is in lieu of all other warranties, express or implied, including but not limited to, any implied warranty of merchantability, fitness or adequacy for any particular purpose or use. Fluke shall not be liable for any special, incident or consequential damages."

SHIPPING

All shipments of John Fluke Mfg. Co., Inc.* instruments should be made via United Parcel Service or "Best Way"*** prepaid. The instrument should be shipped in the original packing carton or if it is not available, use any suitable container that is rigid. If a substitute container is used, the instrument should be wrapped in paper and surrounded with at least four inches of excelsior or similar shock-absorbing material.

CLAIM FOR DAMAGE IN SHIPMENT

The instrument should be thoroughly inspected immediately upon receipt. All material in the container should be checked against the enclosed packing list. The manufacturer will not be responsible for shortages against the packing sheet unless notified immediately. If the instrument fails to operate properly, or is damaged in any way, a claim should be filed with the carrier. A full report of the damage should be obtained by the claim agent, and this report should be forwarded to John Fluke Mfg. Co., Inc.* Upon receipt of this report, you will be advised of the disposition of the equipment for repair or replacement. Include the model number, type number, and serial number when referring to this instrument for any reason.

The John Fluke Mfg. Co., Inc.* will be happy to answer all application questions which will enhance your use of this instrument. Please address your requests to JOHN FLUKE MFG. CO., INC., P.O. Box 43210, MOUNTLAKE TERRACE, WASHINGTON 98043*.

* For European customers: FLUKE (Nederland) B.V.
Ledeboerstraat 27
Tilburg, Netherlands

** For European customers, Air Freight prepaid.

CHANGE/ERRATA INFORMATION

MANUAL — **TITLE: 8400A DIGITAL VOLTMETER**
ISSUE: Rev. 4 - OCTOBER 18, 1974

Please make changes in this manual according to the following change and/or errata information:

ERRATA #

- Page 1-2 paragraph 1-17
- | | | |
|--|----------------|--|
| Input Impedances $\pm 10V$ range | 10,000 megohms | } (change from) shunted by less than 100 p.f.
(to) Typical 8400A, Filter In |
|--|----------------|--|
- Page 1-3 paragraph 1-17
- RESPONSE TIME
- | | |
|-------------------------------|---|
| Filter "out" | (change from) less than 33 milliseconds (to) 33 milliseconds on 10V, 100V, 1000V ranges; 39 milliseconds on 1V range; 129 milliseconds on 0.1V range. |
| Shock and Vibration | (change from) meets requirements of MIL-T-21200H and MIL-E-16400F (to) Meets requirements of MIL-T-21200L and MIL-E-16400F |
| Size | (change from) 3½" H x 17"W x 18"D (88.1 mm x 432 mm x 457.4mm) (to) 3½"H x 17"W x 17¼"D (88.1mm x 432mm x 436.9mm) |
- Page 1-6 paragraph 1-18
- RESPONSE TIME
- | | |
|------------------------|--|
| Filter "out" | (change from) Less than 33 milliseconds (to) 33 milliseconds on 100 k Ω , 1000 k Ω ranges; 39 milliseconds on 100 Ω , 1000 Ω , 10,000 Ω ranges; 129 milliseconds on 10 Ω range; 33 to 60 milliseconds on 10,000 k Ω ranges. |
|------------------------|--|
- Page 5-31
- Delete CR16 and CR32 from list for FLUKE STOCK NO. 149187, USE CODE Q; Change TOT QTY from 16 to 14.
- Page 5-32
- Add CR16 and CR32 to list for FLUKE STOCK NO. 203323, USE CDE Q; change TOT QTY from 11 to 13.
- Page 5-33
- Delete Q36 from list for FLUKE PART NO. 218396; change TOT QTY from 8 to 7
- Add Q36 to list for FLUKE PART NO. 168708; change TOT QTY from 1 to 2.

8400A DIGITAL VOLTMETER

8400A Option 01 Page 8

Change REF DESIG entry CR1 thru CR4, CR15 to read CR1 thru CR6, CR15, change the FLUKE STOCK NO. from 261370 to 375907, change TOT QTY from 5 to 7.

Delete REF DESIG, DESCRIPTION, FLUKE STOCK NO., and TOT QTY information for CR5, CR6

8400A Option 03 Page 18

Change the value of R22 in the DESCRIPTION from 1.62k to 1.27k.

Change the FLUKE STOCK NO. from 283697 to 267369.

8400A Option 03 Page 19

Change the value of R53 in the DESCRIPTION from 6.81k to 4.53k

Change the FLUKE STOCK NO. from 268417 to 260331

8400A Option 06 Page 7

Change REF DESIG CR1 thru CR4 to CR1 thru CR6, change STOCK NO. from 261370 to 375907

Change TOT QTY from 4 to 6.

Delete REF DESIG, DESCRIPTION, STOCK NO. and TOT QTY information for CR5, CR6

8400A Option 07 Page 1 Paragraph 6-4

Change step c. to read:

- c. Remove the rear guide for the DC External Reference PCB.

Change step d. to read:

- d. Mount the Rear Input Connector to the bulkhead forming the inclosure around the power transformer.

NOTE

The rear input assembly must be lowered into the inclosure on a diagonal; the output connectors pointing toward the right rear corner of the inclosure. Turn the assembly so that the connectors extend out through the openings in the rear panel and secure it in place.

Change step e to read:

- e. Replace the rear guide for the DC External Reference PCB.

Add the Rear Input harness to terminal connection(BLUE - GUARD)to the list of connection in step g.

8400A Option 09 Page 12

Change REF DESIG CR6, CR7, CR20 to CR6, CR7, CR13, CR14, CR16, CR20

Change TOT QTY from 3 to 6.

Delete REF DESIG and DESCRIPTION information for CR12, CR13.

Delete REF DESIG, DESCRIPTION, STOCK NO, and TOT QTY information for CR14, CR16

Change REF DESIG CR15, CR18 to CR12, CR15, CR18; Change TOT QTY from 2 to 3

8400A DIGITAL VOLTMETER

Page 7-17/7-18 Figure 7-8

Change the value of R52 from 6.81K to 4.53K

Change the value of R22 from 1.62K to 1.27K

CHANGE # 1

Page 1-7 Paragraph 1-18

Add under REFERENCE INPUT:

Type 3-Wire, Real Time, Average Reading

Page 7-37/7-38 Figure 7-18

Add CR12 and CR13 to the schematic as shown below:

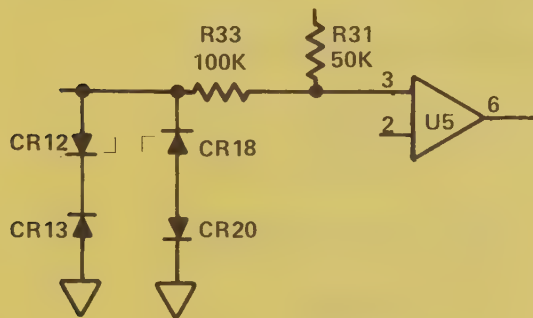


Table of Contents

SECTION	TITLE	PAGE
1	INTRODUCTION AND SPECIFICATIONS	1-1
	1-1. Description	1-1
	1-16. Specifications	1-2
	1-19. Accessories	1-8
2	OPERATING INSTRUCTIONS	2-1
	2-1. Introduction	2-1
	2-3. Installation	2-1
	2-5. Repackaging For Shipment	2-1
	2-7. Options and Accessories	2-1
	2-9. Input Power Requirements	2-1
	2-11. Operating Features	2-2
	2-13. Measurement Instructions	2-2
	2-15. External Reference	2-4
	2-22. Remote Control Unit	2-6
	2-33. Data Output Unit	2-7
	2-51. Operating Notes	2-11
3	THEORY OF OPERATION	3-1
	3-1. Introduction	3-1
	3-3. Block Diagram Analysis	3-1
	3-25. Circuit Descriptions	3-4

(continued on page ii)

TABLE OF CONTENTS, *continued*

SECTION	TITLE	PAGE
4	MAINTENANCE	4-1
4-1.	Introduction	4-1
4-5.	Service Information	4-1
4-8.	General Maintenance	4-1
4-30.	Performance Test	4-7
4-36.	Calibration Procedure	4-8
4-50.	Compensating Component Selection	4-11
4-53.	Troubleshooting	4-12
5	LIST OF REPLACEABLE PARTS	5-1
5-1.	Introduction	5-1
5-4.	Parts List Column Descriptions	5-1
5-5.	Manufacturers' Cross Reference List Column Descriptions	5-2
5-6.	How to Obtain Parts	5-2
5-9.	Serial Number effectivity	5-3
6	OPTIONS AND ACCESSORIES	6-1
6-1.	Introduction	6-1
6-3.	Options	6-1
6-5.	Accessories	6-1
	AC Converter, Option —01	1
6-1.	Introduction	1
6-3.	Specifications	1
6-5.	Installation	1
6-7.	Operating Instructions	1
6-9.	Theory of Operation	1
6-17.	Maintenance	3
6-37.	List of Replaceable Parts	6
6-39.	Serial Number Effectivity	9
	Ohms Converter, Option —02	1
6-1.	Introduction	1
6-3.	Specifications	1
6-5.	Installation	1
6-7.	Operating Instructions	1
6-9.	Theory of Operation	1
6-20.	Maintenance	2
6-42.	List of Replaceable Parts	5
6-43.	Serial Number Effectivity	5

(continued on page iii)

SECTION	TITLE	PAGE
6, continued	Data Output Unit, Option –03	1
	6-1. Introduction	1
	6-3. Specifications	1
	6-5. Installation	1
	6-7. Operating Instructions	1
	6-9. Theory of Operation	2
	6-28. Maintenance	7
	6-47. List of Replaceable Parts	14
	6-49. Serial Number Effectivity	21
	Remote Control Unit, Option –04	1
	6-1. Introduction	1
	6-3. Specifications	1
	6-5. Installation	1
	6-7. Operating Instructions	1
	6-9. Theory of Operation	1
	6-23. Maintenance	4
	6-31. List of Replaceable Parts	7
	6-35. Serial Number Effectivity	10
	DC External Reference, Option –05	1
	6-1. Introduction	1
	6-3. Specifications	1
	6-5. Installation	1
	6-7. Operating Instructions	1
	6-9. Theory of Operation	2
	6-19. Maintenance	3
	6-39. List of Replaceable Parts	5
	6-41. Serial Number Effectivity	8
	AC External Reference, Option –06	1
	6-1. Introduction	1
	6-3. Specifications	1
	6-5. Installation	1
	6-7. Operating Instructions	1
	6-9. Theory of Operation	2
	6-17. Maintenance	3
	6-34. List of Replaceable Parts	5
	6-36. Serial Number Effectivity	9
	Rear Input, Option –07	1
	6-1. Introduction	1
	6-3. Installation	1
	6-5. List of Replaceable Parts	1
	6-7. Serial Number Effectivity	2

(continued on page iv)

TABLE OF CONTENTS, *continued*

SECTION	TITLE	PAGE
<i>6, continued</i>		
	True RMS Converter, Option –09	
	6-1. Introduction	1
	6-3. Specifications	1
	6-4. Kit Installation	2
	6-6. Operation	2
	6-8. Theory of Operation	2
	6-22. Maintenance	5
	6-42. List of Replaceable Parts	10
	6-43. Serial Number Effectivity	10
	RACK MOUNTING FIXTURES	
	DOU, RCU MATING CONNECTOR	
	EXTERNAL REFERENCE MATING CONNECTOR	
	REAR INPUT MATING CONNECTOR	
	EXTENDER CARD	
	MODEL 80F-5 VOLTAGE DIVIDER	
	MODEL 80F-15 VOLTAGE DIVIDER	
	MODEL 80RF HIGH FREQUENCY PROBE	
	MODEL A90 CURRENT SHUNT	
7	GENERAL INFORMATION	7-1
8	SCHEMATIC DIAGRAMS	8-1

List of Illustrations

FIGURE	TITLE	PAGE
1-1.	Model 8400A Outline Drawing	1-4
2-1.	Controls, Terminals, and Indicators (Sheet 1 of 3)	2-2
2-2.	Remote Control Unit Trigger Requirements (External Command Entry)	2-7
2-3.	Data Output Unit Trigger Requirements	2-7
2-4.	Sample Sync Signal Timing	2-10
2-5.	Code Conversion	2-10
2-6.	Wiring Example, Acquisition Format, and Truth Tables for Serial Character, Parallel Bit Acquisition	2-12
2-7.	Minimum Lines Acquisition	2-13
2-8.	Suggested Guard Connections for Reduction of Common Mode-To-Normal Mode Signal Conversion	2-14
2-9.	Proper Guard Connections for (A) 2-Terminal Ω Measurements When Signal Leads are Short and (B) 4-Terminal Ω Measurements on 10Ω through $10,000\Omega$ Ranges	2-14
3-1.	Model 8400A Block Diagram	3-2
3-2.	Ohms and K Ohms Range Configuration	3-4
3-3.	Buffer Amplifier Block Diagram	3-5
3-4.	Active Filter	3-6
3-5.	A-to-D Converter and Logic Block Diagram	3-7
3-6.	Sample and Hold Switching	3-8
3-7.	Shift Register Outputs	3-9

(continued on page vi)

LIST OF ILLUSTRATIONS, *continued*

FIGURE	TITLE	PAGE
3-8.	Sixteen-State Binary Counter Output	3-9
3-9.	DVM Timing and Synchrony Diagram (Sheet 1)	3-10
3-10.	Basic Sample Command Oscillator	3-13
4-1.	Assembly Locations	4-2
4-2.	Function Switch Assembly	4-4
4-3.	Pushbutton Switch Disassembly	4-5
4-4.	Range Switch Assembly	4-6
4-5.	Pushbutton Switch Module Replacement	4-6
4-6.	Ext. Ref. and Filt Switch Disassembly	4-7
4-7.	Readout Check Equipment Connection	4-8
4-8.	Adjustment and Test Point Locations	4-9
4-9.	Equipment Connection for Calibration	4-10
4-10.	Assembly and Test Point Locations	4-13
4-11.	Troubleshooting DVM Digital Section	4-16
4-12.	Troubleshooting DVM Display	4-17
4-13.	A/D Converter Controls	4-18
4-14.	Analog Storage Controls	4-18
4-15.	Counter Operation	4-19
4-16.	Shift Register Operation	4-19
4-17.	A9TP2	4-20
4-18.	A9TP2	4-20
4-19.	A9TP2	4-21
5-1.	Model 8400A Digital Voltmeter	5-6
5-2.	Power Supply PCB Assembly	5-8
5-3.	Range Delay PCB Assembly	5-11
5-4.	Logic PCB Assembly	5-15
5-5.	A-to-D Converter PCB Assembly	5-19
5-6.	Active Filter PCB Assembly	5-21
5-7.	Buffer Amplifier PCB Assembly	5-25
5-8.	Display PCB Assembly	5-29

(continued on page vii)

LIST OF ILLUSTRATIONS, *continued*

FIGURE	TITLE	PAGE
AC Converter, Option –01		
6-1.	Circuit Diagram AC Converter	2
6-2.	Rectifier Output Waveforms	2
6-3.	AC Voltage Test Requirements	4
6-4.	AC Converter Range Calibration	5
6-5.	AC Converter Function Command Check	5
6-6.	AC Converter Relay Truth Table	6
6-7.	AC Converter PCB Assembly	10
Ohms Converter, Option –02		
6-1.	Simplified Diagram of Ohms Converter Showing Two Configurations	2
6-2.	Equipment Connections for Ohms Test	3
6-3.	Ohms Converter PCB Assembly	8
Data Output Unit, Option –03		
6-1.	Data Output Unit Block Diagram	2
6-2.	Explanation of Logic Symbolology Used in DOU	4
6-3.	DOU Timing Diagram	5
6-4.	Shift Register Load Sequence	6
6-5.	Control Signal Timing During Autorange	7
6-6.	Test and Calibration Equipment	8
6-7.	Decision Flow Chart DOU Troubleshooting	10
6-8.	Decision Aids (Sheet 1 of 4)	11
6-9.	Example Waveforms for Troubleshooting	14
6-10.	Data Output Unit No. 2 PCB Assembly	15
6-11.	Data Output Unit No. 1 PCB Assembly	19

(continued on page viii)

LIST OF ILLUSTRATIONS, *continued*

FIGURE	TITLE	PAGE
Remote Control Unit, Option –04		
6-1.	8400A Remote Control Unit Block Diagram	2
6-2.	Remote Control Sample Load Sequence	2
6-3.	Remote Control Unit Test Requirements	5
6-4.	Remote Control Unit Trouble Analysis (Flow Chart)	6
6-5.	Function and Range Code	7
6-6.	Remote Control Unit PCB Assembly	9
DC External Reference, Option –05		
6-1.	DC External Reference Simplified Diagram	2
6-2.	Voltage Distribution in MOSFET Q9	3
6-3.	Gate Driver Voltages	3
6-4.	Equipment Connections for DC External Reference Unit Calibration	4
6-5.	DC External Reference Stylized Waveforms	5
6-6.	DC External Reference PCB Assembly	6
AC External Reference, Option –06		
6-1.	Block Diagram AC External Reference Converter	2
6-2.	Rectifier Output Waveforms	2
6-3.	Equipment Connection for Testing	4
6-4.	AC External Reference PCB Assembly	6
True RMS Converter, Option –09		
6-1.	Terminal Block	2
6-2.	True RMS Converter Block Diagram	3
6-3.	True RMS Converter Adjustments and Test Points	7
6-4.	Equipment Connection for Crest Factor Adjust	9

List of Tables

TABLE	TITLE	PAGE
2-1.	Option and Accessories	2-1
2-2.	8400A Measurement Instructions	2-5
2-3.	External Reference Ratio Ranges	2-5
2-4.	Remote Control Unit Logic Interlocking	2-6
2-5.	Remote Control Unit Pin Assignment	2-7
2-6.	Data Output Unit Truth Tables and Logic Levels	2-8
2-7.	Data Output Unit Functional Pin Connections	2-9
2-8.	Overload Protection Characteristics	2-13
4-1.	Required Test Equipment	4-1
4-2.	DC Test Requirements (.01V to 1V)	4-8
4-3.	DC Test Requirements (10V, 100V, and 1000V)	4-8
4-4.	Ladder Calibration	4-11
4-5.	Comparator Level Adjustment	4-11
4-6.	Buffer Calibration	4-11
4-7.	Offset Correction Resistor Selection	4-12
4-8.	Power Supply Checks	4-12
Ohms Converter, Option –02		
6-1.	Current Output, Ω Configuration	2
6-2.	Required Resistance Values	3
6-3.	Kilohms Test Requirements	3
6-4.	Ohms Test Requirements	3
6-5.	K Ω Range Calibration	4
6-6.	Ohms Range Calibration	4

LIST OF TABLES, *continued*

TABLE	TITLE	PAGE
Remote Control Unit, Option –04		
6-1.	Function Codes	3
6-2.	Range Codes	3
6-3.	Counter Sequence	3
6-4.	Multiplexer Operation	4
AC External Reference, Option –06		
6-1.	AC External Reference Check	4
6-2.	AC External Reference Converter Range Calibration	5
True RMS Converter, Option –09		
6-1.	Test Equipment	5
6-2.	Calibration Adjustment/Check	6

Section 1

Introduction & Specifications

1-1. DESCRIPTION

1-2. The Model 8400A Digital Voltmeter is a versatile instrument with five full decades of digits plus a sixth digit for 20% overrange. Its mainframe accepts a family of analog and system options that may be installed in the field at any time, in any sequence, for expansion from a bench DVM into a full systems multimeter.

1-3. Fluke's Recirculating-Remainder* A/D conversion technique is used in the 8400A. This conversion circuitry periodically samples the input and serially digitizes the sample, providing a reliable DVM with high long-term accuracy and linearity plus superior environmental characteristics.

1-4. Basic DVM

1-5. DC voltages are measured on five ranges with up to 1 microvolt of resolution. 20% overranging with 1100 volt overload capability further characterizes these ranges. A non-blinking readout contains an in-line neon tube display showing polarity, overrange digit, and five full decades of digits followed by a lighted function annunciator. The speed at which the readout updates is controlled by a variable Sample Rate control, and the switched four-pole filter has true broad-band noise rejection that cannot integrate a constant offset error into the reading. The filter may be used with all analog options.

1-6. Pushbutton selection, 1000 volt guarding, full autoranging, instantaneous auto-polarity, and calibration of all standard and optional functions through the top guard cover are standard features of the 8400A.

1-7. Analog Options

1-8. AC voltages to 1100 volts are measured on four ranges over a frequency domain of 10 Hz to 100 kHz with up to 10 microvolts resolution. A zero control is not needed to maintain the extremely low "percent of range" portions of the specifications.

1-9. True four-terminal resistance measurements on the 10 ohm through 10K ohm ranges are made with very low power dissipation in the unknown resistor. The instrument autoranges through all resistance ranges, from 10 ohms to 12 megohms, with 100 microhm resolution.

1-10. Isolated four terminal DC/DC ratios are measured in real time via the DC External Reference option. The Reference input LO terminal may be elevated by as much as $\pm 13\text{V}$ from the input LO terminal without loss of ratio accuracy. Furthermore, the standard reference voltage span of +1V to +10.5V permits measurement of ratios from a wide number of sources. Special reference voltage ranges are available on request.

1-11. Three terminal AC/AC ratio measurements use the AC External Reference Option. Reference voltages from 0.1V to 105V may be applied on one of three internally selected ranges for highly accurate ratio determinations over a broad range of frequencies.

1-12. System Options

1-13. Isolated Data Output and Isolated Remote Control options use guarded toroids to transfer data and commands to and from the 8400A with no degradation of com-

mon-mode rejection specifications. These options are also DTL/TTL compatible and are designed to permit multiplexing of several 8400A's on common sets of control and data output lines. Moreover, they are buffered to prevent interaction between the DVM and the acquisition/control devices.

1-14. External Triggering of the 8400A is accomplished via its Data Output Unit, and resulting data may be acquired fully in parallel BCD format or serially by character in multiples of four-bits. A single control line enables automatic time delays that allow for full settling of the ana-

log input prior to digitization of the data transferred. Five flags provide continuous measurement status information for the acquisition device.

1-15. Remote Control is exerted by contact closures or logic levels. The 8400A's Control Command Storage feature permits the 8400A to latch on commands which may be later removed from inputs while the 8400A retains the commanded function and range in internal memory. Logical interlocks are a further important systems feature of this option, because they prevent incompatible calls.

1-16. SPECIFICATIONS

1-17. Mainframe

DC VOLTS

RANGES	$\pm 0.1V, \pm 1V, \pm 10V, \pm 100V, \pm 1000V$ (automatic polarity selection)
Resolution	$\pm 0.001\%$ of range, (1 μV maximum on $\pm 0.1V$ range)
Overrange	20%, $\pm 1100V$ maximum input on $\pm 1000V$ range
Overload	$\pm 1100V$ DC or RMS ($\pm 1500V$ peak) may be continuously applied to any range without damage.

ACCURACY (To 120% of range or $\pm 1100V$ maximum input)

24 hours	$\pm 10V, \pm 100V, \pm 1000V$ ranges . .	$\pm (0.002\%$ of input + 0.001% of range)
(23°C $\pm 1^\circ C$)	$\pm 1V$ range	$\pm (0.003\%$ of input + 0.002% of range)
	$\pm 0.1V$ range	$\pm (0.003\%$ of input + 0.005% of range)
90 days	$\pm 10V, \pm 100V, \pm 1000V$ ranges . .	$\pm (0.004\%$ of input + 0.001% of range)
(18°C to 28°C)	$\pm 1V$ range	$\pm (0.005\%$ of input + 0.002% of range)
	$\pm 0.1V$ range	$\pm (0.005\%$ of input + 0.005% of range)
1 year	$\pm 10V, \pm 100V, \pm 1000V$ ranges . .	$\pm (0.01\%$ of input + 0.001% of range)
(18°C to 28°C)	$\pm 1V$ range	$\pm (0.02\%$ of input + 0.002% of range)
	$\pm 0.1V$ range	$\pm (0.02\%$ of input + 0.005% of range)

Temperature Coefficients (0°C to 18°C and 28°C to 50°C)

$\pm 10V, \pm 100V, \pm 1000V$ ranges	$\pm (0.0003\%$ of input + 0.0001% of range)/°C
$\pm 1V$ range	$\pm (0.0004\%$ of input + 0.0002% of range)/°C
$\pm 0.1V$ range	$\pm (0.0005\%$ of input + 0.0006% of range)/°C
Input Impedances	
$\pm 10V$ range	10,000 megohms
$\pm 1V$ range	1000 megohms
$\pm 0.1V$ range	100 megohms
$\pm 100V, \pm 1000V$ range	10 megohms
	} shunted by less than 100 p.f.
Offset Current at 23°C $\pm 1^\circ C$	Less than ± 5 pa. on any range
Temperature Coefficient	Less than ± 1 pa/°C on any range
Zero Stability	Better than 5 μV for 90 days after a one hour warmup.

NOISE REJECTION

Normal Mode (filtered)	Greater than 65 db @ 60 Hz (60 db @ 50 Hz)
Maximum superimposed AC Voltage	50% of range peak AC, maximum
Common Mode (with up to 1K unbalance in either lead)	
DC	Greater than 140 db
AC to 60 Hz, Filter "in"	Greater than 140 db
Filter "out".	Greater than 100 db

NOTE: Common Mode Rejection specifications are maintained with any combination of options installed and are unaffected when grounded devices are used in conjunction with the remote control or data output options.

RESPONSE TIME (from an input step change to a completed reading within 0.005% of the change when externally triggered.)

Filter "out".	less than 33 milliseconds
Filter "in".	less than 500 milliseconds

GENERAL

Digitizing Time	18 milliseconds
Sample Aperture	3 milliseconds
Sample Rate	Smoothly variable from 13 per second to one per 4.5 seconds via SAMPLE RATE control

NOTE: A maximum sample rate of 30 readings per second is obtained when Model 8400A is externally triggered via Option 8400A-03.

Autorange Time	Filter "out".	50 milliseconds per range change
	Filter "in"	280 milliseconds per range change
Filter		4-pole active filter for use with DC volts, AC volts, and Resistance measurements
Range Selection		Manual, Automatic Standard; Remote Optional
Function Selection.		Manual Standard, Remote Optional, Autoranges from Ω to $K\Omega$
Display		In-line neon-tube display of polarity, overrange digit and 5 full decades of digits. with automatic decimal placement plus an illuminated function annunciator.
Overload Limits (Maximum voltage that may be continuously applied without damage)		
"Hi" to "Lo"		See individual functions under "range", & "overload"
"Lo" to "Guard"		$\pm 100V$ DC or peak AC
"Guard" to "Chassis".		$\pm 1000V$ DC or peak AC maximum Common Mode Voltage
Temperature Range,	Operating	$0^{\circ}C$ to $+50^{\circ}C$
	Non-Operating	$-40^{\circ}C$ to $+75^{\circ}C$
Humidity Range	$0^{\circ}C$ to $+25^{\circ}C$	Less than 80% relative humidity
	$+25^{\circ}C$ to $+50^{\circ}C$	Less than 70% relative humidity
Altitude Range,	Operating.	To 10,000 feet (3.048 km)
	Non-Operating.	To 50,000 feet (15.25 km)
Shock and Vibration.		Meets requirements of MIL-T-21200H and MIL-E-16400F
Operating Power (including options).		115/230 VAC $\pm 10\%$, 50 to 440 Hz, Less than 25W
Weight (including options)		Less than 20 pounds(9.08 kg)
Size.		3½" H x 17" W x 18" D (88.1 mm x 432 mm x 457.4mm), see Figure 1-1
Warm-up Time.		20 minutes to 1 year accuracy, 1 hour to full accuracy.

1-18. Options**AC VOLTS (Using Option 8400A-01)**

RANGES 1V, 10V, 100V, 1000V

Resolution	$\pm 0.001\%$ of range, (10 μV maximum on 1V range)
Overrange	20%, 1100V RMS maximum on 1000V range

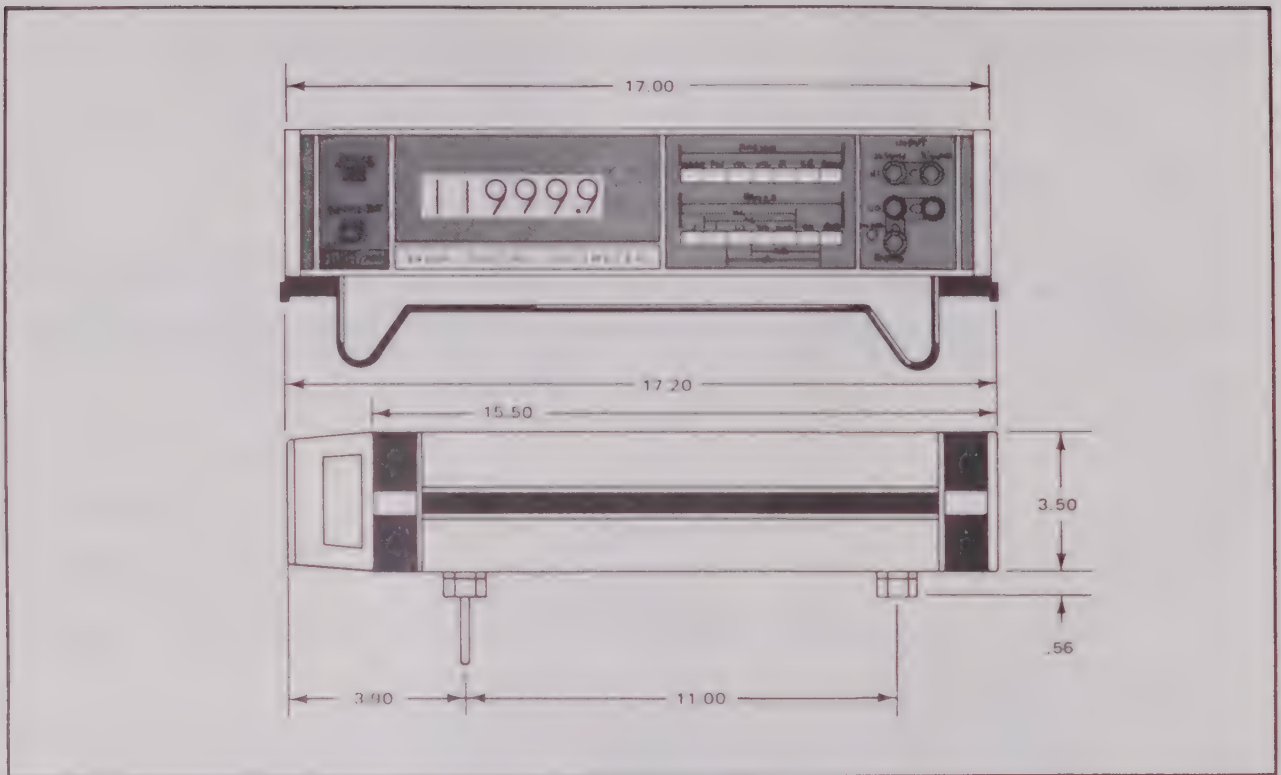


Figure 1-1. MODEL 8400A OUTLINE DRAWING

Overload 1100V RMS may be continuously applied to any range without damage
 Superimposed DC $\pm 1100V$ DC (Peak AC plus DC may not exceed $\pm 1500V$)

ACCURACY (To 120% of range or 1100V maximum input)

0.001V to 500V, (90 days, 18°C to 28°C)	50 Hz - 10 kHz	$\pm(0.05\% \text{ of input} + 0.005\% \text{ of range})$
	10 kHz - 50 kHz	$\pm(0.1\% \text{ of input} + 0.005\% \text{ of range})$
	20 Hz - 50 Hz and 50 kHz - 100 kHz	$\pm(0.5\% \text{ of input} + 0.005\% \text{ of range})^*$
500V to 1100V, 90 days (18°C to 28°C)	10 Hz - 20 Hz	$\pm(1.0\% \text{ of input} + 0.01\% \text{ of range})$
	50 Hz - 10 kHz	$\pm 0.1\% \text{ of input}$
	10 kHz - 50 kHz	$\pm 0.15\% \text{ of input}^*$
	20 Hz - 50 Hz	$\pm(0.5\% \text{ of input} + 0.005\% \text{ of range})$
	10 Hz - 20 Hz	$\pm(1.0\% \text{ of input} + 0.01\% \text{ of range})$

*NOTE: Input Volt - Hertz product should not exceed 2×10^7

Temperature Coefficients (0°C to 18°C and 28°C to 50°C)

10 Hz - 50 kHz	$\pm(0.002\% \text{ of input} + 0.0005\% \text{ of range})/^{\circ}C$
50 kHz - 100 kHz	$\pm(0.01\% \text{ of input} + 0.0005\% \text{ of range})/^{\circ}C$

Input Impedance 1.11 megohm, $\pm 0.1\%$, shunted by less than 100 pf.

NOISE REJECTION

Common Mode (with up to 100 Ω unbalance in either lead)

DC to 60 Hz Greater than 120 db

RESPONSE TIME (from an input step change to a completed reading within 0.05% of the change when externally triggered).

Filter "out"	100 milliseconds (input frequency greater than 400 Hz)
Filter "in"	500 milliseconds (any input frequency)

AC VOLTS (Using option 8400A-09)

For Measurement of DC-Coupled (AC + DC) Voltages or AC Only.

RANGES	1, 10, 100, 1000 VAC
Overrange	20%, 1100V RMS maximum on 1000V range
Resolution	0.001% range
Overload	1100V RMS any range (1500V peak AC)
Superimposed DC (AC only)	1100V DC (Peak AC plus DC may not exceed $\pm 1500V$)
Max. Crest Factor	7 at full-scale and increasing down scale per: $7X \sqrt{\frac{V \text{ Range}}{V \text{ Input}}}$

ACCURACY

	AC + DC	AC ONLY
D.C.	$\pm(0.1\% \text{ of input} + 0.03\% \text{ of range})$	
50Hz-10kHz	$\pm(0.1\% \text{ of input} + 0.03\% \text{ of range})$	$\pm(0.1\% \text{ of input} + 0.012\% \text{ of range})$
90 days, (18°C to 28°C) (0.001V - 1100V ⁽¹⁾)	10kHz-30kHz ⁽²⁾ $\pm(0.2\% \text{ of input} + 0.06\% \text{ of range})$	$\pm(0.2\% \text{ of input} + 0.04\% \text{ of range})$
	30kHz-50kHz ⁽²⁾ $\pm(0.3\% \text{ of input} + 0.12\% \text{ of range})$	$\pm(0.3\% \text{ of input} + 0.1\% \text{ of range})$
	20Hz-50Hz $\pm(0.5\% \text{ of input} + 0.03\% \text{ of range})$	$\pm(0.5\% \text{ of input} + 0.012\% \text{ of range})$
	10Hz-20Hz $\pm(1.0\% \text{ of input} + 0.06\% \text{ of range})$	$\pm(1.0\% \text{ of input} + 0.04\% \text{ of range})$
	50kHz-100kHz ⁽²⁾ $\pm(1.0\% \text{ of input} + 0.32\% \text{ of range})$	$\pm(1.0\% \text{ of input} + 0.3\% \text{ of range})$
	100kHz-300kHz ⁽²⁾ $\pm(2.0\% \text{ of input} + 0.52\% \text{ of range})$	$\pm(2.0\% \text{ of input} + 0.5\% \text{ of range})$

(1) With inputs above 500V multiply accuracy by $\left[\frac{2000V + V \text{ input}}{2000V} \right]$

(2) Input volt x hertz, product should not exceed 2×10^7 .

Temperature Coefficients (0°C to 18°C and 28°C to 50°C)

DC and 10 Hz - 10 kHz (AC + DC) $\pm(0.004\% \text{ Inp.} + 0.004\% \text{ Range})$

10 Hz - 10 kHz (AC only) $\pm(0.004\% \text{ Inp.} + 0.001\% \text{ Range})$

Input Impedance 1 Megohm, shunted by less than 150 p.f.

NOISE REJECTION

Common Mode (with up to 100Ω unbalance in either lead)

DC to 60 Hz Greater than 120 db

RESPONSE TIME (to a reading within 0.1% of range when measuring step change inputs and using external trigger).

Filter "out" 100 milliseconds maximum⁽³⁾

Filter "in" 500 milliseconds maximum

(For readings less than 10% Range, double indicated times).

(3) Above 400 Hz for rated accuracies.

RESISTANCE (Using Option 8400A-02)

RANGES 10Ω, 100Ω, 1000Ω, 10,000Ω, 100 KΩ, 1000 KΩ, 10,000KΩ

NOTE: Model 8400A will autorange through all resistance ranges.

Resolution 0.001% of range, (100 uΩ maximum on 10 Ω range)

Overrange 20%, 12 megohms maximum on 10,000K range

Overload, 10Ω - 10,000Ω ranges 20V RMS (fused)

100KΩ - 10,000KΩ ranges Up to 250V RMS may be continuously applied without damage

ACCURACY (To 120% of range)

90 days,	100k Ω - 1000k Ω ranges	$\pm(0.01\%$ of input +0.002% of range)
(18°C to 28°C)	100 Ω - 10,000 Ω ranges	$\pm(0.01\%$ of input +0.003% of range)
	10 Ω range	$\pm(0.01\%$ of input +0.01% of range)
	10,000k Ω range	$\pm(0.05\%$ of input +0.002% of range)
Temperature Coefficients (0°C to 18°C and 28°C to 50°C)		
	100k Ω , 1000k Ω ranges	$\pm(0.0007\%$ of input +0.0001% of range)/°C
	10,000k Ω range	$\pm(0.003\%$ of input +0.0001% of range)/°C
	100 Ω - 10,000 Ω range	$\pm(0.001\%$ of input +0.0002% of range)/°C
	10 Ω range	$\pm(0.001\%$ of input +0.0005% of range)/°C

CONFIGURATION True 4-terminal through 10,000 Ω range and 2 terminal on the 100 K Ω through 10,000 K Ω ranges.

Current through R measured

Range	10 Ω , 100 Ω , 1000 Ω , 10,000 Ω , 100K Ω 1000K Ω , 10,000 K Ω
Current	10 ma 1 ma 100 μ a 10 μ a 1 μ a
Maximum Lead Resistance (for less than 0.001% of range effect on accuracy)	
4 terminal mode, Current leads	10 Ω in both leads on 10 Ω range and 100 Ω on all other ranges
Voltage leads	1 K Ω in either lead on all ranges.
2 terminal mode	Less than 0.001% of range lead resistance.

RESPONSE TIME (from an input step change to a completed reading within 0.01% of the change when externally triggered).

Filter "out"	Less than 33 milliseconds
Filter "in"	Less than 500 milliseconds

ISOLATED DC EXTERNAL REFERENCE (4 Terminal DC/DC Ratio using Option 8400A-05)

NOTE: Mating connector is supplied.

REFERENCE INPUT

Voltage Range	+1V to +10.5V
Input Resistance	1 megohm $\pm 0.1\%$
Isolation of Reference and	
Input Commons	V input + V common difference not to exceed ± 13 V on 10V and lower ranges.

NOTE: Fused to prevent damage.

RANGES $\pm 0.01:1$, $\pm 0.1:1$, $\pm 1:1$, $\pm 10:1$, $\pm 100:1$

Resolution	$\pm 0.001\%$ of Ratio range, (0.0000001: 1 maximum on $\pm 0.01:1$ range)
Overrange	20%, 110: 1 maximum input on 100: 1 range
Overload	± 1100 V DC or RMS (± 1500 V peak) may be continuously applied to the numerator (input) terminals without damage.
Reading vs. Ratio	10 x Ratio

ACCURACY (To 120% of ratio range)

90 days	$\pm 1:1$, $\pm 10:1$, $\pm 100:1$ ranges	$\pm(0.005\%$ of Ratio +0.002% x 10V _{ref} of range)
(18°C to 28°C)	$\pm 0.1:1$ range	$\pm(0.005\%$ of Ratio +0.004% x 10V _{ref} of range)
	$\pm 0.01:1$ range	$\pm(0.005\%$ of Ratio +0.01% x 10V _{ref} of range)

NOTE: 24 hour and 1 year specifications available upon request.

Temperature Coefficients (0°C to 18°C and 28°C to 50°C)

$\pm 1:1$, $\pm 10:1$, $\pm 100:1$ ranges	$\pm(0.0003\%$ of ratio +0.0001% x 10V/V _{ref} of range)/°C
$\pm 0.1:1$ range	$\pm(0.0004\%$ of ratio +0.0002% x 10V/V _{ref} of range)/°C
$\pm 0.01:1$ range	$\pm(0.0005\%$ of ratio +0.0006% x 10V/V _{ref} of range)/°C

NOISE REJECTION (At Reference Input)

Normal Mode	30 db @ 60 Hz
Common Mode (with up to 1K unbalance)	120 db with a + 10V Reference

REFERENCE SETTLING TIME..... 2 seconds

(To 0.01% of range following a step change of reference voltage. Numerator response time same as "dc volts").

AC EXTERNAL REFERENCE (3 Terminal AC/AC Ratio using Options 8400A-01 and 8400A-06)

NOTE: Mating connector is supplied.

REFERENCE INPUT

Reference Ranges.....	1V, 10V, 100V (internal selection)
Reference Voltage	10% to 105% of Reference Range
Input Impedance	1 megohm shunted by less than 100 pf.

RATIO RANGES

Reference Range	1V.....	1: 1, 10: 1, 100: 1, 1000: 1
	10V.....	0.1: 1, 1: 1, 10: 1, 100: 1
	100V.....	0.01: 1, 0.1: 1, 1: 1, 10: 1
Resolution	0.001% of Ratio range, 0.0000001: 1 maximum	
Overload	130V RMS at Reference Input	
Reading vs. Ratio,	1V Ref. Range	1 x Ratio
	10V Ref. Range	10 x Ratio
	100V Ref. Range	100 x Ratio

ACCURACY (90 days at 18°C to 28°C and to 120% of ratio range)

50 Hz - 10 kHz *

1: 1 Range and Reference and Input

at the same frequency $\pm(0.05\% \text{ of Ratio} + 0.005\% \times \text{Ref Range}/V_{\text{ref}} \text{ of range})$

* *NOTE: Specifications from 10 Hz - 50 Hz and 10 kHz - 100 kHz available on request.*

Input and Reference not at the same

frequency or not on the 1:1 Range $\pm(0.1\% \text{ of Ratio} + 0.005\% \times \text{Ref. Range}/V_{\text{ref}} \text{ of range})$

Temperature Coefficient

(0°C to 18°C and 28°C to 50°C). $\pm(0.004\% \text{ of Ratio} + 0.001\% \times \text{Ref Range}/V_{\text{ref}} \text{ of range})$

REFERENCE SETTLING TIME 2.5 seconds maximum.

(To 0.05% of range following a step change of reference voltage. Numerator response time same as "ac volts").

ISOLATED DATA OUTPUT (Using Option 8400A-03)

NOTE: Two mating connectors are supplied.


Data Available	Digits, polarity, range, functions
Coding	8 4 2 1 BCD, digits and range
Logic Levels	1 = +5V, 0 = 0V (Series 930 DTL with 6K pullup)
Maximum Trigger Rate	30 per second
Flags	Digitizing, Remotely Controlled, Remotely Triggered, Ready, Overload
Acquisition	Full parallel or serial by character in multiples of 4 bits
Automatic Adaptive Timeouts	Automatic delays to allow for settling time of all analog inputs are enabled via a single logic input line.

ISOLATED REMOTE CONTROL (Using Option 8400A-04)

NOTE: Mating connector is supplied

Control Levels.....	0 = function called, 1 = function inactive
Logic Levels	0 = Contact closure or 0V, 1 = open or +5V
Input Definition	Series 930 DTL
Control Command Storage	Continuous or addressed remote control of instrument. Triggered address control allows the 8200A to "latch" to input commands. Following latch, the commands may be removed but the functions and ranges commanded will continue to be in effect until the next address trigger.
Interlocks.....	Incompatible functions or simultaneous ranges cannot be called.

ISOLATED DATA OUTPUT TIMING DIAGRAMS

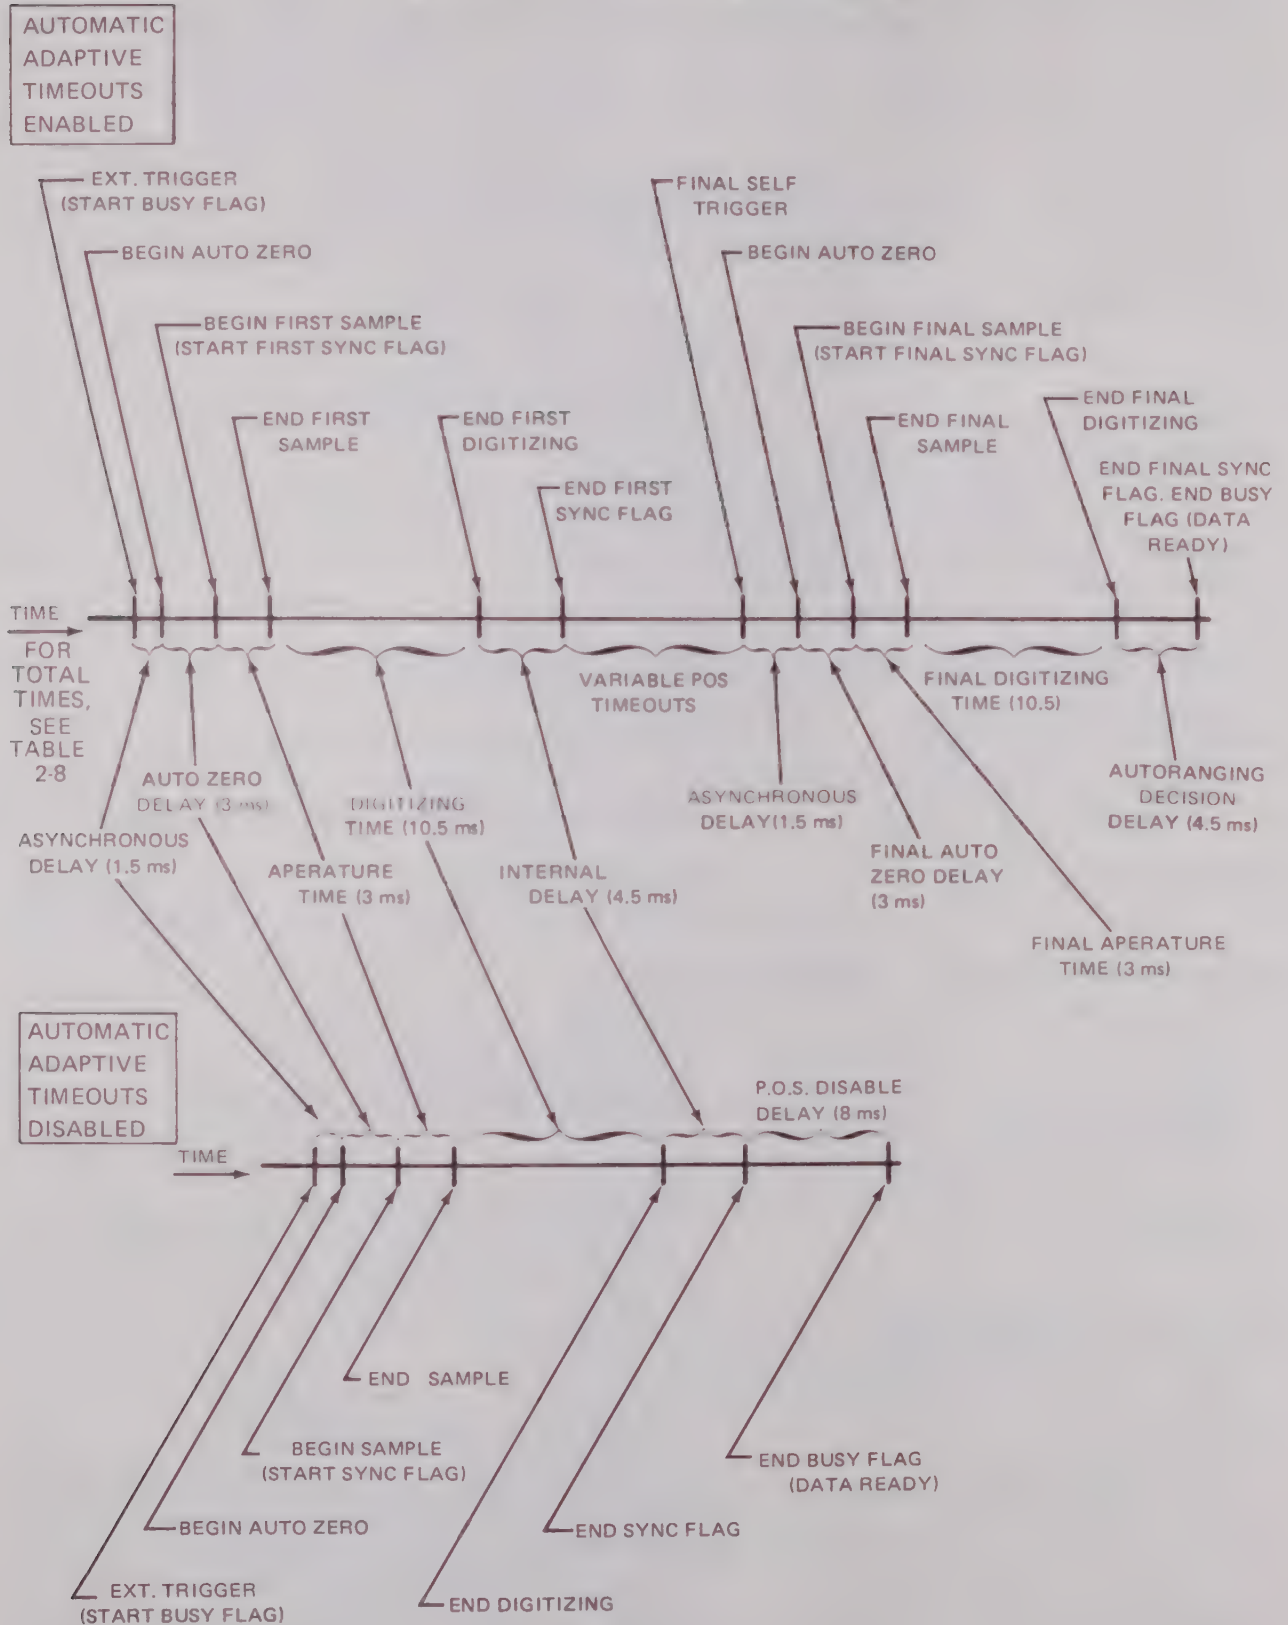

No Call Volts DC and autorange called
Flag Remotely controlled Flag in Data Output Unit

NOTE: Further Details available on request

PARALLEL REAR INPUT (Using Option 8400A-07)

NOTE: Switchable Rear/Front Inputs available on special quote.

1-19. Accessories

- | | | |
|----------------------------------|----------------------------------|-----------------------------|
| ■ A90 Current Shunt | ■ 80F-15 High Voltage Probe | ■ 80RF High Frequency Probe |
| ■ 80F-5 High Voltage Probe | ■ M00-280-610 24-inch Rack Slide | ■ M03-203-601 Rack Ears |
| ■ M00-260-610 18-inch Rack Slide | | |

Section 2

Operating Instructions

2-1. INTRODUCTION

2-2. This section contains operating instructions for the Model 8400A Digital Voltmeter. If any problem is encountered in operating the instrument, contact the nearest John Fluke Sales Representative or write directly to the John Fluke Mfg. Co., Inc. Please include the instrument serial number when writing.

2-3. INSTALLATION

2-4. The 8400A is supplied with non-marring feet and tilt-down bail for bench or field use. A rack-mounting kit and rack-slide kits for installation of the instrument in a standard 19-inch rack are available. These accessories are described in Section 6 of the manual.

2-5. REPACKAGING FOR SHIPMENT

2-6. This instrument was packed and shipped in a foam-packed cardboard carton. If reshipment is required, use the original container or request a new container from the John Fluke Mfg. Co., Inc. Please include instrument model number with your request.

2-7. OPTIONS AND ACCESSORIES

2-8. Model 8400A options and accessories are listed in Table 2-1. They are fully described in Section 6 of the manual.

2-9. INPUT POWER REQUIREMENTS

2-10. The 8400A operates on 115 or 230 volt, 50 Hz to 440 Hz ac power. Before applying power to the instru-

Table 2-1. OPTIONS AND ACCESSORIES

Option No.	Name
8400A-01	AC Converter
8400A-02	Resistance Converter
8400A-03	Data Output
8400A-04	Remote Control
8400A-05	DC External Reference
8400A-06	AC External Reference
8400A-07	Rear Input
8400A-09	True RMS Converter
-01 required with -06 -01 and -09 cannot be installed together -07 required with -05 or -06	
Accessory No.	Name
298265	Extender Assembly (Required for servicing pcb's)
M03-203-601	Rack Ears
M00-260-610	18-inch Rack Slides
M00-280-610	24-inch Rack Slides
A90	Current Shunts
80F-5	High Voltage Probe
80F-15	High Voltage Probe
80RF	High Frequency Probe

ment, note the position of the 115/230 volt slide switch at the rear of the instrument (Figure 2-1). If the switch does not indicate the desired operating voltage, place it in the correct position.

WARNING!

Ensure that the instrument case is connected to a high quality earth ground, either through the polarized line plug or through a separately connected ground wire.

2-11. OPERATING FEATURES

2-12. The name and function of front and rear panel controls, terminals and indicators are shown in Figure 2-1.

2-13. MEASUREMENT INSTRUCTIONS

2-14. Measurement instructions for basic DVM functions are given in Table 2-2.

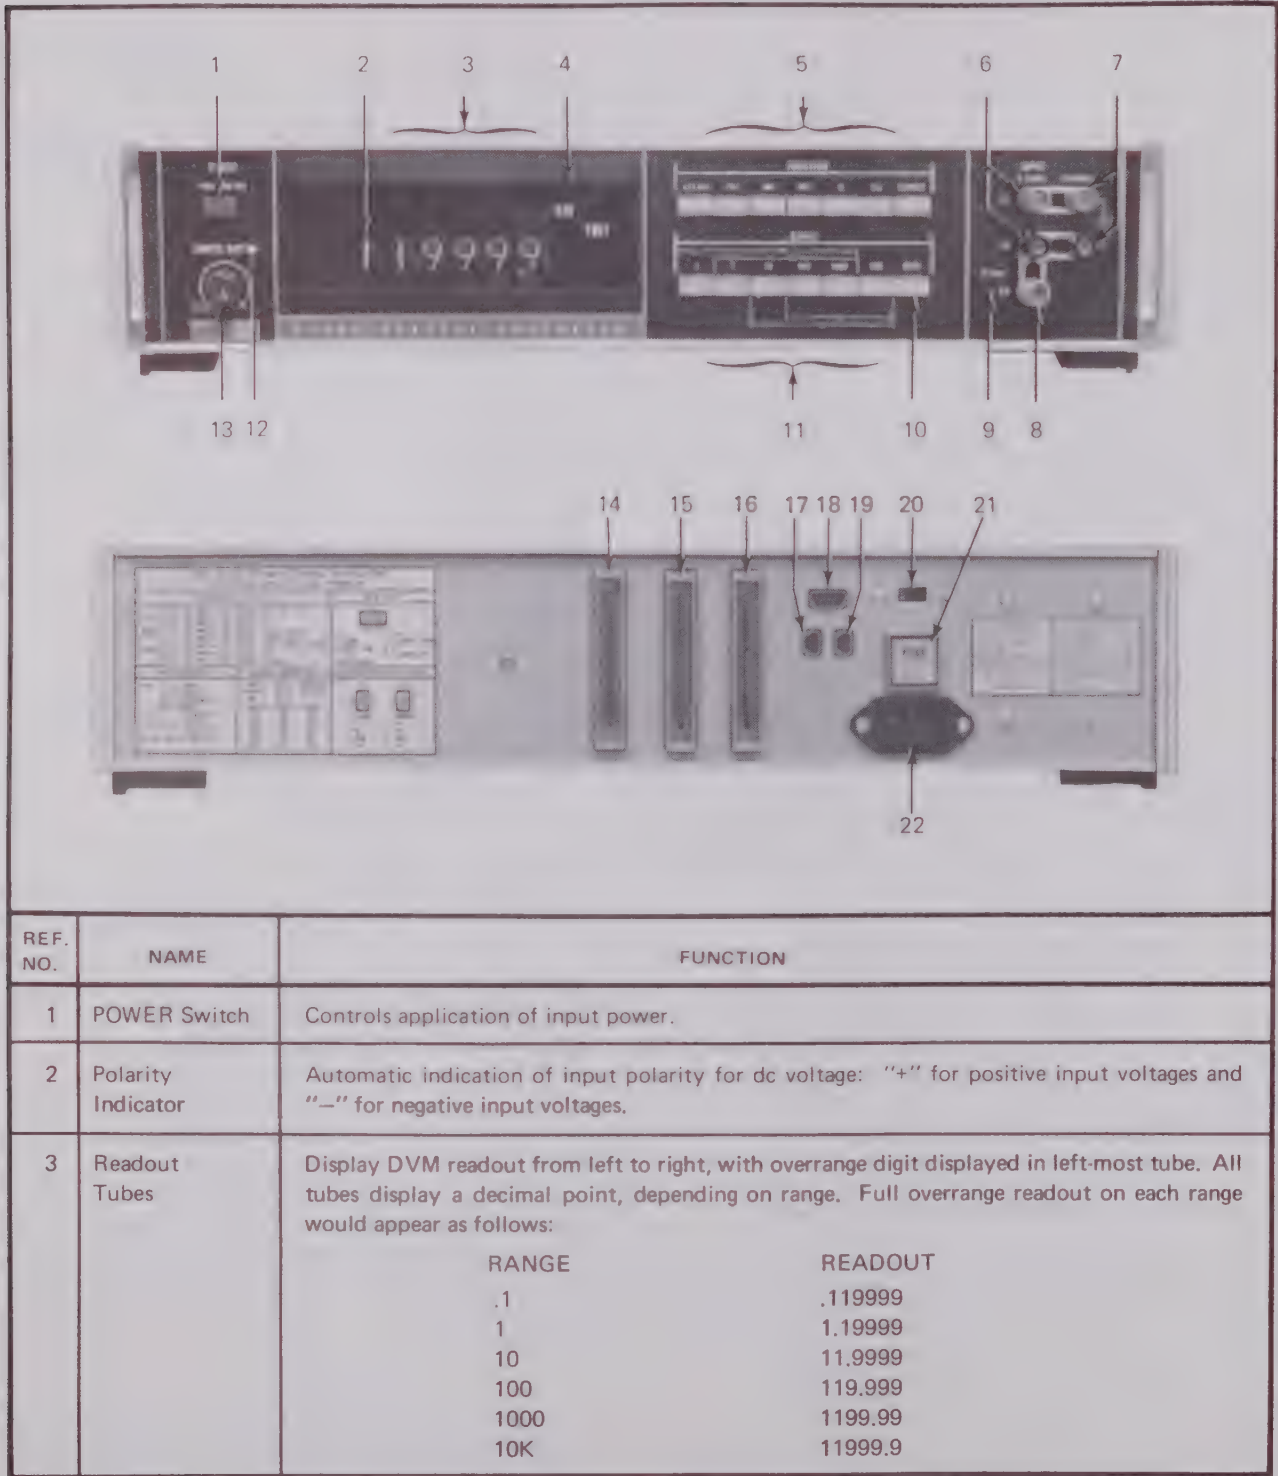


Figure 2-1. CONTROLS, TERMINALS, AND INDICATORS (Sheet 1 of 3)

REF NO.	NAME	FUNCTION
4	Function/Status Annunciator	Indicate instrument function and status as follows: $K\Omega$ DVM operating in kilohm mode. AC DVM operating in ac voltage mode. DC DVM operating in dc voltage mode. Ω DVM operating in ohms mode. X REF DVM operating in External Reference mode. FILT Active 4-pole filter called for maximum noise rejection. OVER DVM input is over the 20% overrange capability.
5	FUNCTION Switches	Select desired DVM operating mode: EXT REF . . Enables substitution of isolated external reference voltage for internal reference FILT Controls 4-pole active input filter to provide desired noise rejection. Functional for dc voltage, ac voltage, and resistance measurements. VDC Places DVM in dc voltage mode with full-scale ranges of .1, 1, 10, 100, and 1000. VAC Places DVM in ac voltage mode with full-scale ranges of 1, 10, 100, and 1000. Ω Places DVM in ohms mode with full-scale ranges of 10, 100, 1000, and 10K if available range is called; otherwise, DVM autofunctions to Ω . $K\Omega$ Places DVM in kilohms mode with full-scale ranges of 100, 1000 and 10K if available range is called; otherwise, DVM autofunctions to Ω . REMOTE . . Places DVM in remote mode, enabling DVM function and range to be controlled remotely via the Remote Control Unit.
6	INPUT Terminals	HI, LO input connections for dc and ac voltage measurement.
7	Ω SOURCE Terminals	Current source for all resistance measurements.
8	GD (Guard) Terminal	Connects to internal guard chassis. When properly connected externally, provides maximum common mode rejection.
9	DC ZERO Control	Adjusted for .000000 ± 1 with VDC, Filter, and .1 Range called and INPUT terminals shorted.
10	AUTO RANGE Switch	Places DVM in autorange mode, providing automatic ranging for each function and its range complement.
11	Manual RANGE	Enable manual selection of DVM range. Not calling a range or incorrect range selection automatically places DVM in autorange mode.
12	Sample Rate Indicator	Visual indication of sample rate.
13	SAMPLE RATE Control	Permits variation of DVM sample rate from 13 readings per second to 1 reading per 4.5 seconds. In EXT position (fully counterclockwise), sample rate control is transferred to remote control point via the Data Output Unit. If the Data Output option is not installed and the control is turned to EXT, the DVM will read out and display from its internal storage circuitry indefinitely, with readout corresponding to value of last measurement sample.

Figure 2-1. CONTROLS, TERMINALS, AND INDICATORS (Sheet 2 of 3)

REF NO.	NAME	FUNCTION
14	Data Output Unit Connector (No. 1)	Provides connections for Data Output Unit (Option —03).
15	Data Output Unit Connector (No. 2)	
16	Remote Control Connector	Provides connections for Remote Control (Option —04).
17	AC External Reference Connector	Provides connections for AC External Reference Unit (Option —06).
18	Rear Input Connector	Provides connections for rear input to DVM (Option —07).
19	DC External Reference Connector	Provides connections for DC External Reference Unit (Option —05).
20	115/230 Volt Input Power Switch	Selects either 115 or 230 volt ac line operation.
21	Line FUSE	Protects DVM from overloads. Fuse rating is AGC 1/2 ampere.
22	AC Line Voltage Connector	Mates with polarized 3-wire power cord for connection to 115/230 volt, 50 Hz to 440 Hz, ac line.

Figure 2-1. CONTROLS, TERMINALS, AND INDICATORS (Sheet 3 of 3)

2-15. EXTERNAL REFERENCE

2-16. General

2-17. AC and DC External Reference options enable the user to substitute an external ac or dc voltage for the internal DVM reference voltage. The principal use of the instrument when operated in this manner is for voltage ratio measurements. Another important use is to allow substitution of a system voltage for the 8400A reference voltage. By this means, variables in systems measurements may be reduced.

2-18. The DC External Reference Unit makes 4-terminal voltage ratio measurements: $\pm$ dc to dc and ac to dc. The AC External Reference Unit makes 3-terminal ac to ac voltage ratio measurements. Separate rear panel input connectors are provided for ac and dc reference voltage inputs.

The pin connection diagram for each connector is shown on a rear panel decal.

2-19. Operation

2-20. The following steps describe the basic operating procedure for ratio measurements using the External Reference options:

- a. Select 8400A voltage range as desired according to the ratio range and corresponding readout, as shown in Table 2-3. Reference input range for the AC External Reference Unit is controlled by an internal range switch located on the AC External Reference Unit pcb. The switch is accessible through the top guard cover after removing the DVM top dust cover. Switch positions are marked on the guard cover.

Table 2-2. 8400A MEASUREMENT INSTRUCTIONS

MEASUREMENT	8400A			REMARKS
	FUNCTION	RANGE	INPUT CONNECTIONS	
±DC Voltage	VDC	.1, 1, 10, 100, 1000, AUTO	Front panel HI, LO terminals or rear input terminals if equipped with Rear Input option.	DVM autoranges automatically if range is not manually called or if a range is called that is not compatible with the selected function. Use 4-terminal ohms measurements, if desired, on 10Ω through 10,000Ω ranges. SOURCE terminals must be connected, either remotely or with shorting links at INPUT binding posts, for all resistance measurements.
AC Voltage	VAC	1, 10, 100, 1000, AUTO		
Ohms	Ω	10, 100, 1000, 10K, AUTO		
Kilohms	KΩ	100, 1000, 10K, AUTO		
DVM Zero Adjustment	VDC, Filter	.1	Short INPUT terminals together. Use a low-thermal shorting link.	Adjust front panel DC ZERO control for readout of .000000 ±1.

Table 2-3. EXTERNAL REFERENCE RATIO RANGES

MODE	RATIO RANGE $\frac{V_{INPUT}}{V_{REF}}$	READOUT	REFERENCE INPUT
DC/DC X 10	0 to ±0.0119999 0 to ±0.119999 0 to ±1.19999 0 to ±11.9999 0 to ±119.999 0 to ±1000.00	0 to ±.119999 0 to ±1.19999 0 to ±11.9999 0 to ±119.999 0 to ±1000.00	+1V to +10.5V
AC/DC X 10	0 to 0.119999 0 to 1.19999 0 to 11.9999 0 to 100.000	0 to 1.19999 0 to 11.9999 0 to 119.999 0 to 1000.00	
AC/AC	0 to 1.19999 0 to 11.9999 0 to 119.999 0 to 1000.00	0 to 1.19999 0 to 11.9999 0 to 119.999 0 to 1000.00	1V Range: 0.1V to 1.05V 10V Range: * 1V to 10.5V 100V Range: * 10V to 105V
* Table shows values for 1V Reference Range only. For 10V and 100V Reference Ranges, readout equals 10X ratio and 100X ratio, respectively.			

EXTERNAL REFERENCE UNIT	REFERENCE VOLTAGE INPUT
DC	+1v to +10.5v
AC	1v, 10v and 100v ranges. (Maximum in- put: 130v rms.)

- b. Connect reference voltage to rear input terminals.
- c. Press EXT REF switch on the front panel.
- d. Press VDC switch if dc-to-dc voltage ratios are to be measured or VAC switch if ac-to-dc/ac ratios are to be measured.

2-21. Installation, theory of operation, and maintenance instructions for the External Reference options are covered in Section 6 of the manual.

2-22. REMOTE CONTROL UNIT

2-23. General

2-24. The Remote Control Unit (RCU) enables the 8400A to be programmed or controlled remotely. RCU inputs are designed to interface directly with DTL/TTL logic. Control by discrete transistors or contact switches is also possible. Operating power for the RCU must be supplied from an external +5 volt source having a current capability of at least 150 milliamperes. Power may be obtained from the Data Output Unit option if the DVM is so equipped.

2-25. The RCU provides the capability of controlling all DVM functions and ranges, with logic interlocking provided so that incompatible functions or simultaneous

ranges cannot be called. Acceptable combinations are shown in Table 2-4.

2-26. RCU Command Triggering

2-27. The RCU has two operating modes which control entry of external commands into the unit: continuous command mode and triggered command mode.

2-28. In continuous command mode, the RCU requires no external triggering. The instrument always reflects present state of command inputs in continuous mode. To achieve this mode of operation, hold pin 35 (Auto Command Entry Defeat) and pin 33 (External Command Entry) at logical "1" (+5v) or open.

2-29. In triggered command mode, the RCU will only respond to programming inputs after application of an external trigger. It will memorize input commands within 10 microseconds of trigger application. Following the storage operation, programming inputs may be changed or removed without affecting stored information. To achieve this mode of operation, hold pin 35 (Auto Command Entry Defeat) low by application of logical "0" or contact closure and apply the external trigger to pin 33 (External Command Entry). RCU connector location is shown in Figure 2-1. Pin assignments are given in Table 2-5. Trigger requirements (External Command Entry) are given in Figure 2-2.

2-30. Operation

2-31. To place DVM in remote operation, proceed as follows:

- a. Press REMOTE FUNCTION switch to transfer control of DVM function and range to the remote control point.

Table 2-4. REMOTE CONTROL UNIT LOGIC INTERLOCKING

FUNCTION CALLED	RANGE CALLED							FILTER	RATIO
	.1	1	10	100	1000	10K	NONE		
VDC	.1	1	10	100	1000	AUTO	AUTO	YES	YES
VAC	AUTO	1	10	100	1000	AUTO	AUTO	YES	YES
Ω	AUTO	AUTO	10	100	1000	10K	AUTO	YES	NO
K Ω	AUTO	AUTO	AUTO	100	1000	10K	AUTO	YES	NO
NOTE: 1. If function and range are not called, DVM goes to VDC mode and autoranges (providing REMOTE button is pressed). 2. When ranges are selected manually, DVM will autofunction between Ω and K Ω if the selected range does not agree with the called function.									

Table 2-6. REMOTE CONTROL UNIT PIN ASSIGNMENTS

FUNCTION	PIN NO.	FUNCTION	PIN NO.
Common	*2	VAC	17
Common	*4	K Ω	19
Common	*6	Ω	23
1 Range	7	1 Range	25
Common	*8	100 Range	27
+5V Input	**9	External Reference	29
1000 Range	11	Filter	31
10K Range	13	External Command Entry	***33
10 Range	15	Auto Command Defeat	***35

Spare Pins: 1, 3, 5, 10, 12, 14, 16, 18, 20, 22, 24, 26, 28, 30, 32, 34, 36

LOGIC LEVELS

LOGIC 1 = +5V OR OPEN

(INPUT DEVICE MUST BE
ABLE TO SOURCE 40 μ AMP
AT 2.6V)

LOGIC 0 = 0V OR CONTACT CLOSURE

(INPUT DEVICE MUST BE
ABLE TO SINK AT 1.6 MA AT 0V)

TRUTH TABLE

1 - FUNCTION NOT CALLED

0 = FUNCTION CALLED

NOTES:

* Isolated from Input "LO" and chassis

** +5V Input: Maximum current requirement = 150 milliamperes. (Available from DOU)

*** Used only in Control Command Storage mode of operation. No connections are required when RCU is controlled with continuously applied commands.

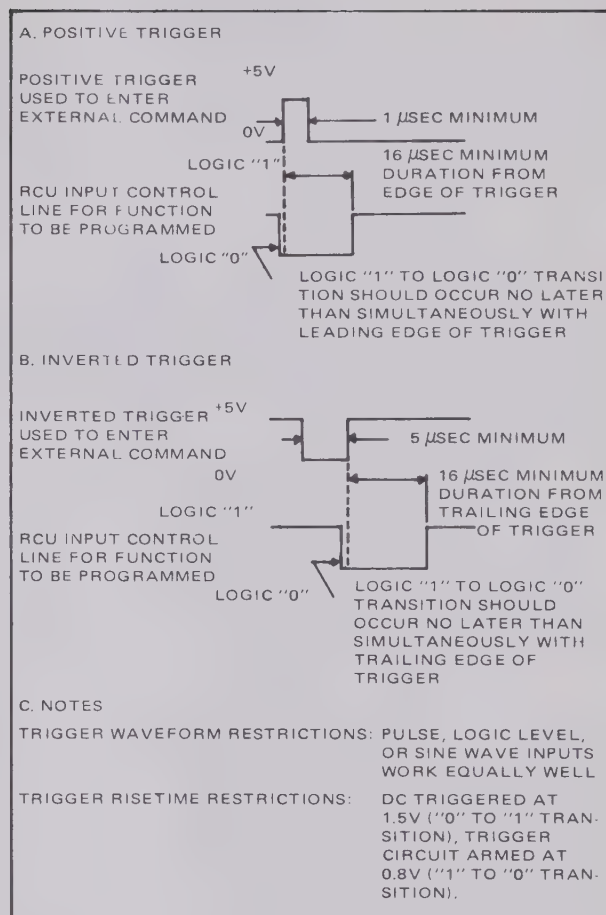


Figure 2-2. REMOTE CONTROL UNIT TRIGGER REQUIREMENTS (EXTERNAL COMMAND ENTRY)

- c. Command a function or range via a contact closure or a zero volt logic level between the appropriate pin and common. For example, to program 10k ohm, filtered operation, command pins 13, 23, and 31 via contact closure or zero volts to pin 2, 4, or 6 (commons).
- 2-32. Installation, theory of operation, and maintenance instructions for the Remote Control Unit are covered in Section 6 of the manual.

2-33. DATA OUTPUT UNIT

2-34. General

2-35. DOU access is by means of two card-edge connectors located at the rear of the instrument (Figure 2-1). Data may be acquired fully in parallel BCD format or serially by character in multiples of four-bits. The Programmed One-Shot (POS) line enables automatic time delays that allow for full settling of analog input circuitry prior to data transfer.

- b. If remote control of DVM sample rate is desired, turn SAMPLE RATE control to its extreme CCW position (EXT). In EXT position, the internal sample rate oscillator is disabled and the DVM sample command is applied via the Data Output Unit. If the Data Output Unit is not installed and the control is turned to EXT, the DVM will readout and display from analog storage indefinitely. The readout will correspond to the value of the last measurement.

2-36. The DOU is self powered and provides +5V (150 milliamperes maximum) output for operation of the Remote Control Unit (Option -04) or other logic circuitry. DOU truth tables and logic levels are given in Table 2-6. Functional pin connections for the DOU are given in Table 2-7.

2-37. Control Signals

2-38. DOU control inputs consist of External Trigger, External Trigger Inhibit, and Programmed One-Shot. The External Trigger may be a positive or negative going signal, as shown in Figure 2-3. The External Trigger Inhibit input must be a logical "0" to inhibit and a logical "1" to enable. The Programmed One-Shot input must be a logical "1" for fast operation (timeouts defeated) and a logical "0" for normal operation (programmed timeouts).

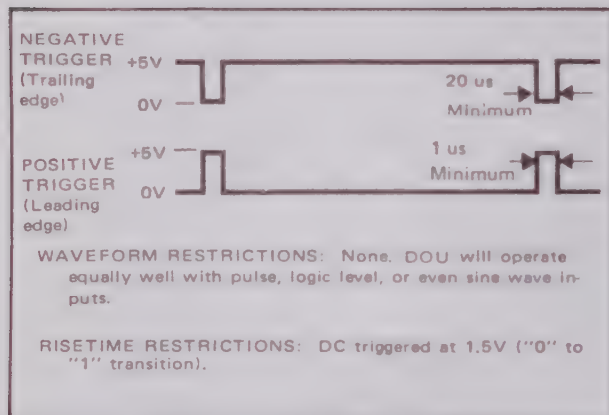


Figure 2-3. DATA OUTPUT UNIT TRIGGER REQUIREMENTS

2-39. The Sample Sync signal corresponds in timing to the DVM sample periods occurring in each measurement period, as shown in Figure 2-4. During the time the DVM is busy processing a request for data, the time of occurrence of the second or final sample period is subject to a number of delays, depending on DVM operating mode, autoranging delays, etc. The purpose of the Sample Sync signal is to inform the DVM input signal acquisition device (scanner) when the final sample is taken by the DVM. This information is useful when the DVM is used in a scanning system, where it is desirable that inputs be changed at the earliest possible time without altering the previous sample.

2-40. Programmed One-Shot

2-41. The response of the 8400A Data Output Unit to a data request consists of a function-dependent series of delays. When enabled, the Programmed One-Shot circuit in the DOU automatically sequences the delay series to provide data within specified accuracy in the minimum possi-

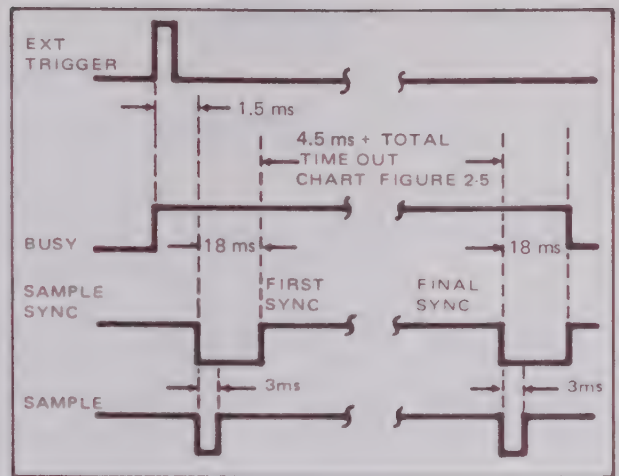


Figure 2-4. SAMPLE SYNC. SIGNAL TIMING (AUTOMATIC ADAPTIVE TIMEOUTS ENABLED).

ble time. If settling time is not a problem in specific applications, convenience is enhanced by provision for defeat of the POS, allowing sample rates as high as 30 per second. Application of +5v logic level or open circuit to pin 2 defeats the POS (Fast Sample); application of logic zero or contact closure to pin 2 enables the POS (Normal Sample). Figure 2-5 illustrates the timing of the events that occur

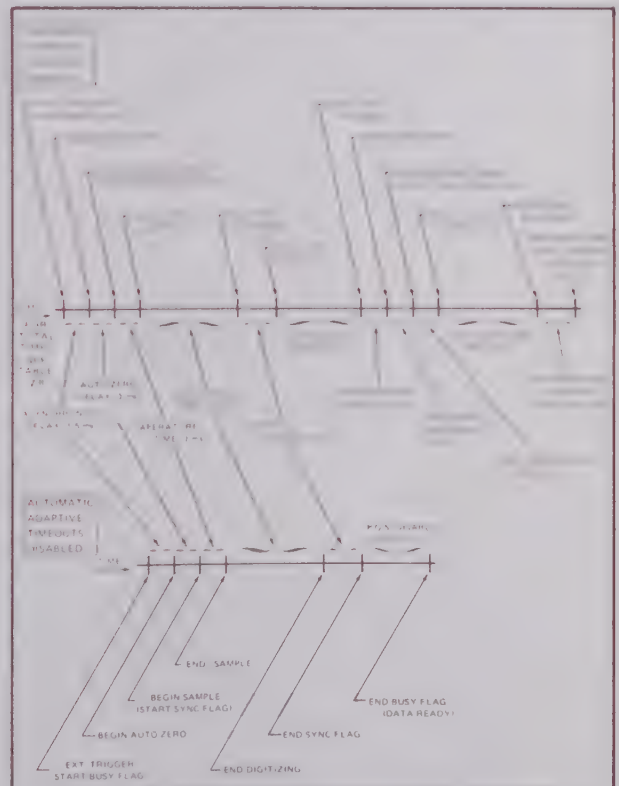


Figure 2-5. 8400A MEASUREMENT CYCLE TIMING DIAGRAM.

Table 2-6. DATA OUTPUT UNIT FUNCTIONAL PIN CONNECTIONS

DATA	CONNECTOR PIN NO.		REMARKS	DATA	CONNECTOR PIN NO.		REMARKS																																
	DOU NO. 1	DOU NO. 2			DOU NO. 1	DOU NO. 2																																	
Range (coded)			<table><tr><th rowspan="2">RANGE</th><th colspan="4">LINE</th></tr><tr><th>b</th><th>c</th><th>d</th></tr><tr><td>10000</td><td>0</td><td>0</td><td>0</td></tr><tr><td>1000</td><td>0</td><td>0</td><td>1</td></tr><tr><td>100</td><td>0</td><td>1</td><td>0</td></tr><tr><td>10</td><td>0</td><td>1</td><td>1</td></tr><tr><td>1</td><td>1</td><td>0</td><td>0</td></tr><tr><td>.1</td><td>1</td><td>0</td><td>1</td></tr></table>	RANGE	LINE				b	c	d	10000	0	0	0	1000	0	0	1	100	0	1	0	10	0	1	1	1	1	0	0	.1	1	0	1	Control Inputs			
RANGE	LINE																																						
	b	c		d																																			
10000	0	0		0																																			
1000	0	0		1																																			
100	0	1		0																																			
10	0	1		1																																			
1	1	0		0																																			
.1	1	0		1																																			
b	33				Ext. Trig.		3																																
c	31			Ext. Trig.																																			
d	32			Inhibit		1																																	
GR (gate)	36			Programmed One-Shot		2																																	
Overrange				Primary Function Flags			Apply logic 0 to gates to inhibit function data outputs. Logic 1: Function active Negative polarity Logic 0: Function inactive Positive polarity																																
1	34			VDC		6																																	
GOR (gate)	35			VAC		4																																	
				Ω		12																																	
				KΩ		10																																	
				GPF (gate)		26																																	
				Secondary Function Flags																																			
				Polarity		18																																	
				Filter		20																																	
				Ext. Ref.		16																																	
				Remote		14																																	
				GSF (gate)		22																																	
1st Decade (MSD)			Apply logic 0 to gates to inhibit decade data outputs.	Flags:			Logic 1:	Logic 0:																															
8	27			Busy		8	Busy	Not Busy																															
4	29			Sample Sync		31	No Sam.Sync	Sam.Sync																															
2	28			Overload		13	Overload	No overload																															
1	30			Trigger		15	Triggered	Not Triggered																															
G1 (gate)	25			GOL (gate)		17																																	
2nd Decade				Power Output				Maximum output:																															
8	21			+5 vdc	20	36,34	150 milliamperes																																
4	23			Common		33,35	at +5 vdc.																																
2	22			Code Conversion			See paragraph																																
1	24			Terminals			2-44 for code conversion information.																																
G2 (gate)	19			Z _{out}		9																																	
				Z ₁		30																																	
				Z _{in}		25																																	
				Y _{out}		5																																	
				Y ₁		32																																	
				Y _{in}		21																																	
				X _{out}		7																																	
				X ₁		29																																	
				X _{in}		23																																	
			W _{out}		11																																		
			W ₁		24																																		
			W _{in}		19																																		

during the busy flag. The total busy flag time when the automatic adaptive timeouts are enabled, is given in Table 2-7.

2-42. Code Conversion

2-43. The 8-4-2-1 BCD code (standard) used in the 8400A may be converted to some other code, using the convenient code conversion terminals provided at the output connector on DOU No. 2. To convert to another code remove the jumpers and connect the code conversion network, as shown in Figure 2-6. Usually only two integrated circuits are required in the network vs. about twelve for parallel conversion at the outputs, so a considerable saving may be realized. Detailed information regarding code conversion is available from the factory.

2-44. Figure 2-7 contains comprehensive timing diagrams for measuring both switched and continuously applied inputs when the D.O.U.'s automatic adaptive timeouts are not enabled.

2-45. OUTPUT FLAGS

2-46. Besides the Busy Flag (Data Not Ready), there is also a Sample Sync Flag. This flag goes to logic "1" when the DVM starts sampling the input signal (aperture window opening). By using the Sample Sync Flag (negative transition - leading edge), plus an external 3 millisecond, one-

Table 2-7. TOTAL BUSY FLAG TIME OUT
(Automatic Adaptive Timeouts Enabled)

FUNCTION RANGE	TOTAL TIME	MS
	FILTER OUT	FILTER IN
VDC-10, 100, 1000	54 $\pm$ 3	523 $\pm$ 42
VDC-0.1, 1.0	123 $\pm$ 10	523 $\pm$ 42
VAC - all ranges	123 $\pm$ 10	523 $\pm$ 42
Ω - all ranges	123 $\pm$ 10	523 $\pm$ 42
k Ω - all ranges	73 $\pm$ 6	523 $\pm$ 42
Autorange - per range change	Add 50	Add 280

shot delay, total data acquisition time can be decreased when using input scanners or a changing input signal which require long settling times. This will take advantage of the fact that the aperture window is only open for 3 milliseconds allowing the input signal to be changed and to be settled before the next sample aperture occurs. When the Automatic Timeouts are enabled, the final sample sync flag must be used instead of the initial or intermediate sync flags. See Figure 2-4 for timing of the sample sync flag.

2-47. The trigger flag indicates if the DVM is being triggered internally or externally. Other flags are the over-


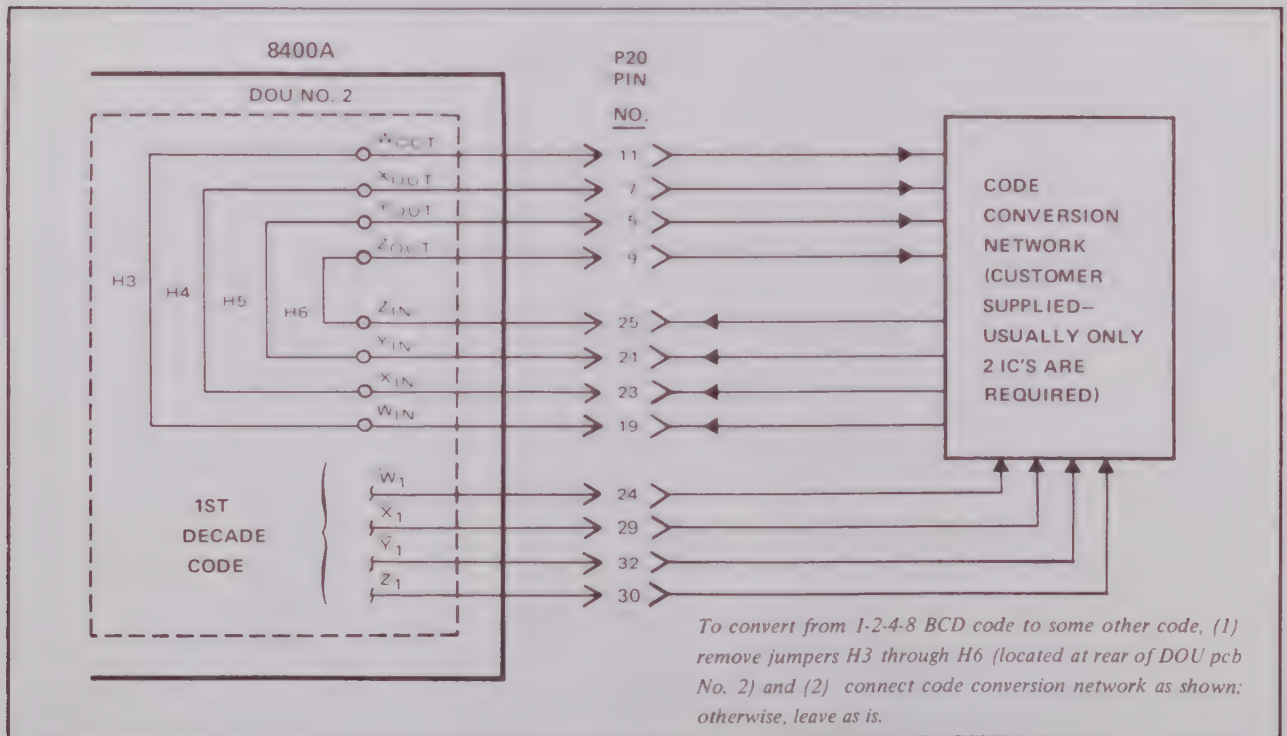



Figure 2-6. CODE CONVERSION

1. WITH PROGRAMMED FUNCTION AND/OR RANGE CHANGE - AUTORANGING NOT ALLOWED.

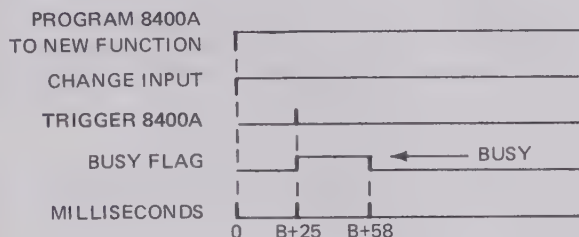


B = BUFFER SETTling TIME FROM TABLE D
25 = TIME TO SWITCH 8400A INTERNAL RELAYS

- a. SIMULTANEOUSLY CHANGE INPUT AND PROGRAM FROM A FORMER FUNCTION TO A NEW ONE WHEN FORMER INPUT DOES NOT CAUSE OVERLOAD CONDITION FOR NEW FUNCTION, OR NEW INPUT WOULD NOT CAUSE OVERLOAD CONDITION FOR OLD FUNCTION. (SEE SPECIFICATIONS ON DATA SHEET).

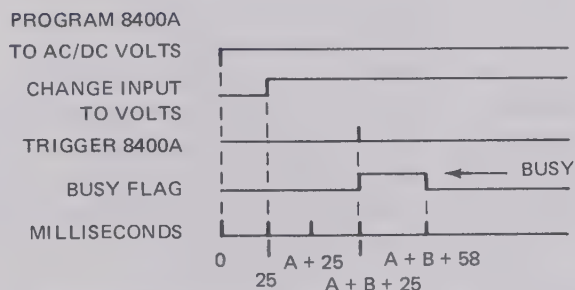

B = BUFFER SETTling TIME FROM TABLE D
A = TIME TO SWITCH INPUT
25 = TIME TO SWITCH 8400A INTERNAL RELAYS


- b. PROGRAM 8400A TO AC OR DC VOLTS FROM Ω OR $k\Omega$, THEN APPLY A VOLTAGE INPUT GREATER THAN SPECIFIED Ω OR $k\Omega$ "OVERLOAD" INPUT. (SEE SPECIFICATIONS ON DATA SHEET)

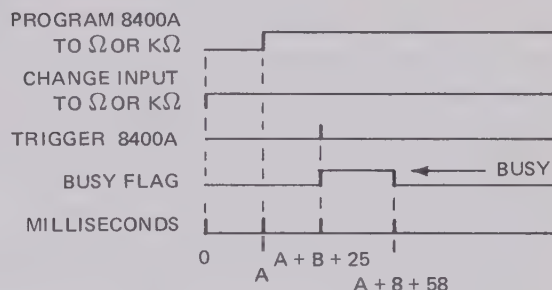

B = BUFFER SETTling TIME FROM TABLE D
A = TIME TO SWITCH INPUT
25 = TIME TO SWITCH 8400A INTERNAL RELAYS

- c. PROGRAM 8400A TO Ω OR $k\Omega$ FROM AC OR DC VOLTS WHEN INPUT VOLTAGE IS GREATER THAN SPECIFIED OVERLOAD FOR Ω OR $k\Omega$ INPUTS. (SEE SPECIFICATIONS ON DATA SHEET).

2. WITH PROGRAMMED RANGE CHANGE BUT NO FUNCTION CHANGE.

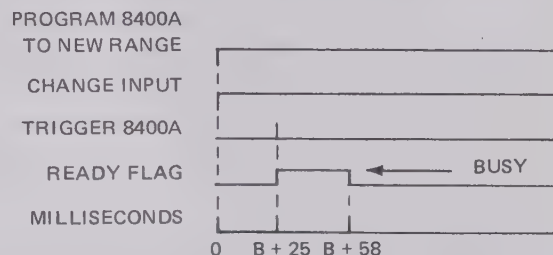

B = BUFFER SETTling TIME FROM TABLE D
25 = TIME TO SWITCH 8400A INTERNAL RELAYS

TABLE D

BUFFER SETTling TIME TABLE

FUNCTION	RANGE	BUFFER SETTling TIME IN MILLISECONDS	
		FILTER "OUT"	FILTER "IN"
DCV	.1V	100	500
	1,10,100	33	500
	1000	33	500
ACV	ALL	33	500
	Ω	100	500
	100,1000	33	500
$k\Omega$	10,000	33	500
	100	33	500
	1000,1000	33	500

Figure 2-7. SINGLE READING TIMING REQUIREMENTS WHEN D.O.U.'S AUTOMATIC ADAPTIVE TIMEOUTS ARE NOT ENABLED.

load, Volts DC, Volts AC, Ohms, Kilohms, Polarity, Filter, External Reference and Remote Flags which are self-explanatory. Refer to Table 2-7 for pin connections and level information.

2-48. Completely Parallel Data Acquisition

2-49. For completely parallel data acquisition, perform the following steps:

- a. Determine the BCD code to be used and wire accordingly (see paragraph 2-42 for code conversion information).

NOTE!

84-2-1 BCD is supplied in standard 8400A.

- b. Acquire full digits data by connection to the decade outputs. Leave inhibit lines associated with each decade open.
- c. Acquire function, range, overrange and polarity data as desired. Leave associated inhibit lines open.
- d. If data output is to be applied to a printer, the foregoing data could be grouped for presentation in several printer columns, with each column weighted as desired.
- e. Acquire busy, overload, and trigger flags for use as desired.

2-50. Serial Character, Parallel Bit Acquisition

2-51. For serial character, parallel bit acquisition, perform the following steps:

- a. Determine the BCD code to be used and wire accordingly (see paragraph 2-42 for code conversion information).
- b. Connect function, range, polarity, and digit outputs in parallel, as shown in Figure 2-8 or in groups of 8, 12, 16 bits, etc., as desired.
- c. User supplied clock controls inhibit lines to determine the sequence of character acquisition. Data is transferred to the output lines when the associated inhibit lines are high. Truth tables and acquisition format are also shown in Figure 2-8.

2-52. Minimum Lines Acquisition

2-53. Minimum lines acquisition is a practical application of serial character, parallel bit acquisition, in which a user-supplied clock is placed near the 8400A to sequentially control the inhibit lines. Proceed as follows:

- a. Place a customer fabricated 9-segment ring counter near the 8400A and interface as shown in Figure 2-9.
- b. Trigger the 8400A. (The Sample Time line may be programmed via interface or it may be hard-wired).
- c. When data is ready, transition of the 8400A BUSY signal will start the ring counter. A synchronizing pulse, sent from the ring counter's advance line, will allow the acquisition device to recognize the character being acquired on the four output lines.
- d. An OVERLOAD line is available to serve as an alarm or priority interrupt.

2-54. Installation, theory of operation, and maintenance instructions for the Data Output Unit are covered in Section 6 of the manual.

2-55. OPERATING NOTES

2-56. Overload Protection

2-57. The 8400A is protected against overload in each function and on all ranges. Table 2-8 lists the maximum voltages that may safely be applied to the DVM on all ranges.

2-58. Guarded Measurements

2-59. The 8400A employs a system of shields and guards that function (when properly connected) to minimize common mode-to-normal mode signal conversion and induced noise, thereby providing the user with a versatile systems DVM capable of fully-floating measurements without significant degradation of accuracy.

2-60. Non-floating measurements will likely be the usual case. Under these conditions, it is satisfactory to strap the front panel guard (GD) terminal to the LO input terminal using the shorting link provided.

CAUTION!

If guarded measurement is not needed, the DVM guard terminal should be connected to the INPUT LO terminal at the front panel to preclude possible damage to the instrument.

2-61. In general, guarded voltage and resistance measurements will be necessary under the following conditions:

- a. When long signal leads are used and signal source impedance is high.

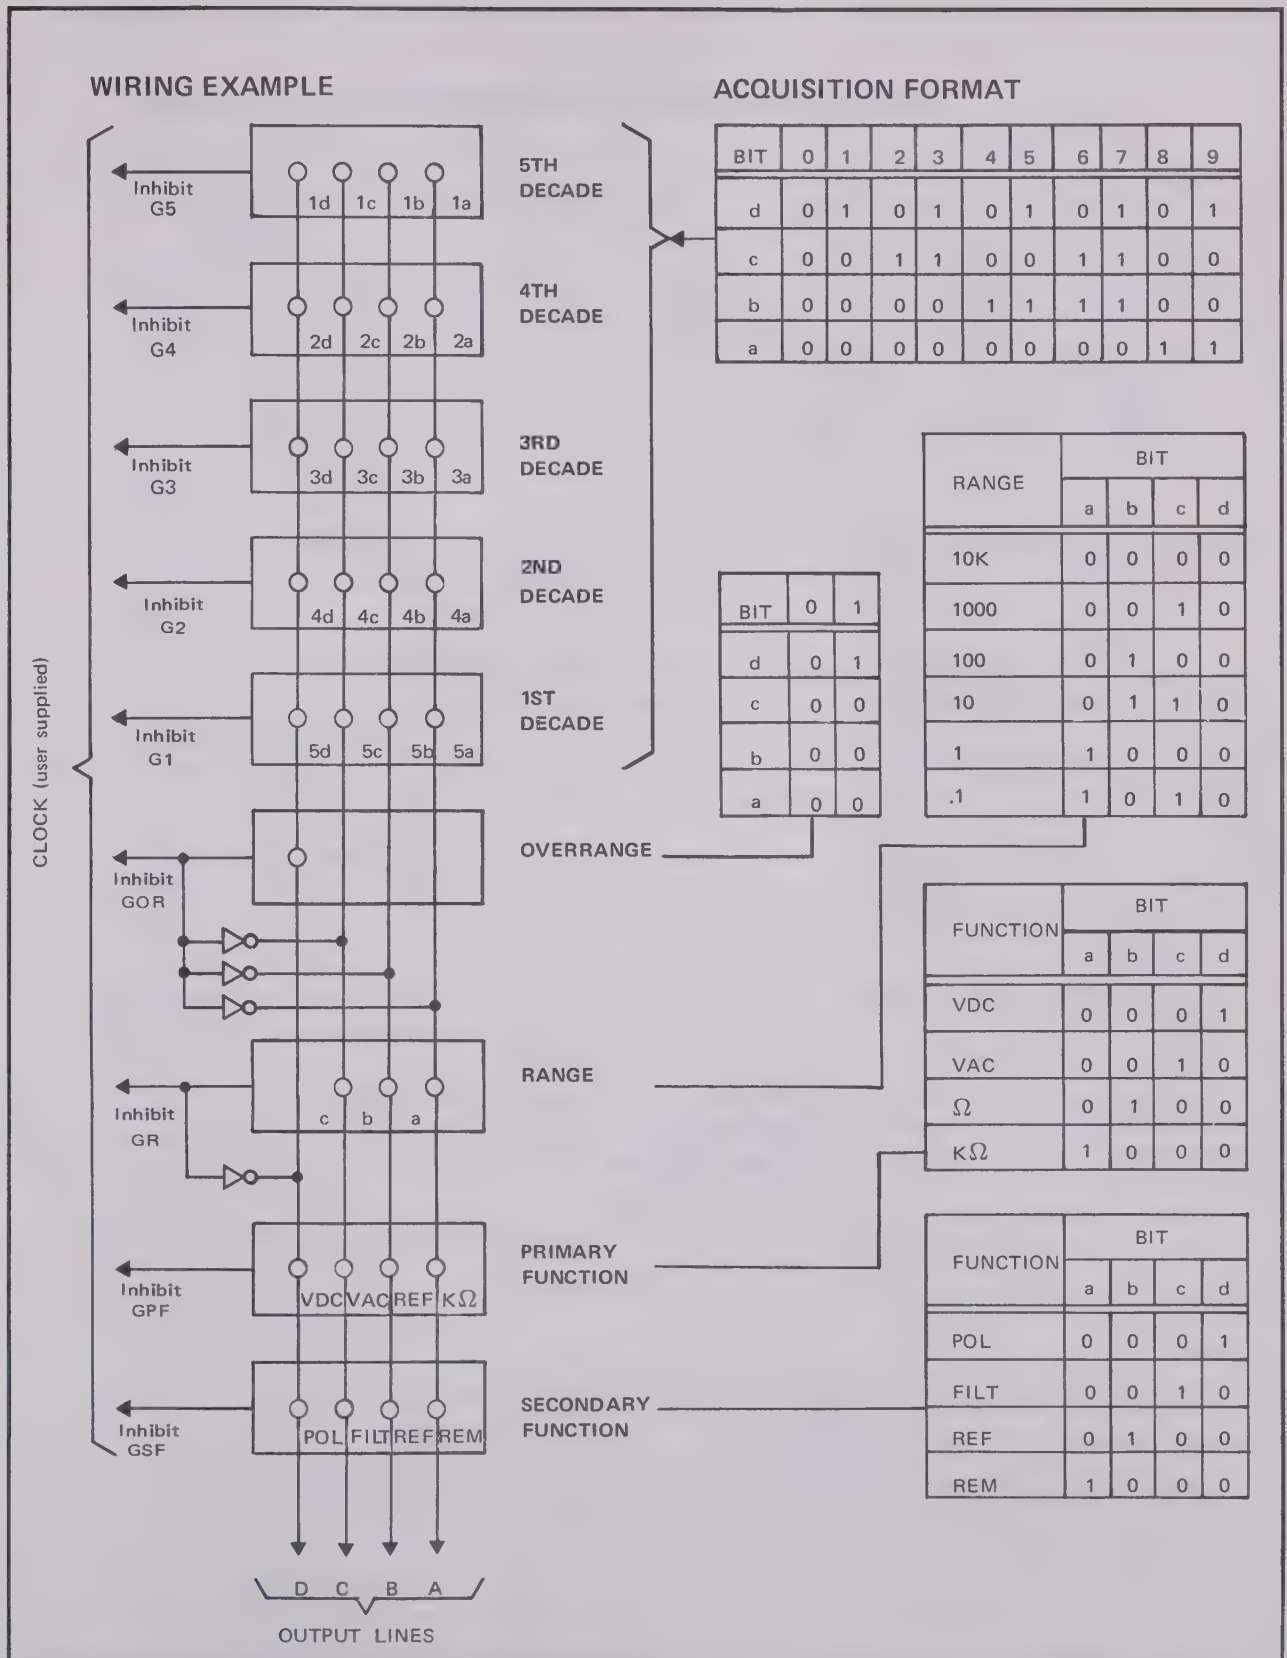


Figure 2-8. WIRING EXAMPLE, ACQUISITION FORMAT, AND TRUTH TABLES FOR SERIAL CHARACTER, PARALLEL BIT ACQUISITION

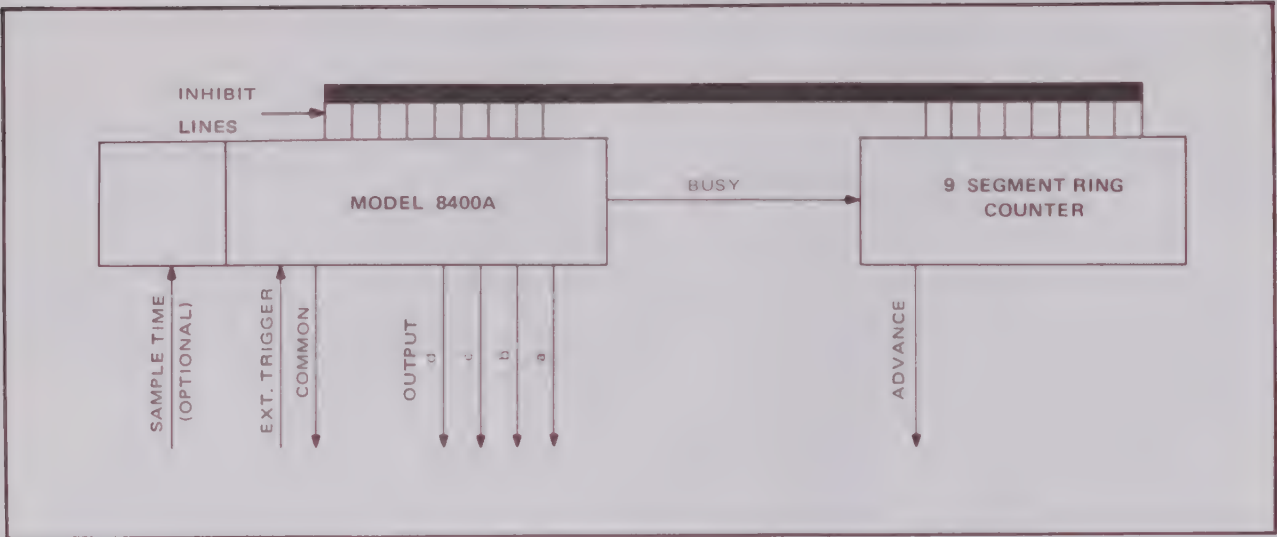


Figure 2-9. MINIMUM LINES ACQUISITION

Table 2-8. OVERLOAD PROTECTION CHARACTERISTICS

FUNCTION	MAXIMUM SAFE INPUT	FORM OF PROTECTION
VDC	±1100V dc or RMS (±1500V peak) continuously on any range.	Circuit Design
VAC	1100V RMS continuously on any range.	
RESISTANCE: 10Ω - 10,000KΩ ranges	20V RMS	FUSE: 15 ma fuse (with spare) located on Ohms Converter PCB
100 KΩ - 10,000 KΩ ranges	250V RMS continuously	Circuit Design
DC EXTERNAL REFERENCE	+10.5 (Note: The algebraic sum of the DVM input voltage and the common difference voltage should not exceed 13 volts dc or peak ac).	FUSE: 15 ma fuse located on DC External Reference Converter PCB protects mainframe if maximum common difference voltage is exceeded.
AC EXTERNAL REFERENCE	130V RMS at Reference Input terminals.	Circuit design

- b. When floating measurements are made and the common mode voltage is a high potential, high frequency, or both.
- c. When the DVM is operating in the presence of high-level radiated noise, of which the most com-

mon example is stray fields at the power line frequency.

2-58. Figure 2-10 shows two methods for making guarded voltage measurements where reduction of common mode-to-normal signal conversion is desired. Figure 2-11 shows two methods for connection of the guard terminal when making ohms measurements.

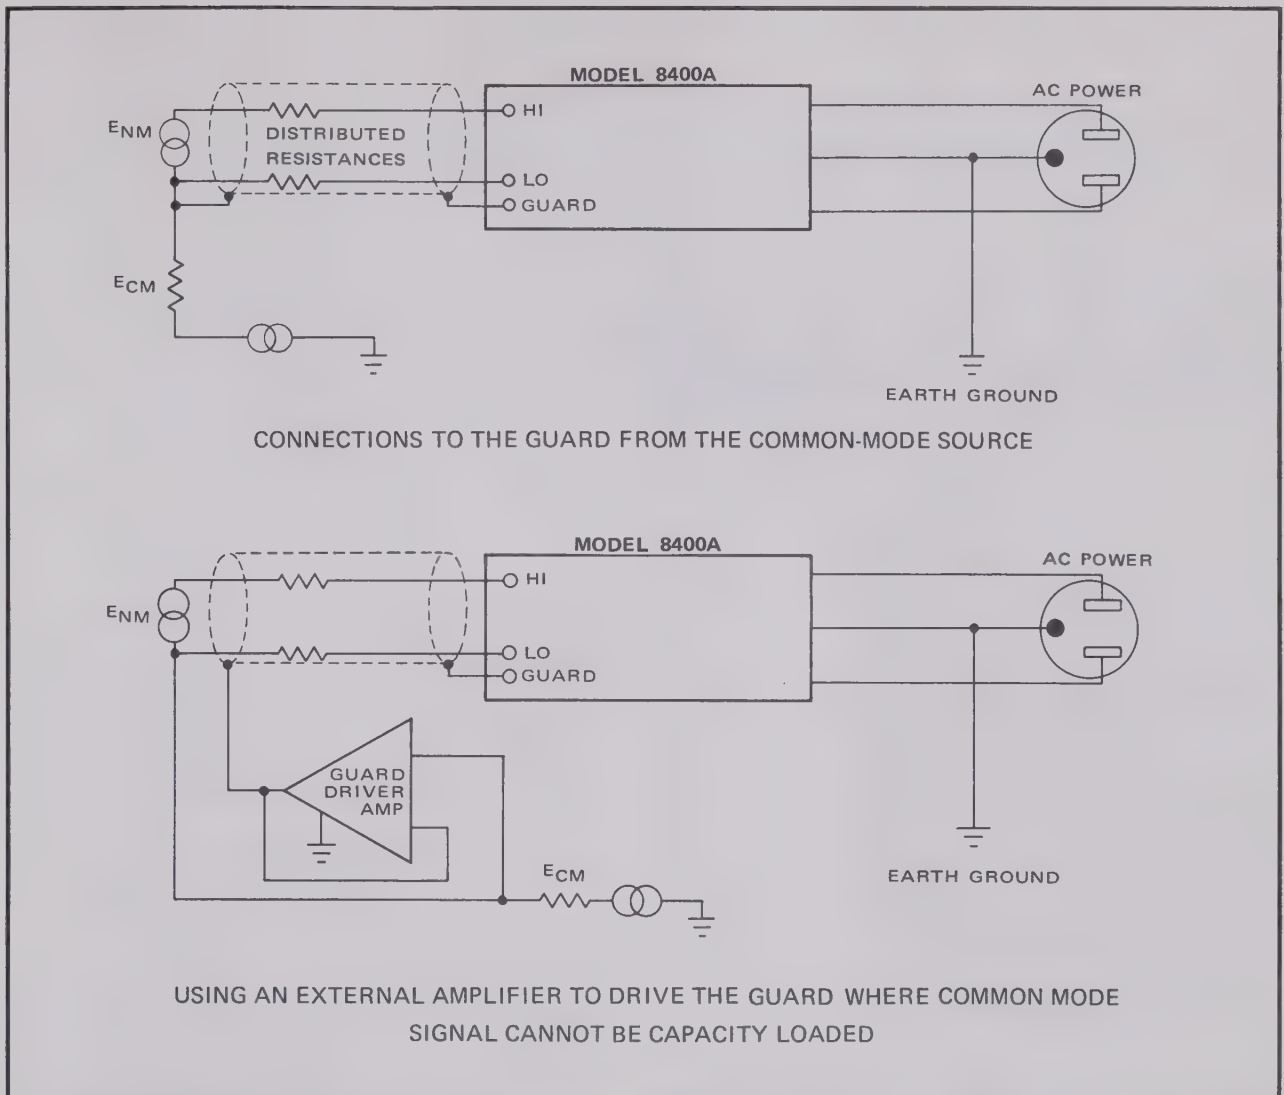


Figure 2-10. SUGGESTED GUARD CONNECTIONS FOR REDUCTION OF COMMON MODE-TO-NORMAL MODE SIGNAL CONVERSION

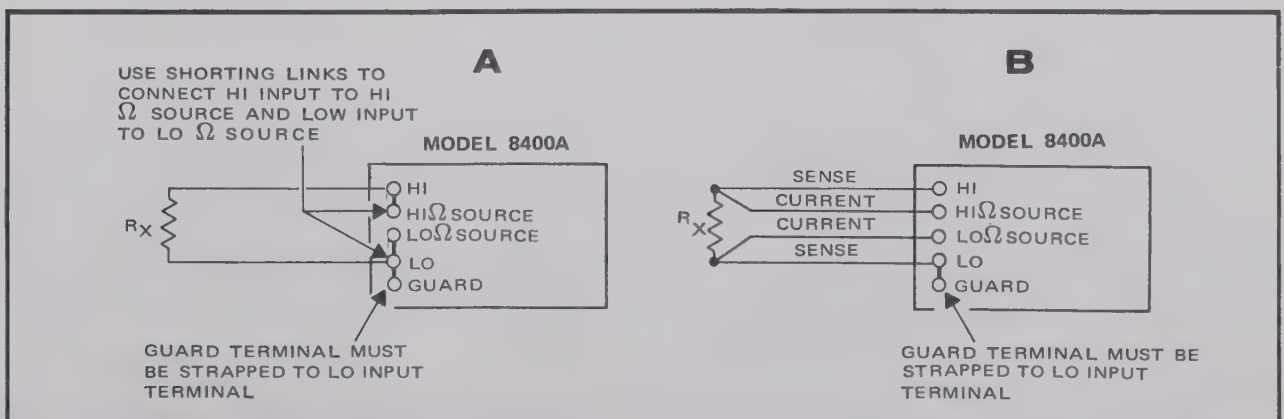


Figure 2-11. PROPER GUARD CONNECTIONS FOR (A) 2-TERMINAL Ω MEASUREMENTS WHEN SIGNAL LEADS ARE SHORT AND (B) 4-TERMINAL Ω MEASUREMENTS ON 10Ω THROUGH $10,000\Omega$ RANGES

Section 3

Theory of Operation

3-1. INTRODUCTION

3-2. This section describes the theory of operation of the Model 8375A. The information is arranged under headings of "BLOCK DIAGRAM ANALYSIS" and "CIRCUIT DESCRIPTIONS." Simplified block diagrams and circuits are included with the text information. Schematic diagrams are located at the rear of the manual.

3-3. BLOCK DIAGRAM ANALYSIS

3-4. Buffer (A11)

3-5. The Buffer (A11) receives the dc input voltage and scales it up or down so that a full-scale input produces a full-scale 10V output to the active filter. (Refer to Figure 3-1.) When the 0.1 or 1V range is selected, the Buffer is configured as an amplifier having a gain of 100 or 10, respectively. In the 10, 100 or 1000V range, the A11 Buffer has a fixed unity gain and the input is scaled using a divider to provide the full-scale $\pm 10V$ output.

3-6. Active Filter (A10)

3-7. The A10 Active Filter suppresses ac noise present in the Buffer output. It consists of a voltage follower and a four-pole filter. Filtering is in effect when the FILTER switch on the front panel is pressed. If this switch is not pressed, the four-pole filter is bypassed and the circuit functions as a voltage follower. The resulting filtered or unfiltered output is applied to the A9 A/D Converter.

3-8. Logic (A8)

3-9. The A8 Logic produces the master timing signals from which the measurement periods in the instrument are established. It also produces the reference voltage upon

which the accuracy and stability is based. The circuitry consists of a master clock, a six-state shift register, a current controlled oscillator (CCO), a four-bit binary counter, and a +7V reference supply. The master clock produces gating signals that synchronize all timing circuitry in the instrument. The shift register is driven by the clock signals and produces digit cycle control signals for the A9 A/D Converter. Any output from the A/D amplifier produces an output from the analog comparator which enables the CCO to send output pulses to the binary counter. The binary counter selects the appropriate steps in the A9 A/D Converter ladder such that the CCO output is ultimately disabled. The resulting state of the binary counter is also applied to the A14 Display and decoded to indicate the measured value. The $\pm 7V$ reference supply output is applied to the ladder in the A9 A/D Converter.

3-10. A/D Converter (A9)

3-11. The A9 A/D Converter receives the output from the Active Filter, determines the polarity, and serially digitizes the input voltage. The digitizing process is controlled through commands from the A8 Logic assembly. The circuitry consists of an inverting amplifier, polarity detector, sample and hold, A/D amplifier, ladder switches, and an analog comparator amplifier. The inverting amplifier receives the positive or negative outputs of the A10 Active Filter and inverts the positive output so that the input to the A/D amplifier is always negative. Polarity of this signal is sensed by the polarity detector and applied to the A14 Display section. Any output voltage from the A/D amplifier, greater than V_{ref} , produces an output from the analog comparator which then enables the CCO to send output pulses to the binary counter. The binary counter pulses gate the appropriate ladder switches in the A/D converter to produce a voltage across the primary ladder resistors. The resulting voltage is equal in value, but opposite in polarity,

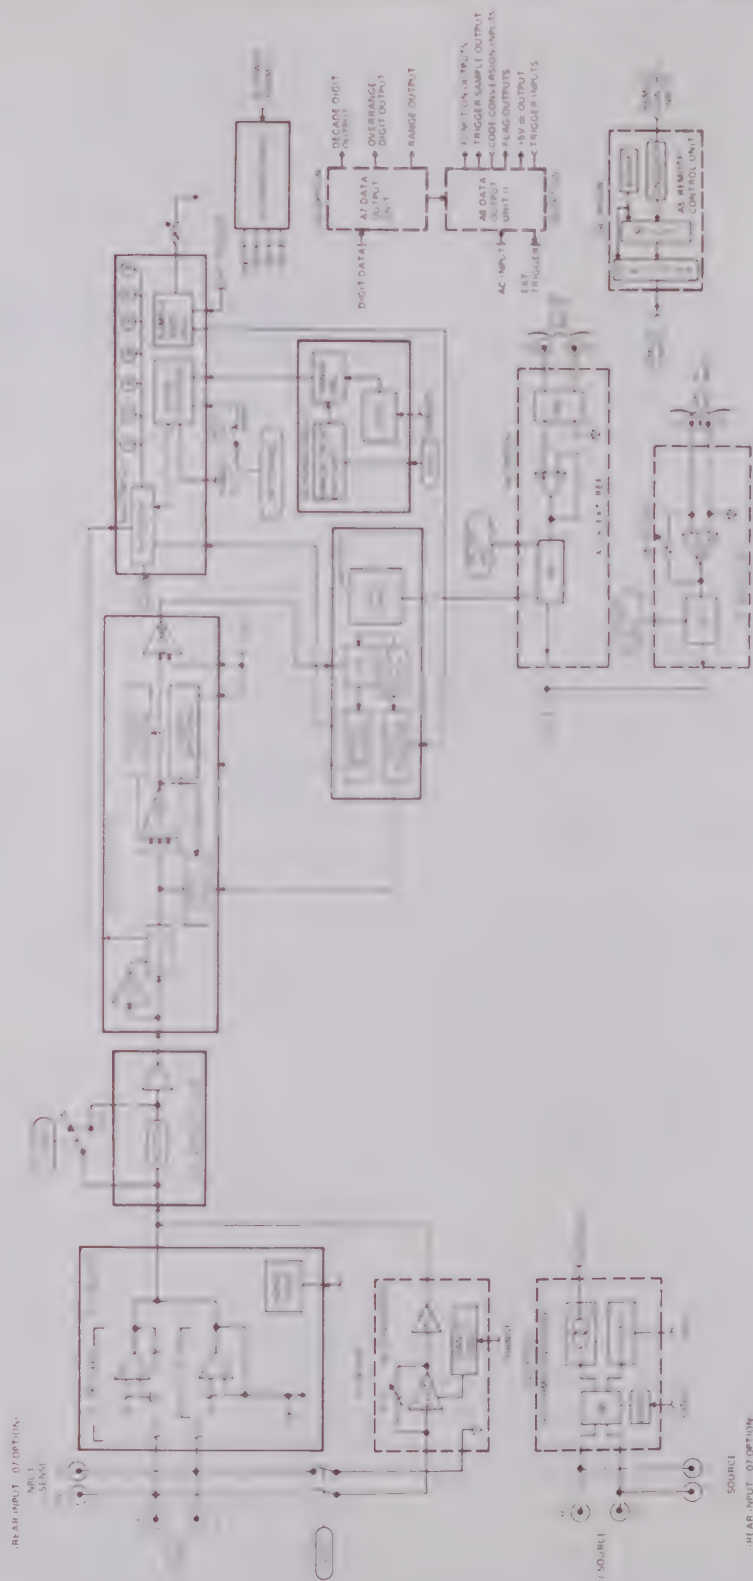


Figure 3-1. MODEL 8400A BLOCK DIAGRAM

to that portion of the A/D amplifier input voltage that caused the amplifier output to be greater than V_{ref} . As the degenerative affect of the primary ladder voltage causes the A/D amplifier output to fall below V_{ref} , the analog amplifier will no longer enable the CCO to send output pulses to the ladder switches. At this point the digitizing process for the most significant digit of the unit input voltage is complete. The voltage level remaining at the output of the A/D amplifier, representing the 8400A input voltage minus the most significant digit, is stored in the sample and hold circuit until the logic control gates it out to the input of the A/D amplifier. Each decade of the recirculated remainder is digitized in a similar fashion with one exception; the recirculated remainder voltage (now the A/D amplifier input voltage) and the primary ladder voltage are now the same polarity, because they are applied to opposite sides of the dual fet input transistor.

3-12. Display (A14)

3-13. The A14 Display decodes and digitally displays the input voltage magnitude and polarity. It also provides a variable sample rate for control of the measurement cycle. The circuitry consists of a sample rate oscillator, range counter, decoder, and display indicators. The sample rate oscillator frequency is controlled by a SAMPLE RATE control on the front panel and determines the rate at which the input to the instrument is sampled. The range counter receives auto-range commands from the A2 Range Delay and manual range commands from the front panel switches. The range counter applies range information to the decoder and all input signal conditioning circuitry. Range, polarity, and digit information is processed in the decoder, which then produces the correct display condition in the indicators.

3-14. Range Delay (A2)

3-15. The A2 Range Delay processes switching inputs from the front panel and produces control commands for the decoder in the A14 Display. It also produces up/down autorange commands for the range counter. The circuit consists of logic, range delay one-shot, and a pulse generator. The logic circuitry produces control signals for the pulse generator and the decoder in the A14 Display. A clock signal for the range counter in the A14 Display is produced by the pulse generator. This clock signal is required for the autorange feature. The range delay one-shot produces a programmed time delay after any range change to allow for settling time of analog signal conditioners which process the input.

3-16. Power Supply (A1)

3-17. Operating voltages for the instrument are produced in the A1 Power Supply. The voltages produced are +200V, $\pm 18V$ and +5V. Each voltage is derived from the ac input using a series regulator.

3-18. Options

3-19. Optional features can be installed in the instrument. Each option is shown in Figure 3-1 and described in the following paragraphs.

3-20. AC CONVERTER. The A13 AC Converter is installed as the -01 Option. This circuitry allows ac measurements to 1000V at frequencies from 10 Hz to 100 kHz. The circuitry consists of an operational rectifier, amplifier integrator, and range logic. AC inputs are amplified or attenuated and rectified in the operational rectifier. The resulting dc voltage is then filtered and amplified by the amplifier integrator. Range commands are processed in the range logic whose output then establishes a fixed gain or attenuation factor for the operational rectifier. The resulting full-scale -10V dc output is applied to the A10 Active Filter. This voltage is then filtered, serially digitized and displayed in the same manner as previously described in the basic instrument paragraphs.

3-21. OHMS CONVERTER. The A12 Ohms Converter is installed as the -02 Option. This circuitry allows resistance measurements from $100\ \mu\Omega$ to $12M\ \Omega$. Resistance measurements in ohms ranges are true, four-terminal. Measurements in K ohm ranges are conventional two-terminal. The circuitry consists of a constant current generator, a current source, switching circuitry, and logic. When the ohm function is selected, the constant current generator output is made available to the Ω SOURCE terminals. Since both the Ω SOURCE and SENSE terminals are connected to the unknown resistance, the A11 Buffer input voltage is directly proportional to the resistance value. The A11 Buffer output is then serially digitized and displayed as described previously to indicate the resistance value. In the K ohm ranges, the current source output is made available to the Ω SOURCE terminals. The resulting voltage input is then measured in the same manner; however, since the voltage drop in the lead resistance of the unknown also appears at the voltage measuring terminals, true four terminal measurement is not available. Simplified diagrams of the four terminal and conventional resistance configurations are shown in Figure 3-2.

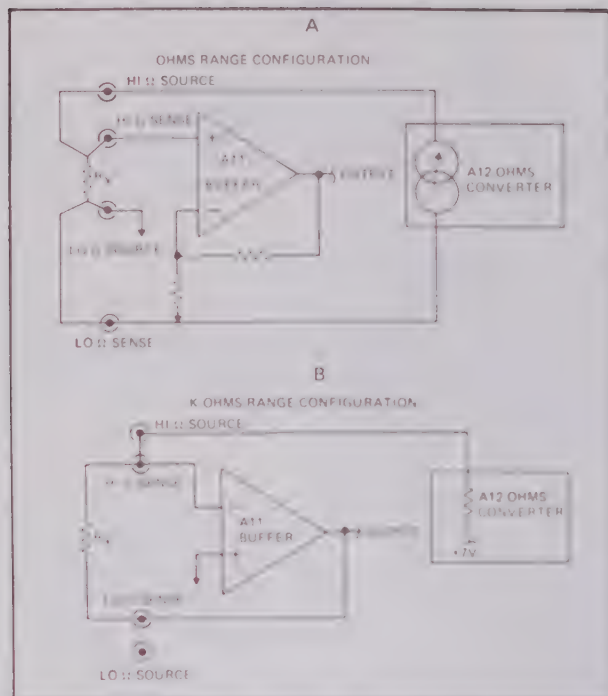


Figure 3-2. OHMS AND K OHMS RANGE CONFIGURATION

3-22. **DATA OUTPUT.** The A6 and A7 Data Output Units are installed as the -03 Option. This circuitry provides parallel, isolated, coded outputs of digit, polarity, range, and function. It also provides a +5V dc output for external equipment as well as input lines for external triggering and control of the measurement cycle. The circuitry is contained on two separate assemblies. Digit and range outputs are available from the Data Output Unit 1. Function indications, flag outputs, and +5V dc outputs in addition to triggering and code conversion inputs are available in the Data Output Unit II.

3-23. **REMOTE CONTROL.** The A5 Remote Control Unit is installed as the -04 Option. This circuitry allows remote control of mode, instrument range, and functions. Input requirements are compatible with DTL or TTL logic levels. The circuitry consists of a clock generator, encoder, multiplexer, and decoder. The clock generator produces a clock signal which gates the multiplexer and decoder. Inputs are coded in the encoder and applied to the multiplexer. The multiplexer output is then serially transferred to the decoder at the clock rate. Serial to parallel conversion takes place in the decoder and the resulting commands used to control the range and function.

3-24. **DC EXTERNAL REFERENCE.** The A3 DC External Reference is installed as the -05 Option. This circuitry allows dc/dc and ac/dc ratio measurements using an external dc reference voltage. Input reference voltage can be from +1 to +10.5V dc. The circuitry consists of a differ-

ential amplifier and a switching circuit. The external reference input is buffered by the differential amplifier. Application of internal or external reference voltage to the V_{REF} line is done through the switching circuit.

3-25. **AC EXTERNAL REFERENCE.** The A14 AC External Reference assembly is installed as the -06 Option. This circuitry allows ac/ac ratio measurements with an external ac reference voltage. Input reference voltage can be from 0.1 to 100V ac at 10 Hz to 100 kHz. The circuitry consists of an operational rectifier and switching circuitry. The ac reference input is amplified or attenuated and rectified in the operational rectifier. The resulting dc reference is then applied to the V_{REF} line by the switching circuitry.

3-26. **REAR INPUT.** The Rear Input terminals are installed as the -07 Option. These terminals are connected in parallel with the input terminals on the front panel.

3-27. CIRCUIT DESCRIPTIONS

3-28. The following paragraphs describe in detail the basic circuitry contained in the instrument. Circuit descriptions for options are located in the subsections of Section 6. Schematic diagrams are located at the rear of the manual.

3-29. A11 Buffer

3-30. The A11 Buffer (Drawing No. 8400A-1005) provides a full-scale dc voltage, isolated from the input under measurement, of 10V dc. It consists of four basic elements: input and output voltage dividers, amplifiers, and control logic. The circuitry has two operating configurations or modes determined by the voltage range selected: a low volts mode and a high volts mode. In the low volts mode (0.1 and 1.0 volt range) some amplification of the input occurs. In the high volts mode (10, 100, and 1000 volts range) input attenuation occurs, except in the 10 volts range when the input is processed without attenuation or amplification. Both modes are shown in block form in Figure 3-3. The A portion of the figure depicts the low volts mode, and the B portion of the figure depicts the high volts mode.

3-31. The input to the A11 Buffer is derived from input jacks J25 and J26, both jacks being shown on the block and system wiring diagrams. Buffer input current limiting resistors 1R1 and 1R2 are also located on the system diagram, along with the high and low inputs to the A11 Buffer, at jacks J4TM and J1TR, respectively, of terminal block No. 1.

3-32. On the A11 Buffer schematic, the low volts input is applied across current limiting resistor R2, through the contacts of K1, to the high input impedance amplifier com-

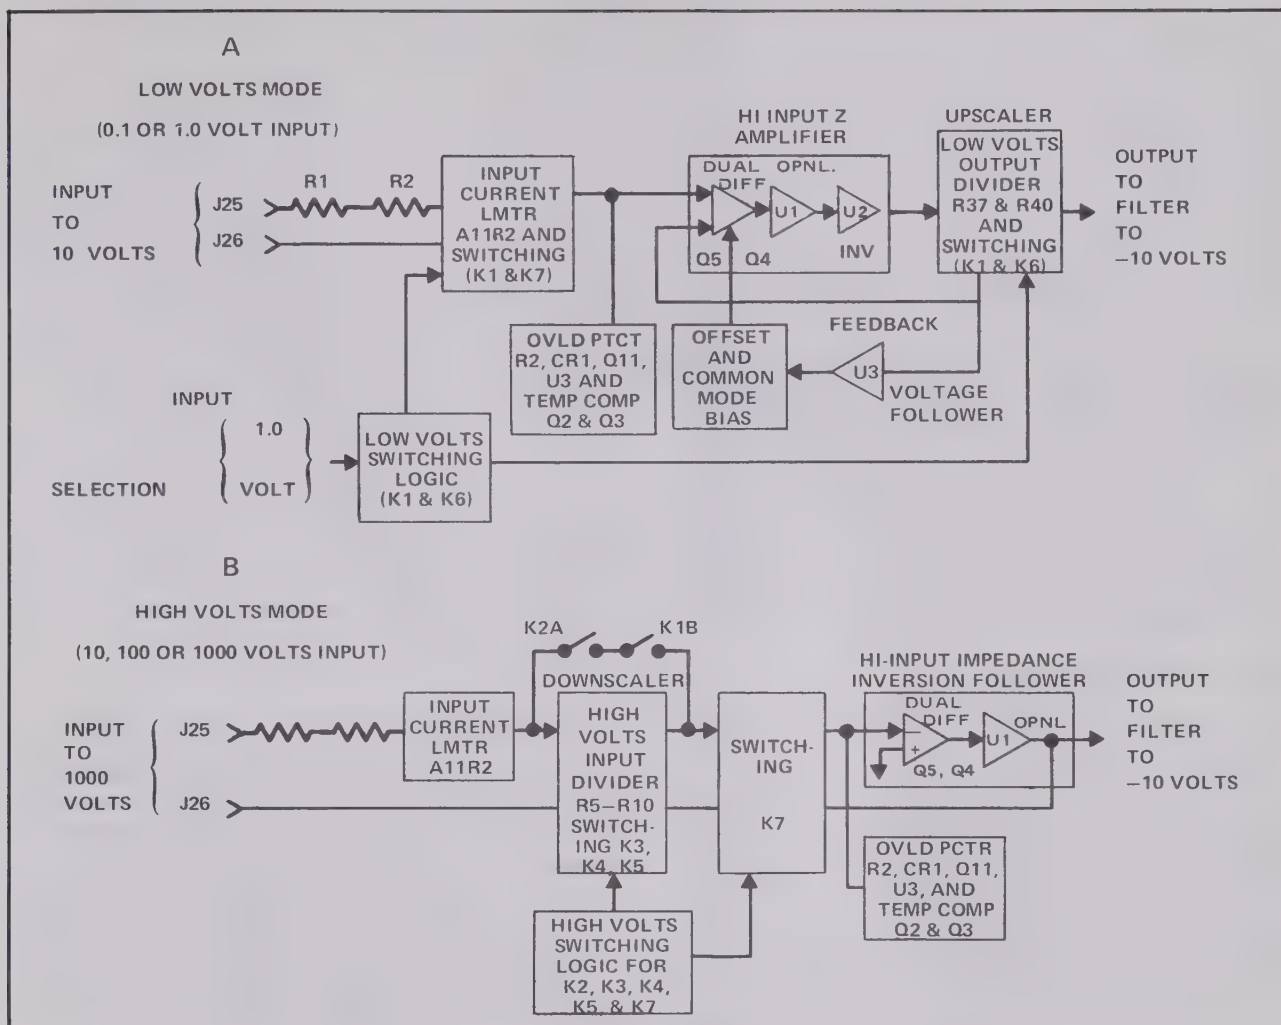


Figure 3-3. BUFFER AMPLIFIER BLOCK DIAGRAM

posed of three separate amplifiers: dual differential amplifier Q5 and Q4, operational amplifier U1, and inverter U2.

3-33. The output of the amplifier is applied in parallel to the A10 Active Filter and to a gain determining, output voltage divider, R37 through R40, through contacts of relays K1 and K6. Inspection of the resistance ratios in the output divider shows that the final amplifier output must be 100 times the input in the 0.1 volt range, and 10 times the input in the 1 volt range. Thus, the A11 Buffer output is the required 10 volts for full-scale inputs.

3-34. In the high volts mode of operation, shown in Figure 3-3B, the buffer amplifier receives the input voltage directly (10V range) or receives a scaled down voltage through an input voltage divider consisting of R5 through R10. Since the buffer is a unity gain inverter, its output is the inverse of the received input. For example, an input of

+1000V would be scaled down to +10V through the input divider. With +10V at its input, the buffer output is -10V.

3-35. In the low volts mode, voltage follower U3 is used to bootstrap the operational environment of the input dual differential pair Q4 and Q5, with the input voltage to increase its effective ratio of common mode rejection. Any differential amplifier offset voltage present that would cause buffer output with no input is compensated by use of two potentiometers; one, COARSE DC ZERO, which balances the base emitter voltages of the input differential amplifier Q5 by adjusting the collector current ratio, and two, or the second potentiometer, BUFFER ZERO, which affords a fine adjustment via the front panel by applying just that amount of nulling voltage to the base of differential amplifier Q5B that results in a buffer output voltage equal to zero when the input voltage is zero. This last potentiometer is labeled DC ZERO just over the front panel access hole.

3-36. Overload protection for dual differential amplifier Q5 is afforded by the combination of components R2, CR1, Q11, and the current limiting resistors previously defined as R1 and R2 shown on the system wiring diagram. Positive overvoltage protection is afforded by transistor Q11 which clamps amplifier output to 1.7 volts. Negative overvoltage protection is afforded by diode CR1 which clamps the input to -1.7 volts. The current drawn during an overload is limited by the total input resistance of 147k ohms.

3-37. Compensation circuits are provided to reduce the temperature coefficients of the input offset voltage and offset current. Transistor Q2 and surrounding circuitry provides through R18 and R19 the temperature varying base current required by input transistor Q5. Transistor Q3 compensates the temperature variation of the base-emitter voltage in dual transistor Q4 to ensure that input transistor Q5 remains at substantially the same bias conditions irrespective of temperature.

3-38. A10 Active Filter

3-39. The A10 Active Filter (Drawing No. 8400A-1015) consists of a voltage follower preceded by four poles of low pass filtering. These four poles attenuate undesirable AC signals which may be present in the dc input signal. Filtering occurs after the FILT button on the front panel of the DVM is depressed. A block diagram of the active filter is shown in Figure 3-4. Also shown is the response curve of the active filter which plots attenuation in decibels against a log scale of frequency in Hertz.

3-40. A9 A-to-D Converter and A8 Logic

3-41. The A9 A-to-D Converter and A8 Logic circuits (respectively, drawings No. 8400A-1003 and -1004) are discussed together in the following paragraphs, since any discussion of the analog-to-digital (A-to-D) conversion process must include elements of both circuits. The basic conversion and logic circuitry involved in the conversion process is shown in Figure 3-5. Also shown is an arbitrary input voltage that is the equivalent to the inverted, unknown voltage applied across the input jacks of the DVM. The output of the converter is shown, applied to the following stage, the A14 Display, and consists of binary coded data bit groups that are serially emitted from the converter and applied to the display circuits for decoding and serial display. The basic purpose of the combined converter-logic circuitry is to convert the analog voltage input (given as +6.3524 dc volts in Figure 3-5) serially by decade to binary coded bit groups, one bit group per decade.

3-42. The inverting amplifier consists of input switch Q3, dual FET input amplifier Q4, operational amplifier U1, and associated circuitry. Once every 18 milliseconds, during the C sub-period the inverting amplifier switch Q6 is switched on by the S5 Logic Signal, to zero the inverting amplifier. The automatic zero circuit consists of transistors Q5 and Q6 and capacitor C2. The drive circuit also supplies a turn-off signal to transistor Q3, thereby removing the input to the inverting amplifier during the C sub-period.

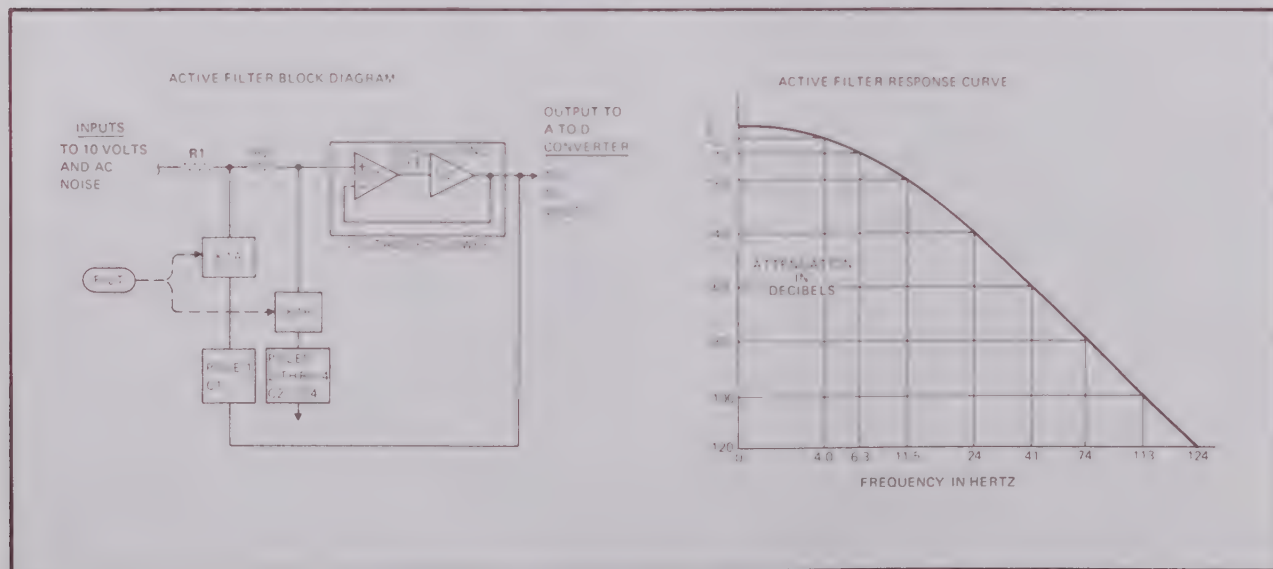


Figure 3-4. ACTIVE FILTER

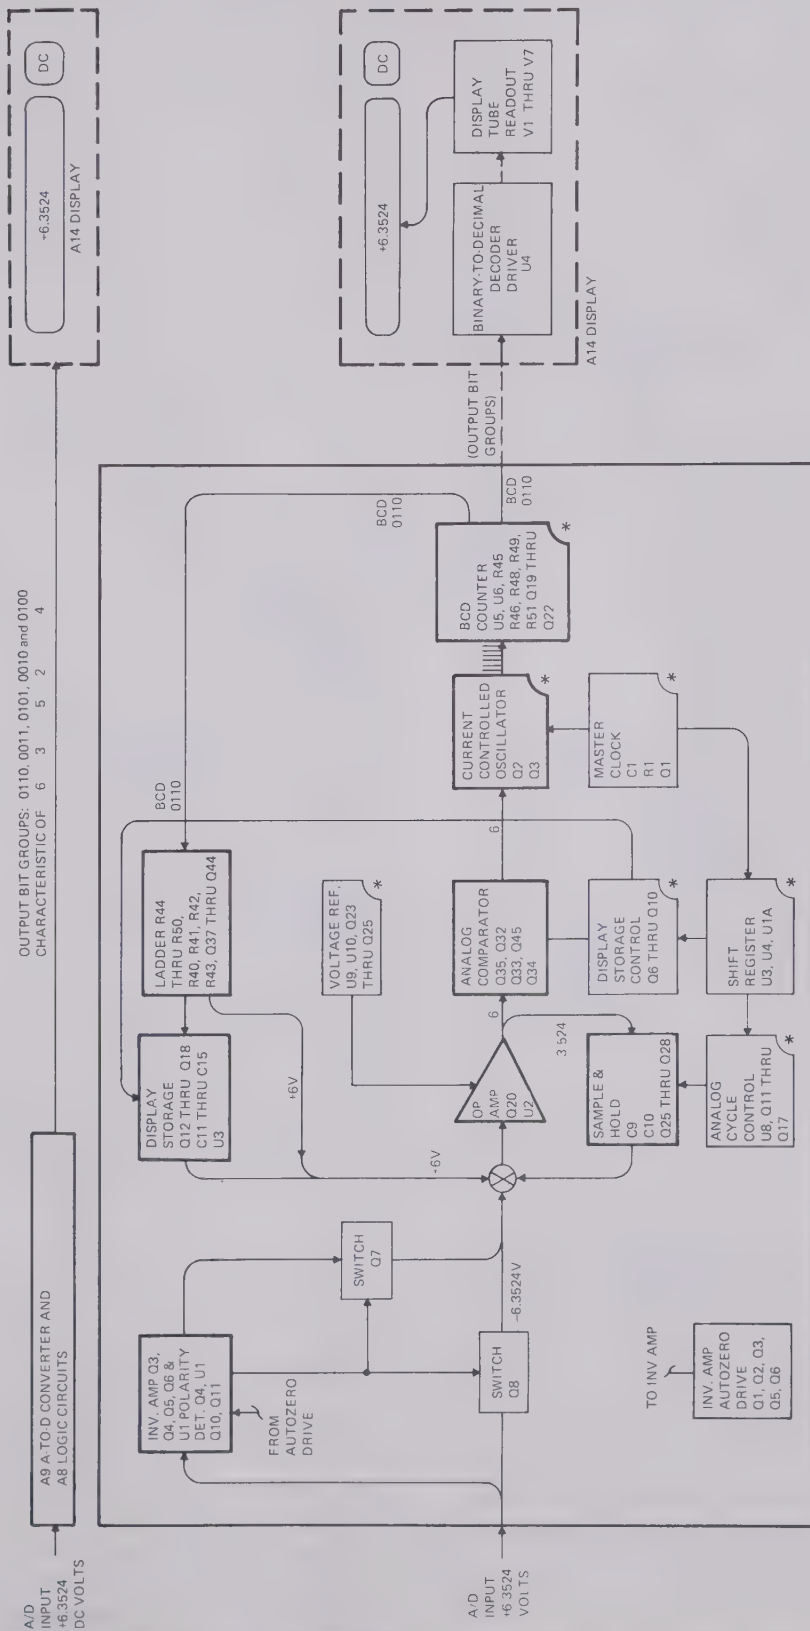


Figure 3-5. A-TO-D CONVERTER AND LOGIC BLOCK DIAGRAM

3-43. The polarity detector consists of flip-flop Q10, Q11, and associated circuitry. The flip/flop employs base triggering, which is applied through diode CR6 to the base of Q10. The gate signal, gate 4, is applied to the emitters of Q10 and Q11 and enables the detector during the A sub-period of the measure period. During the remainder of the measure period, the plus and minus gates (Q8 and Q7, respectively) are turned off and the polarity information is retained by the display circuitry.

3-44. The A/D amplifier consists of dual FET Q20, operational amplifier U2, and associated components. Switch Q24 is turned on during the ZERO (Ø) sub-period of the measurement period by a ZERO signal from the logic circuit. This signal also controls switches Q19 and Q31, which are turned on during the ZERO sub-period to zero the differential amplifier, and switch Q30, which is turned off during the ZERO sub-period to disconnect the amplifier output from the ladder. Transistor Q29 and resistor R54 constitute a clamp, which prevents amplifier U2 from saturating while its output is above 7 volts.

3-45. The analog comparator, consisting of transistors Q45, Q32, Q33, Q34, Q35 and associated components, is basically a voltage comparator. Differential amplifier stage Q35 compares the A/D amplifier output with the +7 volts reference, and differential stage Q33, Q34 outputs to the current controlled oscillator (CCO) anytime the A/D amplifier output voltage is greater than the +7 volts reference. Transistor Q32 operates as a second comparator, which responds quickly to high voltage levels, thereby allowing maximum time for resolution of the least significant digit.

3-46. The sample and hold circuit consists of transistors Q25 through Q28 and capacitors C9 and C10. The sequence of operation for the sample and hold circuit is shown in Figure 3-6.

MEASURE PERIOD SUBPERIODS	SWITCHES ON	VOLTAGES STORED ON SAMPLE AND HOLD CAPACITORS	
		C9	C10
A	Q26, Q22	3.524	0
B	Q25, Q28	3.524	5.24
C	Q27, Q26	2.4	5.24
D	Q25, Q28	2.4	4.0
E	Q27	0	4.0
ZERO (Ø)	Q19, Q31, Q24	0	?

 VOLTAGES SHOWN ARE ONLY PROPORTIONAL TO ACTUAL VOLTAGES.

Figure 3-6. SAMPLE AND HOLD SWITCHING

3-47. The ladder switches of Q37 through Q44 are controlled by drivers Q19 through Q22 on the A8 logic board. The output of the ladder switches is applied to two ladders. Each ladder comprises a 4-bit, weighted-resistor, digital-to-analog converter. The primary ladder consists of resistors R44 through R50 and produces an output voltage that corresponds to the actual value of the most significant digit of the A/D amplifier input voltage. The secondary ladder, which drives only the display storage circuit through buffer amplifier U3, consists of resistors R40 through R43 and produces an output that closely approximates the actual value of the primary ladder output. A half-digit bias is produced by R38 and R39 in conjunction with the secondary ladder resistors and adds the voltage equivalent of a half-digit to the output of the secondary ladder. This ensures proper display storage readout by compensating for the effects of voltage decay in the storage circuit.

3-48. The display storage circuit consists of FET switches Q13 through Q17, capacitors C11 through C15, and FET switches Q12 and Q18. The buffered output of the secondary ladder is supplied to the appropriate storage capacitor through Q18, which is switched on during the second half (display time) of each sub-period. The first (most significant) digit is stored on C13, the second on C11, etc. When the cycle change circuitry switches to storage mode, Q12 is turned on and the analog voltages stored on the storage capacitors are serially applied to the input of the A/D amplifier. Thus, the same reading is continually digitized and displayed until a new sample of the input is taken.

3-49. The 333 Hz clock signal is produced by transistor Q1 on the A8 Logic board. The clock frequency is determined by the RC time constant of resistor R1 and capacitor C1. The output of Q1 is applied to the trigger input of flip-flop U1B. The F output of U1B is inverted in Q4 and becomes the $\bar{H}$ signal. The F, $\bar{F}$, and $\bar{H}$ signals are used by the logic to generate control signals.

3-50. The six-state shift register consists of J-K flip-flops U3A, U3B, U4A, U4B, and U1A. Error correction gate U2B controls the input to flip-flop U3B to ensure proper operation of the shift register. At the end of a typical digitizing cycle, flip-flop U1A reverts to the ZERO condition upon receiving the $\bar{H}$ clock pulse. Since all the flip-flops are now in the ZERO condition, the output of U2B goes low, thereby defining the start of the ZERO sub-period as shown in the timing diagram of Figure 3-9. The ZERO sub-period is terminated by the next $\bar{H}$ clock pulse, which sets flip-flop U3B high because its J input was high and its K input was low when the clock pulse was received. Subsequent clock pulses set the flip-flop outputs as shown in Figure 3-7.

SUBPERIOD	SHIFT REGISTER FLIP FLOP AND ZERO GATE OUTPUT STATES					
	U3B	U3A	U4A	U4B	U1A	U2B
ZERO	0	0	0	0	0	0
A	1	0	0	0	0	1
B	0	1	0	0	0	1
C	0	0	1	0	0	1
D	0	0	0	1	0	1
E	0	0	0	0	1	1

Figure 3-7. SHIFT REGISTER OUTPUTS

3-51. The sixteen-state binary counter consists of J-K flip-flop U5B, U5A, U6A, and U6B. The counter is set to ZERO at the beginning of each sub-period in the measurement period by the $\overline{H}$ clock pulse. During each sub-period of the digitizing cycle, the output pulses from the CCO, which are applied to the clock input of flip-flop U5B, are counted. The truth table for the flip-flops in the binary counter is shown in Figure 3-8. The binary counter is disabled by gate U2A if the count of 11 is attained.

CCO PULSE COUNT	SIXTEEN-STATE BINARY COUNTER			
	U5B Z	U5A Y	U6A X	U6B W
0	0	0	0	0
1	1	0	0	0
2	0	1	0	0
3	1	1	0	0
4	0	0	1	0
5	1	0	1	0
6	0	1	1	0
7	1	1	1	0
8	0	0	0	1
9	1	0	0	1
10	0	1	0	1
11	1	1	0	1

Figure 3-8. SIXTEEN-STATE BINARY COUNTER OUTPUT

3-52. The CCO consists of multivibrator Q2 and Q3. The CCO has no output until it is supplied current by the analog comparator and is enabled by the F output of the J-K flip-flop U1B. The CCO output is applied to the clock input of the 16-state binary counter. The 9's catcher gate U7A, disables the CCO at a count of nine, if the DVM is digitizing the second through fifth digits (sub-periods B through E).

3-53. The outputs of the six-state shift register, in conjunction with the $\overline{H}$ pulses of the output of Q4, are applied to the display storage control circuit consisting of transistors Q6 through Q10 and related components. Outputs

from this circuitry control the display storage circuit located on the A9 A-to-D Converter board.

3-54. The analog cycle control circuit produces the gating and control signals which are used to control the synchronization of events in the analog portion of the DVM, principally in the A-to-D Converter circuits. These signals, together with other control signals are shown in the DVM Timing and Synchrony Diagram, Figure 3-9. The analog cycle control circuit consists of NAND gates U8A through D driving transistors Q11 through Q17 and associated circuit elements.

3-55. The ladder switch driver circuitry (Q19 through Q22 on A8 Logic board) receives 8-4-2-1 coded binary data from the sixteen-state binary counter and translates this to 4-4-2-1 coded binary data, which matches the weighting of the resistors in the ladder. Thus, the ladder output is proportional to the count in the binary counter. The count increases until the output of the ladder is sufficient to bring the A-to-D amplifier to the particular balanced position required by the input voltage.

3-56. The master +7 volts reference for the instrument is derived using reference amplifier U9 as a reference element. The reference voltage is produced using operational amplifier U10 and emitter follower Q25, which presents a low source impedance at the reference point. Transistor Q24 disables the +7 volts reference in the event the user wishes to employ an external reference and the required options are installed. Transistor Q23, coupled with the zener in the reference amplifier, produces a reference voltage for the +18 volts regulator in the A1 Power Supply.

3-57. A14 Display

3-58. The A14 Display circuits (Drawing No. 8400A-1002) control the function/status indicators and the decimal indicators associated with the readout tubes. The K Ω , AC, DC, Ω , OVER, FILT, and X REF indicators are controlled by the respective function control lines. They are illuminated when +5 volts dc is applied to the control line; however, the control lines are interlocked in the associated assembly so that the indicator remains extinguished unless the assembly is installed in the instrument. The OVER range indicator is operated by transistor Q5 in the OVER RANGE DRIVER circuit.

3-59. The polarity signs + and - of tube V1 are controlled by a flip-flop consisting of transistors Q19, Q20, FET switches Q32, Q33, current source transistors Q9,

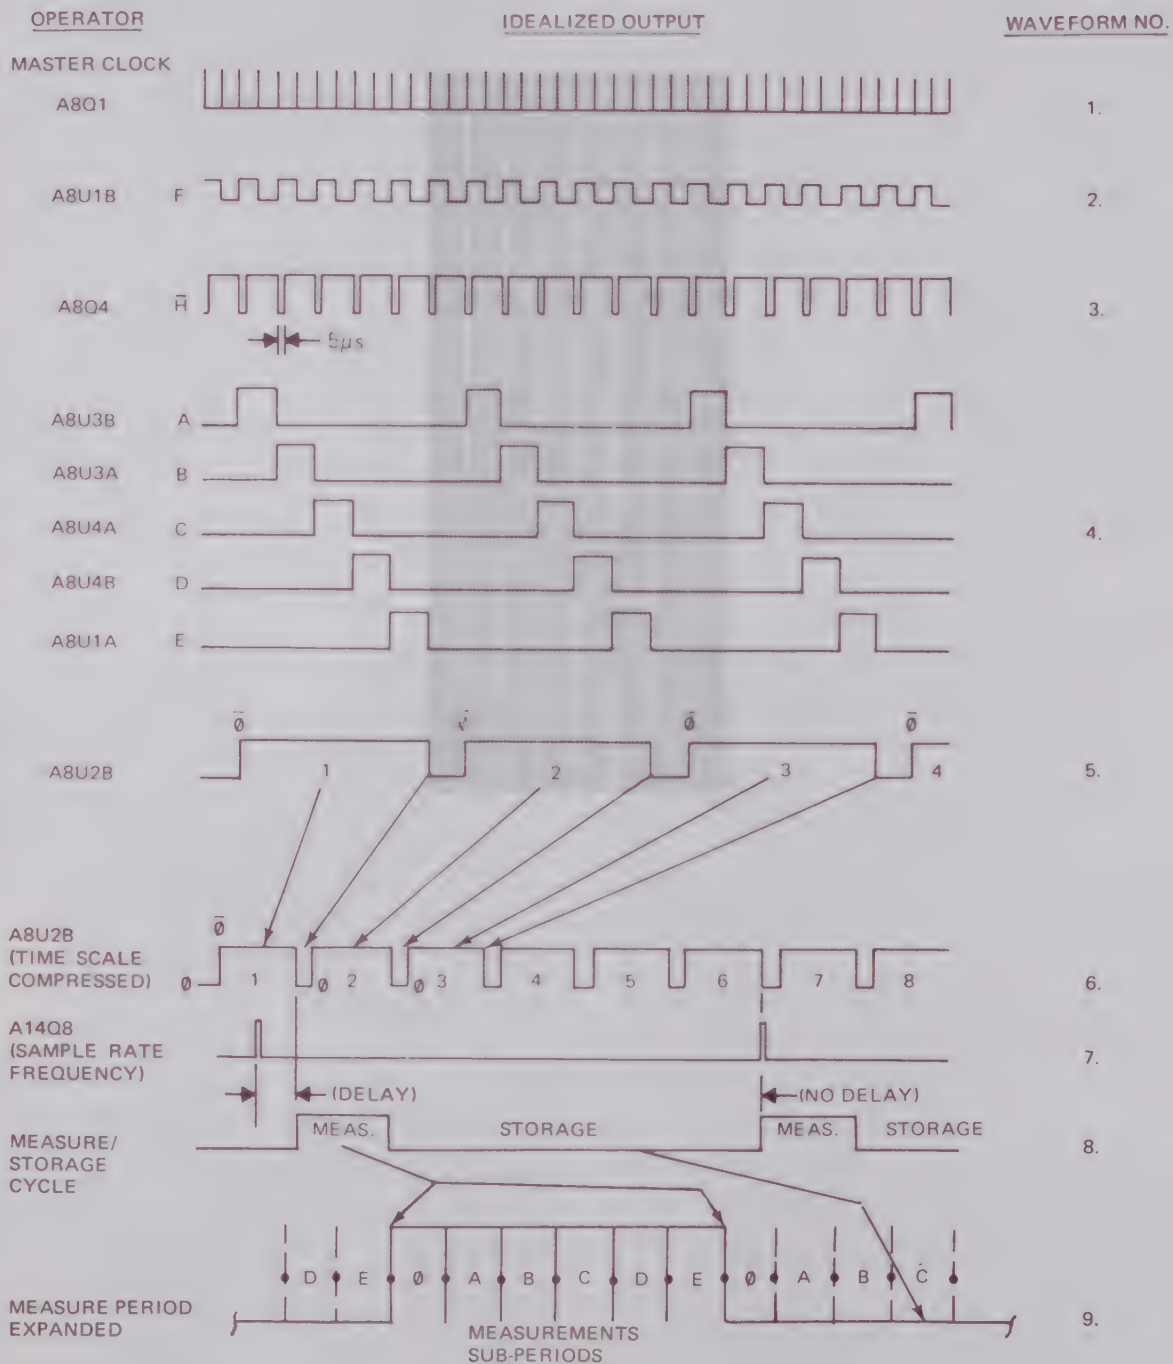


Figure 3-9. DVM TIMING AND SYNCHRONY DIAGRAM (SHEET 1)

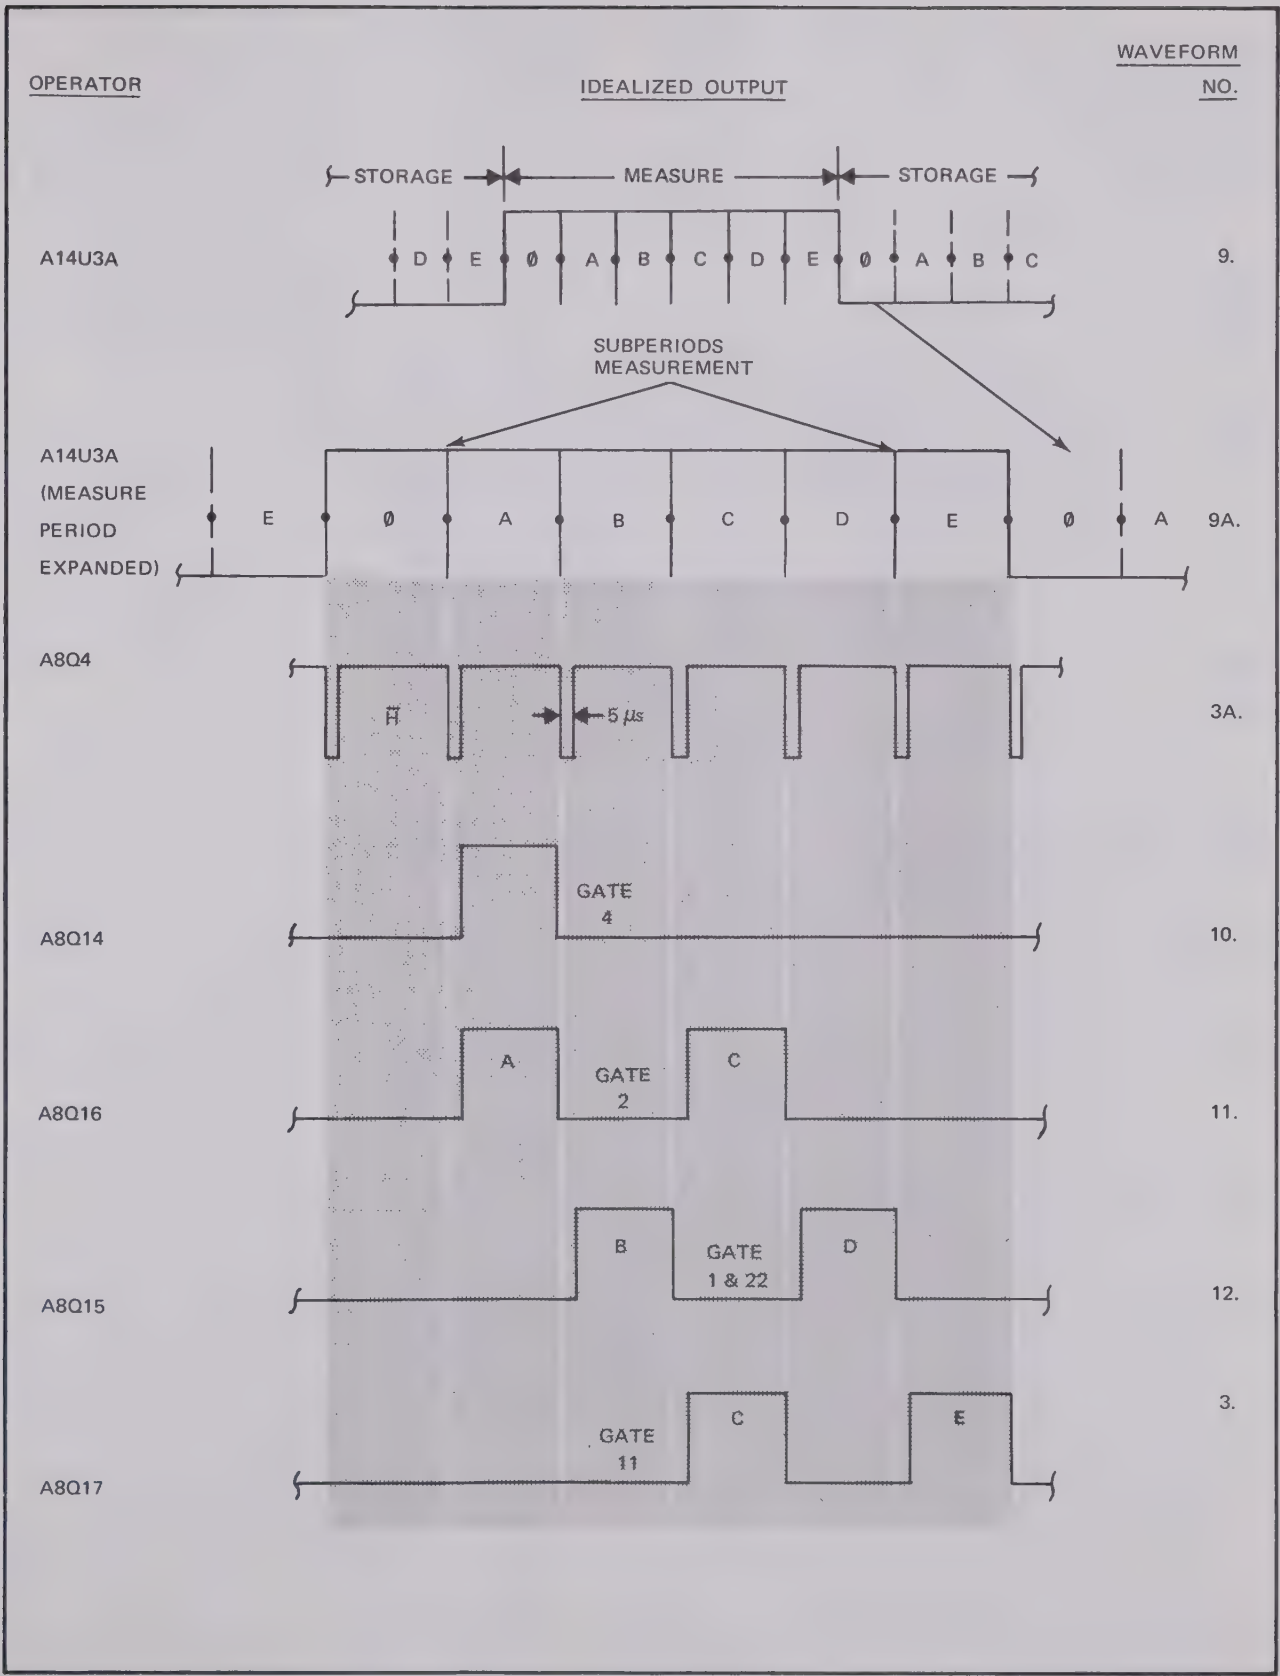


Figure 3-9. DVM TIMING AND SYNCHRONY DIAGRAM (SHEET 2)

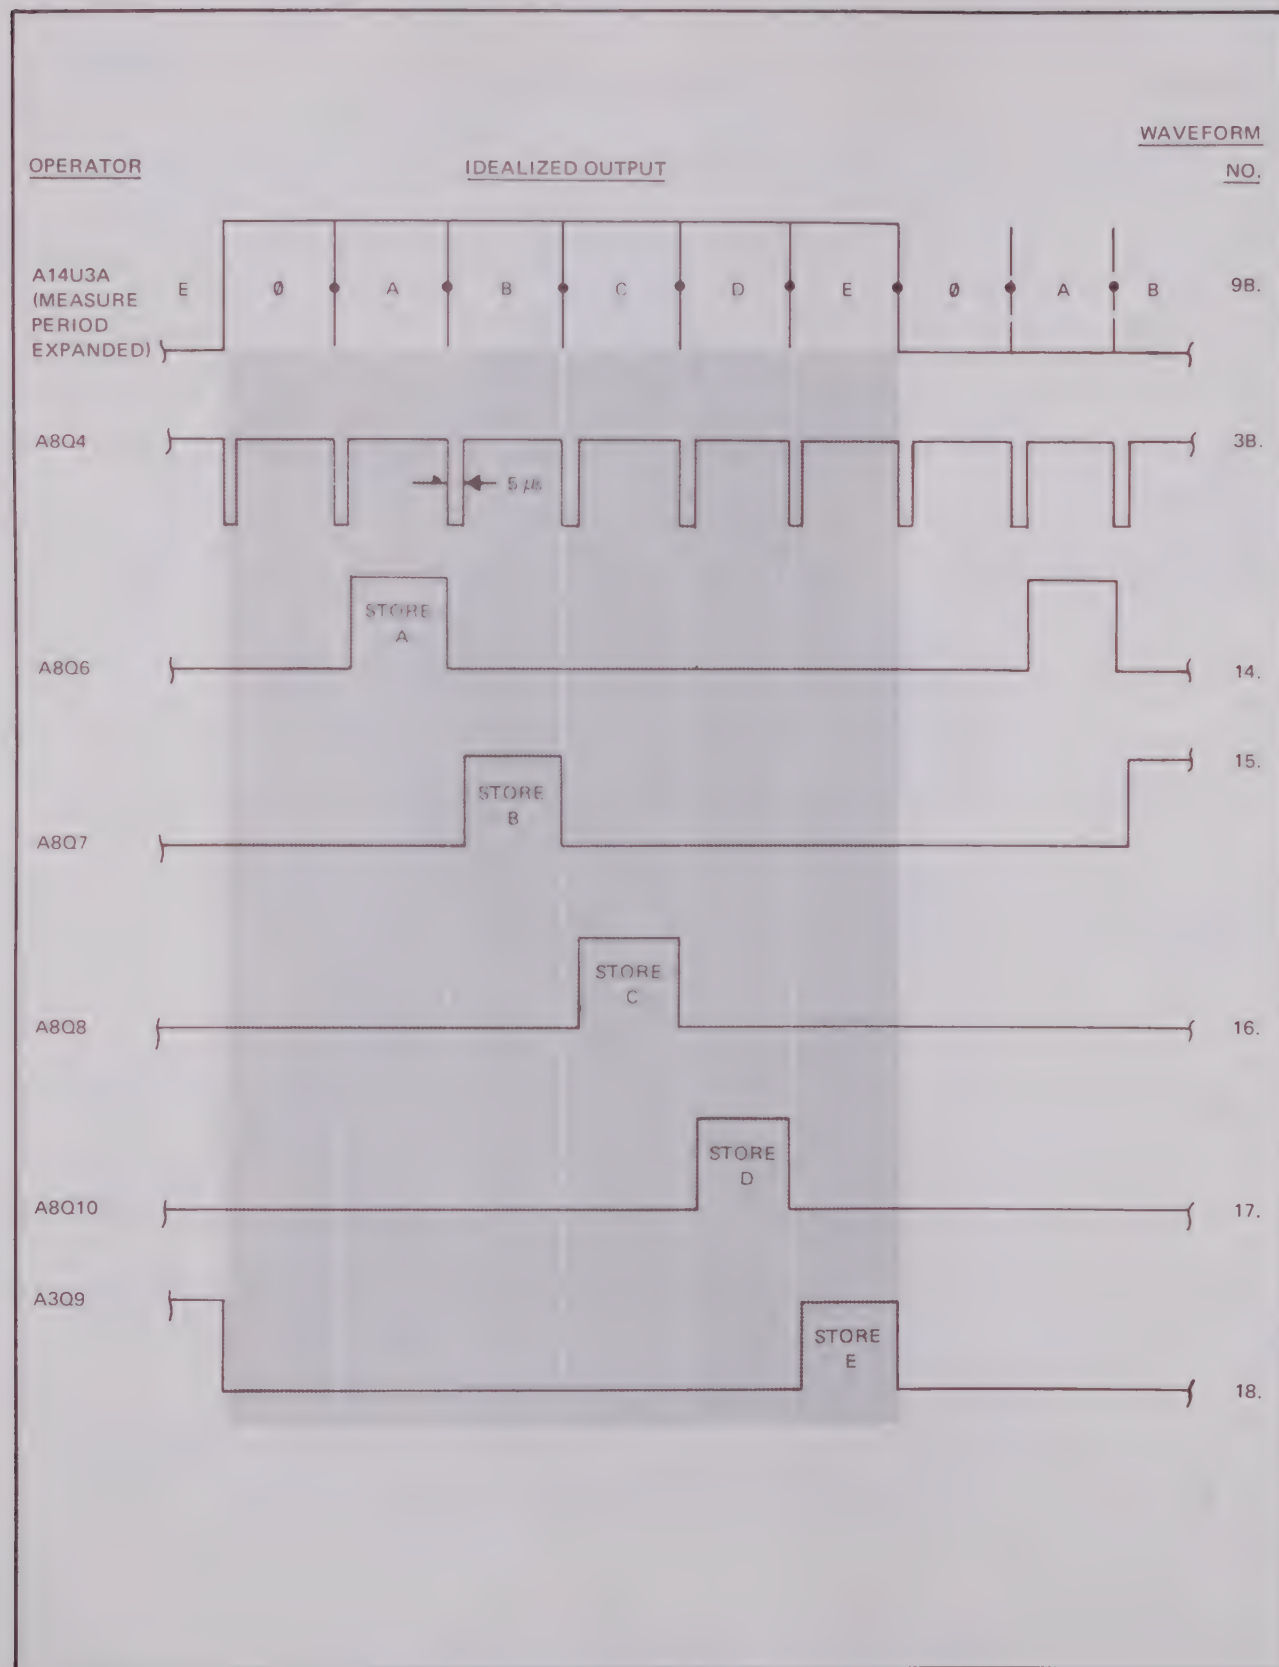


Figure 3-9. DVM TIMING AND SYNCHRONY DIAGRAM (SHEET 3)

Q10, and associated components. Inputs to this circuit are VDC, C, POL INFO A and B, and *a*. POL INFO A and B come from the polarity detector in the A-to-D Converter and determine which of the two polarity characters are illuminated. The range counter, via *a*, reverses the effects of POL INFO A and B as a function of range to account for the fact that the polarity detector receives the input to the instrument in its *true* sense on the 0.1 and 1 volt ranges, but in its *inverted* sense on all other ranges. The decimal point indicators in tubes V2 through V7 are controlled by transistor switches Q11 through Q16, which, in turn, are controlled by the range counter status.

3-60. The switches Q22 through Q26 are the main elements of the anode strobing control circuit. They are turned on sequentially by shift register signals A through E, beginning with signal A. The F signal ensures that the transistors are turned on only during the second half of each sub-period as defined in Figure 3-9. The output of these switches controls switches Q27 through Q31, which apply +200 volts dc to the anode of each readout tube.

3-61. The overrange indicator V2 is operated by transistors Q17 and Q18. These transistors are controlled by the 6-state cycle control shift register, the 16-state binary counter, and the range counter. The *zero* character in this tube is illuminated only when the range counter commands the 0.1 or 1 range, and when the count in the binary counter is less than 10. The *one* character is illuminated when the count in the binary counter is 10 or 11. The decoder driver U4 is a monolithic BCD to decimal decoder which accepts the 4-bit BCD output of the 16-state binary counter, decodes each digital word, and selects one of ten output drivers. The cathodes of readout tubes V3 through V7 are connected in parallel. These ten nodes are, in turn, connected to the ten available outputs of the decoder driver.

3-62. The sample command oscillator (SCO) consists of Programmable Unijunction Transistor (PUT) Q8 and surrounding circuitry shown in Figure 3-10 in its normal operating state. Resistors R12 and R14 provide a bias level for the gate of the PUT. When capacitor C3 charges to approximately 0.6 volt above the gate bias level, the PUT turns on and discharges C3 through R15. This generates an output pulse which commands the measure/storage cycle J-K flip-flop U3A to the measure period to take a sample, providing the end of a $\overline{\text{ZERO}}$ pulse is coincident at the clocked input to the flip flop. If the sample results in a command to autorange, signal 3 from the A2 Range Delay one-shot turns off Q6 and disables the SCO to allow time for analog signal conditions to settle on the new range before another sample is taken. Capacitor C3 begins

to recharge and the SCO cycle begins again. The oscillator frequency is dependent upon the time constant of R and C3, and the gate bias level. The frequency is varied by the adjustment of R through the front panel SAMPLE RATE control. Transistor Q7 and its base bias network (R11 and R13) ensures that PUT Q8 is turned off by forcing the gate and anode to the same potential after C3 discharges.

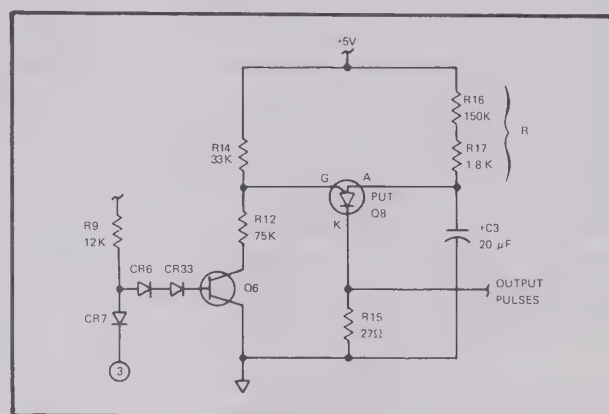


Figure 3-10. BASIC SAMPLE COMMAND OSCILLATOR

3-63. The remaining circuitry surrounding the SCO (See A14 Display schematic diagram) functions only when the SAMPLE RATE control is switched to the EXT position and samples are initiated through the external trigger input of the Data Output Unit (D.O.U.) option. In this circumstance, the emitter of Q6 is normally high. Thus, the gate of PUT Q8 is near the supply voltage and the PUT is disabled. A trigger from the D.O.U., however, pulls the emitter of Q6 to ground. Its collector follows, causing the gate of Q8 to be more than 0.6 volt below the anode and the PUT fires once. If the corresponding sample results in a range change, the range delay one shot multivibrator will disable the SCO via Signal No. 3 and CR7. This means that no samples may be commanded until the range delay one-shot times out. At the end of this time delay, the SCO is automatically retriggered via CR8, by Signal No. 2 from the range delay one-shot. Diode CR9 and resistor R10 ensure that capacitor C3 is charged rapidly to ready the PUT for the next trigger pulse. Signal No. 8 interrupts the cycle control shift register on the A8 Logic board by forcing it directly to the E sub-period. This is done to minimize the time between the sample command (trigger) and actual sample.

3-64. The measure/storage cycle circuit is composed of J-K flip-flop U3A on the A14 Display board. The clocked input of U3A is connected to $\overline{\text{ZERO}}$ through a bias and differentiating network composed of capacitor C4 and resistors R18, R19. When the M output of U3A is high, the instrument is in the measurement period of the measurement/

storage cycle. When the M output from U3A is low, the storage period prevails. The clocked input is normally high as determined by the bias network, and since this is a master-slave type flip flop, the master is connected directly to the *J* and *K* inputs and isolated from the outputs. If the SCO outputs a pulse, the *J* input goes high and causes the master to assume the true state. At the start of the next ZERO (0) time, the clock pulses low causing the slave, and, hence, the outputs, to assume the state of the master. That is to say, the output goes true and initiates a measure cycle. At the same time, the master is updated as a function of the new *J* and *K* inputs. Thus, at the start of the next ZERO (0) time, the slave assumes the false state existing in the master, and the storage period is initiated. Not until the SCO pulses again will another measurement period be initiated. The idealized waveform output of the measure/storage cycle J-K flip-flop is seen by viewing waveform No. 8 and its two input generating waveforms 6 and 7 in Figure 3-9, Sheet 1.

3-65. The OVER RANGE DRIVER circuit is composed of programmable unijunction transistor (PUT) Q4, transistors Q3, Q5, and Q37, and associated circuitry. Transistor Q2, diode CR5, and resistors R2 and R4 are not part of the driver circuit but constitute a delay line in the speed at which the range delay one-shot multivibrator circuit on the A2 Range Delay board times out. The time-out delay is a function of the FILTER button being depressed on the front panel, applying a low at the base of PNP transistor Q2, turning it on, and effectively holding transistor Q1 in the range delay one-shot off (time-out status) for a longer time than would otherwise occur if transistor Q2 were not turned on by the filtering function being activated. The overrange driver PUT Q4 is turned on when its gate voltage is depressed about 0.6 volt relative to the anode voltage. The differential voltage developed across resistor R64 (tied between the gate and anode of the PUT) when the PUT conducts turns on PNP transistor Q5, and resultingly, turns on the OVER lamp in the function display annunciator. The gate to anode voltage relationship that turns on transistor Q5 and the OVER lamp is brought about by NPN transistor Q3 when it is turned on. Q3 is turned on by the 12th output pulse from the CCO being applied to its base. Twelve output pulses from the CCO indicate greater than twenty percent overvoltage is being applied at the input of the instrument for a given range. However, even though turned on, transistor Q3 is ineffective in gating the PUT unless an enabling signal ($\overline{UP}$) is applied through R6 to its emitter. The source of the $\overline{UP}$ signal is the output of NAND gate U2A located on the A8 Logic board. Signal No. 7 is the UP range signal that is applied to NAND gate U3B on the A2 Range Delay board. It is generated at the emitter of transistor Q37 when this transistor is turned on

by the PUT firing. After firing, the PUT is reset by the application of the positive-going edge of the M signal applied to its cathode through C1.

3-66. The RANGE COUNTER circuit is composed of J-K flip-flops U2A and U2B. The clocked input to the range counter is provided by J-K range flip-flop U3B, that has as its clocked input signal No. 6. This signal originates in the range oscillator on the A2 Range Delay board and is pulsed high everytime the range oscillator PUT fires. The J-K inputs to the range flip-flop U3B are tied together at the output of the measure/storage cycle J-K flip-flop U3A and go high every measurement period. The range counter is a divide-by-6 counter that provides the 6 possible binary states for range counting, 5 pulses being considered an up-range command and 1 pulse being considered a down-range command. Signal No. 6 applied to the clocked input of the range flip-flop U3B alters the 6 states of the range counter. Transistor Q35 is provided to pull the range counter out of an unallowed state that may occur at turn-on.

3-67. A2 Range Delay

3-68. The A2 Range Delay circuits (Drawing No. 8400A-1006) consists of a series of gates, a range delay one-shot multivibrator, and a range oscillator. The gates allow the specified set of ranges to be attained, which is dependent upon the function called on the front panel. The range oscillator generates pulses which trigger the range delay one-shot while simultaneously causing the A14 range counter to change states. The range delay one-shot prevents further ranging for a specified time to allow the analog signal conditioners to settle in the new range.

3-69. The gates are U2A, U2B, U2C, U3A, and U3B. Gates U2C and U3A are up range stops which pull down on the range-up enable line. Gate U2C prevents autoranging above the 10,000 range, while gate U3A prevents autoranging above the 1000 range on the VDC function. Gates U2A and U2B are down range stops which pull down on the range-down enable line. Gate U2A prevents autoranging below the 10 range in the Ω function, while gate U2B prevents autoranging below the 0.1 range in any function. Gate U3B is the master up-range control. It enables the range oscillator only if an up range is to be expected.

3-70. The three inverters U1D, U1E, and U1F coupled with the range-up enable line provide one input for up-range control gate U3B. The result is that U3B is enabled for 1.5 milliseconds (the second half of the A sub-period of a measurement period) if an up-range is to be executed.

Signals applied to diodes CR6 through 8 and 10, coupled with the range-down enable line provide a negative going signal to the range oscillator at the end of the A sub-period of a measurement period if a down-range is to be executed. Thus, there are two ways which can enable the range oscillator.

3-71. The range oscillator is composed of capacitor C4, resistors R14 and R18, and Programmable Unijunction Transistor (PUT) Q4, with the output of this oscillator appearing at the cathode of PUT Q4. The PUT is fired, discharging capacitor C4 through R15, when the gate is about -0.6 volt relative to the anode. Thus the PUT is fired to produce one output pulse by lowering gate voltage or by raising the anode voltage, such that the voltage difference between these elements is as indicated above. The firing of PUT Q4 discharges capacitor C4 and reduces the anode and gate voltages. This causes Q3 to turn on and force the anode and gate of Q4 to the same potential. Q4 turns off and capacitor C4 charges through R14 and R18. If the firing potential between the gate and anode of Q4 is established, Q4 again fires and the cycle is repeated to produce the second output pulse. The frequency of oscillations is set by the level of gate voltage applied and the charging time constant of R14, R18, and capacitor C4.

3-72. Control of the gate of PUT Q4 is effected by one of two mutually exclusive inputs. One of these is associated with ranging up and is identified on the A2 schematic as the output of gate U3B. The other of the two inputs is associated with ranging down and is identified as the range down enable line. In an up-range situation, the output of U3B pulls low for 1.5 milliseconds during which time the range oscillator outputs five pulses. In a down-range situation, the range-down enable line pulls low. This signal is capacitively coupled via C3 to the gate of PUT Q4 causing it to output one pulse. Five pulses counted by the A14 range counter commands a transition to the next higher range, while one pulse commands a transition to the next lower range. In either case, the first output pulse triggers the range delay one-shot to allow the analog signal conditioners to settle in the new range.

3-73. Transistors Q1, Q2, and associated components make up the range delay one-shot multivibrator. A range change pulse from the range oscillator applied to the base of transistor Q2 turns this transistor on and transistor Q1 off, thereby placing the one-shot multivibrator into its unstable state. The RC charge time of combined capacitors C2, C6, and resistor R5, and the current through R16 determine how long the one-shot remains in its unstable state. With the filter selected, no current flows through R16 and the timeout is about 220 milliseconds. Without

the filter selected, the timeout is decreased to about 25 milliseconds because some current flows through R16. Signal No. 3 disables the sample command oscillator during the range delay time. Signal No. 2 re-triggers the SCO at the end of the range delay time.

3-74. Transistor Q5 and associated components is a circuit that prevents the instrument remaining in a disallowed range, as in 10,000 VDC, when turned on. When Q5 is turned on by the inputs of VDC and $\overline{a. b. c.}$, the collector of Q5 pulls down on the set line of the counter and thereby forces the instrument out of the 10,000 range.

3-75. A1 Power Supply

3-76. The A1 Power Supply (Drawing No. 8400A-1001) consists of four regulators, a + and -18 volts regulator, a 200 volts regulator, a 5 volts regulator. The purpose of the power supply is to furnish to the instrument all of its required operating power.

3-77. The $+18$ and -18 volts regulators obtain filtered dc voltage from the full-wave rectifiers consisting of diodes CR5 through CR8 and filter capacitors C2 and C5. The $+18$ volts regulator consists of operational amplifier U1 and series pass transistor Q3. The voltage reference for the $+18$ volts regulator is derived from reference amplifier U9 and temperature compensation transistor Q23 on the A8 Logic board. The -18 volts regulator consists of operational amplifier U2 and series pass transistor Q5. The -18 volts regulator is referenced to the $+18$ volts.

3-78. The $+200$ volts regulator is operated from a full-wave bridge rectifier and filter consisting of diodes CR1 through CR4 and capacitor C1. The reference for the $+200$ volts regulator is the $+18$ volts. Voltage variations are amplified in transistor Q2 and applied to series pass transistor Q1.

3-79. The $+5$ volts regulator is operated from a full-wave rectifier and filter consisting of CR10 through CR13 and capacitor C8. The reference for the $+5$ volts regulator is -18 volts. The series pass element is a compound-emitter follower composed of transistor Q8 driving power transistor Q6 voltage variations which are detected by the sample string (R14, R15 and R17) are amplified by transistors Q7.

3-80. Miscellaneous Circuitry

3-81. Input power to the instrument and interconnection of various assemblies is shown in the Wiring and Interconnect Diagrams (Drawing No. 8400A-1000 and

8400A-1100). Line power is fused by F1 and applied through the contacts of POWER switch S1 and T1. The primary of T1 consists of two windings which are parallel or series connected through slide switch S2 to allow operation from either a 115 or 230V ac line. When S2 is set to 115, the primary windings of T1 are connected in parallel.

The 230 position of S2 connects the windings in series. Secondary windings of T1 provide ac voltages to the A1 Power Supply and A6 Data Output Unit No. 2. Shielding between the primary and secondary windings prevents coupling of any undesired line signals to the internal sections of the instrument.

Section 4

Maintenance

4-1. INTRODUCTION

4-2. This section contains information and instructions concerning preventive and corrective maintenance for the Model 8400A Digital Voltmeter. The information and instructions are arranged under headings of "SERVICE INFORMATION, GENERAL MAINTENANCE, PERFORMANCE TEST, CALIBRATION PROCEDURE, COMPENSATING COMPONENT SELECTION, and TROUBLESHOOTING."

4-3. A calibration interval of 90 days is recommended to ensure instrument operation within the 90-day specifications as stated in Section 1.

4-4. Table 4-1 lists the required test equipment. If the recommended equipment is not available, other equipment having equivalent specifications may be used.

Table 4-1. REQUIRED TEST EQUIPMENT

EQUIPMENT NOMENCLATURE	RECOMMENDED EQUIPMENT	FUNCTION
DC Calibrator	Fluke Model 332D DC Calibrator	Performance Test Calibration Troubleshooting
Kelvin Varley Divider	Fluke Model 720A	Calibration
Differential Voltmeter	Fluke Model 885AB	Performance Test Calibration Troubleshooting
Oscilloscope	Tektronix Model 504	Troubleshooting
Oscillator	Hewlett Packard Model 745 and 746	Troubleshooting

4-5. SERVICE INFORMATION

4-6. Each instrument that is manufactured by the John Fluke Mfg. Co., Inc. is warranted for a period of one year upon delivery to the original purchaser. The WARRANTY is located at the front of the manual.

4-7. Factory authorized calibration and service for each Fluke product is available at various world-wide locations. A complete list of these authorized service centers is located at the rear of the manual. Shipping information is given in Section 2, paragraph 2-5. If requested, an estimate will be provided to the customer before any repair work is begun on instruments that are beyond the warranty period.

4-8. GENERAL MAINTENANCE

4-9. Access/Disassembly

4-10. The following procedure is used to gain access to the interior of the Model 8400A.

- a. Remove top dust cover to gain access to calibration adjustments and test points.
- b. Remove top guard chassis by removing the four screws which hold it in place. Access is now provided to the plug-in assemblies shown in Figure 4-1.

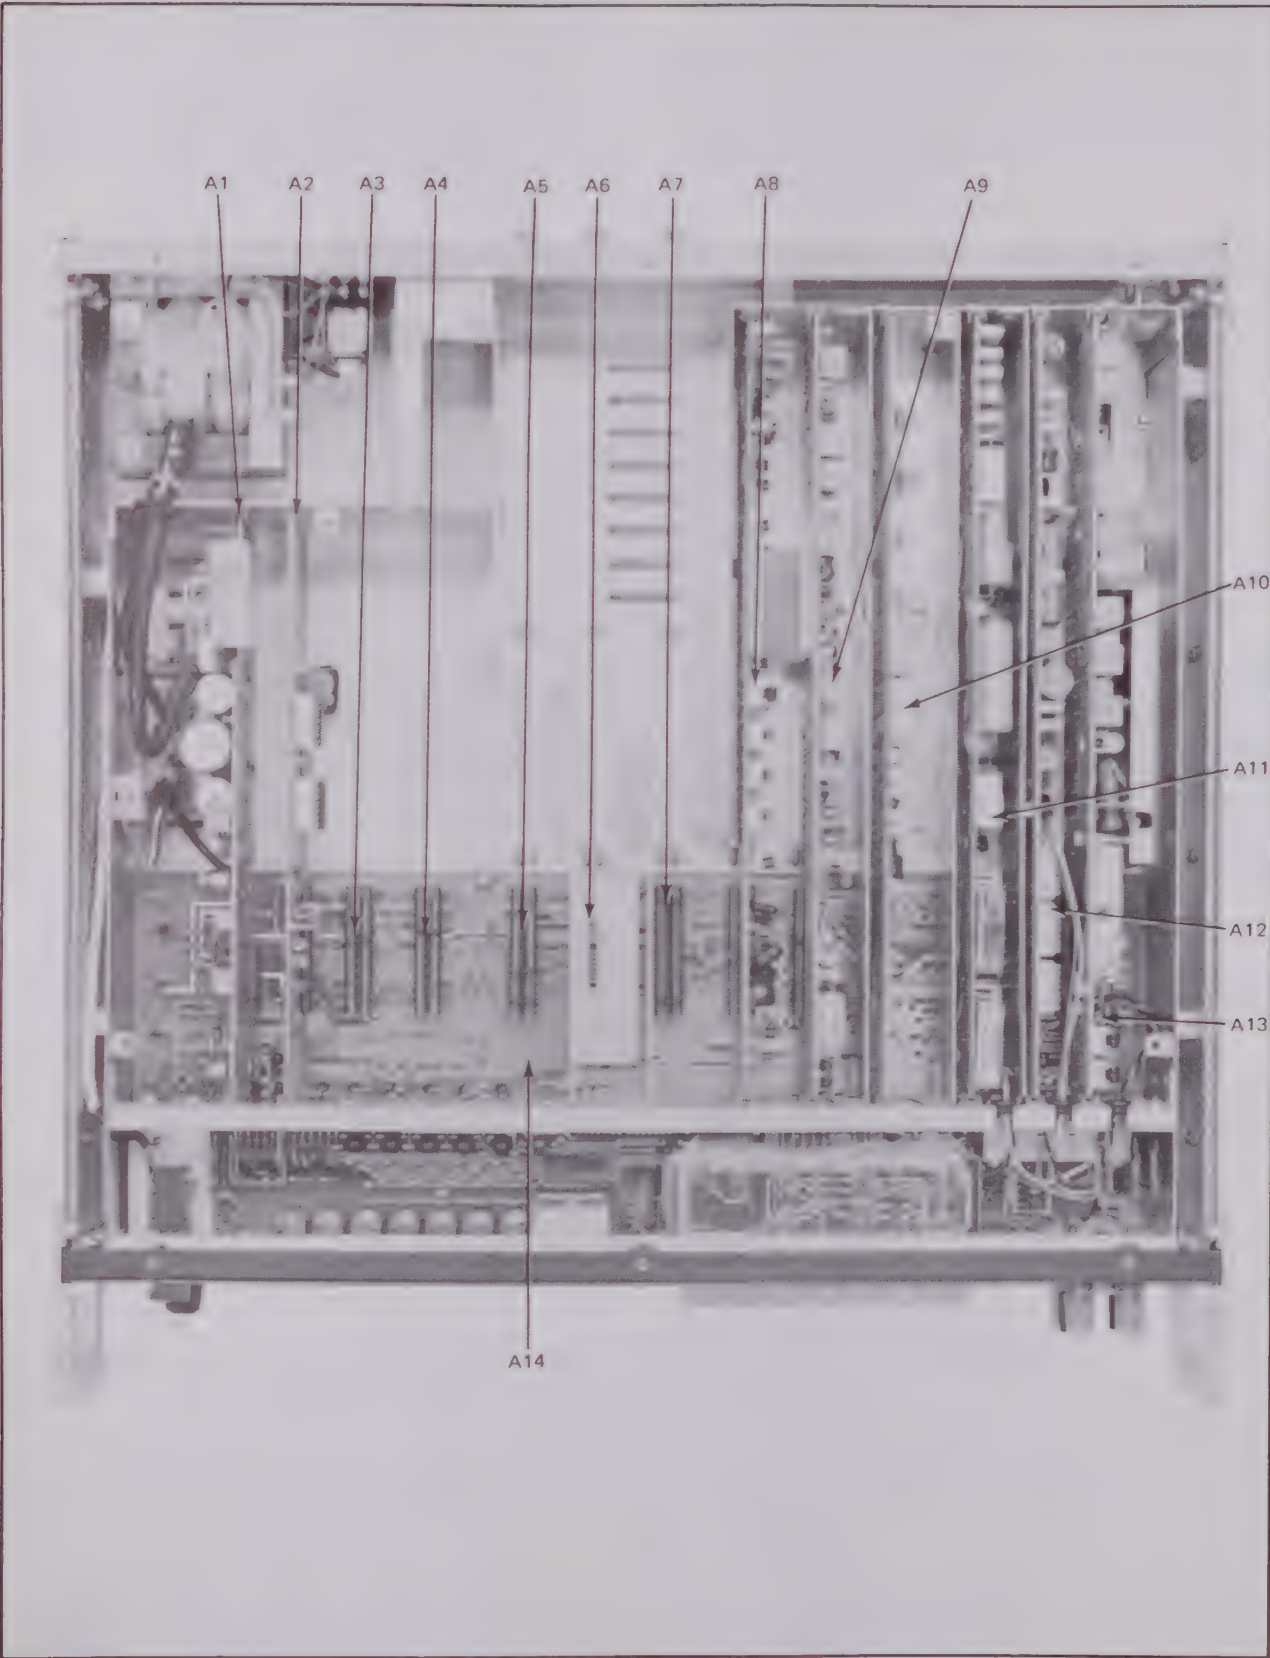


Figure 4-1. ASSEMBLY LOCATIONS

- c. Remove bottom dust cover. By removing single screw securing bottom guard cover access can be gained to the bottom section of the Model 8400A.

4-11. Cleaning

4-12. Clean the instrument periodically to remove dust, grease, and other contamination. Use the following procedure:

- a. Clean the interior with clean, dry air at low pressure. When the printed circuit boards require cleaning, first spray them with Freon T.F. Degreaser (Miller Stephensen Company, Inc.) and then remove the dirt with clean, dry air at low pressure.

CAUTION

Do not spray Freon T.F. on the component side of any PCB since damage to certain components may result.

- b. Clean the front panel and exterior surfaces with anhydrous ethyl alcohol or a soft cloth dampened in a mild solution of detergent and water.

CAUTION!

Do not use aromatic hydrocarbons or chlorinated solvents on the front panel, because they will react with the Lexan binding posts.

4-13. Fuse Replacement

4-14. One fuse is located in the rear panel fuseholder. When replacement is necessary, install Bussman, TYPE AGC 1/2A as shown on Decal located on the rear panel.

4-15. Lamp and Tube Replacement

4-16. The readout tubes (V1 thru V7) and the Function Display Lamps are mounted behind the left portion of the front panel. These components are replaced without special tools using the following procedure:

4-17. FUNCTION DISPLAY LAMPS

- a. Remove top and bottom dust covers and inner guard chassis covers.
- b. To replace the function display lamps remove the function display assembly mounting screws. Access to these mounting screws is from the bottom of the instrument.
- c. Remove the function display assembly from the top of the instrument. After removal of the plexi-

glass cover on the assembly, the defective lamp may be replaced by carefully unsoldering the old lamp, clearing the holes of solder, and soldering in the new lamp. Instruments below serial number 208 have an extra lamp in FUNCTION Display assembly in position marked MV. All instruments above serial 209 do not have a spare lamp.

CAUTION!

Use a desoldering tool and exercise extreme caution to avoid lifting land patterns.

4-18. READOUT TUBE REPLACEMENT

- a. To replace the readout tubes desolder the base mounting pins and remove tube from the top of the instrument.

4-19. The SAMPLE RATE indicator (DS1) is located next to the SAMPLE RATE adjustment on front panel. Remove DS1 by desoldering both leads from A14 assembly, and pull lamp out from holder. Install and solder new lamp.

4-20. Switch Maintenance

4-21. The following procedure covers service and replacement of the push button switches. If switch contacts are deformed, or if switch module is defective, replacement parts can be obtained by ordering either the FUNCTION or RANGE switch assembly.

4-22. The procedure for servicing the FUNCTION and RANGE switch assembly is as follows:

4-23. GENERAL.

- a. Remove the top and bottom dust covers and the top and bottom inner guard covers.
- b. Set all switches to the nondepressed position.
- c. Remove shorting links from INPUT terminals on front panel.
- d. Remove knob from the SAMPLE RATE potentiometer.

4-24. REMOVAL OF DISPLAY PCB.

- a. Unplug and remove all plug in circuit assemblies from instrument.

- b. Remove decals from the side of handles.
- c. Remove four (4) screws on side of each handle. Remove the front panel from the instrument.
- d. Disconnect wires from terminal posts to terminal block at the terminal block, and pull SAMPLE RATE lamp out from its holder.
- e. Remove four (4) screws which secure the front sub-panel to the inner chassis and three (3) screws which secure DISPLAY PCB (A14) to front sub-panel. Remove front sub-panel.
- f. Remove seven (7) mounting screws from the display PCB (A14).
- g. Pull display PCB out from front of instrument.
- d. Pull FUNCTION switch assembly away from brackets.
- e. Remove rear support bracket and lockouts by bending all locking tabs on rear support bracket, up. (Figure 4-2).
- f. Remove retaining ring and spring from switch shaft.
- g. Insert a tool between the latch bar and switch shaft on adjacent switch (Figure 4-3).
- h. Slide latch bar to edge of opening in front switch support bracket.
- i. Holding latch bar open, push defective switch shaft out rear of module. Switch contacts will fall out of their slots when shaft is pushed out of module.

4-25. DISASSEMBLY – FUNCTION SWITCHES (EXCEPT EXT REF, FILT).

- a. Unplug P14 (flexible plug in circuit plug) from connector J14 on DISPLAY PCB.
- b. Remove four (4) mounting screws which secure FUNCTION switches to switch assembly brackets.
- c. Remove button on switch to be repaired by applying pressure to the rear of the button on pulling button away from switch. Note that on some instruments buttons are cemented on the switch shaft. When replacing buttons, use a small amount of contact cement. Apply cement to shaft only.
- j. Inspect the switch contacts for contamination and, if necessary, clean them with a clean swab saturated in alcohol. After cleaning, the contacts must be re-coated with a thin coat of grease. Use RYKON 2EP grease (American Oil Co.) or equivalent.

CAUTION!

Under no circumstances MUST attempts be made to re-form or add tension to the switch contacts by bending them.

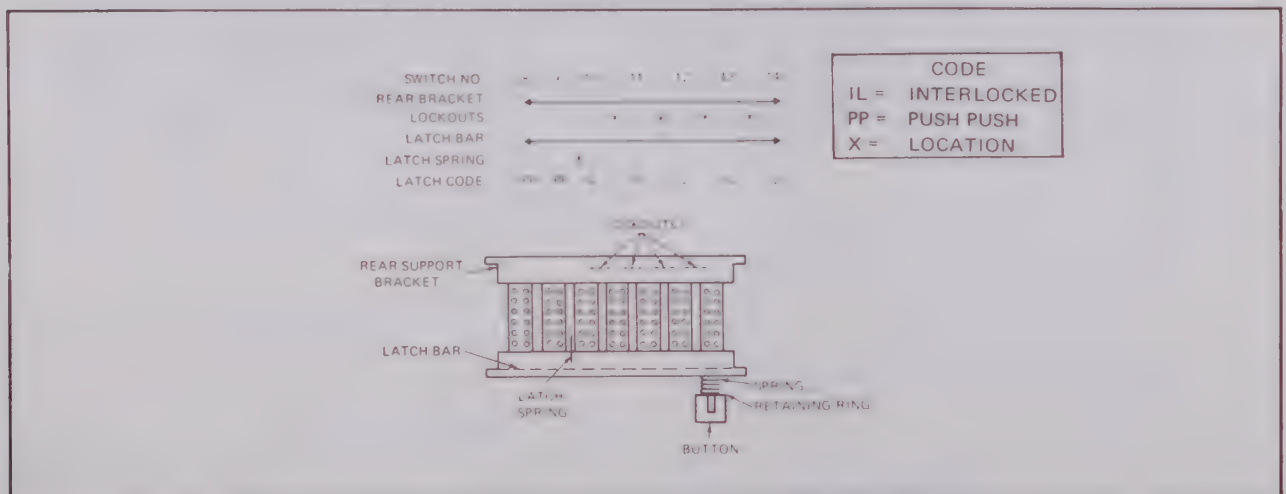


Figure 4-2. FUNCTION SWITCH ASSEMBLY

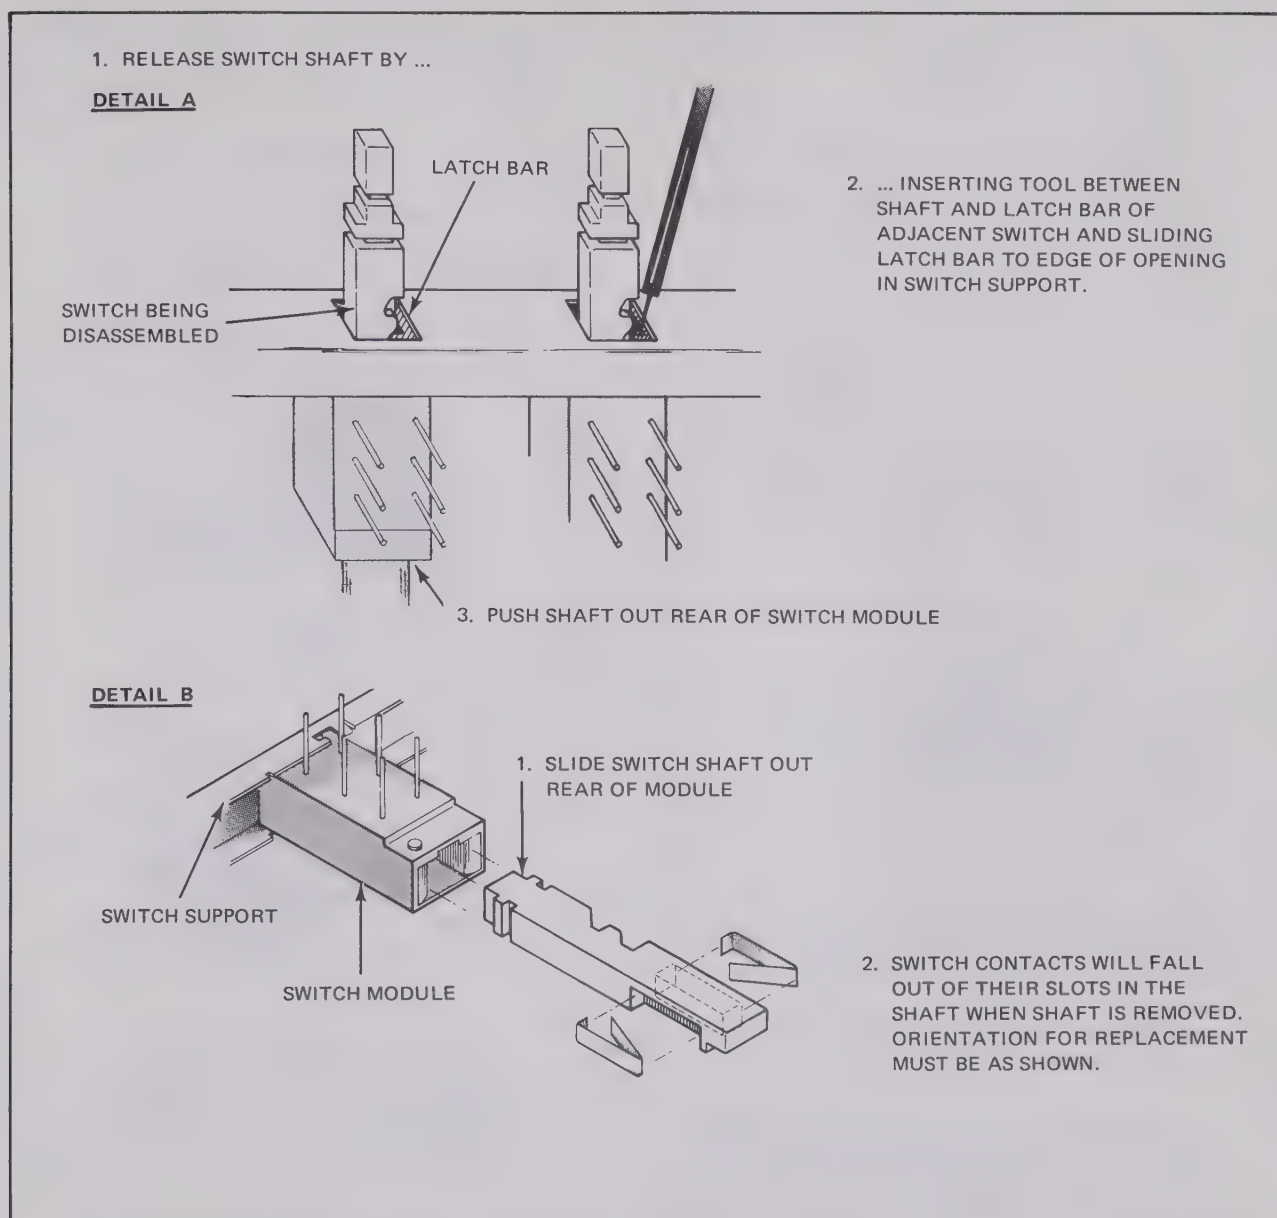


Figure 4-3. PUSHBUTTON SWITCH DISASSEMBLY

4-26. DISASSEMBLY -- RANGE SWITCHES.

- | | |
|--|--|
| <p>a. Unplug P14 (flexible plug in circuit plug) from J14.</p> <p>b. Remove U2 and U3, on Display PCB, from their sockets.</p> <p>c. Remove four (4) mounting screws which secure RANGE switches to switch assembly brackets.</p> <p>d. Pull FUNCTION switch assembly, with brackets, away from RANGE switch assembly.</p> | <p>e. Desolder and remove J14 connector from Display PCB.</p> <p>f. Straighten all locking tabs on rear support bracket. (Figure 4-4.)</p> |
|--|--|

CAUTION!

When straightening locking tabs avoid damaging land patterns on PCB.

- g. Remove rear support bracket by sliding bracket to the right to clear switch module alignment pins. Remove bracket and lockouts.
- h. Remove button, retaining ring and spring.
- i. Insert a tool between the latch bar and switch shaft on adjacent switch (Figure 4-4).

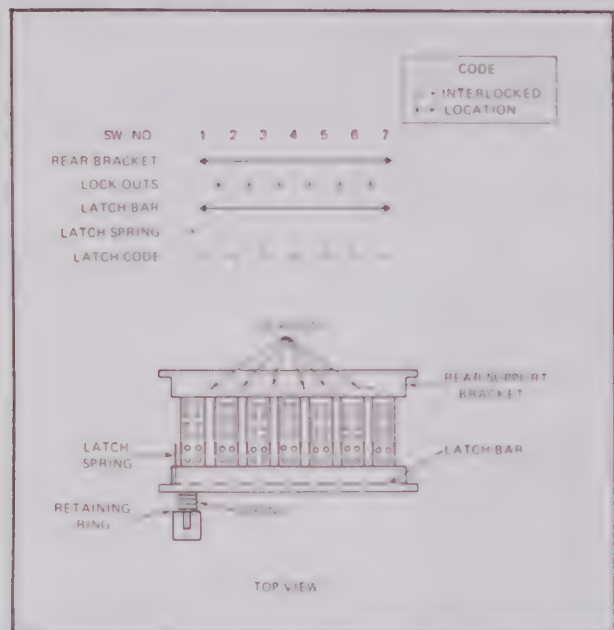


Figure 4-4. RANGE SWITCH ASSEMBLY

- j. Slide latch bar to edge of opening in front switch support bracket.
- k. Holding latch bar open, push defective switch shaft out rear of module. Switch contacts will fall out of their slots when shaft is pushed out of module.

CAUTION!

Under no circumstances **MUST** attempts be made to re-form or add tension to the switch contacts by bending them.

- l. Inspect the switch contacts for contamination and, if necessary, clean them with a cotton swab saturated in alcohol. After cleaning, the contacts must be re-coated with a thin coat of grease: Use RYKON 2EP grease or equivalent.

4-27. SWITCH MODULE REPLACEMENT - FUNCTION ASSEMBLY (EXCEPT EXT REF, FILT)

- a. Repeat paragraphs 4-21, 4-22, and 4-23a. thru f.
- b. Desolder flexible printed circuit from all switches.

CAUTION!

Use a desoldering tool and exercise extreme caution to avoid lifting land patterns or otherwise damaging the flexible circuit assembly.

- c. Unlock the locking tab on front switch support bracket and remove module (Figure 4-5).

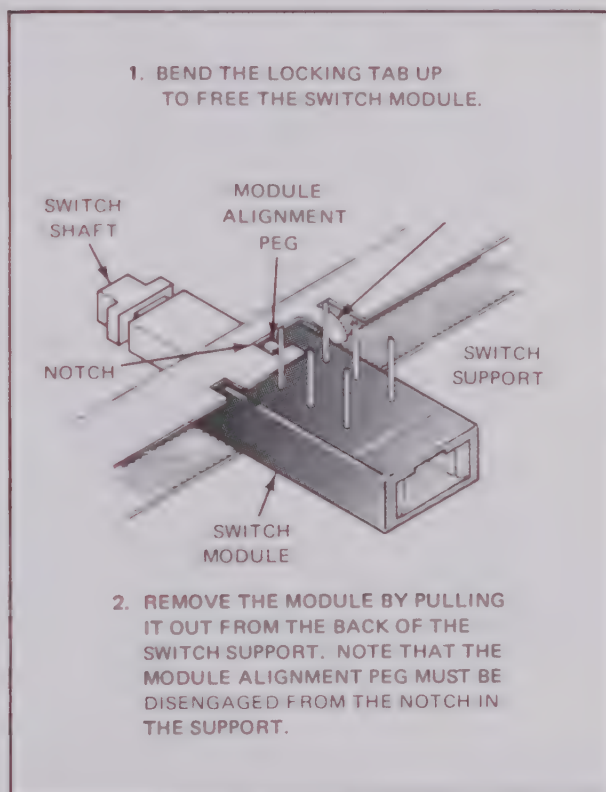


Figure 4-5. PUSHBUTTON SWITCH MODULE REPLACEMENT

- d. Install new switch module by reversing the foregoing procedure.

CAUTION!

Under no circumstances **MUST** attempts be made to re-form or add tension to the switch contacts by bending them.

4-28. SWITCH MODULE REPLACEMENT - RANGE ASSEMBLY.

- a. Repeat paragraphs 4-21, 4-22, and 4-24.
- b. Remove all buttons, retaining rings, springs and latch spring.
- c. Unlock all locking tabs on front support bracket and remove front support bracket and latch bar.

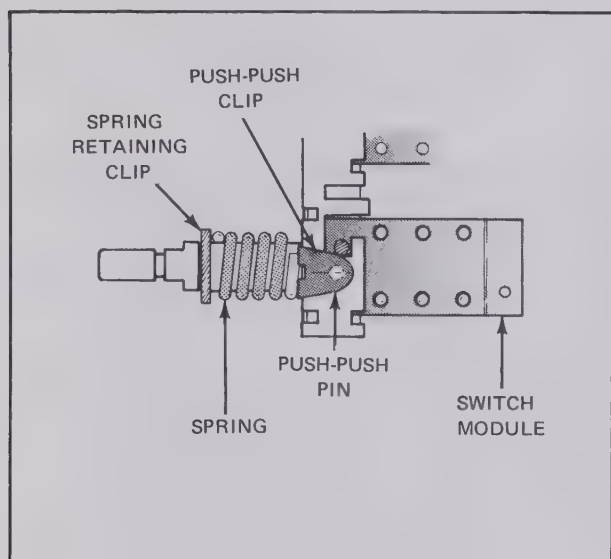


Figure 4-6. EXT REF AND FILT SWITCH DISASSEMBLY

- d. Desolder module that is to be replaced.

CAUTION!

Use a desoldering tool and exercise extreme caution to avoid lifting land patterns or otherwise damaging PCB.

- e. Install new switch module by reversing foregoing procedure. Refer to Figure 4-4 for assembly of RANGE SWITCH assembly.

4-29. DISASSEMBLY — EXT REF, FILT SWITCH.

- a. Repeat paragraphs 4-21, 4-22, and 4-23a. thru f.
- b. Desolder defective switch from flexible circuit.
- c. Remove push-push pin and push-push clip (Figure 4-6).

- d. Remove switch shaft per Figure 4-3 Detail B.

CAUTION!

Under no circumstances **MUST** attempts be made to re-form or add tension to the switch contacts by bending them.

- e. Inspect the switch contacts for contamination and, if necessary, clean them with a cotton swab saturated in alcohol. After cleaning, the contacts must be re-coated with a thin coat of grease: Use RYKON 2EP grease or equivalent.
- f. Assemble the switch by reversing the foregoing procedure. Exercise caution to ensure the contacts are not deformed during assembly.

4-30. PERFORMANCE TEST

4-31. The performance test in this section compares the basic instrument performance to the accuracy specifications in Section 1 of this manual to determine if the instrument is in calibration. Known dc voltages are applied to the instrument input terminals on each of five dc voltage ranges and proper operation of the manual range and auto-range circuitry is verified. The performance test should be conducted prior to any instrument maintenance or calibration attempts. This test is also suited to receiving inspection of new instruments. The performance test should be conducted under the following conditions: Ambient Temperature $23^{\circ}\text{C} \pm 5^{\circ}\text{C}$, relative humidity less than 70%.

4-32. Should an instrument fail the performance test corrective maintenance or calibration will be required. In the case a trouble occurs, analysis of the test results, with reference to the Troubleshooting Section, should help to locate the trouble.

NOTE!

Tolerances for dc voltage measurements are derived from the 90-day instrument specifications contained in Section 1 of this manual.

4-33. In the following procedure dc voltages are applied to the instrument at 10% and 100% of full scale on the .1, 1, 10, 100 and 1000 volt ranges.

4-34. Preliminary Operation

- a. Connect the Model 8400A to the ac line and set the controls as follows:

POWER	ON
FUNCTION	VDC, FILT
RANGE	.1

4-35. Readout Checks

- a. Short INPUT terminals.
- b. Adjust the front panel ZERO control for a minimum reading on the Model 8400A display.
- c. Connect equipment as shown in Figure 4-7.

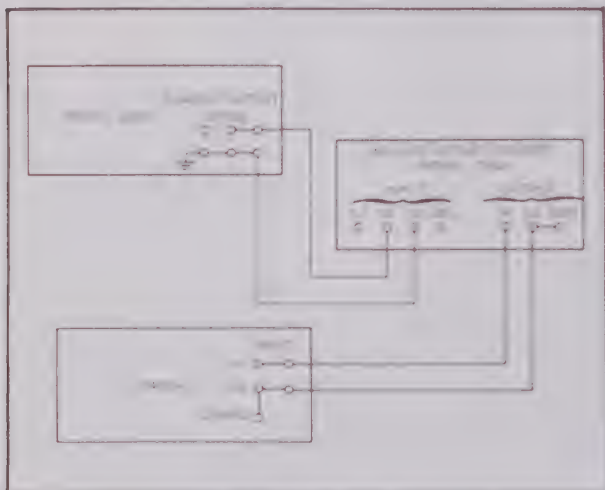


Figure 4-7. READOUT CHECK EQUIPMENT CONNECTION

- d. Set the calibrator to 10.0000V output on 10V range.
- e. Refer to Table 4-2 for K-V divider settings and corresponding readout limits on Model 8400A.

Table 4-2. DC TEST REQUIREMENTS (.01V to 1V)

K-V Divider SETTINGS	MODEL 8400A	
	RANGE	READOUT LIMITS
.0010000	.1	+0.009994 to .010006
.0100000	.1	+0.99990 to .100010
.0100000	1	+0.09997 to 0.10003
.1000000	1	+0.99993 to 1.00007
.1000000	10	+0.9999 to 01.0001

- f. Reverse input leads to Model 8400A.
- g. Repeat step e. The DVM readout must be the same as for positive inputs, except that the polarity indication will be negative (-).
- h. Disconnect equipment and connect calibrator to Model 8400A.
- i. Apply each of the input voltages shown in Table 4-3 to the INPUT terminals of the Model 8400A. The readout must be as indicated.

Table 4-3. DC TEST REQUIREMENTS (10V, 100V, AND 1000V)

INPUT (Volts DC)	MODEL 8400A		
	RANGE	READOUT LIMITS	READOUT TOLERANCES
+10.0000	10	+09.9995 to 10.0005	±.0005
+10.0000	100	+009.998 to 010.002	±.002
+100.000	100	+099.995 to 100.005	±.005
+100.000	1000	+0099.98 to 0100.02	±.02
+1000.00	1000	+0999.95 to 1000.05	±.05

- j. Repeat step i. with negative input voltages. The DVM readout must be the same as for positive inputs, except that the polarity indication will be negative (-).
- k. Apply zero volts to the INPUT terminals of the DVM and depress the AUTO RANGE switch. The readout must be .000000 ±.000005.
- l. Apply +1000.00 volts dc to the INPUT terminals. The DVM must range automatically and the readout must be +1000.00 ±.05.

4-36. CALIBRATION PROCEDURE

4-37. Introduction

4-38. The basic Model 8400A should be calibrated every 90 days or 1 year in order to maintain rated accuracy or whenever repairs have been made. Calibration should be done under the following conditions: Ambient Temperature of $23^{\circ}\text{C} \pm 2^{\circ}\text{C}$, relative humidity less than 70%. Refer to Table 4-1 for recommended test equipment. Adjustment

and test point locations are labeled on the top inner guard cover. Figure 4-8 shows adjustment and test point locations with the top inner guard cover on. Option calibration appears in Section 6 of this manual.

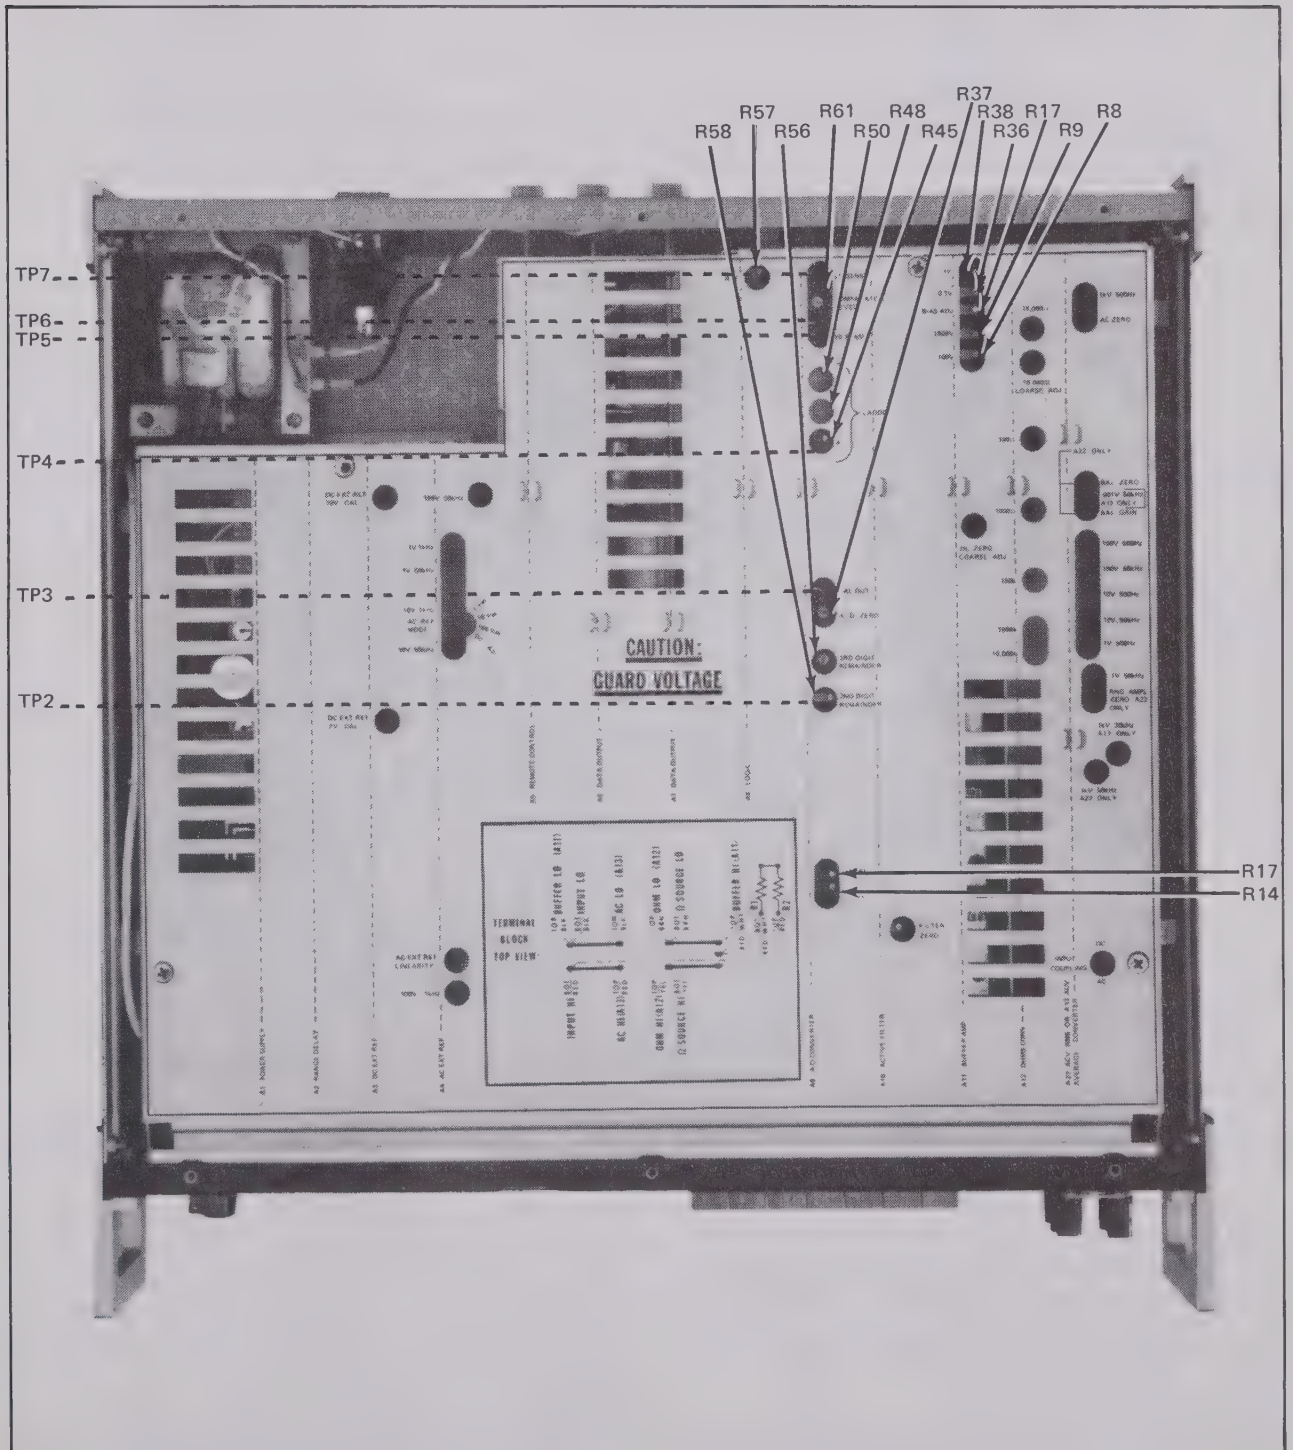


Figure 4-8. ADJUSTMENT AND TEST POINT LOCATIONS

4-39. Preliminary Operations

- Remove the upper dust cover screws, but leave top cover in place.
- Set the 115/230 volt switch on the rear panel to 115 and then connect line cord to the output of an autotransformer set to 115V ac.
- Turn on the Model 8400A and allow it to warm-up for one hour.

4-40. Buffer Zero Adjustment

- Set the Model 8400A controls as follows:

FUNCTION	VDC, FILT
RANGE	.1

- Short the INPUT terminals.
- Adjust front panel ZERO control for minimum reading on the display.
- Remove top dust cover.

4-41. Bias Current Adjustment

- Remove short across input terminals and replace with 1 megohm resistor in parallel with a .22 uF capacitor.
- Adjust BIAS (A11R17) for a zero ± 3 digit readout on the Model 8400A display.
- Repeat steps 4-40b. and c.

4-42. Reference Voltage Adjustment

- Connect a battery powered differential voltmeter LO SENSE to (A9TP7) and HI SENSE to (A9TP5).
- Adjust REF (A8R57) for a reading of 7.00000 ± 25 uV on the differential voltmeter. Remove short from the INPUT terminals.

4-43. A-D Zero Adjustment

- Connect the HI of the differential voltmeter to CAL OUT (A9TP3).

- Set the differential voltmeter as follows:

RANGE	1V
NULL SENSE	.1
READOUT	.550000

- Set the Model 8400A as follows:

FUNCTION	VDC
	FILTER
SAMPLE RATE	FULL CW
RANGE	10

- Connect test equipment as shown in Figure 4-9.

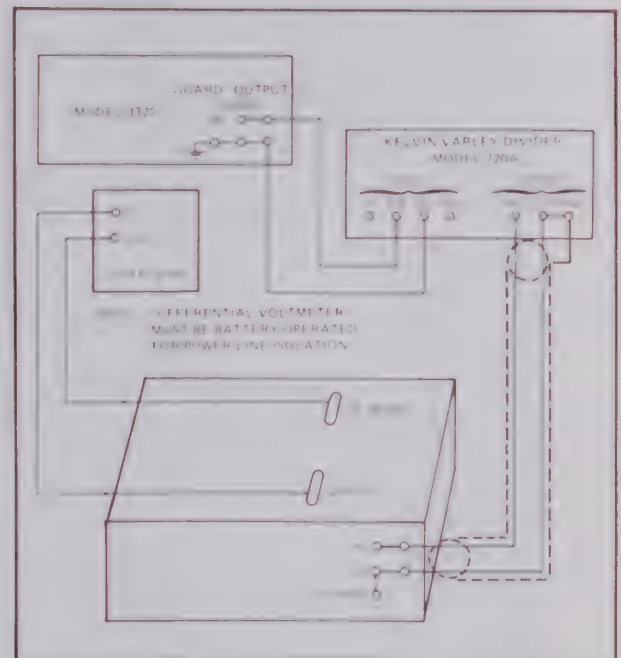


Figure 4-9. EQUIPMENT CONNECTION FOR CALIBRATION

- Set the calibrator to 10.0000V output on 10V range and dial .000052 on 720A.
- Adjust A-D ZERO (A9R37) for a readout of +0.0005V on the Model 8400A nixie display. Refine the adjustment for a null (zero) reading on the differential voltmeter. Reverse the input to the Model 8400A and observe $-0.0005V$ on the display and that the reading on the differential voltmeter changes less than ± 4 major divisions.

4-44. + Cal Adjustment

- Connect equipment as shown in Figure 4-9.
- Adjust COMPARATOR LEVEL (A9R61) to full cw.

- c. Dial .800052 on divider.
- d. Adjust + CAL (A9R17) for a readout of +8.0005 on Model 8400A display.
- e. Refine the adjustment for a null (zero) on the differential voltmeter.

4-45. Ladder Cal

- a. Connect equipment as shown in Figure 4-9.
- b. Apply the input voltages given in Table 4-4 and perform the associated adjustments that produce the required readout on the Model 8400A and differential voltmeter.

Table 4-4. LADDER CALIBRATION

LADDER NO.	MODEL 8400A			DIFF. V/M READOUT
	K-V Divider	Adjustment	READOUT	
4	+4.00052V	LADDER 4 (A9R45)	+4.0005V	NULL
2	+2.00052V	LADDER 2 (A9R48)	+2.0005V	NULL
1	+1.00052V	LADDER 1 (A9R50)	+1.0005V	NULL

4-46. Negative Cal Adjustment

- a. Set divider to .800052.
- b. Reverse input to the Model 8400A.
- c. Adjust -CAL (A9R14) for a display readout of -8.0005.
- d. Refine the adjustment for a null (zero) on the differential voltmeter.

4-47. Remainder Adjustment

- a. Set COMPARATOR LEVEL (A9R61) full ccw.
- b. Connect equipment as shown in Figure 4-9.
- c. Apply the input voltages given in Table 4-5 and perform the associated adjustments that produce the required readout on the Model 8400A and differential voltmeter.

Table 4-5. COMPARATOR LEVEL ADJUSTMENT

DIGIT NO.	MODEL 8400A			
	K-V Divider SETTING	Adjustment	READOUT	DIFF. V/M READOUT
2	+0.090052V	2nd Digit Remainder (A9R58)	+0.9005	NULL
3	+0.099052V	3rd Digit Remainder (A9R56)	+0.9905	NULL
4	+0.099952V	—	+0.9995	±2 Major Divisions

4-48. Comparator Level Adjustment

- a. Connect equipment as in Figure 4-9, but do not make the differential voltmeter connections.
- b. Set divider to .099995.
- c. Adjust COMPARATOR LEVEL (A9R61) so display readout alternates between +0.9999 and +1.0000.
- d. Alternate a dc input to the Model 8400A between +1.9999V and +2.0000V dc and verify that the display readout corresponds.

4-49. Buffer DC Calibration

- a. Apply the dc input voltages given in Table 4-6 and adjust the associated control for a corresponding readout.

Table 4-6. BUFFER CALIBRATION

DC INPUT VOLTAGE	MODEL 8400A		
	RANGE	ADJUSTMENT	READOUT
+100.000	100	100V (A11R8)	+100.000
+1000.00	1000	1000V (A11R9)	+1000.00
+1.00000	1	1V (A11R36)	+1.00000
+1.00000	.1	0.1V (A11R38)	+1.00000

- a. Disconnect test equipment and replace top cover. Calibration of the basic Model 8400A is complete. Refer to Section 6 for calibration of the options.
- #### 4-50. COMPENSATING COMPONENT SELECTION
- 4-51. The replacement of components Q5, U1, and R22 thru R27 in the Buffer Assembly will cause a deterioration of the temperature coefficient specification. If one or all of

these components is found to be faulty the Buffer Assembly PCB must be returned to the factory for repair and recalibration.

4-52. Active Filter

4-53. If either Q1 or U2 are replaced in the Active Filter (A10), R11 or R12 may need to be selected in order to bring the required offset correction within the range of zero control R13. This is done as follows:

- Depress VDC and 10 buttons on Model 8400A.
- Short the INPUT terminals of the Model 8400A.
- Short TP1 to TP2 on Active Filter PCB.
- Install jumpers across R11 and R12 in positions W1 and W2.
- Turn instrument on by depressing POWER button.
- Observe the Model 8400A readout.
- Select the proper offset resistor using Table 4-7.

Table 4-7. OFFSET CORRECTION RESISTOR SELECTION

8400A READOUT	RESISTANCE REQUIRED	JF PART NO.
0 — .0004	NONE	— —
.0005 — .0012	6.81k	268417
.0013 — .0020	13.7k	236752
.0021 — .0028	21.0k	229484
.0029 — .0036	28.7k	235176
.0037 — .0044	35.7k	288480
.0045 — .0052	44.2k	271676

- Install resistor in location R11 if readout polarity is positive (+) or R12 if readout polarity is negative (—). Remove only the jumper wire for location used.

4-53. TROUBLESHOOTING

4-54. Introduction

4-55. The information in the following paragraphs is provided to assist in locating troubles in the basic Model 8400A. Figure 4-10 shows assembly location by reference

number and test point locations. Since this instrument is somewhat complex, it is recommended that the theory of operation in Section 3 be understood before any attempt at troubleshooting is undertaken.

4-56. Initial Troubleshooting

4-57. Troubleshooting of the Model 8400A starts by first inspecting the instrument for improperly seated plug-in assemblies, loose wires, physically damaged parts, or other obvious problems. The next step is then to ensure that it is being operated correctly, but still fails to meet specifications. Performance checks designed for this purpose are given in paragraphs 4-30 through 4-35.

4-58. Section Localization

4-59. To aid in troubleshooting the Model 8400A, the basic instrument can be broken down into three major sections, analog, digital, and power supply.

4-60. The analog section consists of the A11 Buffer and A10 Active Filter. These assemblies supply a dc voltage from +10 to —10 volts, dependent upon the polarity and value of the input, to the digital section.

4-61. The digital section is composed of the A9 A-to-D Converter, A8 Logic, A2 Range Delay, and A14 Display assemblies. The digital section converts the dc input from the analog section to a digital signal, then processes this signal through timing, storage, and display circuits for proper readout.

4-62. The power supply section consists of an A1 Power Supply Assembly. This assembly supplies operating voltages to the internal circuits of both the analog and digital sections.

4-63. Power Supply

4-64. The A1 Power Supply can be checked for proper operation using a dc differential voltmeter and performing the voltage checks given in Table 4-8.

Table 4-8. POWER SUPPLY CHECKS

VOLTAGE TEST POINTS		DC VOLTS		
V/M Lo	V/M Hi	NOMINAL	LIMITS	ADJUSTMENT
A1TP4	A1TP2	+18V	±10 mV	A1R11
A1TP4	A1TP3	—18V	±375 mV	NONE
A1TP4	A1TP5	+5V	+ .15V	Remove R17 to increase
A1TP4	A1TP1	+200V	±5V	NONE

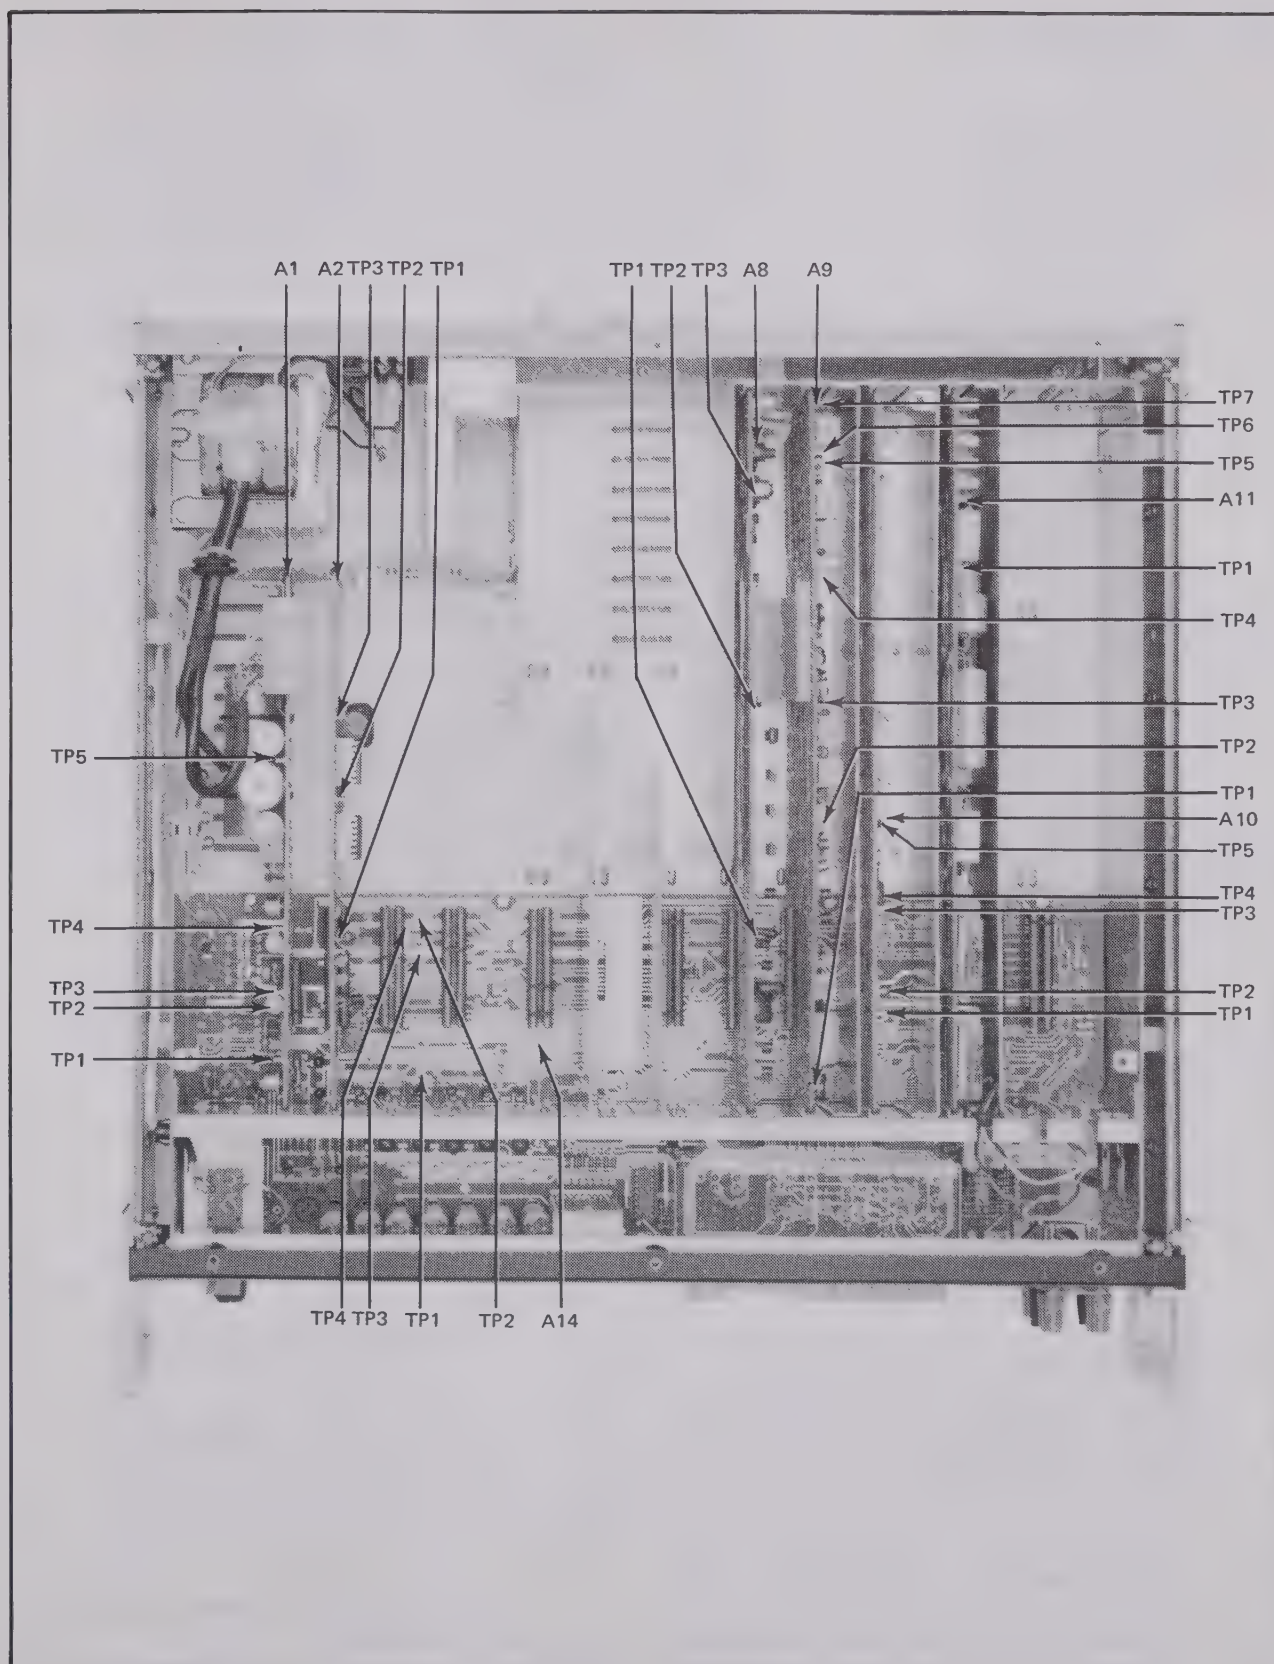


Figure 4-10. ASSEMBLY AND TEST POINT LOCATIONS

4-65. Analog Section

4-66. To determine if a trouble exists in the analog section, use the following checks:

- Connect a battery powered differential voltmeter LO to A10TP4 and HI to A10TP3.
- Depress VDC and 10 switches on Model 8400A.
- Turn on the Model 8400A and apply +10V dc to INPUT terminals. The differential voltmeter should read -10V.

NOTE!

The differential voltmeter should read -10V for full scale inputs on the 10, 100, and 1000 volt ranges, and +10V for full-scale inputs on the .1 and 1 volt ranges. For inputs less than full-scale on any range, the differential voltmeter should read proportionately less.

(Example: +10V input on 100V range, the differential voltmeter will read -1V).

FAULT ANALYSIS

IF VOLTMETER READINGS DO NOT CORRESPOND TO INPUT VOLTAGES, THE TROUBLE EXISTS IN THE ANALOG SECTION. IF VOLTMETER READINGS DO CORRESPOND TO INPUT VOLTAGES, THE TROUBLE EXISTS IN THE DIGITAL SECTION.

4-67. BUFFER CHECKS.

4-68. Overload Check.

- Connect differential voltmeter HI to K1 pin 14 and LO to the Model 8400A HI (red) INPUT terminal.
- Depress the 1, VDC, FILT buttons and set SAMPLE RATE full cw.
- Apply +3V $\pm 1\%$ to INPUT terminals of 8400A and observe readout of +1.19999. The differential voltmeter should read $-.5V \pm .25V$.

FAULT ANALYSIS

IF READINGS DO NOT CORRESPOND, THE PROBABLE CAUSE IS IN THE OVERLOAD CIRCUITRY. THE AMPLIFIER SECTION MAY BE A SECONDARY CAUSE.

4-69. Zero Check.

- Depress .1 and VDC buttons on Model 8400A.
- Short the INPUT terminals on front panel.
- Readout Zero Volts on Readout display.
- Adjust front panel DC Zero control so readout varies from +.000030 to -.000030.

FAULT ANALYSIS

IF DC ZERO CONTROL WILL NOT SWING THROUGH ABSOLUTE ZERO, ADJUSTMENT OF COURSE DC ZERO (A11R28) IS INDICATED. IF THIS IS NECESSARY, THE AMPLIFIER SECTION OF THE BUFFER COULD BE FAULTY.

NOTE!

The BUFFER assembly must be returned to factory for replacement of faulty parts within the amplifier circuitry. Refer to paragraph 4-51 for critical components.

4-70. Gain Check.

- Depress 10 button on Model 8400A.
- Connect a battery powered differential voltmeter as follows:
HI to INPUT HI on Model 8400A.
LO to A11TP2
- Apply $-12.5V \pm .5V$ to INPUT terminals of Model 8400A.
- Readout on Model 8400A should be -11.9999.
- Adjust the differential voltmeter to obtain measured value (null).
- Reverse the polarity of the input voltage and observe the following:

1. Model 8400A readout is +11.9999.
2. Differential voltmeter reading changed less than $+25 \mu\text{V}$.

— FAULT ANALYSIS —

IF BUFFER CHECKS ARE OK, ANALOG PROBLEM CAN EXIST IN ACTIVE FILTER CIRCUITRY.

4-71. ACTIVE FILTER CHECKS.

4-72. Gain Checks.

NOTE!

Remove Remote Control Unit if Model 8400A is so equipped.

- a. Depress REMOTE button on Model 8400A.
- b. Connect battery powered differential voltmeter LO to A10TP5 and HI to A10TP3.
- c. Adjust differential voltmeter to obtain measured value (null).
- d. Apply +10V dc $\pm 1\text{V}$ between A10TP4 (common) and A10TP5. The differential voltmeter indication should not change more than $100 \mu\text{V}$.
- e. Reverse polarity of input voltage and note that differential voltmeter indication should not change more than $100 \mu\text{V}$.

4-73. AC Rejection.

- a. Depress VDC, FILT, 10 buttons.
- b. Apply a 3V rms $\pm 1\%$, 60 Hz signal to the INPUT terminals of Model 8400A.
- c. Adjust SAMPLE RATE control so the readout changes about twice a second.
- d. The Model 8400A readout should be less than 20 digits.

4-74. Digital Section

4-75. The digital section may be divided into a number of somewhat independent sections for trouble analysis.

These digital sections and their locations are as follows:

LOCATION	DIGITAL SECTIONS
A14 — Display	Range Counter Sample Command Oscillator Readout Tubes and Controls
A9 — A-to-D Converter	A/D Amplifier Sample and Hold Analog Comparator Ladder (Primary and Secondary) Display Storage
A8 — Logic	Master Clock CCO Analog Cycle Control Display Storage Control 6-State Shift Register 16-State Binary Counter

4-76. Generally troubleshooting the digital section is more difficult than the analog section; therefore, troubleshooting guides (Figure 4-11 and 4-12) are important aids for localizing troubles to sections.

NOTE!

The storage cycle can be bypassed if there is a suspicion that the storage circuitry is faulty. A FAULTY storage cycle is usually seen as flashing digits. By jumpering A1TP5 (+5V) to A14TP2 (M), the Model 8400A is placed into a continuous measurement mode.

4-77. Figures 4-13 thru 4-16 are idealized waveforms from significant locations showing relationship of each waveform to the others and to the measure period. Analysis of these waveforms and a comparison to waveforms present at the same points will assist in localizing troubles. All waveforms are as shown when Model 8400A is placed in the continuous measurement condition.

— FAULT ANALYSIS —

IF, AFTER PLACING THE MODEL 8400A INTO THE CONTINUOUS MEASUREMENT CONDITION, THE READOUT IS CORRECT, THE FAULT LIES IN THE STORAGE CIRCUITRY. IF READOUT IS STILL INCORRECT THE FAULT LIES ELSEWHERE.

4-78. Figures 4-17 thru 4-19 show waveforms that are present at A9TP2 with Model 8400A in continuous measurement condition. Analysis of these waveforms to those present under trouble conditions will assist in troubleshooting the digital section.

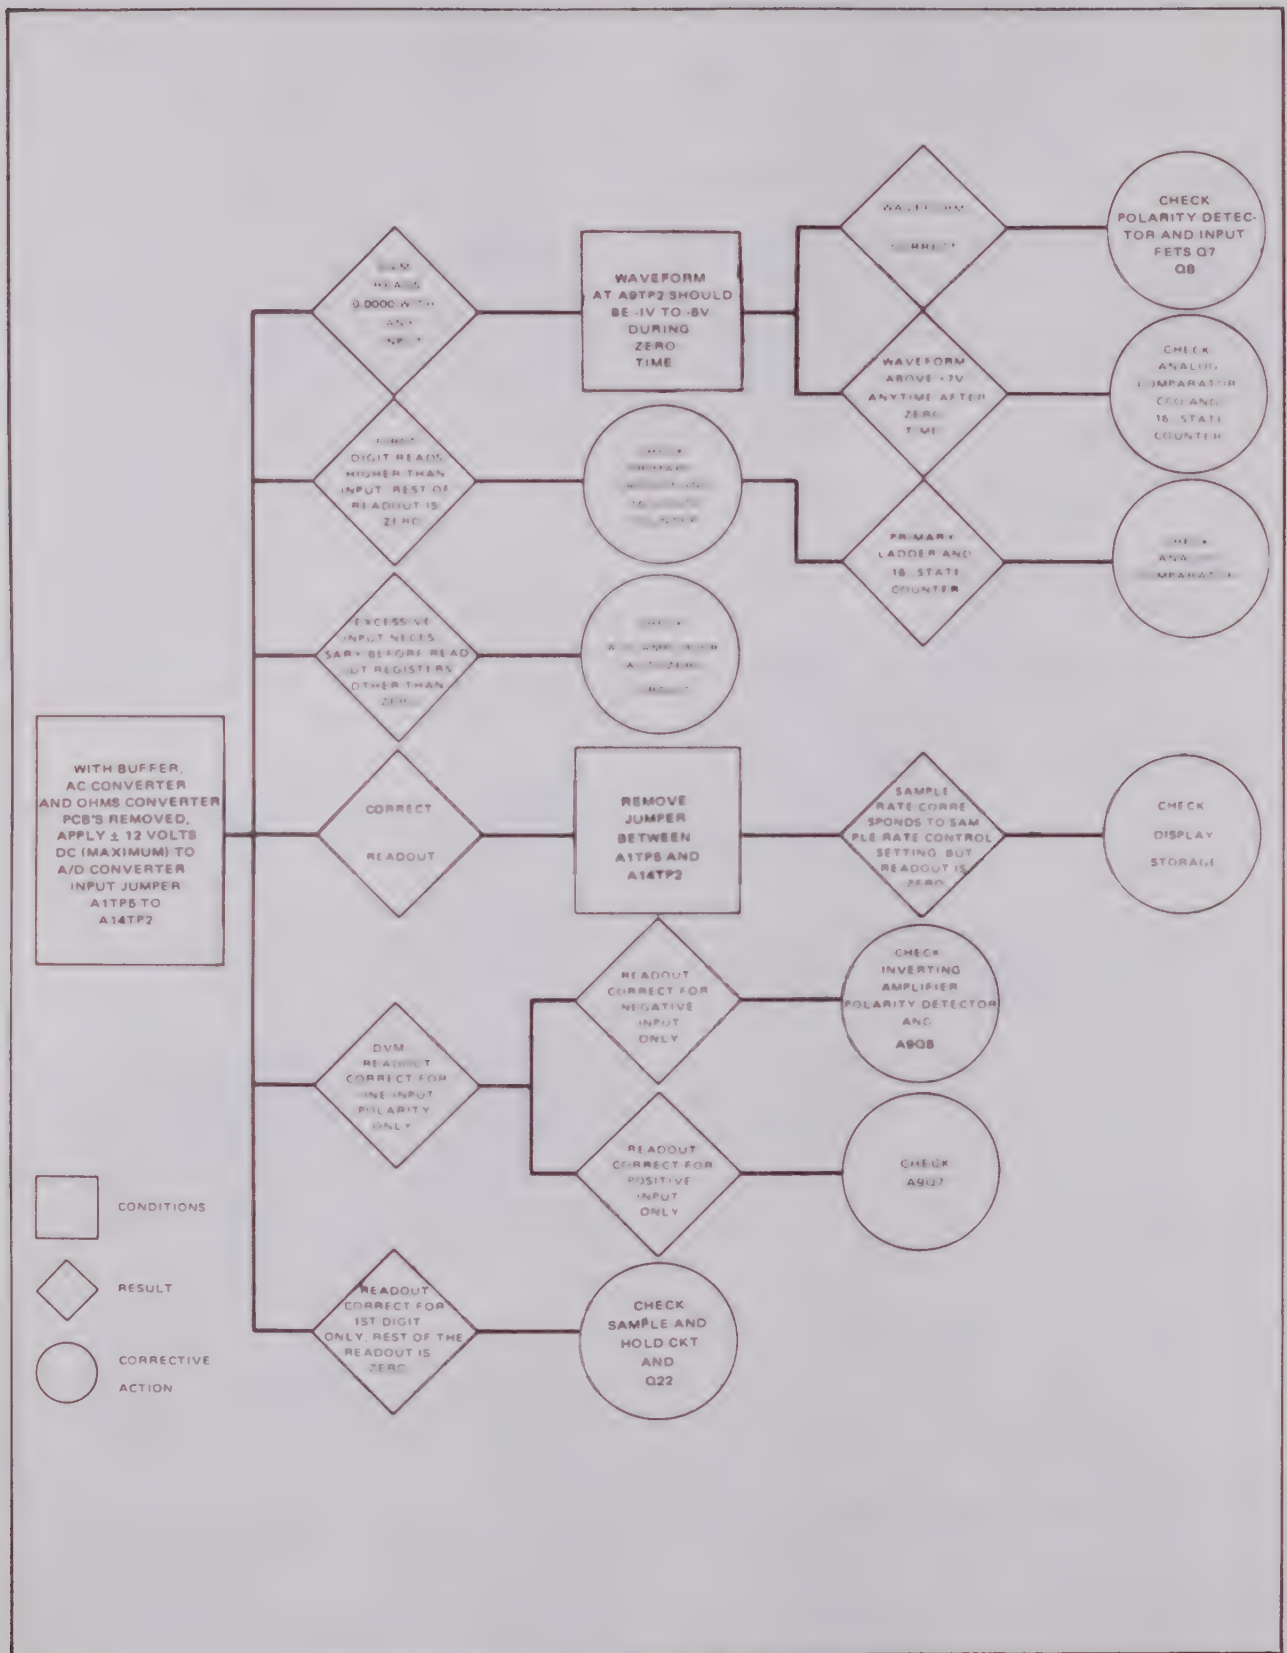


Figure 4-11. TROUBLESHOOTING DVM DIGITAL SECTION

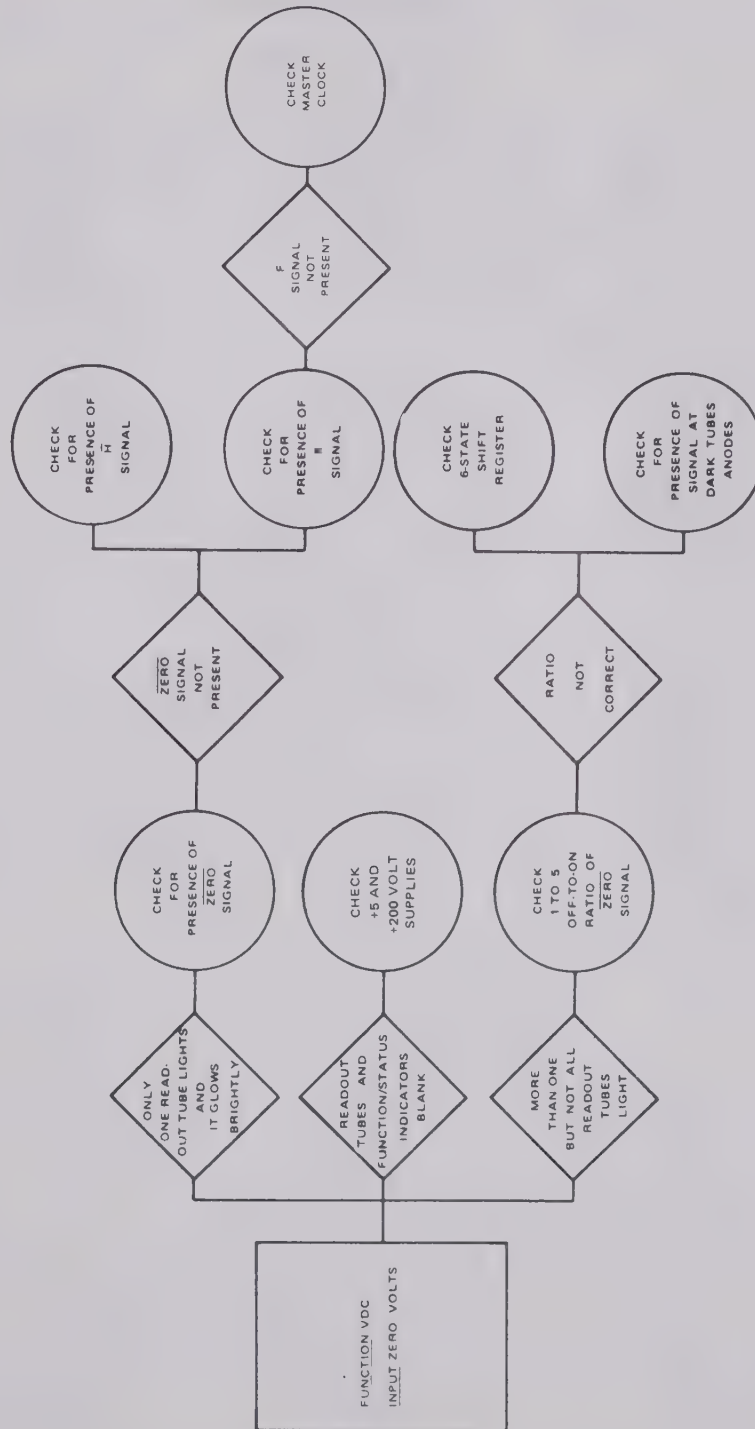


Figure 4-12. TROUBLESHOOTING DVM DISPLAY

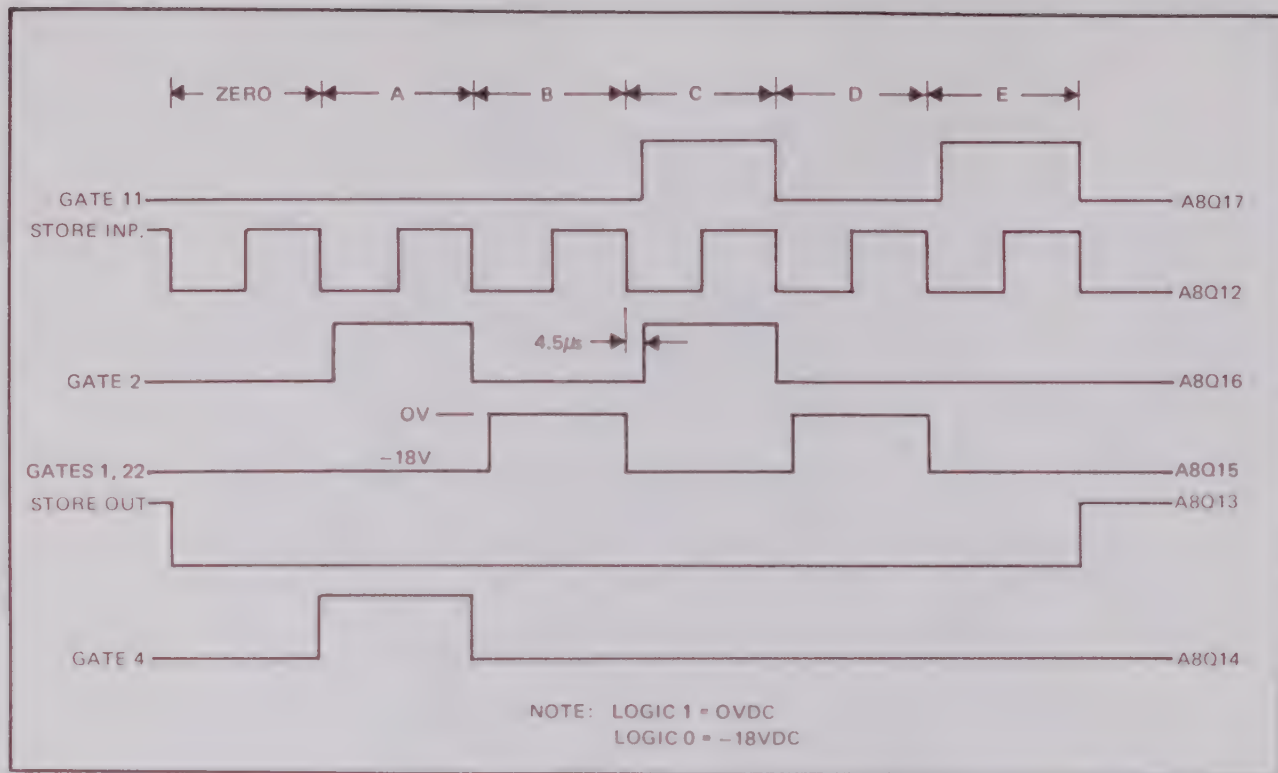


Figure 4-13. A/D CONVERTER CONTROLS

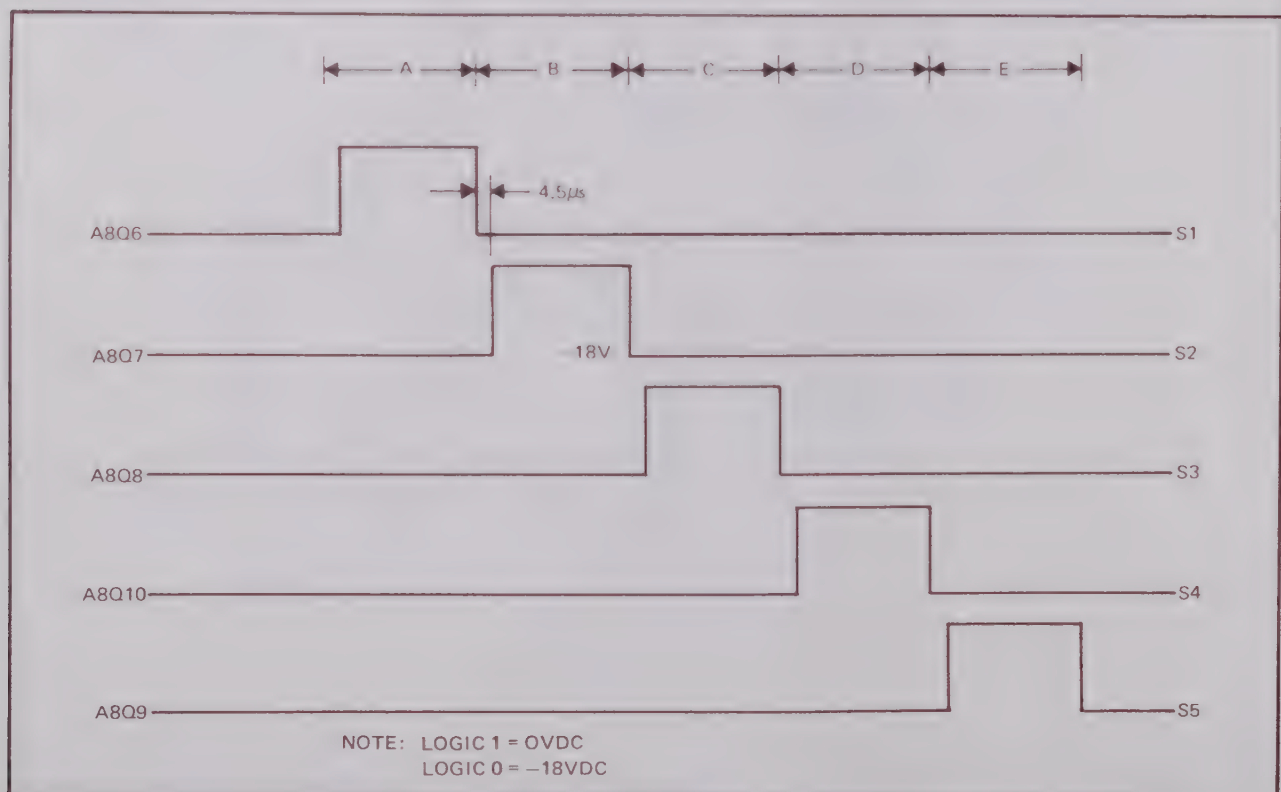


Figure 4-14. ANALOG STORAGE CONTROL

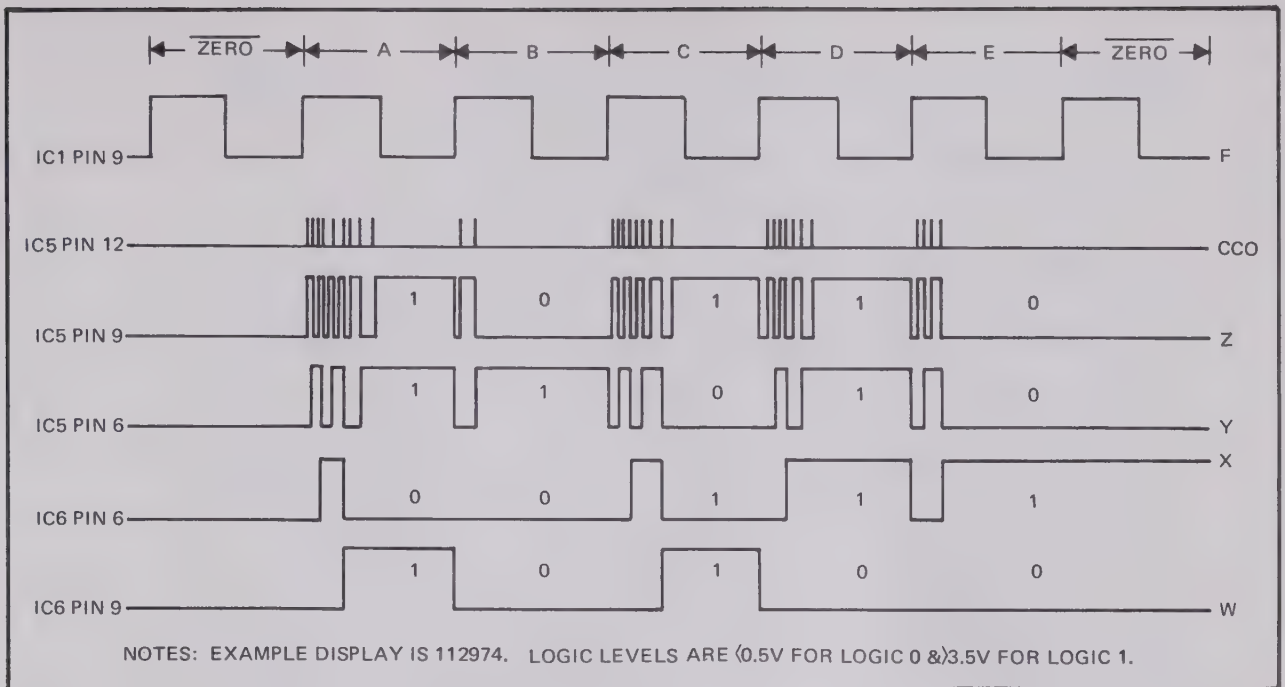


Figure 4-15. COUNTER OPERATION

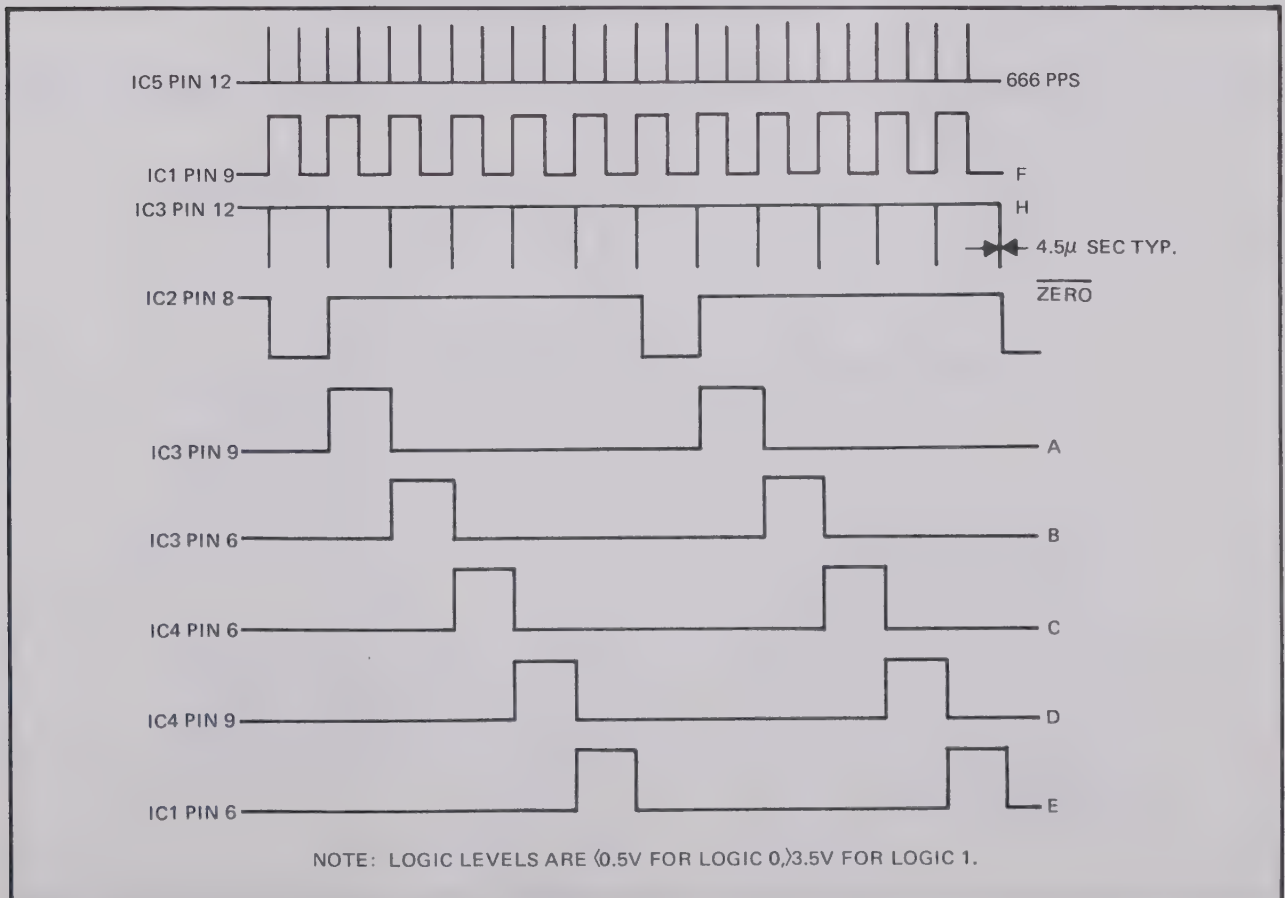


Figure 4-16. SHIFT REGISTER OPERATION

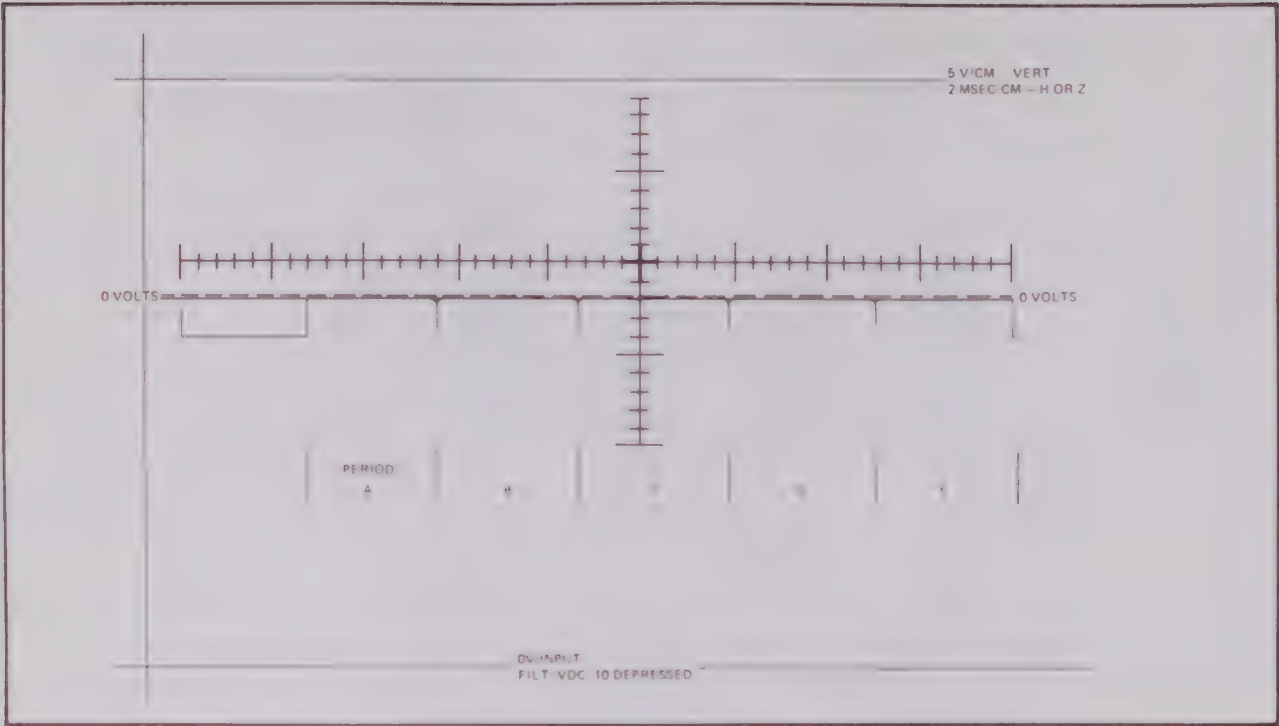


Figure 4-17. A9TP2 MEASUREMENT

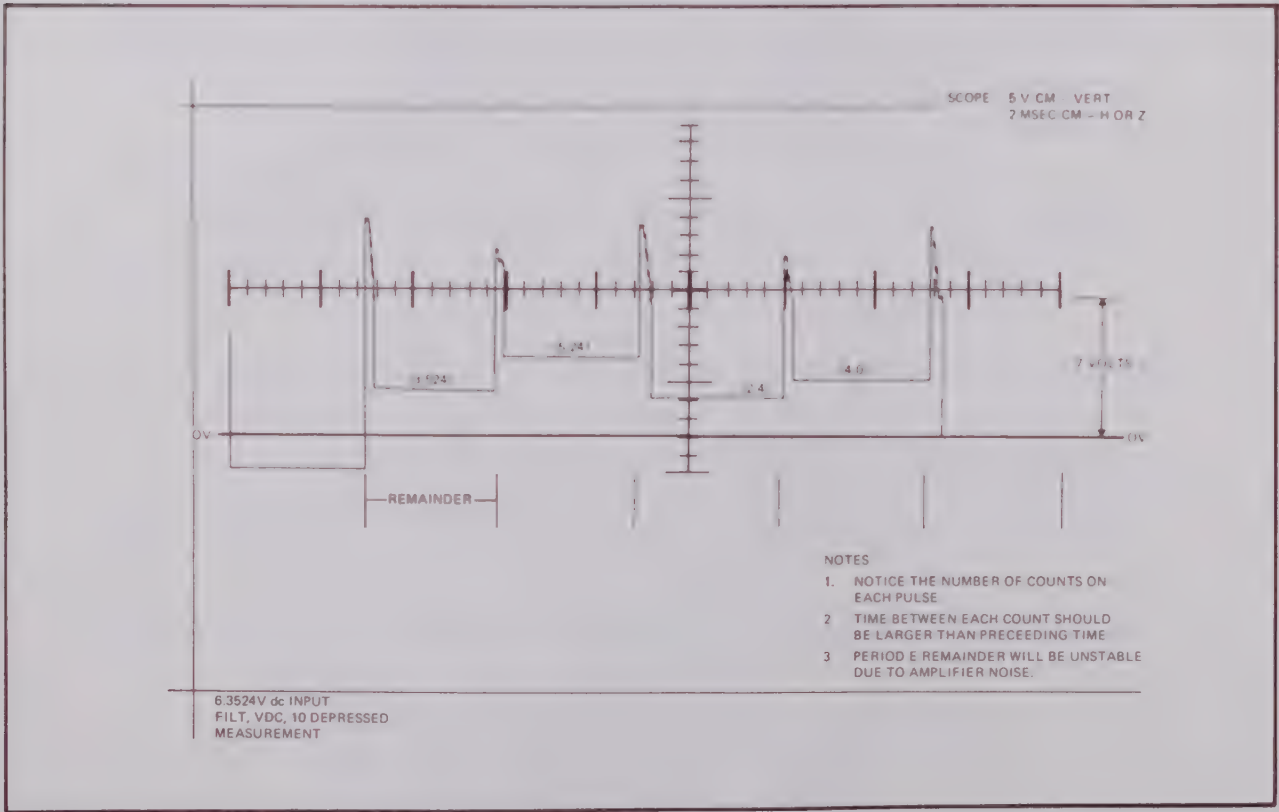


Figure 4-18. A9TP2

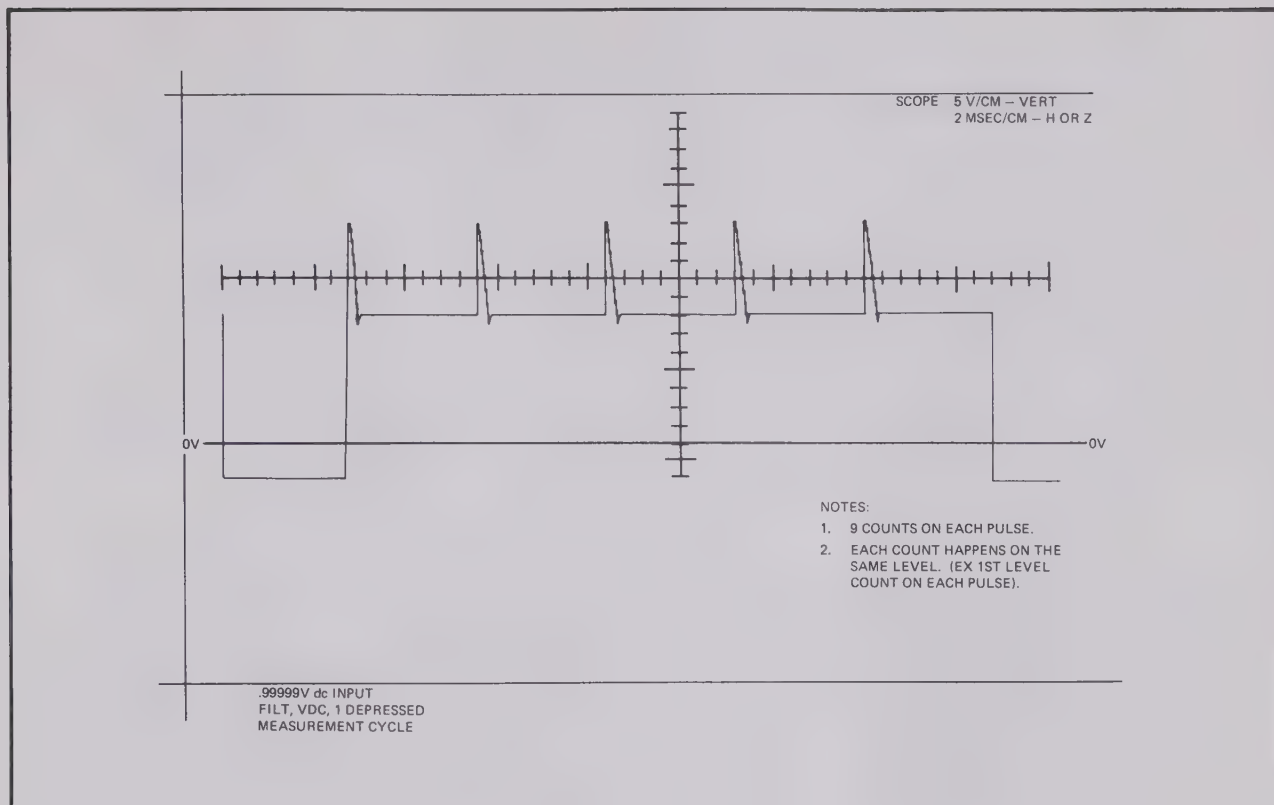


Figure 4-19. A9TP2

Section 5

List of Replaceable Parts

5-1. INTRODUCTION

5-2. This section contains an illustrated parts breakdown list of the instrument and a Cross Reference List of FLUKE stock numbers to original MANUFACTURERS' part numbers. It also lists recommended spare parts and contains part ordering information. The starting page number of each major listing is given in the Table of Contents.

5-3. The parts list shows the location of all assemblies and the replaceable components. Major assemblies are identified by a designation beginning with the letter A followed by a number (e.g., A1 etc). Subassemblies are identified in the same manner; however, the parent assembly designator precedes this designator (e.g., A1A1 etc.). Electrical components are identified by their schematic diagram designator and listed hardware parts are identified by the FLUKE stock number. All listed components are described, and the FLUKE stock number is given. The original MANUFACTURER'S part number for each listed item is given in the Cross Reference List at the rear of this section.

5-4. PARTS LIST COLUMN DESCRIPTIONS

- a. The REF DESIG column indexes the item description to the associated illustration. In general the reference designations are listed under each assembly in alpha-numeric order. Subassemblies of minor proportions are sometimes listed with the assembly of which they are a part. In this case, the reference designations may appear out of order.
- b. The DESCRIPTION column describes the salient characteristics of the component. Indention of the description indicates the relationship to other assemblies, components, etc. In many cases it is necessary to abbreviate in this column. For abbreviations and symbols used, refer to Appendix B located at the rear of the manual.
- c. The six-digit part number, by which the item is identified at the John Fluke Mfg. Co., Inc. is listed in the STOCK NO. column. Use this number when ordering parts from the factory or authorized representatives. In the case where a flag note is used, special ordering is required. Flag note explanations are located as close as possible to the flag note.
- d. The TOT QTY column lists the total quantity of the item used in each particular assembly. This quantity reflects only the latest Use Code. Second and subsequent listings of the same item are referenced to the first listing with the abbreviation REF.
- e. Entries in the REC QTY column indicate the recommended number of spare parts necessary to support one to five instruments for a period of two years. This list presumes an availability of common electronic parts at the maintenance site. For maintenance for one year or more at an isolated site, it is recommended that at least one of each assembly in the instrument be stocked. In

the case of optional subassemblies, plug-ins, etc. that are not always part of the instrument, or are deviations from the basic instrument model, the REC QTY column lists the recommended quantity of the item in that particular assembly.

- f. The USE CODE column identifies certain parts which have been added, deleted or modified during the production of the instrument. Each part for which a Use Code has been assigned may be identified with a particular instrument serial number by consulting the Serial Effectivity List, paragraph 5-9. Sometimes when a part is changed, the new part can and should be used as a replacement for the original part.

5-5. MANUFACTURERS' CROSS REFERENCE LIST COLUMN DESCRIPTIONS

- a. The six-digit part number, by which the item is identified at the John Fluke Mfg. Co., Inc. is listed in the FLUKE STOCK NO. column. Use this number when ordering parts from the factory or authorized representatives.
- b. The Federal Supply Code for the item manufacturer is listed in the MFG column. An abbreviated list of Federal Supply Codes is included in Appendix A.
- c. The part number which uniquely identifies the item to the original manufacturer is listed in the MFG PART NO. column. If a component must be ordered by description, the type number is listed.

5-6. HOW TO OBTAIN PARTS

5-7. Standard components have been used whenever possible. Standard components may be ordered directly from the manufacturer by using the manufacturer's part number, or parts may be ordered from the John Fluke Mfg. Co., Inc. factory or authorized representative by using the FLUKE stock number. In the event the part you order has been replaced by a new or improved part, the replacement will be accompanied by an explanatory note and installation instructions, if necessary.

5-8. You can insure prompt and efficient handling of your order to the John Fluke Mfg. Co., Inc. if you include the following information:

- a. Quantity.
- b. FLUKE Stock Number.
- c. Description.
- d. Reference Designation.
- e. Instrument model and serial number.

Example: 2 each, 215897, Transistor, 2N4126
A2A1Q1 & Q2 for 645A, S/N 123.

If you must order structural parts not listed in the parts list, describe the part as completely as possible. A sketch of the part, showing its location to other parts of the instrument is helpful.

5-9. SERIAL NUMBER EFFECTIVITY

5-10. A Use Code column is provided to identify certain parts that have been added, deleted or modified during production of the Model 8400A. Each part for which a use code has been assigned may be identified with a particular instrument serial number by consulting the Use Code Effectivity List below. All parts with no code are used on all instruments with serial numbers above 123.

USE CODE	SERIAL NUMBER EFFECTIVITY
-------------	---------------------------

A	123 thru 148.
B	149 and on.
C	187 and on.
D	198 and on.
E	123 thru 264.
F	265 and on.
G	123 thru 267.
H	268 and on.
I	123 thru 265.
J	266 and on.
K	378 and on.
L	330 and on.
M	123 thru 377.
N	123 thru 332.
O	333 and on.
P	123 thru 632.
Q	633 and on.
R	123 thru 272.
S	273 and on.
T	554 and on.
U	123 thru 553.
V	76400 and on.

REF DESIG OR ITEM NO.	DESCRIPTION	FLUKE STOCK NO.	MFG FED SPLY CDE	MFG PART NO. OR TYPE	TOT QTY	REC QTY	USE CDE
	8400A DIGITAL VOLTMETER Figure 5-1						
A1	Power Supply (Figure 5-2)	288159			1		
A2	Range Delay (Figure 5-3)	288209			1		
A3	DC External Reference (See Section 6, -05 Option not supplied with standard 8400)				1		
A4	AC External Reference (See Section 6, -06 Option not supplied with standard 8400)				1		
A5	Remote Control (See Section 6, -04 Option not supplied with standard 8400)				1		
A6	Data Output No. 2 (See Section 6, -03 Option not supplied with standard 8400)				1		
A7	Data Output No. 1 (See Section 6, -03 Option not supplied with standard 8400)				1		
A8	Logic (Figure 5-4)				1		
A9	AD Converter (Figure 5-5)				1		
A10	Active Filter (Figure 5-6)				1		
A11	Buffer (Figure 5-7)	288191			1		
A12	Ohms Converter (See Section 6, -02 Option not supplied with standard 8400)				1		
A13	AC Converter (See Section 6, -01 Option not supplied with standard 8400)				1		
A14	Display (Figure 5-8)	288167			1		
A22	True RMS converter (See Section 6, -09 Option not supplied with standard 8400)				1		
C1	Cap, cer, fixed 47 pf $\pm 10\%$	282145			1		
J25, J27	Binding post, red, Hi	275552			2		
J26, J28	Binding post, black, Lo	275560			2		
J30, J31	Jack, teflon, ins (Mounted on T1)	295287			2		
J32	Binding post, blue, guard	275578			1		

REF DESIG OR ITEM NO.	DESCRIPTION	FLUKE STOCK NO.	MFG FED SPLY CDE	MFG PART NO. OR TYPE	TOT QTY	REC QTY	USE CDE
R1, R2	Res, ww, 50K, $\pm 25\%$	307298			2		
R3	Res, comp, 10M $\pm 10\%$, $\frac{1}{2}w$	108142			1		C
S1	Switch, power (for push button, see below)	291526			1		
	Button, push, green	268862			1		
	Cover, top, outer	311746			1		
	Cover, top guard	346163			1		
	Cover, access	297713			1		
	Cover, bottom	298554			1		
	Foot	292870			4		
	Knob, black	190249			1		
	Lens	297903			1		
	Line, cord and plug	284174			1		
	Shorting Link	190728			3		
	Terminal, double	301382			4		
	Terminal, single	301390			5		
	Terminal strip, black	305136			4		
	Terminal strip, ins, light grey	297846			6		
	1  Order by model and option number						
	2  A8 and A9 must be purchased as a set Stock number 303461						

REF DESIG OR ITEM NO.	DESCRIPTION	FLUKE STOCK NO.	MFG FED SPLY CDE	MFG PART NO. OR TYPE	TOT QTY	REC QTY	USE CDE
	REAR PANEL ASSEMBLY Figure 5-1						
P1	Connector, AC receptacle	284166			1		
F1	Fuse, AGC ½A fast-blo	153858			1		
XF1	Fuse Holder	295741			1		
	Panel, rear (includes slide switch, stock no. 226274)	297645			1		
T1	Transformer, power	365171			1		

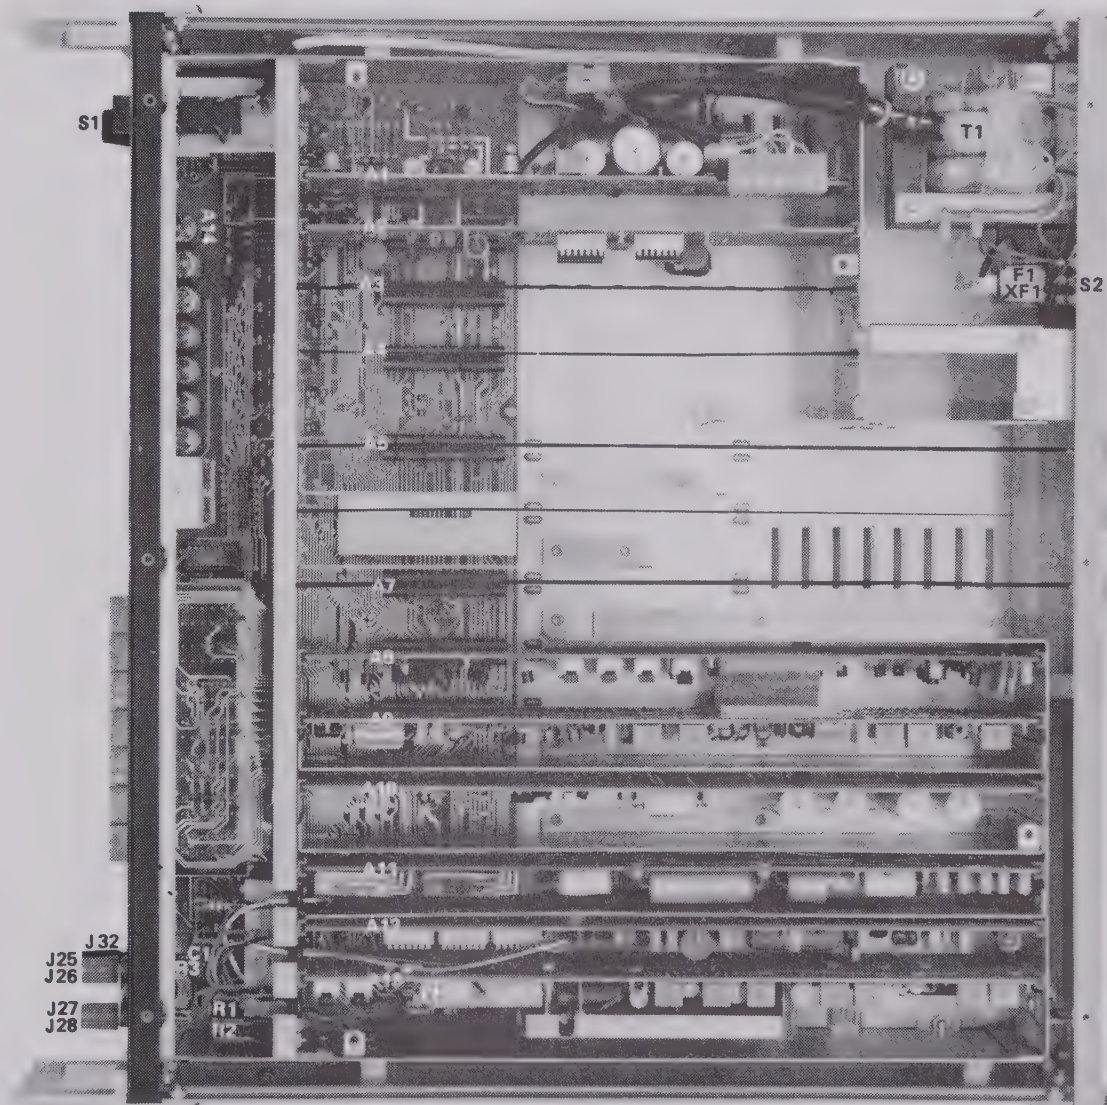


Figure 5-1. MODEL 8400A DIGITAL VOLTMETER

REF DESIG OR ITEM NO.	DESCRIPTION	FLUKE STOCK NO.	MFG FED SPLY CDE	MFG PART NO. OR TYPE	TOT QTY	REC QTY	USE CDE
A1	POWER SUPPLY Figure 5-2	288159			REF		
C1	Cap, elect, 8 uf +50/-10%, 350V	275792			1		
C2, C5	Cap, elect, 250 uf +50/-10%, 40V	178616			2		
C3, C7	Cap, mica, 33 pf $\pm 5\%$, 500V	160317			2		
C4, C6	Cap, elect, 50 uf +50/-10%, 25V	168823			2		
C8	Cap, elect, 7100 uf +75/-10%, 10V	295196			1		
CR1 thru CR4	Diode, silicon, 1 amp, 600 piv	112383			4		
CR5 thru CR8, CR10 thru CR13	Diode, silicon, 1 amp, 100 piv	116111			8		
CR9	Diode, zener, 12V	249052			1		
Q1, Q2	Tstr, silicon, NPN	218511			2		
Q3, Q8	Tstr, silicon, NPN	150359			2		
Q4	Not used	150359			2		
Q5	Tstr, silicon, PNP	269076			-1		
Q6	Tstr, silicon, NPN	288381			1		
Q7	Tstr, silicon, NPN	218396			1		
R1	Res, comp, 510 $\pm 5\%$, $\frac{1}{2}w$	108951			1		
R2	Res, comp, 68k $\pm 5\%$, $\frac{1}{4}w$	148171			1		
R3	Res, met flm, 383k $\pm 1\%$, $\frac{1}{8}w$	288498			1		
R4, R15	Res, met flm, 40.2k $\pm 1\%$, $\frac{1}{8}w$	235333			2		
R5, R8	Res, comp, 51 $\pm 5\%$, $\frac{1}{2}w$	144717			2		

REF DESIG OR ITEM NO.	DESCRIPTION	FLUKE STOCK NO.	MFG FED SPLY CDE	MFG PART NO. OR TYPE	TOT QTY	REC QTY	USE CDE
R6	Res, ww, 7.2k $\pm 0.1\%$, $\frac{1}{4}w$	295121			1		
R7	Not used						
R9	Res, ww, 4.02k $\pm 0.1\%$, $\frac{1}{4}w$	240937			1		
R10, R12	Res, met flm, 10k $\pm 1\%$, $\frac{1}{8}w$	168260			2		
R11	Res, var, cer met, 500 $\pm 10\%$, 1w	291120			1		
R13, R16	Res, comp, 5.6k $\pm 5\%$, $\frac{1}{4}w$	148080			2		
R14	Res, met flm, 9.53k $\pm 1\%$, $\frac{1}{8}w$	288563			1		
R17	Res, comp, 220k $\pm 5\%$, $\frac{1}{4}w$	160937			1		
U1, U2	IC, operational amplifier	271502			2		

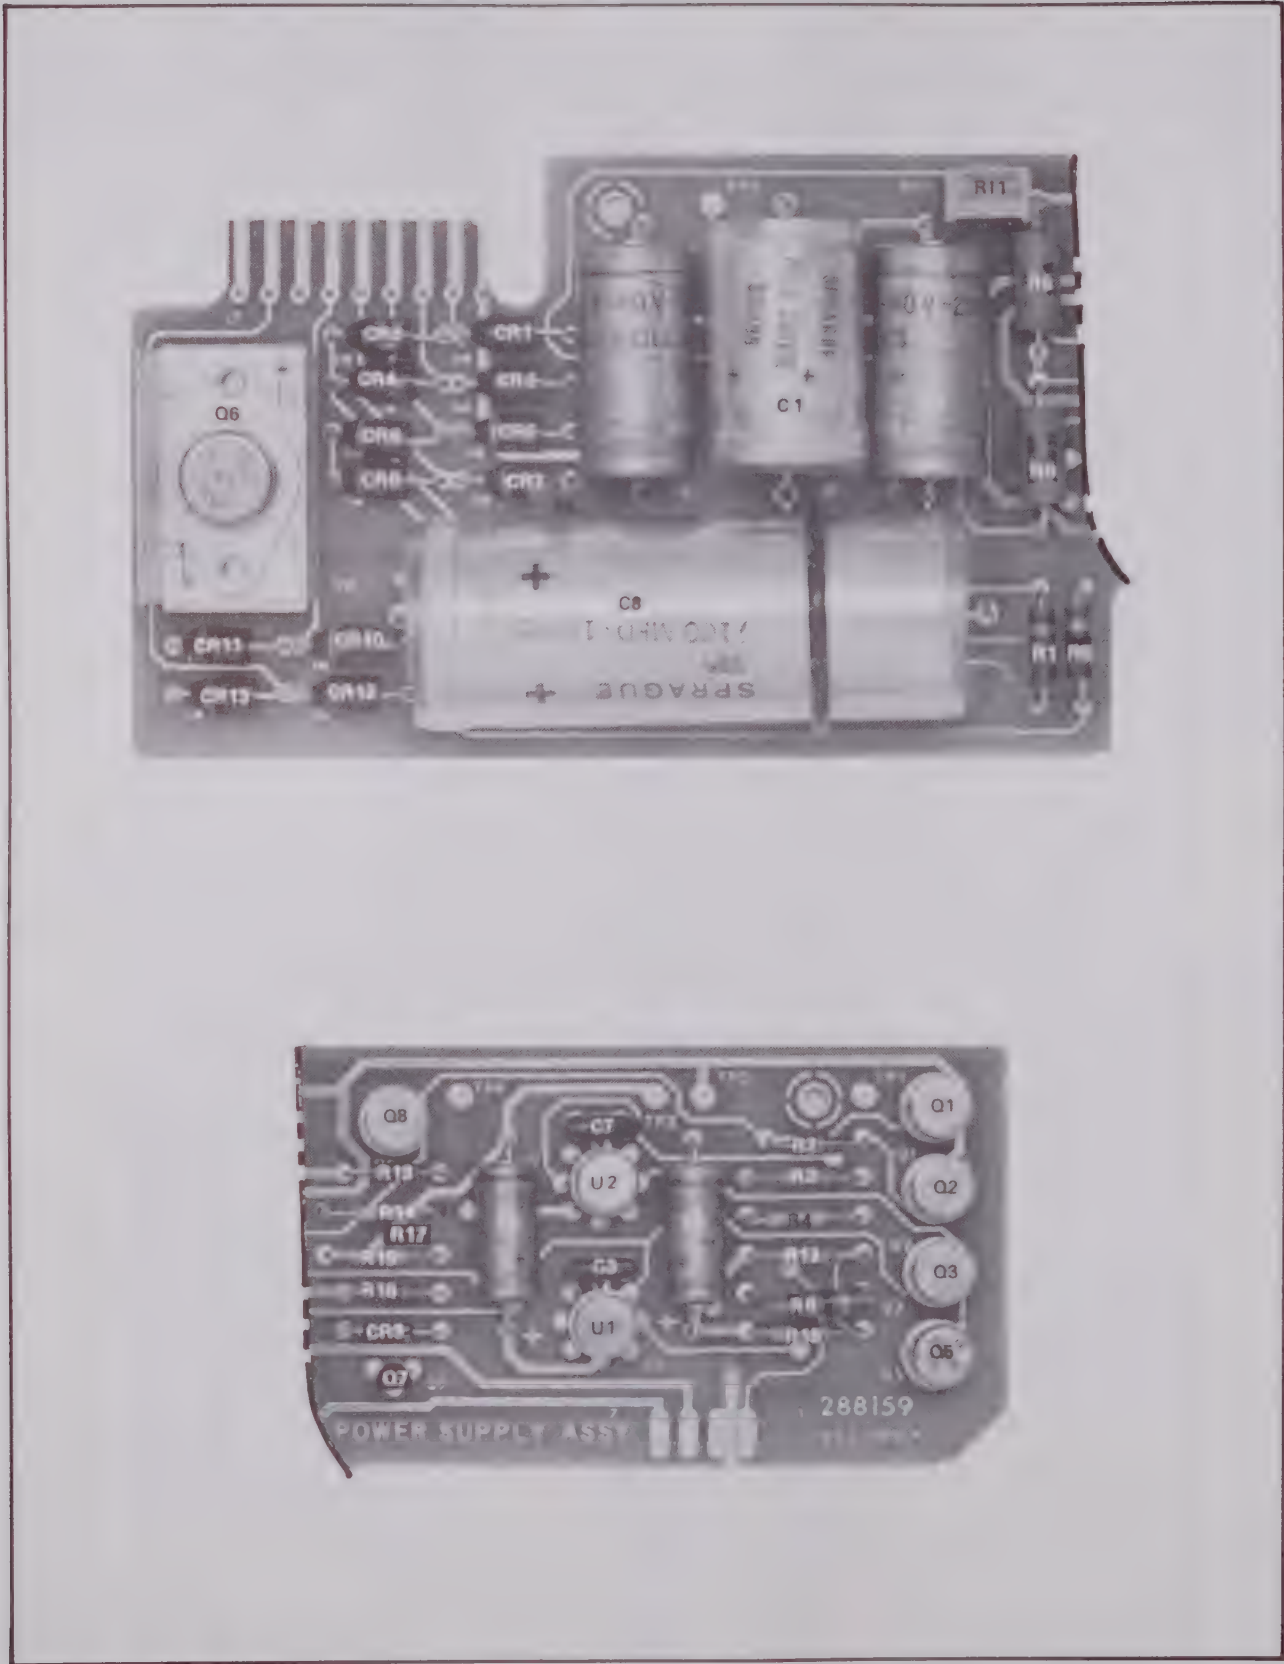


Figure 5-2. POWER SUPPLY PCB ASSEMBLY

REF DESIG OR ITEM NO.	DESCRIPTION	FLUKE STOCK NO.	MFG FED SPLY CDE	MFG PART NO. OR TYPE	TOT QTY	REC QTY	USE CDE
A2	RANGE DELAY	288209			REF		
	Figure 5-3						
C1, C3	Cap, cer, 0.025 uf $\pm 20\%$, 100V	168435			2		
C2, C6	Cap, Ta, 3.3 uf $\pm 5\%$, 20V	271320			2		
C4	Cap, mica, 0.01 uf $\pm 1\%$, 300V	152470			1		
C5	Cap, elect, 200 uf $+50/-10\%$, 10V	236935			1		
C7	Cap, cer, 2200 pf, $\pm 10\%$, 500V	268425			1		Q
C8	Cap, cer, .01 uf, $\pm 20\%$, 100V	149153			1		Q
CR1, CR3, CR9, CR11	Diode, silicon 150 mA	203323			4		E
CR1, CR3, CR9, CR11 CR16	Diode, silicon, 150 mA	203323			5		F
CR2, CR6, CR7, CR8, CR10	Diode, germanium, 80 mA, 100 piv	149187			5		E
CR2, CR6, CR7, CR8, CR10 CR12 thru CR15	Diode, germanium, 80 mA, 100 piv	149187			9		F
CR4, CR5	Diode, fast switching germanium, 50 piv	180505			2		
Q1, Q2	Tstr, silicon, NPN	168708			2		
Q3	Tstr, silicon, NPN	218396			1		E

REF DESIG OR ITEM NO.	DESCRIPTION	FLUKE STOCK NO.	MFG FED SPLY CDE	MFG PART NO. OR TYPE	TOT QTY	REC QTY	USE CDE
Q3, Q5	Tstr, silicon, NPN	218396			2		F
Q4	Tstr, silicon, unijunction	268110			1		
R1, R6, R15	Res, comp, 220 $\pm 5\%$, $\frac{1}{4}w$	147959			3		
R2	Res, comp, 22k $\pm 5\%$, $\frac{1}{4}w$	148130			1		
R3, R7	Res, comp, 4.7k $\pm 5\%$, $\frac{1}{4}w$	148072			2		
R4, R17	Res, comp, 27k $\pm 5\%$, $\frac{1}{4}w$	148148			2		
R5	Res, comp, 51k $\pm 5\%$, $\frac{1}{4}w$	193334			1		
R8	Res, met flm, 27.4k $\pm 1\%$, $\frac{1}{8}w$	241471			1		
R9	Res, met flm, 15.4k $\pm 1\%$, $\frac{1}{8}w$	261651			1		
R10	Res, comp, 47k $\pm 5\%$, $\frac{1}{4}w$	148163			1		
R11	Res, comp, 10k $\pm 5\%$, $\frac{1}{4}w$	148106			1		E
R11, R19	Res, comp, 10k $\pm 5\%$, $\frac{1}{4}w$	148106			2		F
R12	Res, met flm, 10k $\pm 1\%$, $\frac{1}{8}w$	168260			1		
R13	Res, met flm, 36.5k $\pm 1\%$, $\frac{1}{8}w$	235309			1		
R14	Res, met flm, 21k $\pm 0.5\%$, $\frac{1}{8}w$	229484			1		E
	Res, met flm, 16.9k $\pm 1\%$, $\frac{1}{8}w$	267146			1		F
R16	Res, comp, 5.1k $\pm 5\%$, $\frac{1}{4}w$	193342			1		
R18	Res, var, cer met, 10k $\pm 10\%$, $\frac{1}{2}w$	285171			1		F
U1	IC, DTL, Hex Inverter	268367			1		
U2	IC, DTL, Triple 3-Input Nand Gate	266312			1		
U3	IC, DTL, dual 4-Input Nand	268383			1		
	Socket, IC, 14 contact, U1, U2, U3	276527			3		

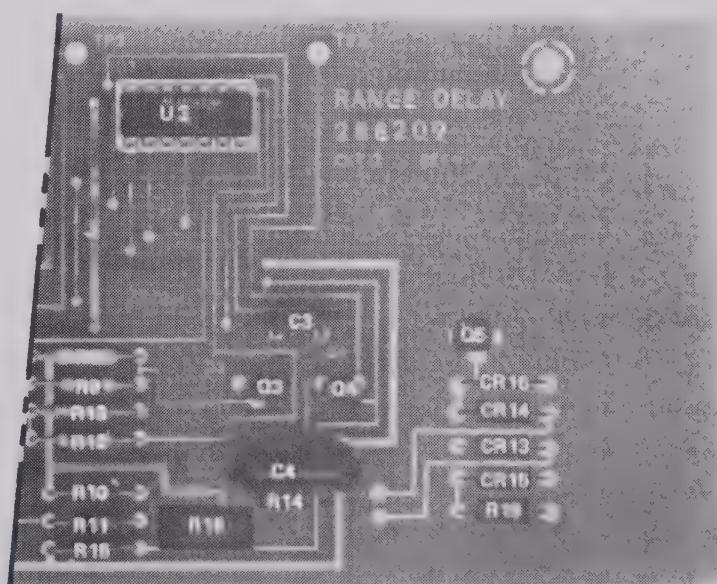
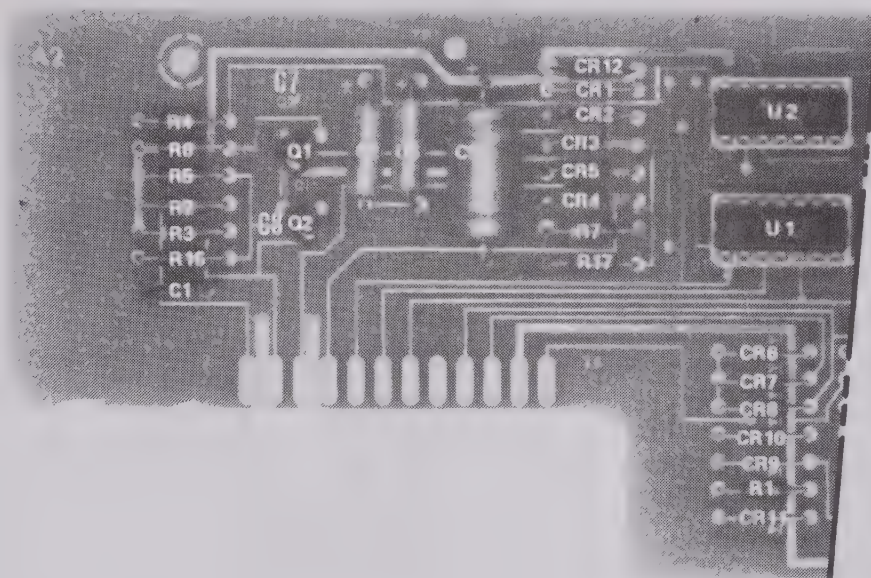


Figure 5-3. RANGE DELAY PCB ASSEMBLY

REF DESIG OR ITEM NO.	DESCRIPTION	FLUKE STOCK NO.	MFG FED SPLY CDE	MFG PART NO. OR TYPE	TOT QTY	REC QTY	USE CDE
A8	LOGIC	288183			REF		
	Figure 5-4						
C1	Cap, mica, 5600 pf $\pm 2\%$, 500V	182873			1		
C2	Cap, mica, 1500 pf $\pm 5\%$, 500V	148361			1		
C3	Cap, cer, 180 pf $\pm 10\%$, 1kV	105890			1		
C4	Cap, mica, 470 pf $\pm 5\%$, 500V	148429			1		
C5	Cap, cer, 0.025 uf $\pm 20\%$, 100V	168435			1		M
C5	Cap, cer, 2200 pf $\pm 10\%$, 500V DC	268425			1		K
C6	Cap, mica, 33 pf $\pm 5\%$, 500V	160317			1		
C7	Cap, mica, 270 pf $\pm 5\%$, 500V	148452			1		
CR1, CR2, CR5, CR6, CR7	Diode, silicon, 150 mA	203323			5		M
CR1, CR2, CR5, CR6, CR7, CR10, CR11	Diode, silicon, 150 mA	203323			7		K
CR3	Diode, silicon, 1 amp, 100 piv	116111			1		
CR4, CR8	Diode, germanium, 80 mA, 100 piv	149187			2		M
CR4, CR8, CR9	Diode, germanium, 80 mA, 100 piv	149187			3		K
P23	Connector, PCB to Cable, 34 contact	295337			1		
Q1	Tstr, silicon, unijunction	268110			1		
Q2 thru Q5, Q19 thru Q22, Q24	Tstr, silicon, NPN	218396			9		M

REF DESIG OR ITEM NO.	DESCRIPTION	FLUKE STOCK NO.	MFG FED SPLY CDE	MFG PART NO. OR TYPE	TOT QTY	REC QTY	USE CDE
Q2 thru Q5 Q19 thru Q22, Q24, Q26	Tstr, silicon, NPN	218396			10		K
Q6 thru Q17	Tstr, silicon PNP	195974			12		
Q18	Tstr, germanium, PNP	148619			1		
Q23	Tstr, silicon, NPN	168716			1		
Q25	Tstr, silicon, NPN	168708			1		
R1	Res, met flm, 750k $\pm 1\%$, $\frac{1}{2}w$	155192			1		
R2	Res, met flm, 110k $\pm 1\%$, $\frac{1}{8}w$	234708			1		
R3	Res, comp, 47 $\pm 5\%$, $\frac{1}{4}w$	147892			1		
R4	Res, met flm, 46.4k $\pm 1\%$, $\frac{1}{8}w$	188375			1		
R5,R19	Res, comp, 2.7k $\pm 5\%$, $\frac{1}{4}w$	170720			2		
R6,R21 R28, R29, R31, R32, R33	Res, comp, 1.5k $\pm 5\%$, $\frac{1}{4}w$	148031			7		
R7	Res, comp, 820 $\pm 5\%$, $\frac{1}{4}w$	148015			1		
R8,R59 R60	Res, comp, 10k $\pm 5\%$, $\frac{1}{4}w$	148106			3		
R9	Res, comp, 27k $\pm 5\%$, $\frac{1}{4}w$	148148			1		
R10	Res, comp, 1k $\pm 5\%$, $\frac{1}{4}w$	148023			1		
R11, R20, R37	Not Used						
R12, R40, R41	Res, comp, 4.7k $\pm 5\%$, $\frac{1}{4}w$ (R40 Deleted)	148072 148072			3 2		K

REF DESIG OR ITEM NO.	DESCRIPTION	FLUKE STOCK NO.	MFG FED SPLY CDE	MFG PART NO. OR TYPE	TOT QTY	REC QTY	USE CDE
R13, R25, R26, R27	Res, comp, 8.2k $\pm 5\%$, $\frac{1}{4}w$	160796			4		
R14 thru R18	Res, comp, 51k $\pm 5\%$, $\frac{1}{4}w$ (R17 Deleted)	193334 193334			5 4		K
R22, R23	Res, comp, 2.2k $\pm 5\%$, $\frac{1}{4}w$	148049			2		
R24, R64	Res, comp, 1.8k $\pm 5\%$, $\frac{1}{4}w$	175042			2		
R30	Res, comp, 680 $\pm 5\%$, $\frac{1}{4}w$	148007			1		
R34, R35, R36, R38, R39	Res, comp, 22k $\pm 5\%$, $\frac{1}{4}w$	148130			5		
R42	Res, comp, 33k $\pm 5\%$, $\frac{1}{4}w$	148155			1		
R43	Res, comp, 47k $\pm 5\%$, $\frac{1}{4}w$	148163			1		M
R43, R66	Res, comp, 47k $\pm 5\%$, $\frac{1}{4}w$	148163			2		K
R43, R66, R67	Res, comp, 47k $\pm 5\%$, $\frac{1}{4}w$	148163			3		V
R44, R50, R52	Res, comp, 220k $\pm 5\%$, $\frac{1}{4}w$	160937			3		
R45, R46, R48, R49, R51, R65	Res, comp, 11k $\pm 5\%$, $\frac{1}{4}w$	221580			6		
R47	Res, comp, 39k $\pm 5\%$, $\frac{1}{4}w$	188466			1		
R53	Res, met flm, 182k $\pm 1\%$, 1/8w	241091			1		
R54	Res, met flm, 3.74k $\pm 1\%$, 1/8w, T9	260547			1		
R57	Res, var, cer met, 20 $\pm 20\%$, $\frac{1}{2}w$	261180			1		
R58	Res, ww, 14k $\pm 0.1\%$, $\frac{1}{4}w$	275321			1		

REF DESIG OR ITEM NO.	DESCRIPTION	FLUKE STOCK NO.	MFG FED SPLY CDE	MFG PART NO. OR TYPE	TOT QTY	REC QTY	USE CDE
R61	Res, comp, 1.2k $\pm$ 5%, 1/4w	190371			1		
R63	Res, met flm, 3.74k $\pm$ 1%, 1/8w	272096			1		
U1,U3 thru U6	IC, TTL, dual J-K flip flop	268441			5		
U2	IC, DTL, dual 4-Input Nand	268383			1		
U7	IC, TTL, dual 4-Input Expandable Nor Gate	268557			1		
U8	IC, DTL, Quad 2-Input Nand Gate	268375			1		
U9, R55, R56, R62	Matched Reference Amplifier Set	290650			1		
U10	IC, operational amplifier	271501			1		
	Socket, IC, 14 contact, U2, U7, U8	276527			3		
	Socket, IC, 16 contact, U1, U3 thru U6	276535			5		



Figure 5-4. LOGIC PCB ASSEMBLY

REF DESIG OR ITEM NO.	DESCRIPTION	FLUKE STOCK NO.	MFG FED SPLY CDE	MFG PART NO. OR TYPE	TOT QTY	REC QTY	USE CDE
A9	A/D CONVERTER Figure 5-5	288175			REF		
C1,C3, C4,C5	Cap, mica, 390 pf $\pm 5\%$, 500V	148437			4		
C2, C7	Cap, plstc, 0.47 uf $\pm 10\%$, 250V	184366			2		
C6,C16 C18, C19	Cap, mica, 33 pf $\pm 5\%$, 500V	160317			4		
C8	Cap, cer, 15 pf $\pm 10\%$, 500V	159947			1		
C9,C10	Cap, plstc, 0.047 uf $\pm 10\%$, 120V	260562			2		
C11 thru C15	Cap, cer, 0.01 uf $\pm 20\%$, 100V	149153			5		
C17	Cap, plstc, 0.047 uf $\pm 10\%$, 250V	162008			1		
C20	Cap, mica, 2 pf $\pm 10\%$, 500V	175208			1		L
C21	Cap, mica, 1000 pf $\pm 5\%$, 500V	148387			1		K
CR1, CR2, CR16	Diode, silicon, 150 mA, 125 piv	272252			3		M
CR1, CR2, CR16, CR19	Diode, silicon, 150 mA, 125 piv	272252			4		K
CR3, CR4, CR5, CR7 thru CR15	Diode, silicon, 150 mA	203323			12		
CR6	Diode, germanium, 80 mA, 100 piv	149187			1		M
CR6, CR20	Diode, germanium, 80 mA, 100 piv	149187			2		K
CR17	Diode, silicon, 75 mA, 90 piv	260554			1		
CR18	Diode, zener, 6.8V	187195			1		
P24	Connector, PCB to cable, 34 contact	295337			1		

REF DESIG OR ITEM NO.	DESCRIPTION	FLUKE STOCK NO.	MFG FED SPLY CDE	MFG PART NO. OR TYPE	TOT QTY	REC QTY	USE CDE
Q1, Q21, Q45	Tstr, silicon, NPN	218396			3		
Q2,Q3,2	Tstr, silicon, PNP (Q2, Deleted)	195974 195974			2 1		M K
Q3, Q6, Q19, Q22, Q23, Q24	Tstr, FET, N-channel	271924			6		
Q4	Tstr, FET, dual, N-channel	257501			1		
Q5,Q13 thru Q17, Q36	Tstr, FET, N-channel	288324			7		U
Q5,Q13 thru Q17, Q31, Q36	Tstr, FET, N-channel	288324			8		T
Q7,Q8, Q9	Tstr, FET, N-channel, Matched Set (must be replaced as a set)	274795			1		
Q10, Q11, Q29, Q30, Q33, Q34	Tstr, silicon, PNP	288761			6		I
Q30	Tstr, silicon, PNP	321398			1		J
Q10, Q11, Q29, Q33, Q34	Tstr, silicon, PNP	288761			5		J
Q12, Q18, Q25 thru Q28, Q31	Tstr, FET, N-channel	261388			7		U

REF DESIG OR ITEM NO.	DESCRIPTION	FLUKE STOCK NO.	MFG FED SPLY CDE	MFG PART NO. OR TYPE	TOT QTY	REC QTY	USE CDE
Q12, Q18, Q25 thru Q28	Tstr, FET, N-channel	261388			6		T
Q20	Tstr, FET, dual, N-channel	267963			1		
Q35	Tstr, silicon, NPN, dual, monolithic	295717			1		
Q37, Q39, Q41, Q43	Tstr, germanium, NPN	306126			4		
Q38, Q40, Q42, Q44	Tstr, germanium, PNP	306118			4		
R1, R4 R18	Res, comp, 4.7k $\pm 5\%$, $\frac{1}{4}w$	148072			3		M
R4	Res, comp, 4.7k $\pm 5\%$, $\frac{1}{4}w$	148072			1		K
R2, R3	Res, comp, 47k $\pm 5\%$, $\frac{1}{4}w$	148163			2		
R5, R34, R53, R62, R63, R80	Res, comp, 100k $\pm 5\%$, $\frac{1}{4}w$	148189			6		
R6, R36, R59, R64	Res, comp, 10k $\pm 5\%$, $\frac{1}{4}w$	148106			4		
R7, R13	Res, ww, 10k, Matched Set	291690			1		
R8,R9, R31	Res, met flm, 45.3k $\pm 1\%$, 1/8w	234971			3		
R10	Res, met flm, 49.9k $\pm 1\%$, 1/8w	268821			1		
R11	Res, comp, 68k $\pm 5\%$, $\frac{1}{4}w$	148171			1		
R12	Res, comp, 220 $\pm 5\%$, $\frac{1}{4}w$	147959			1		
R14, R17, R45	Res, var, cer met, 20 $\pm 20\%$, $\frac{1}{2}w$	261180			3		

REF DESIG OR ITEM NO.	DESCRIPTION	FLUKE STOCK NO.	MFG FED SPLY CDE	MFG PART NO. OR TYPE	TOT QTY	REC QTY	USE CDE
R15, R16 R44, R46 R47 R49 R51	Res, ww, 28.578k Res, 22, 50k Res, ww, 100k Res, ww, 200k Res, ww, 199.98k	285239			1		
	Matched Set						
R19, R22	Res, comp, 33k $\pm 5\%$, $\frac{1}{4}w$	148155			2		M
R19, R22	Res, met flm 33.2k .0, -5% , $\frac{1}{8}w$	334102			2		K
R20, R21	Res, comp, 22k $\pm 5\%$, $\frac{1}{4}w$	148130			2		M
R20, R21	Res, met flm 22.1k $\pm 5\%$, $\frac{1}{8}w$	229476			2		K
R23 R23,	Res, comp, 5.6k $\pm 5\%$, $\frac{1}{4}w$	148080			1		M
R18 R24,	Res, met flm, 4.99k 0.1%, $\frac{1}{8}w$	334110			2		K
R25, R35	Res, comp, 220k $\pm 5\%$, $\frac{1}{4}w$	160937			3		
R26	Res, comp, 82 $\pm 5\%$, $\frac{1}{4}w$	149484			1		
R27	Res, met flm, 21.5k $\pm 1\%$, $\frac{1}{8}w$	168278			1		
R28, R78	Res, comp, 27k $\pm 5\%$, $\frac{1}{4}w$	148148			2		
R29	Res, met flm, 22.1k $\pm 1\%$, $\frac{1}{8}w$	235234			1		
R30	Res, comp, 820k $\pm 5\%$, $\frac{1}{4}w$	220541			1		
R32, R79	Res, comp, 15k $\pm 5\%$, $\frac{1}{4}w$	148114			2		
R33	Res, comp, 1k $\pm 5\%$, $\frac{1}{4}w$	148023			1		
R37	Res, var, cer met, 10k $\pm 10\%$, 1w	285171			1		
R38, R39	Res, comp, 6.2M $\pm 5\%$, $\frac{1}{4}w$	221960			2		
R40, R41	Res, met flm, 750k $\pm 1\%$, $\frac{1}{8}w$	271361			2		
R42	Res, met flm, 1.5M $\pm 1\%$, $\frac{1}{4}w$	284976			1		
R43	Res, comp, 3M $\pm 5\%$, $\frac{1}{4}w$	221952			1		
R48	Res, var, cer met, 50 $\pm 10\%$, 1w	285122			1		
R50	Res, var, cer met, 100 $\pm 10\%$, 1w	285130			1		

REF DESIG OR ITEM NO.	DESCRIPTION	FLUKE STOCK NO.	MFG FED SPLY CDE	MFG PART NO. OR TYPE	TOT QTY	REC QTY	USE CDE
R52	Res, comp, (nominally 22 $\pm$ 5%, 1/4w)	147884			1		
R54	Res, comp, 18k $\pm$ 5%, 1/4w	148122			1		
R55	Res, ww, 1.022k $\pm$ 0.05%, 1/4w	288654			1		
R56	Res, var, cer met, 20 $\pm$ 20%, 1w	285114			1		
R57	Res, ww, 5k $\pm$ 0.05%, 1/4w	288647			1		
R58	Res, var, cer met, 200 $\pm$ 20%, 1/2w	284711			1		
R60	Res, comp, 150k $\pm$ 5%, 1/4w	182212			1		
R61	Res, var, cer met, 200 $\pm$ 10%, 1w	285148			1		
R65	Res, comp, 1M $\pm$ 5%, 1/4w	182204			1		G
R65	Res, comp, 510k $\pm$ 5%, 1/4w	275685			1		H
R66, R68, R70, R72	Res, met flm, 4.99k $\pm$ 1%, 1/8w	168252			4		
R67, R69, R71, R73	Res, met flm, 32.4k $\pm$ 1%, 1/8w	182956			4		
R74	Res, met flm, 6.04k $\pm$ 1%, 1/8w	285189			1		
R75	Res, met flm, 1k $\pm$ 1%, 1/8w	168229			1		
R76	Res, comp, 270k $\pm$ 5%, 1/4w	220061			1		
R77	Res, met flm, 16.9 $\pm$ 1%, 1/8w	281790			1		
R81	Res, comp, 4.7m $\pm$ 5%, 1/4w	220046			1		K
U1 thru U4	IC, operational amplifier	271502			4		

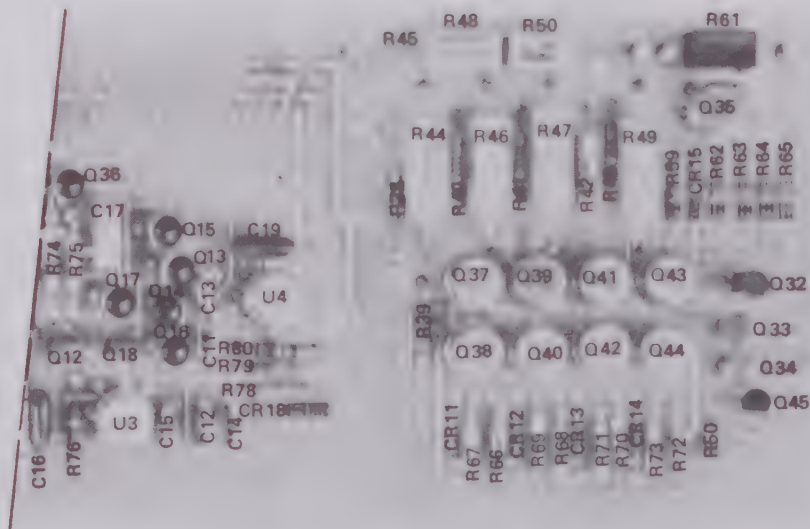


Figure 5-5. A TO D CONVERTOR PCB ASSEMBLY

REF DESIG OR ITEM NO.	DESCRIPTION	FLUKE STOCK NO.	MFG FED SPLY CDE	MFG PART NO. OR TYPE	TOT QTY	REC QTY	USE CDE
A10	ACTIVE FILTER Figure 5-6	290346			REF		
C1 thru C4	Cap, plstc, 0.47 uf $\pm 20\%$, 120V	190553			4		
C5, C8	Cap, mica, 33 pf $\pm 5\%$, 500V	160317			2		
C6, C7	Cap, mica, 150 pf $\pm 5\%$, 500V	148478			2		
CR1, CR2	Diode, silicon, 10 mA, 2 piv	180554			2		
CR3	Diode, silicon, 150 mA	203323			1		D
K1	Relay, reed switch	219097			2		
	Coil, relay	272070			1		
Q1	Tstr, silicon, NPN, Super beta dual monolithic	284075			1		
Q2	Tstr, silicon, NPN	218396			1		
Q3	Tstr, silicon, PNP	195974			1		
R1, R2, R4, R5	Res, met flm, 46.4k $\pm 1\%$, 1/8w	188375			4		
R3	Res, comp, 6.8k $\pm 5\%$, 1/4w	148098			1		
R6	Res, met flm, 140k $\pm 1\%$, 1/8w	289439			1		
R7	Res, comp, 100k $\pm 5\%$, 1/4w	148189			1		
R8	Res, met flm, 8.66k $\pm 1\%$, 1/8w	260364			1		
R9, R10	Res, met flm, 215k $\pm 1\%$, 1/8w	289470			2		
R11, R12	Res, factory selected value						
R13	Res, var, cer met, 5k $\pm 20\%$, 1/2w	267872			1		
R14	Res, met flm, 100k $\pm 1\%$, 1/8w	248807			1		
R15	Res, met flm, 2.49k $\pm 1\%$, 1/8w	226209			1		
R16	Res, met flm, 82.5k $\pm 1\%$, 1/8w	246223			1		
R17	Res, met flm, 2k $\pm 1\%$, 1/8w	235226			1		
R18	Res, met flm, 7.15k $\pm 1\%$, 1/8w	260356			1		
U1, U2	IC, operational amplifier	271502			2		

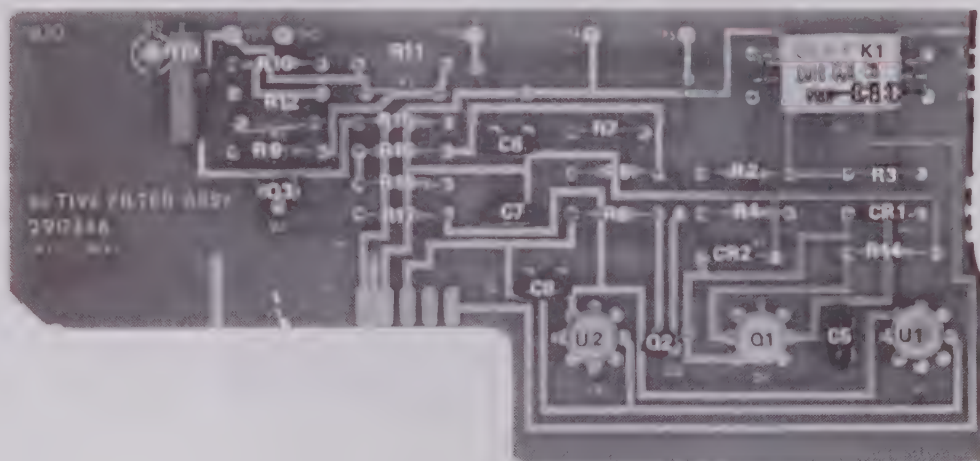


Figure 5-6. ACTIVE FILTER PCB ASSEMBLY

REF DESIG OR ITEM NO.	DESCRIPTION	FLUKE STOCK NO.	MFG FED SPLY CDE	MFG PART NO. OR TYPE	TOT QTY	REC QTY	USE CDE
A11	BUFFER Figure 5-7	288191			REF		
C1, C3	Cap, mica, 100 pf $\pm 5\%$, 500V	148494			2		
C2, C4	Cap, mica, 33 pf $\pm 5\%$, 500V	160317			2		
C5	Cap, mica, 270 pf $\pm 5\%$, 500V	148452			1		
C6, C7	Cap, cer, 0.05 uf $\pm 20\%$, 100V	149161			2		
C8	Cap, plstc, 0.1 uf $\pm 5\%$, 100V	167460			1		
C9, C10	Not Used						
C11	Cap, mica, 2200 pf $\pm 5\%$, 500V	148346			1		
CR1	Diode, silicon, 10 mA, 2 piv	180554			1		
CR2	Not Used						
CR3	Diode, zener, 6.8V	166199			1		
CR4 thru CR8	Diode, silicon, 200 mA, 25 piv	190272			5		
CR9 thru CR17	Diode, germanium, 80 mA, 100 piv	149187			9		
CR18 thru CR24	Diode, silicon, 150 mA	203323			7		
K1, K7	Relay, 4 PDT, 5V coil	272716			2		
K2	Relay, reed switch	284091			1		
	Coil, relay	272070			1		
K3	Relay, reed switch	284091			REF		
	Coil, relay	269019			4		
K4, K5, K6	Relay, reed switch	289850			3		
	Coil, relay	269019			REF		
Q1, Q8	Tstr, silicon, PNP	195974			2		
Q2	Tstr, germanium, PNP	148643			1		
Q3	Tstr, silicon, NPN	168716			1		

REF DESIG OR ITEM NO.	DESCRIPTION	FLUKE STOCK NO.	MFG FED SPLY CDE	MFG PART NO. OR TYPE	TOT QTY	REC QTY	USE CDE
Q4	Tstr, silicon, NPN, dual, monolithic	295717			1		
Q5	Tstr, silicon, NPN, Super beta dual monolithic 	284075			1		
Q6, Q7	Tstr, silicon, PNP, selected	280198			2		
Q9, Q10	Not Used						
Q11	Tstr, selected	321638			1		
R1	Res, comp, 1M $\pm 5\%$, $\frac{1}{4}w$	182204			1		
R2	Res, comp, 47k $\pm 5\%$, $\frac{1}{2}w$	150219			1		
R4	Not Used						
R3	Res, comp, 910k $\pm 5\%$, 2w	110171			1		
R5, R6 R7 R10	Res, ww, 4.45M Res, ww, 899.55k Res, ww, 99.95k } Matched Input Divider Set	284505			1		
R8	Res, var, cer met, 1k $\pm 20\%$, $\frac{1}{2}w$	267856			1		
R9	Res, var, cer met, 100 $\pm 20\%$, $\frac{1}{2}w$	267823			1		
R11	Res, met flm, 10k $\pm 1\%$, 1/8w	168260			1		
R12	Res, met flm, 13.7k $\pm 1\%$, 1/8w	236752			1		
R13	Res, met flm, 34k $\pm 1\%$, 1/8w	261602			1		
R14	Res, met flm, 2.61k $\pm 1\%$, 1/8w	289983			1		
R15	Res, met flm, 232 $\pm 5\%$, 1/8w	289975			1		
R16	Res, met flm, 84.5k $\pm 1\%$, 1/8w	229492			1		
R17	Res, var, cer met, 100k $\pm 20\%$, $\frac{1}{2}w$	268581			1		
R18, R19	Res, comp, 100M $\pm 10\%$, $\frac{1}{2}w$	190520			2		
R20, R33	Res, comp, 10k $\pm 5\%$, $\frac{1}{4}w$	148106			2		
R21	Res, comp, 270k $\pm 5\%$, $\frac{1}{4}w$	220061			1		
R22, R23, R25, R26	Res, met flm, factory selected value (may not be installed)						

REF DESIG OR ITEM NO.	DESCRIPTION	FLUKE STOCK NO.	MFG FED SPLY CDE	MFG PART NO. OR TYPE	TOT QTY	REC QTY	USE CDE
R24, R27	Res, met flm, 2M, Matched Set	290320			1		
R28	Res, var, cer met, 1k $\pm 10\%$, 1w	285155			1		R
	Res, var, cer met, 10k $\pm 10\%$, 1w	285171			1		S
R29	Res, met flm, 3.83M $\pm 1\%$, $\frac{1}{2}w$	289660			1		
R30, R31	Res, comp, 22k $\pm 5\%$, $\frac{1}{4}w$	148130			2		
R32	Res, comp, 470 $\pm 5\%$, $\frac{1}{4}w$	147983			1		
R34	Res, comp, 3.3k $\pm 5\%$, $\frac{1}{4}w$	148056			1		
R35 R37 R39	Res, ww, 90k Res, ww, 9k Res, ww 1k	289686		Matched Output Divider Set	1		
R36	Res, var, cer met, 200 $\pm 20\%$, $\frac{1}{2}w$						
R38	Res, var, cer met, 20 $\pm 20\%$, $\frac{1}{2}w$						
R40	Res, comp, 1 $\pm 5\%$, $\frac{1}{2}w$	218693			1		
R41	Res, met flm, 499k $\pm 1\%$, 1/8w	268813			1		
R42	Res, comp, 1k $\pm 5\%$, $\frac{1}{4}w$	148023			1		
R43, R44	Res, comp, 330 $\pm 5\%$, $\frac{1}{4}w$	147967			2		
U1	IC, operational amplifier 	284760			1		
U2	IC, operational amplifier	271502			1		
U3	IC, voltage follower	288365			1		
U4	IC, DTL, Quad 2-Input Nand Power Gate	288597			1		
	Socket, IC, U4	276527			1		
	Cover (not shown)	298893			1		
	 Replacement of this part requires factory recalibration. Return A11 buffer PCB only						

REF DESIG OR ITEM NO.	DESCRIPTION	FLUKE STOCK NO.	MFG FED SPLY CDE	MFG PART NO. OR TYPE	TOT QTY	REC QTY	USE CDE
A14	DISPLAY	288167			REF		
	Figure 5-8						
C1	Cap, cer, 0.05 uf $\pm 20\%$, 50V	149161			1		
C2	Cap, cer, 300 pf $\pm 10\%$, 500V	105734			1		P
C2, C100	Cap, cer, 1200 pf $\pm 10\%$, 500V	106732			2		Q
C3	Cap, elect, 20 uf $+50/-10\%$, 16V	241356			1		
C4	Cap, cer, 0.025 uf $\pm 20\%$, 50V	168435			1		
C5	Cap, cer, 0.005 uf $\pm 20\%$, 50V	175232			1		P
C5	Cap, cer, 2200 pf $\pm 10\%$, 500V	268425			1		Q
C6	Cap, cer, 0.01 uf $\pm 20\%$, 100V (on bottom side of PCB)	149153			1		P
C6, C103	Cap, cer, 0.01uf $\pm 20\%$, 100V	149153			2		Q
C101	Cap, cer, 500 pf $\pm 10\%$, 500V	105692			1		Q
C102	Cap, cer, 0.025 uf $\pm 20\%$, 50V	175232			1		Q
CR1, CR2, CR7, CR10, CR12, CR16, CR18, CR19, CR25 thru CR30, CR32	Diode, germanium, 80 mA, 100 piv	149187			15		P
CR1, CR2, CR7, CR10, CR12, CR16, CR18, CR19, CR25 thru CR30,	Diode, germanium, 80 mA, 100 piv	149187			16		Q

REF DESIG OR ITEM NO.	DESCRIPTION	FLUKE STOCK NO.	MFG FED SPLY CDE	MFG PART NO. OR TYPE	TOT QTY	REC QTY	USE CDE
CR32, CR100	Not used						
CR3, CR4, CR17, CR20 thru CR24							
CR5, CR6, CR8, CR9, CR11, CR13, thru CR15, CR31, CR33							
CR5, CR6, CR8, CR9, CR11, CR13, thru CR15, CR31, CR33, CR34							
DS1	Lamp, incandescent, 5V	272476			1		
J1,J10	Connector, femal, 12 contact	291898			2		
J2,J5, J7,J8, J11, J12, J13	Connector, femal, 24 contact	295352			7		
J3,J4, J9	Connector, femal, 24 contact with 6 removed	284240			3		

REF DESIG OR ITEM NO.	DESCRIPTION	FLUKE STOCK NO.	MFG FED SPLY CDE	MFG PART NO. OR TYPE	TOT QTY	REC QTY	USE CDE
J14	Connector, female, 18 contact	291906			1		
Q1, Q21	Not used						
Q2, Q5	Tstr, silicon, PNP	195974			2		
Q3, Q6, Q7, Q19 Q20, Q34, Q35, Q36	Tstr, silicon, NPN	218396			8		
Q4, Q8	Tstr, silicon, unijunction	268110			2		
Q9 thru Q18	Tstr, silicon, NPN	245480			10		
Q22 thru Q26	Tstr, silicon, NPN	218511			5		
Q27 thru Q31	Tstr, silicon, PNP	266619			5		
Q33, Q33	Tstr, FET, N-channel	288324			2		
Q37	Tstr, silicon, NPN	168708			1		
R1, R3, R60	Not used						
R2, R4	Res, comp, 82k $\pm 5\%$, $\frac{1}{4}w$	188458			2		
R5	Res, comp, 6.8k $\pm 5\%$, $\frac{1}{4}w$	148098			1		
R6, R11, R20, R25	Res, comp, 3.9k $\pm 5\%$, $\frac{1}{4}w$	148064			4		
R7, R58	Res, comp, 470 $\pm 5\%$, $\frac{1}{4}w$	147983			2		
R8, R18	Res, comp, 2.7k $\pm 5\%$, $\frac{1}{4}w$	170720			2		
R9, R63	Res, comp, 12k $\pm 5\%$, $\frac{1}{4}w$ (R63 on bottom side of PCB)	159731			2		P

REF DESIG OR ITEM NO.	DESCRIPTION	FLUKE STOCK NO.	MFG FED SPLY CDE	MFG PART NO. OR TYPE	TOT QTY	REC QTY	USE CDE
R9	Res, comp, 1.2k $\pm 5\%$, $\frac{1}{4}w$	190371			1		Q
R10	Res, comp, 1k $\pm 5\%$, $\frac{1}{4}w$	148023			1		P
R10	Res, comp, 510 $\pm 5\%$, $\frac{1}{4}w$	218032			1		Q
R12	Res, comp, 75k $\pm 5\%$, $\frac{1}{4}w$	220525			1		
R13, R30	Res, comp, 2.2k $\pm 5\%$, $\frac{1}{4}w$	148049			2		
R14, R57	Res, comp, 33k $\pm 5\%$, $\frac{1}{4}w$	148155			2		
R15	Res, comp, 27 $\pm 5\%$, $\frac{1}{4}w$	160812			1		
R16	Res, var, comp, 150k $\pm 20\%$, $\frac{1}{2}w$	256479			1		
R17	Res, comp, 1.8k $\pm 5\%$, $\frac{1}{4}w$	175042			1		
R19, R48 thru R54, R64	Res, comp, 10k $\pm 5\%$, $\frac{1}{4}w$ (R64 on bottom side of PCB)	148106			9		P
R19, R48 thru R54, R64, R65	Res, comp, 10k $\pm 5\%$, $\frac{1}{4}w$	148106			10		Q
R26, R27, R28	Res, comp, 1.2k $\pm 5\%$, $\frac{1}{4}w$	190371			3		
R29, R34 thru R38, R61	Res, comp, 8.2k $\pm 5\%$, $\frac{1}{4}w$	160796			7		
R31	Res, comp, 430 $\pm 5\%$, $\frac{1}{4}w$	203869			1		
R32	Res, comp, 330 $\pm 5\%$, $\frac{1}{4}w$	147967			1		
R33	Res, comp, 470k $\pm 5\%$, $\frac{1}{4}w$	188441			1		
R39	Res, comp, 820 $\pm 5\%$, $\frac{1}{4}w$	148015			1		N
R39	Res, comp, 430 $\pm 5\%$, $\frac{1}{4}w$	203869			2		O
R40	Res, comp, 22k $\pm 5\%$, $\frac{1}{4}w$	148130			1		M

REF DESIG OR ITEM NO.	DESCRIPTION	FLUKE STOCK NO.	MFG FED SPLY CDE	MFG PART NO. OR TYPE	TOT QTY	REC QTY	USE CDE
R40	Res, comp, 4.7k $\pm 5\%$, $\frac{1}{4}w$	148072			1		K
R41	Res, comp, 2.7k $\pm 5\%$, $\frac{1}{4}w$	170720			1		N
R41	Res, comp, 5.1k $\pm 5\%$, $\frac{1}{4}w$	193342			1		O
R43 thru R46, R55, R56, R62	Res, comp, 39 $\pm 5\%$, $\frac{1}{4}w$	193391			7		
R47	Res, comp, 3.3k $\pm 5\%$, $\frac{1}{4}w$	148056			1		
	Switch Assembly	298232			1		
	Switch section, S1 thru S7, RANGE	288688			1		
	Switch section, S8 thru S14, FUNCTION	288670			1		
	Flex circuit	207504			1		
U1	IC, TTL, Hex Inverter Buffer Driver	288605			1		
U2,U3	IC, TTL, dual J-K flip flop	268441			2		
U4	IC, Decoder Driver, DM/SN7441AN, NS8840N	267211			1		
V1	Tube, polarity indicator	272922			1		
V2 thru V7	Tube, neon readout	271494			6		
	Display, function assembly (lamp, P/N 272476 may be purchased separately)	291542			1		
	Socket, IC, 14 contact						
	Socket, IC, 16 contact	291534			3		

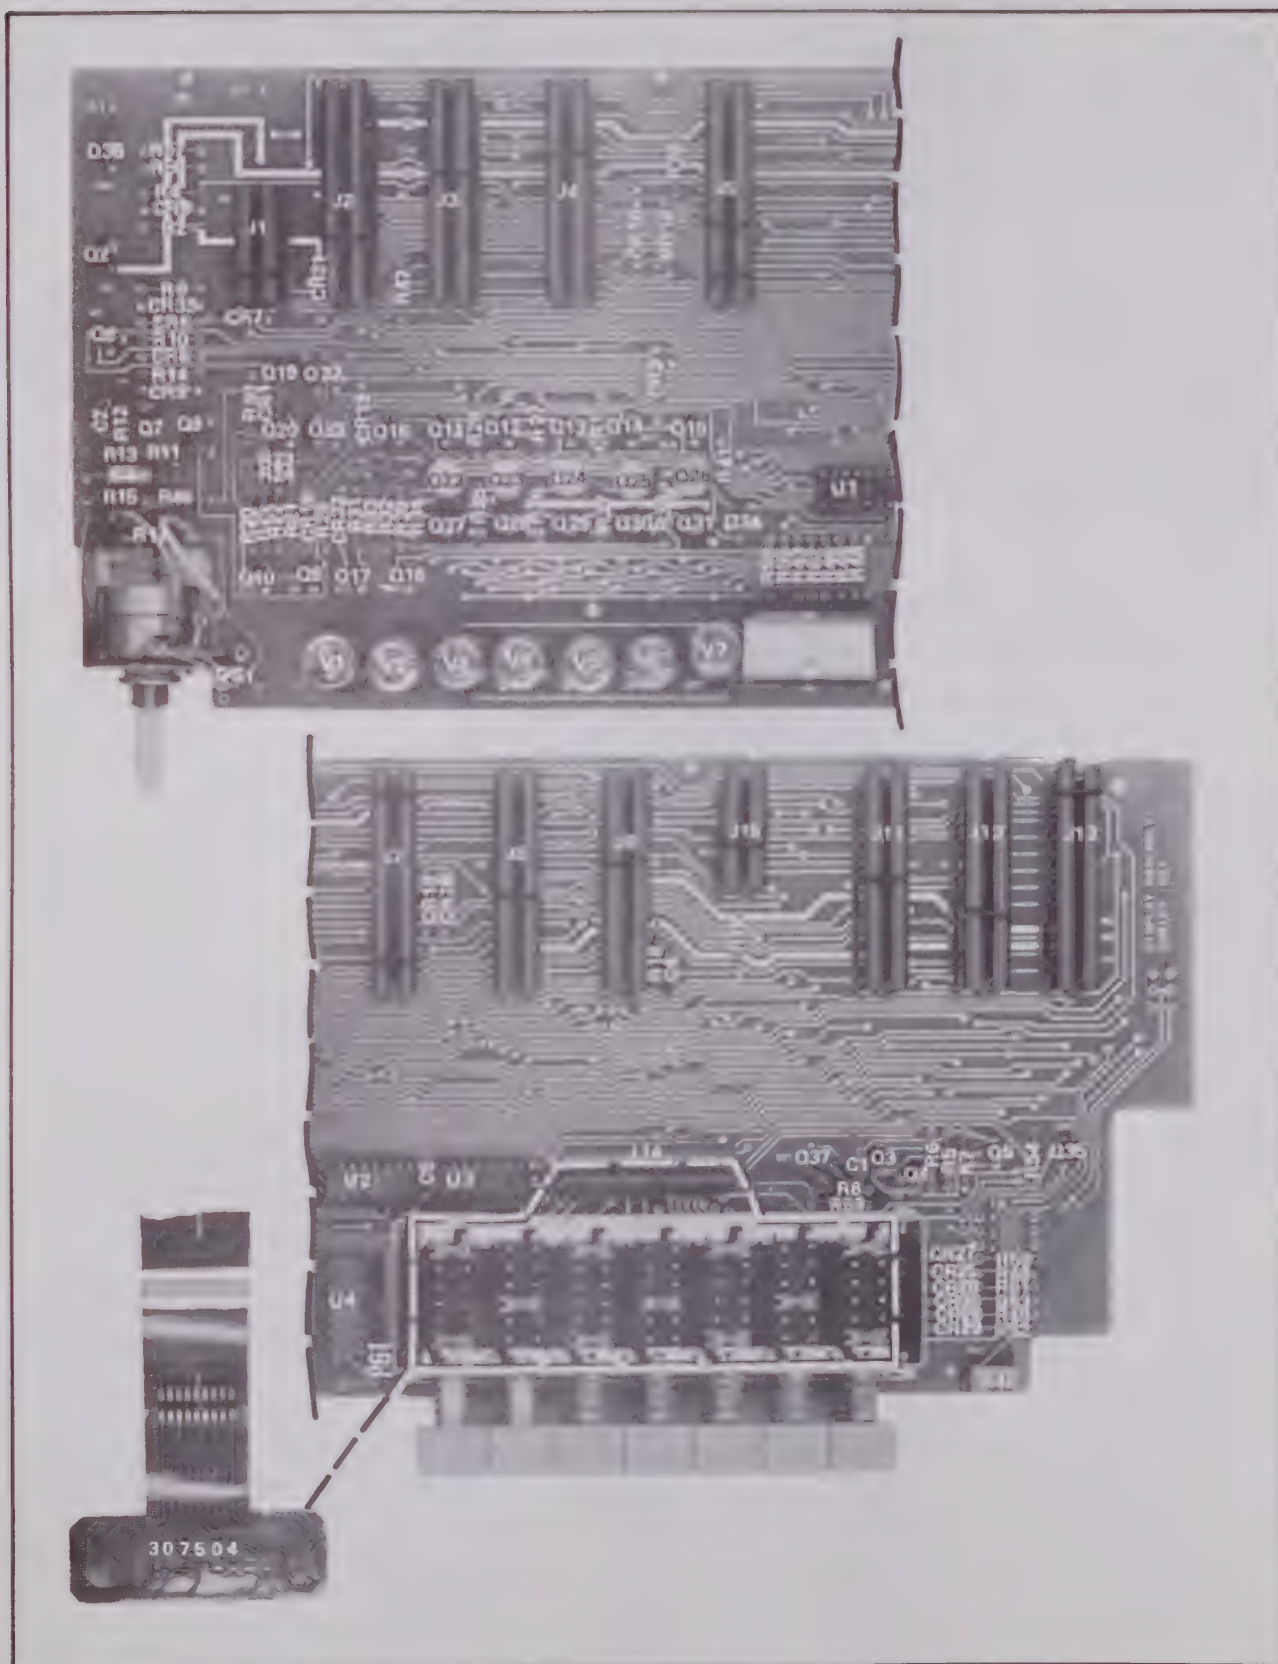


Figure 5-8. DISPLAY PCB ASSEMBLY

MANUFACTURERS' CROSS REFERENCE LIST

FLUKE STOCK NO.	MFR.	MFR. PART NO.	FLUKE STOCK NO.	MFR.	MFR. PART NO.
105668	56289	C023B501J103M	148114	01121	CB1535
105692	71590	2DDH60N501K	148122	01121	CB1835
105734	71590	BB60301KW7W	148130	01121	CB2235
105890	71590	BB60181KS3N	148148	01121	CB2735
106732	71590	CF122	148155	01121	CB3335
108308	01121	EB4751	148163	01121	CB4735
108951	01121	EB5115	148171	01121	CB6835
110171	01121	HB9145	148189	01121	CB1045
110726	07910	1N964B	148346	14655	CD19F222J
112383	05277	1N4822	148361	14655	CD19F152J
113316	07910	1N748	148387	14655	CD19F102J
116111	05277	1N4817	148429	14655	CD19F471J
144717	01121	EB5105	148437	14655	CD15F391J
147892	01121	CB4705	148452	14655	CD15F271J
147926	01121	CB1015	148478	14655	CD15F151J
147934	01121	CB1515	148494	14655	CD15F101J
147959	01121	CB2215	148528	14655	CD15F560J
147967	01121	CB3315	148536	14655	CD15E470J
147975	01121	CB3915	148551	14655	CD15E220J
147983	01121	CB4715	148569	14655	CD15C150J
147991	01121	CB5615	148619	01295	2N1303
148007	01121	CB6815	148643	01295	2N1307
148015	01121	CB8215	149153	56289	C023B101F103M
148023	01121	CB1025	149161	56289	55C23A1
148031	01121	CB1525	149187	93332	1N270
148049	01121	CB2225	149484	01121	CB8205
148056	01121	CB3325	150359	95303	2N3053
148064	01121	CB3925	152470	53021	D20F103F
148072	01121	CB4725	153056	56289	150D156X9020B2
148080	01121	CB5625	155192	91627	TYPE MFF 1/2
148098	01121	CB6825	159582	72928	C102K
148106	01121	CB1035	159731	01121	CB1235
			159947	00656	TYPE C1-1
			160226	05397	K2R2C20K
			160317	14655	CD15E330J
			160796	01121	CB8225
			160804	01121	CB2715

MANUFACTURERS' CROSS REFERENCE LIST

FLUKE STOCK NO.	MFR.	MFR. PART NO.	FLUKE STOCK NO.	MFR.	MFR. PART NO.
160812	01121	CB2705	182790	56289	150D684X9035A2
160937	01121	CB2245	182873	14655	CD19F562G
161810	03877	SG5658	182956	91637	TYPE MFF 1/8
161919	56289	196D105X0035	184366	73445	C280AE/A470K
161943	56289	196D475X0020	186296	73445	C426ARE125
161992	73445	C280AEA100K	187195	07910	CD36554
162008	73445	C280AEA47K	188375	91637	TYPE MFF 1/8
166199	07910	1N754	188441	01121	CB4745
167460	84411	TYPE 863UW	188458	01121	CB8235
168195	91637	TYPE MFF 1/8	188466	01121	CB3935
168229	91637	TYPE MFF 1/8	190249	89536	190249
168252	91637	TYPE MFF 1/8	190272	93332	1N456A
168260	91637	TYPE MFF 1/8	190371	01121	CB1225
168278	91637	TYPE MFF 1/8	190520	01121	EB1071
168435	56289	C128B101H253M	190553	84411	TYPE 863UW
168708	03508	2N3391	190728	24655	0938-9751
168716	07263	S19254	193318	01121	CB9125
168823	73445	C426ARF50	193334	01121	CB5135
170423	14655	CD15F221J	193342	01121	CB5125
170720	01121	CB2725	193391	01121	CB3905
170738	01121	CB5635	193441	01121	CB1845
175042	01121	CB1825	193458	01121	CB1245
175208	84171	DM15020K	194803	73445	C280AEA220K
175224	14655	CD15E120J	194944	01121	CB1065
175232	56289	C023B101E502M	195974	04713	2N3906
176644	14655	CD19F362G	198390	01121	CB2255
177998	14655	CD15E270J	200030	91637	RN55D1820F
178616	73445	C437ARG250	203323	03508	DHD1105
180406	07910	1N758	203869	01121	CB4315
180463	07910	1N968B	208975	14655	CD19F472J
180505	18927	1N276	216986	14655	CD15C080K
180554	07910	CD12599	218081	04713	MPS6520
182204	01121	CB1055	218206	72982	530-000
182212	01121	CB1545	218396	04713	2N3904

MANUFACTURERS' CROSS REFERENCE LIST

FLUKE STOCK NO.	MFR.	MFR. PART NO.	FLUKE STOCK NO.	MFR.	MFR. PART NO.
218511	95303	60994	237297	91637	TYPE MFF 1/8
218693	01121	EB1065	240937	89536	240937
219097	15898	765972	241091	91637	TYPE MFF 1/8
220061	01121	CB2735	241356	73445	C426ARE20
220525	01121	CB7535	241471	91637	TYPE MFF 1/8
220541	01121	CB8245	241497	91637	TYPE MFF 1/8
221580	01121	CB1135	245480	07263	S24496
221606	01121	CB1635	246066	04713	EL131
221614	01121	CB2035	246223	91637	TYPE MFF 1/8
221903	01121	CB6215	246611	07910	1N961B
221911	01121	CB6225	248807	91637	TYPE MFF 1/8
221937	01121	CB7545	248906	95303	CA3046
221952	01121	CB3055	249052	07910	1N963B
221960	01121	CB6255	249284	89536	249284
225599	07263	S22650	256479	71450	TYPE 45
226134	14655	CD15F151F500	257501	17856	DN423
226209	91637	TYPE MFF 1/8	260356	91637	TYPE MFF 1/8
226274	82389	46256LFE	260364	91637	TYPE MFF 1/8
226316	00656	TYPE MFF C1-1	260547	91637	TYPE MFF 1/8
229146	91637	TYPE MFF 1/8	260554	07910	CD55105
229476	91637	TYPE MFF 1/8	260562	84411	863UW47391
229484	91637	TYPE MFF 1/8	260695	07910	1N754A
229492	91637	TYPE MFF 1/8	261180	71450	190PC200B
229898	04713	MPS6522	261370	22767	S1330
229930	91293	JMC2951	261388	04713	SPF179
234484	73445	C280AEA22K	261602	91637	TYPE MFF 1/8
234492	73445	C280AEA33K	261651	91637	TYPE MFF 1/8
234682	01121	CB3045	261842	01121	CB6205
234708	91637	TYPE MFF 1/8	261883	91637	TYPE MFF 1/8
234971	91637	TYPE MFF 1/8	266312	04713	MC862P
235266	91637	TYPE MFF 1/8	266619	07263	2N4888
235234	91637	TYPE MFF 1/8	267120	73445	C280AE/A27K
235309	91637	TYPE MFF 1/8	267153	04713	MC839P
235333	91637	TYPE MFF 1/8	267211	89536	267211
236752	91637	TYPE MFF 1/8			
236802	91637	TYPE MFF 1/8			
236901	73445	C437ARF160			
236935	73445	C426ARD200			
237206	91637	TYPE MFF 1/8			

MANUFACTURERS' CROSS REFERENCE LIST

FLUKE STOCK NO.	MFR.	MFR. PART NO.	FLUKE STOCK NO.	MFR.	MFR. PART NO.
267385	91637	TYPE MMF 1/8			
267823	71450	190PC200B	272138	12040	DM8570
267856	71450	190PC102B	272252	07263	FD333
267872	71450	190PC502B	272476	71744	TYPE T1
267880	71450	190PC103B	272716	77342	TYPE R40
267963	17856	DN503	272732	73445	C437ARD1600
268011	AMI	T-1483	272922	83594	B585-6ST
268110	03508	2N6027	273151	74970	273-1-2
268367	04713	MC836P	274795	89536	274795
268375	04713	MC846P	275321	89536	275321
268383	01295	SN15832N	275362	89536	275362
268441	18324	C4312A	275552	32767	820-65
268540	18324	C4319A	275560	32767	820-45
268557	18324	C4321A	275578	32767	820-55
268581	71450	190PC104B	275792	56289	39D805G350GE4
268789	91637	TYPE MFF 1/8	276527	23880	TSA-2900-14W
268797	91637	TYPE MMF 1/8	276535	23880	TSA-2900-16W
268813	91637	TYPE MFF 1/8	276691	11236	360T105A
268821	91637	TYPE MFF 1/8	277657	89536	277657
268904	84411	TYPE X663F	277665	89536	277665
269019	71707	U-6-P	277905	89536	277905
269076	95303	2N4037	277913	89536	277913
269092	89536	269092	278309	89536	278309
271320	56289	150D335X5020B2	280198	89536	280198
271361	91637	TYPE MFF 1/8	281790	91637	TYPE MFF 1/8
271403	54294	TYPE SP22	281865	12615	SL-841-777
271411	54294	TYPE VA32	282145	56289	HVD3-47
271478	81741	TYPE 23-021	283697	91637	TYPE MFF 1/8
271494	83594	B5853ST	284075	11726	QD200-78
271502	12040	LM301A	284091	12617	TYPE MRR5
271908	91637	TYPE MFF 1/8	284174	70903	KHS-7041
271924	07910	CFE13041	284240	00779	TYPE 583650
272070	71707	UD-6-P	284505	89536	284505
272096	91637	TYPE MFF 1/8	284711	71450	190PC201B
			284760	12040	LM308H

MANUFACTURERS' CROSS REFERENCE LIST					
FLUKE STOCK NO.	MFR.	MFR. PART NO.	FLUKE STOCK NO.	MFR.	MFR. PART NO.
284885	84411	863UW33351	288563	91637	TYPE MFF 1/8
284968	75042	TYPE MEH	288597	04713	MC858P
284976	91637	TYPE MFF 1/4	288605	01295	SN7416P
285031	75915	279.015	288639	91637	TYPE MFF 1/8
285106	07910	CRE3021	288647	89536	288647
285114	71450	360S-200B	288654	89536	288654
285122	71450	360S-500A	288670	89536	288670
285130	71450	360S-101A	288688	89536	288688
285148	71450	360S201A	288761	49956	RS2048
285155	71450	360S-102A	288803	01295	SN158097N
285163	71450	360S-202A	288811	01537	MC856P
285171	71450	360S-103A	288837	01295	SN74100N
285189	91637	TYPE MFF 1/8	288845	01295	SN7402N
285213	71450	190PC253B	288852	04713	MC8312P
285239	89536	285239	288928	12040	LM308AH
285361	89536	285361	289066	91637	TYPE MFF 1/8
288043	89536	288043	289439	91637	TYPE MFF 1/8
288159	89536	288159	289470	91637	TYPE MFF 1/8
288167	89536	288167	289637	72982	538-006D-9-35
288175	89536	288175	289660	00327	TYPE M12
288183	89536	288183	289686	89536	289686
288191	89536	288191	289850	12617	TYPE MRR2
288209	89536	288209	289975	91637	TYPE MFF 1/8
288217	89536	288217	289983	91637	TYPE MFF 1/8
288225	89536	288225	290130	89536	290130
288233	89536	288233	290148	89536	290148
288308	71450	360S-104A	290155	89536	290155
288324	15818	U2412	290163	89536	290163
288365	12040	LM310H	290247	89536	290247
288381	95303	40372	290262	89536	290262
288480	91637	TYPE MFF 1/8	290270	89536	290270
288498	91637	TYPE MFF 1/8	290296	89536	290296
288555	91637	TYPE MFF 1/8			

MANUFACTURERS' CROSS REFERENCE LIST

FLUKE STOCK NO.	MFR.	MFR. PART NO.	FLUKE STOCK NO.	MFR.	MFR. PART NO.
290304	89536	290304	298893	89536	298893
290312	89536	290312	298992	89536	298992
290320	89536	290320	299610	89536	299610
290346	89536	290346	301382	89536	301382
290650	89536	290650	301390	89536	301390
291120	71450	360S501A	303412	89536	303412
291294	91637	TYPE MFF 1/8	303461	89536	303461
291526	89536	291526	306118	01295	GA3938A
291534	00779	583529	306126	01295	GA3937A
291542	00779	583527	307298	89536	307298
291690	89536	291690	307504	89536	307504
291898	00779	583650-2	309633	77342	TYPE R40
291906	00779	583650-3	309849	72982	8131-050-651-224M
292193	89536	292193	311746	89536	311746
292201	89536	292201	321398	89536	321398
292888	89536	292888	329912	12040	LM318H
292896	89536	292896	334722	71450	360S105A
292904	89536	292904	339309	89536	339309
292946	71785	133-59-02-011	340133	91637	TYPE MFF ¼
292953	01537	MC7400P	340158	91637	TYPE MFF ¼
292979	01295	SN7404N	340166	91637	TYPE MFF 1/8
295121	89536	295121	340208	91637	TYPE MFF 1/8
295196	56289	39D718G010JP4	340216	91637	TYPE MFF 1/8
295337	28213	SF3402	340224	91637	TYPE MFF 1/8
295352	00779	583650-9	340232	91637	TYPE MFF 1/8
295535	89536	295535	340240	91637	TYPE MFF 1/8
295717	11726	QD101-78E	340257	91637	TYPE MFF 1/8
296582	75915	281005	340265	03888	TYPE PME 75
297713	89536	297713	340273	95275	VY10CA2R2CA
297762	89536	297762			
297903	89536	297903			
298232	89536	298232			
298554	89536	298554			

MANUFACTURERS' CROSS REFERENCE LIST					
FLUKE STOCK NO.	MFR.	MFR. PART NO.	FLUKE STOCK NO.	MFR.	MFR. PART NO.
340315	91637	TYPE MFF 1/8			
340323	91637	TYPE MFF ¼			
340745	95275	VY10CA2R7CA			
342873	73445	C280AEA10K			
342881	73445	C280AEA6K8			
344283	95275	VY10CA270JA			
347963	80294	3329H-J81-3R0			

Section 6

Option & Accessory Information

6-1. INTRODUCTION

6-2. This section contains information describing the options and accessories usable with this instrument.

6-3. OPTIONS

6-4. Each of the options usable with this instrument are described under headings that list the option name and number. The descriptions give detailed field installation, opera-

ting, and maintenance data for each option as well as a complete list of replaceable parts.

6-5. ACCESSORIES

6-6. Accessories usable with this instrument are described under headings that list the accessory name and number.

6-7. A listing of included options and accessories is given in the contents at the front of this manual.

Option - 01

AC Converter

6-1. INTRODUCTION

6-2. The A13 AC Converter (Drawing No. 8400A-1007) when used in conjunction with the 8400A DVM provides an ac voltage measurement capability through four ranges of 1, 10, 100, and 1000. The converter rectifies ac input voltage to dc and applies the dc to the A9 A-to-D Converter for measurement in exactly the same manner as described in the Theory of Operation for measurement of dc voltage.

6-3. SPECIFICATIONS

6-4. AC Converter specifications are given in Section 1, Introduction and Specifications.

6-5. INSTALLATION

6-6. Use the following procedure to install the AC Converter Option in the 8400A DVM.

- a. With the DVM disconnected from the power source, remove the top dust and chassis guard covers. On the A14 Display Motherboard in the instrument, determine that connector J13 is clear of obstructions and that alignment key is inserted between pin pairs J13-23, -24 and J13-21, -22. See Drawing No. 8400-1002, Sheet 1 of 2. Locate terminal block No. 1 terminals P2TF and P2TR and connect the red and black wires from the AC Converter board to these terminals, respectively.
- b. Check that shield on AC Converter is securely attached to board and align board vertically with plastic guide slots on inner vertical faces of guard chassis. Align rubber grommet with slot in front

guard chassis and insert. Slide converter board downward to fully engage board card edge connector with J13 connector on Motherboard.

- c. Attach guard and instrument dust cover, connect ac power, and perform receiving inspection test of converter as described in paragraph 6-22, Performance Test.

6-7. OPERATING INSTRUCTIONS

6-8. Operation of the DVM with the A13 AC Converter Option 8400-01 installed is covered in Section 2, Operating Instructions.

6-9. THEORY OF OPERATION

6-10. General

6-11. The A13 AC Converter consists of two basic parts as shown in Figure 6-1: an operational rectifier and a dc difference amplifier integrator. The operational rectifier consists of an inverting, trans-conductance amplifier and load resistor with negative feedback arranged to provide a loop gain of about 5×10^3 at midband. The feedback is changed with reed switches for range purposes. The input resistor is 1.11 megohms and this value provides 1.11 megohm input impedance at the DVM input jacks. A symmetrical half-wave rectifier placed between the amplifier and load resistor develops equal positive and negative dc voltages proportional to the amplifier output current. At full scale, this current is near two milliamps. The two output waveforms are shown in Figure 6-2.

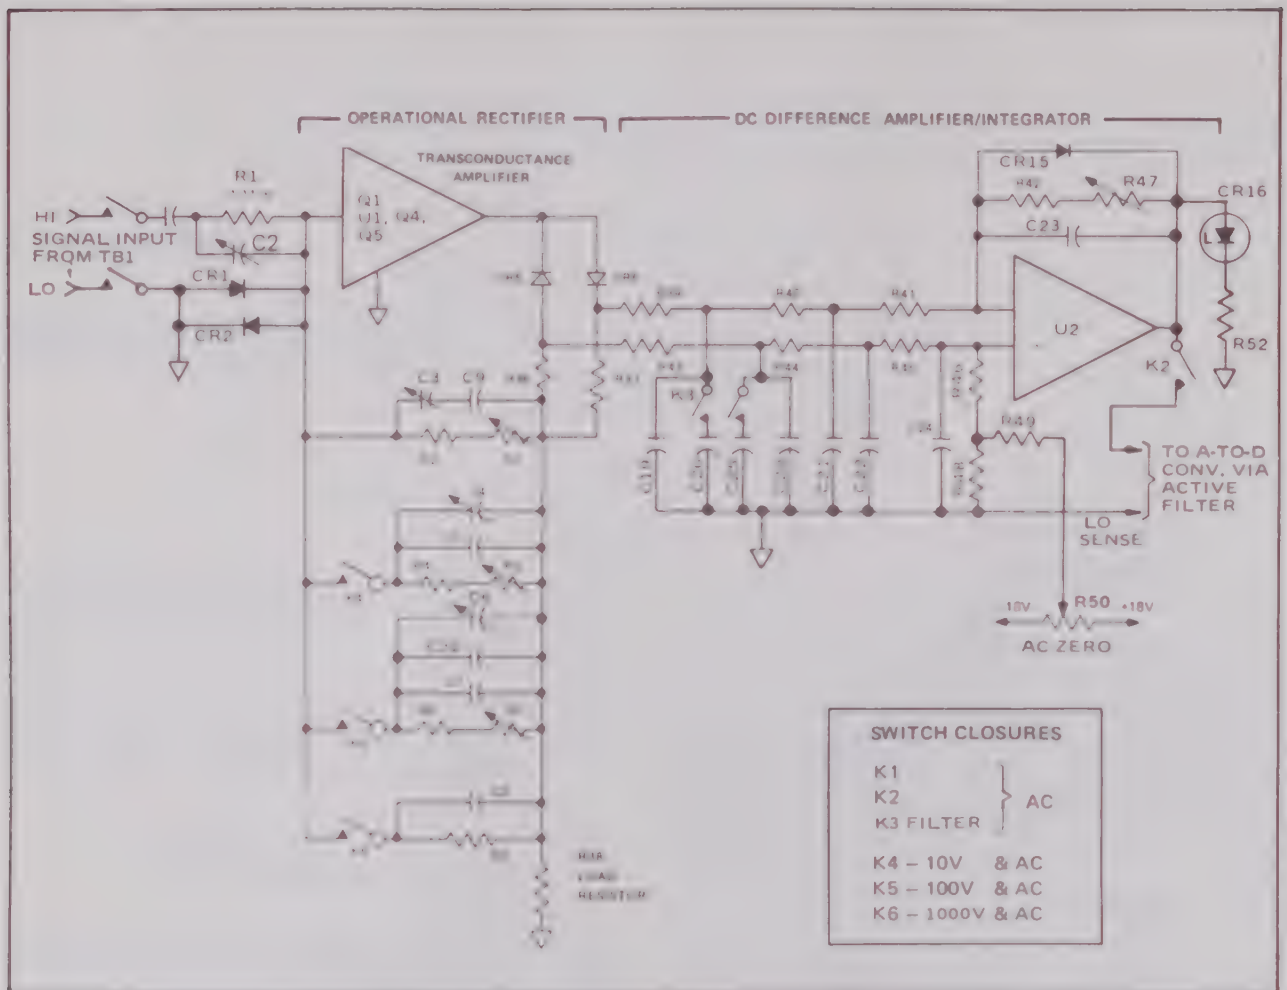


Figure 6-1. CIRCUIT DIAGRAM AC CONVERTER

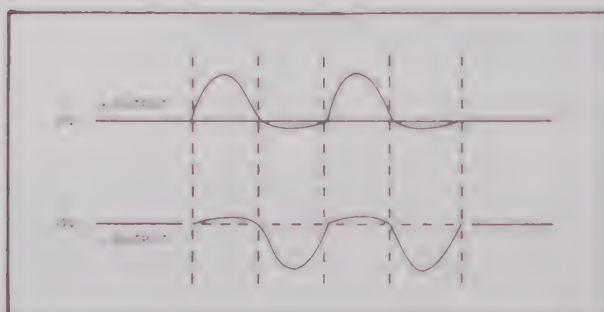


Figure 6-2. RECTIFIER OUTPUT WAVEFORMS

6-12. The dc difference amplifier/integrator filters the output wave forms of Figure 6-2 and amplifies the difference between them by a factor of 3.33333 etc. for measurement by the A-to-D Converter. A minimum three sections of filtering are provided at all times. Additional filtering is available by depressing the FILT button on the front panel to further reduce ripple for low frequency inputs.

NOTE!

Depressing the FILT button inserts the A10 Active Filter assembly into the signal ratio. This reduces ripple with a corresponding sacrifice in settling time. See Section 1 for detailed specifications.

6-13. Circuit Description

6-14. OPERATIONAL RECTIFIER. Input FET Q1 functions as a source follower, while transistor Q2 provides a low impedance guard voltage which is used to bootstrap most of the capacity that otherwise would appear between the FET gate and circuit common. The first two differential pairs are in dual in-line package U1. Together with Q4 and Q5, they develop the required gain. Transistors Q3 and Q6 function as current sources, with values such that clip-

ping due to overload is symmetrical. Changes in capacitor charges are small and amplifier recovery time is minimized. Transistor Q7 compensates for capacitance losses in the diodes.

6-15. DC-DIFFERENCE AMPLIFIER/INTEGRATOR. The filter network, which provides the input to the amplifier/integrator, consists of resistors R39, R40, R41, R43, R44, R45 and capacitors C19, C20, C21, C22, C25 and C26. Capacitors C19, C21, C23 and C26 form matched pairs with capacitors C20, C22, C24, and C25, respectively, to maintain good common-mode rejection. Gain for the dc amplifier is provided by monolithic operational amplifier U2, thereby providing a total loop gain at dc of about 5×10^5 .

6-16. RANGE AND FUNCTION CONTROL. The converter input and output relays, K1 and K2, are operated from the VAC control line. The range relays, K4 through K6, are operated by driver circuitry consisting of NAND gates U4A, C, D and associated components. These range control gates accept the buffered outputs of the range counter on the A14 Display board. U3B and U4B deliver the up and down range stop commands, for VAC function, to A2 Range Delay board. The NAND gates U3A and U3C deliver the set and reset commands to the range counter, on A14 Display board, for prevention of a disallowed range in the VAC function.

6-17. MAINTENANCE

6-18. Introduction

6-19. This section contains maintenance information specifically intended for the AC Converter. Factory service information and general instructions regarding instrument access and cleaning are located in Section 4 of the Manual.

6-20. Test Equipment

6-21. The following equipment is recommended for testing, troubleshooting, and calibrating the AC Converter. If the recommended equipment is not available, equivalent or better instruments may be substituted.

EQUIPMENT NOMENCLATURE	RECOMMENDED EQUIPMENT
AC Voltage Source	HP Model 745A AC Calibrator with companion 1000 volt amplifier.
Multimeter	Fluke Model 8100A Digital Multimeter
Oscilloscope	Tektronix Model 547
Oscilloscope Plug-In	Tektronix Model IA1

6-22. Performance Test

6-23. The performance test in this section compares the AC Converter performance to the accuracy specifications in Section 1 of the manual to determine if the converter is in calibration. Known ac voltages are applied to the DVM input terminals on each of the four ranges. The performance test should be conducted before any instrument maintenance or calibration is attempted. The test is also suited to receiving inspection of new converters. The performance test should be conducted under the following environmental conditions after 1 hour warm up: ambient temperature $23^{\circ}\text{C} \pm 2^{\circ}\text{C}$, relative humidity less than 70%. An instrument that fails the performance test will require corrective maintenance or calibration. In case of difficulty, analysis of the test results with reference to the troubleshooting section, should help to locate the trouble.

NOTE!

Permissible tolerances for ac voltage measurements are derived from the 90-day instrument specifications contained in Section 1 of the manual.

6-24. **AC VOLTAGE TEST.** In the following procedure, 10 kHz voltages are applied to the instrument at 100% of full-scale on the 1, 10, and 100 volt ranges and at 0.1% and 100% of full-scale on the 1000 volt range.

- Set the DVM controls as follows:

FUNCTION RANGE	VAC Manually selected, as required.
-------------------	--

- b. Apply each of the 10 kHz test signals shown in Figure 6-3 to the INPUT terminals of the DVM. The readout should be as indicated.

INPUT (VAC)	RANGE	READOUT LIMITS
1	1	.99945 to 1.00055
10	10	9.9945 to 10.0055
100	100	99.945 to 100.055
1	1000	000.95 to 001.05
1000	1000	999.00 to 1001.00

Figure 6-3. AC VOLTAGE TEST REQUIREMENTS

6-25. Calibration

The AC Converter should be calibrated every 90 days, or whenever repairs have been made to circuitry. Calibration of the converter should be performed at an ambient room temperature of $23^{\circ}\text{C} \pm 5^{\circ}\text{C}$. Relative humidity should be less than 70%. Consult paragraph 6-20 for recommended test equipment.

6-26. PRELIMINARY OPERATIONS

- Remove the upper dust cover retaining screws, but leave the dust cover in place on the instrument.
- Set the rear panel 115/230 volts slide switch to the 115 volt position and connect the line cord to an autotransformer set to 120 volts ac.
- Turn on and allow the instrument to operate for one hour.

6-27. AC CONVERTER ALIGNMENT

- Set the DVM controls as follows:

FUNCTION	VAC
RANGE	1000
SAMPLE RATE	Fully clockwise
- Connect the GUARD terminal to the LO input terminal using the shorting link provided.

- Connect a shorting jumper between the INPUT terminals.
- Adjust AC zero for 000.00 on the readout.
- Rotate the .001V 50 kHz adjustment (A13 C18) slowly in a CW direction. Note that one digit will be displayed longer than the others. When this "long duration digit" changes to a new number STOP; back the adjustment off so that the "long duration digit" just remains steady on the readout.
- Readjust AC zero for 000.00 on the readout.
- Remove the short between the INPUT terminals.
- Perform the checks and adjustments contained in Figure 6-4.

6-28. Calibration of the AC Converter is now complete.

6-29. Troubleshooting

6-30. This section contains information selected to aid in troubleshooting the AC Converter. Before attempting to troubleshoot the unit, however, it should be verified that the trouble is actually in the converter and is not caused by faulty external equipment or improper control settings. For this reason, the performance test (paragraph 6-22) is suggested as a first step in troubleshooting. The performance test may also help to localize trouble to a particular section of the instrument. If the performance test fails to localize the trouble, the following information may be helpful.

6-31. POWER SUPPLY VOLTAGE CHECK

6-32. In this test, each of the supply voltages for the AC Converter is checked at the pin connectors. This test verifies only presence of voltages; a detailed check of the DVM power supply voltages is given in Section 4.

- Connect the oscilloscope common to TP2 of the converter. Use the internal dc oscilloscope trigger. Set the scope controls for dc voltage measurement, and check the following voltages:

Connector Pin No.	Required Voltage
21	-18 volts
19	+18 volts

6-33. COMMAND VOLTAGE CHECK

6-34. The presence of proper command voltages is checked in the following test:

- a. Connect the oscilloscope common to the converter as indicated in the preceding test.
- b. Perform each of the connector pin voltage checks given in Figure 6-5. The voltages should be as indicated.

6-35. RELAY CHECKS

The truth table (Figure 6-6) will help locate defective relays or associated drive circuits. Assuming there are no errors in the command voltage check, if the voltage across the coil does not appear as indicated on the truth

STEP	INPUT		RANGE	ADJUSTMENT	TOLERANCE (± DIGITS)
	FREQ	VOLTS			
1	500 Hz	.001	1	Check Only	3
2	50 kHz	.001	1	.001V 50 kHz (A13C18)	Same reading as Step 1
3	500 Hz	500.00	1000	500V 1 kHz (A13R47)	
4	30 kHz	500.00	1000	500V 30 kHz (A13C2)	
5	500 Hz	1.0000	1	1V 500 Hz (A13R3)	5
6	50 kHz	1.0000	1	1V 50 kHz (A13C3)	5
7	100 kHz	1.0000	1	Check Only	200
8	20 kHz	1.0000	1	Check Only	20
9	50 Hz	1.0000	1	Check Only	30
10	500 Hz	10.0000	10	10V 500 Hz (A13R5)	5
11	50 kHz	10.0000	10	10V 50 kHz (A13C4)	5
12	100 kHz	10.0000	10	Check Only	200
13	1 kHz	100.000	100	100V 500 Hz (A13R7)	5
14	50 kHz	100.000	100	100V 50 kHz (A13C6)	5
15	20 kHz	100.000	100	Check Only	20
16	10 kHz	1000.00	1000	Check Only (wait 30 sec.)	50

Figure 6-4. AC CONVERTER RANGE CALIBRATION

PIN NO.	FUNCTION					POSSIBLE TROUBLE
	VAC	VAC	VAC	VAC	ANY EXCEPT VAC	
	RANGE					
	1V	10V	100V	1000V	ANY	
18	0	1	1	0	0	1. Improper connections between con- verter board and main frame, e.g., mis- alignment of connector pins. 2. Faulty function switch. 3. Defect in range counter on A14 Display PCB. 4. Defective range switch. 5. Short in relay gate circuits on AC option PCB. 6. Short between control lines on AC option board.
2	1	0	0	0	0	
8	1	1	1	1	0	
4	0	1	0	1	0	
3	1	0	0	1	0	
6	0	1	1	1	0	
16	1	0	1	0	0	
Legend: Logical 1 = >3.0V Logical 0 = <0.6V						

Figure 6-5. AC CONVERTER FUNCTION COMMAND CHECK

CONVERTER RELAYS	FUNCTION					POSSIBLE TROUBLE
	VAC	VAC	VAC	VAC	ANY EXCEPT VAC	
	RANGE					
	1V	10V	100V	1000V	ANY	
K1	1	1	1	1	0	1. Improper voltages on connector pins, 18, 2, 8, 4, 3, 6, 16 as shown in Figure 6-5. 2. Defective relay. 3. Defective relay gate circuits.
K2	1	1	1	1	0	
K3	1	1	1	1	0	
K4	0	1	0	0	0	
K5	0	0	1	0	0	
K6	0	0	0	1	0	
Legend: Logical 1 = >4.0V Logical 0 = <0.6V						

Figure 6-6. AC CONVERTER RELAY TRUTH TABLE.

table, the relay drive circuit is at fault. If the coil voltage is correct but the relay fails to respond, then the relay is defective. Neither side of K4, K5, or K6 is connected to the circuit common.

6-36. SEVERE CONVERTER MALFUNCTIONS

a. Symptom: Full-scale output with shorted input.

Procedure: If dc voltage at TP1 and ac voltage on TP2 are zero, then troubleshoot converter output difference amplifier/integrator, and associated circuits.

If the dc voltage on TP1 is greater than $\pm 1V$ (normal is less than 10 mV) check for defective Q1 through Q6, U1, C11, C21 or associated circuits.

If ac voltage is present on TP2, check for open or shorted feedback circuit or defective component in amplifier causing oscillation.

b. Symptom: Zero output with input applied.

Procedure: If ac voltage on TP2 is zero, check for open or short in ac circuit between input and Q1.

If ac voltage does appear on TP2 (full scale is approximately 0.25V rms) check K3 or troubleshoot output difference amplifier/integrator.

c. Symptom: Range of operation does not correspond to range selected.

Procedure: Make command voltage and relay checks, Figures 6-5 and 6-6.

6-37. LIST OF REPLACEABLE PARTS

6-38. For column entry explanations, part ordering information and basic instrument configuration Use Codes and Serial Number Effectivity, see Section 5, paragraphs 5-1 through 5-10. See paragraph 6-39, this option subsection, for additional Use Codes and Serial Number Effectivity List assigned to this printed circuit assembly option.

REF DESIG OR ITEM NO.	DESCRIPTION	FLUKE STOCK NO.	MFG FED SPLY CDE	MFG PART NO. OR TYPE	TOT QTY	REC QTY	USE CDE
A13	AC CONVERTER —01 Option Figure 6-7				REF		
C1	Cap, plstc, 0.22 uf $\pm 20\%$, 1200V	268904			1		
C2	Cap, var, teflon, 0.25 — 1.5 pf, 2 kV	273151			1		
C3, C4	Cap, var, air, 0.8 — 10 pf, 250V	229930			2		
C5	Cap, mica, 12 pf $\pm 5\%$, 500V	175224			1		
C6, C18	Cap, var, cer 9 — 35 pf, 350V	289637			2		
C7	Cap, mica, 150 pf $\pm 1\%$, 500V	226134			1		
C8	Cap, mica, 4700 pf $\pm 5\%$, 500V	208975			1		
C9	Cap, cer, 3 pf $\pm 10\%$, 500V	226316			1		
C10, C14	Cap, Ta, 4.7 uf $\pm 20\%$, 20V	161943			2		
C11	Cap, elect, 150 uf $+50/-10\%$, 16V	186296			1		
C12, C13	Cap, cer, 500 pf $\pm 10\%$, 500V	105692			2		
C15	Cap, elect, 47 uf $+50/-10\%$, 25V	168823			1		
C16, C17	Cap, cer, 0.01 uf $\pm 20\%$, 100V	149153			2		
C19, C20	Cap, plstc, 0.068 uf, Matched Set	290148			1		
C21, C22	Cap, plstc, 0.12 uf, Matched Set	290130			1		
C23, C24	Cap, plstc, 0.0047 uf, Matched Set	290163			1		
C25, C26	Cap, plstc, 0.47 uf, Matched Set	288233			1		
C27	Cap, mica, 33 pf $\pm 5\%$, 500V	160317			1		
C28 thru C31	Not Used						
C32	Cap, mica, 56 pf $\pm 5\%$, 500V	148528			1		

REF DESIG OR ITEM NO.	DESCRIPTION	FLUKE STOCK NO.	MFG FED SPLY CDE	MFG PART NO. OR TYPE	TOT QTY	REC QTY	USE CDE
CR1 thru CR4, CR15	Diode, silicon, 100 mA at 1.5V	261370			5		
CR5, CR6	Diode, silicon, 100 mA at 1.5V	161810			2		
CR7, CR8, CR9	Diode, silicon, 150 mA	203323			3		
CR10 thru CR14	Diode, germanium, 80 mA, 100 piv	149187			5		
CR16	Diode, zener, 13V	110726			1		
K1	Relay reed switch	284091			1		
	Coil, relay	269019			3		
K2,K3 K6	Relay, reed switch	219097			8		
	Coil, relay	272070			3		
K4,K5	Relay, reed switch	219097			REF		
	Coil, relay	269019			REF		
Q1	Tstr, FET, N-channel	246066			1		
Q2,Q6	Tstr, silicon, NPN	218081			2		
Q3, Q4, Q5, Q7	Tstr, silicon, PNP	229898			4		
R1	Res, met flm, 1.11M	269092			1		
R2	Res, met flm, 267k						
	} Matched Set						
R3	Res, var, cer met, 2k $\pm 10\%$, 1w	285163			1		
R4	Res, ww, 29.53k $\pm 0.1\%$, $\frac{1}{2}w$	277657			1		
R5, R32	Res, var, cer met, 200 $\pm 10\%$, 1w	285148			2		
R6	Res, ww, 2.573k $\pm 0.1\%$, $\frac{1}{2}w$	277665			1		
R7	Res, var, cer met, 20 $\pm 20\%$, 1w	285114			1		
R8	Res, ww, 143.3 $\pm 0.1\%$, $\frac{1}{4}w$	292193			1		
R9	Res, met flm, 49.9k $\pm 1\%$, 1/8w	268821			1		

REF DESIG OR ITEM NO.	DESCRIPTION	FLUKE STOCK NO.	MFG FED SPLY CDE	MFG PART NO. OR TYPE	TOT QTY	REC QTY	USE CDE
R10	Res, comp, 8.2k $\pm 5\%$, $\frac{1}{4}w$	160796			1		
R11, R26	Res, met flm, 590 $\pm 1\%$, 1/8w	261883			2		
R12, R33	Res, comp, 10k $\pm 5\%$, $\frac{1}{4}w$	148106			2		
R13	Res, comp, 15k $\pm 5\%$, $\frac{1}{4}w$	148114			1		
R14	Res, met flm, 84.5k $\pm 0.5\%$, 1/8w	229492			1		
R15, R18	Res, comp, 120k $\pm 5\%$, $\frac{1}{4}w$	193458			2		
R16, R17	Res, comp, 11k $\pm 5\%$, $\frac{1}{4}w$	221580			2		
R19, R20	Res, comp, 47 $\pm 5\%$, $\frac{1}{4}w$	147892			2		
R21, R22	Res, met flm, 40.2k $\pm 1\%$, 1/8w	235333			2		
R23	Res, met flm, 82.5k $\pm 1\%$, 1/8w	246223			1		
R24, R28	Res, met flm, 10k $\pm 1\%$, 1/8w	168260			2		
R25, R27	Res, met flm, 21.5k $\pm 1\%$, 1/8w	168278			2		
R29	Res, met flm, 1.1k $\pm 1\%$, 1/8w	241497			1		
R30, R50	Res, var, cer met, 100k $\pm 10\%$, 1w	288308			2		
R31	Res, comp, 10M $\pm 5\%$, $\frac{1}{4}w$	194944			1		
R34	Res, comp, 22k $\pm 5\%$, $\frac{1}{4}w$	148130			1		
R35	Res, comp, 2.2k $\pm 5\%$, $\frac{1}{4}w$	148049			1		
R36, R37	Res, ww, 1.702k $\pm 0.1\%$, $\frac{1}{4}w$	292201			2		
R38	Res, ww, 125 $\pm 0.1\%$, $\frac{1}{4}w$	249284			1		
R39, R40, R43, R44	Res, ww, 130k $\pm 0.1\%$, $\frac{1}{4}w$	285361			4		
R41, R45	Res, ww, 40k $\pm 0.1\%$	271403			2		



REF DESIG OR ITEM NO.	DESCRIPTION	FLUKE STOCK NO.	MFG FED SPLY CDE	MFG PART NO. OR TYPE	TOT QTY	REC QTY	USE CDE
R42, R46	Res, ww, 1M $\pm$ 0.1%	271411			2		
R47	Res, var, cer met, 10k $\pm$ 10%, 1w	285171			1		
R48	Res, met flm, 100 $\pm$ 1%, 1/8w	168195			1		
R49	Res, met flm, 487k $\pm$ 1%, 1/8w	237206			1		
R51	Res, comp, 9.1k $\pm$ 5%, 1/4w	193318			1		
R52	Res, comp, 1k $\pm$ 5%, 1/4w	148023			1		
U1	IC, 5 transistor array	248906			1		
U2	IC, operation amplifier	288928			1		
U3	IC, DTL, triple 3-Input Nand Gate	266312			1		
U4	IC, DTL, Quad 2-Input Nand Power Gate	288597			1		
	Socket, IC, 14 contact, U1, U3, U4	276527			3		

6-39. SERIAL NUMBER EFFECTIVITY

A Use Code column is provided to identify certain parts that have been added, deleted, or modified during production of the Model 8400A. Each part in this option for which a use code has been assigned may be identified with a particular printed circuit board serial number by consulting the Use Code Effectivity List below. All parts with no code are used on all printed circuit boards with serial

numbers 123 and on. NOTE: These Use Codes and Serial Number Effectivity apply to this option printed circuit board assembly only. For the standard instrument configuration, see Section 5, paragraph 5-9, and for additional options, see the appropriate option subsection.

USE	SERIAL NUMBER EFFECTIVITY
CODE	

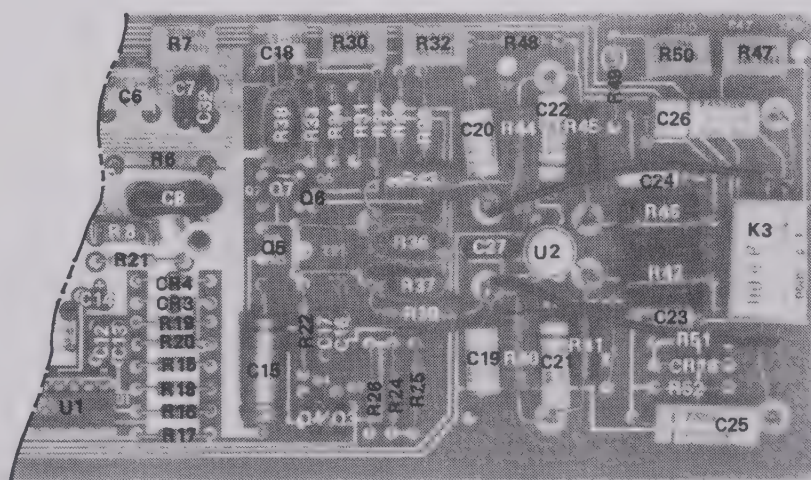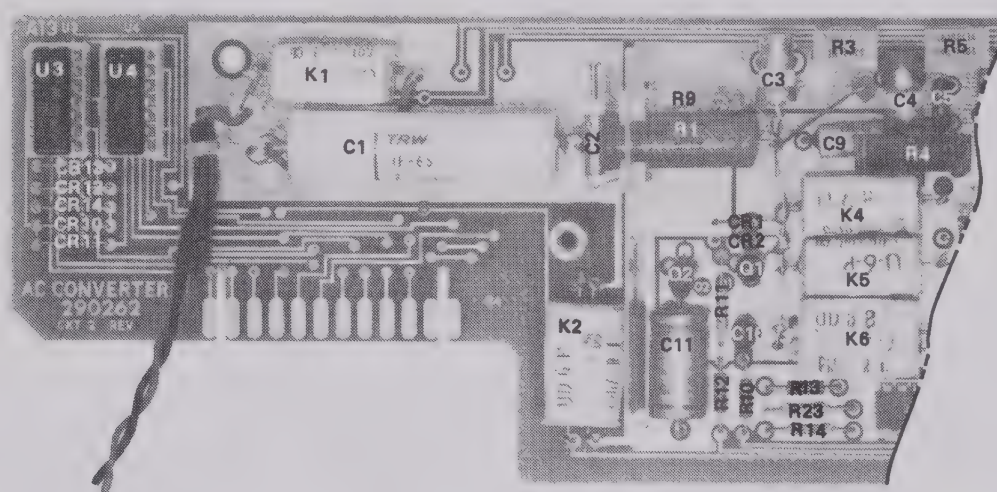

Option - 02

Ohms Converter

6-1. INTRODUCTION

6-2. The Ohms Converter (Option -02) is used in conjunction with the basic DVM to provide resistance measuring capability in seven ranges: 10, 100, 1000, and 10000 ohms, and 100, 1000, and 10000 kilohms.

6-3. SPECIFICATIONS

6-4. Specifications for the ohms converter are located in Section 1, Introduction and Specifications.

6-5. INSTALLATION

6-6. Ohms Converter installation procedures are as follows:

- a. Disconnect the power cord from line power.
- b. Remove the top dust and guard chassis covers. On the A14 Display motherboard in the instrument, determine that connector J12 is clear of obstructions and that the alignment spacer is inserted between pin pairs J12-8, -9 and J12-10, -11 (see Drawing No. 8400A-1002, Sheet 1 of 2). Locate terminal block No. 1, terminals P3TF and P3TR, and connect the yellow and brown wires from the Ohms Converter board to these terminals, respectively. Layout other cable attached to rear of A12 Ohms Converter along inside bottom of the DVM chassis, underneath the other circuit boards, and emerge adjacent to terminal block No. 2. Attach to terminal block No. 2 terminals as shown on the wiring diagram, Drawing No. 8400A-1000. Also see terminal block layout diagram on guard cover.

- c. Align converter board vertically with plastic guide slots on inner vertical faces of guard chassis. Align rubber grommet with slot in front guard chassis and insert. Slide converter board downward to fully engage card-edge connector with J12 connector on motherboard.
- d. Attach guard and instrument dust cover, connect ac power, and perform receiving inspection test of converter as described in paragraph 6-27, Performance Test.

6-7. OPERATING INSTRUCTIONS

6-8. Operation of the DVM with the A12 Ohms Converter Option 8400A-02 installed is covered in Section 2, Operating Instructions.

6-9. THEORY OF OPERATION

6-10. General

6-11. The Ohms Converter is operated in one of two configurations associated with the functions of Ohms and K ohms. In the Ω function, the ohms converter is a constant current source which is connected to the SOURCE Terminals on the front panel of the 8400A. In K Ω function the ohms converter is a precision scaling resistor, which, in conjunction with the Buffer amplifier located in the basic instrument, and the unknown resistor, produces a voltage proportional to the unknown resistor. Simplified diagrams are shown in Figure 6-1.

6-12. Ω CONFIGURATION. A constant current is supplied to the HI and LO SOURCE Terminals of the

8400A from a current source as shown in Figure 6-1. A regulated dc voltage supplies a fixed current to a reference zener diode. The zener reference voltage is impressed across a precision resistor causing a current to flow into the emitter of a transistor. Because this transistor is a high gain device, the majority of the emitter current flows out of the collector, hence, out of the HI SOURCE terminal. The LO SOURCE terminal provides a return path for the precision current.

6-13. The constant current generator produces one of three currents dependent upon the range selected. Table 6-1 shows the current generated for each range selected on the front panel of the 8400A.

Table 6-1. CURRENT OUTPUT, Ω CONFIGURATION

OHMS RANGE CALLED	CURRENT CALLED
10	10 mA
100	10 mA
1000	1 mA
10K	100 μ A

6-14. True four-terminal resistance measurements can be made in the ohms function. The term true four-terminal is used because the current generator is completely isolated from the remaining circuitry in the instrument, and hence, no current will flow in the voltage sense terminals even in the presence of relatively large lead resistances.

6-15. $K\Omega$ CONFIGURATION. In the $K\Omega$ function, a range dependent scaling resistor is placed between the master +7 volt reference and the HI SOURCE terminal. A voltage proportional to the unknown resistance (R_X) is available at the buffer output as shown in Figure 6-1.

6-16. Circuit Description

6-17. CONSTANT CURRENT GENERATOR. Regulated dc voltage is developed by resistors R2, R4, R5, zener diode CR3, transistor Q1 and operational amplifier U1. Divider string, R6, R7, and R8, scales the zener reference voltage and applies it to U2. Range resistors R10 through R16, in conjunction with zener CR3, the regulated dc voltage, and amplifier U2, apply a range dependent, constant current to the emitter of a Darlington pair composed of Q2 and Q3. Fuse F1, capacitor C6, and diodes CR2, CR4 are used as an overvoltage protection circuit for the current generator.

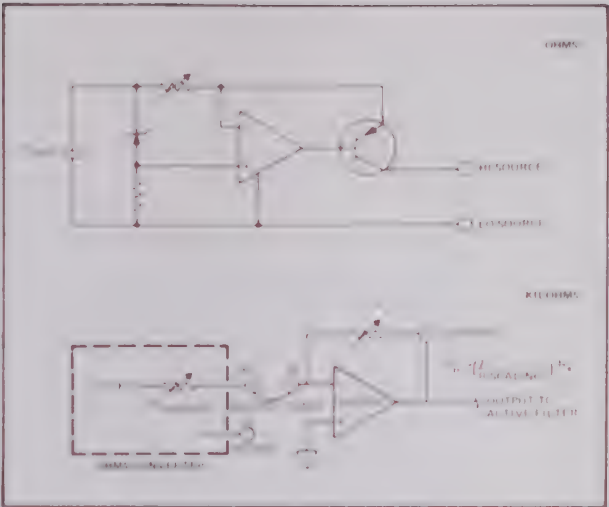


Figure 6-1. SIMPLIFIED DIAGRAM OF OHMS CONVERTER SHOWING TWO CONFIGURATIONS

6-18. RANGE SCALING NETWORK. Resistors R17 through R22, and relay contacts K1-A, K2-A and K4 are the range scaling network. The relay contacts K1-A and K2-A are actuated by range selection on front panel. Relay K4 is actuated in the $K\Omega$ function and connects one end of the scaling network to the HI SOURCE terminal on front panel.

6-19. RELAY DRIVE CIRCUIT. Range control relay K1 receives its call commands from the A11 BUFFER assembly, whereas relay K2 receives its call commands from the buffered A14 range counter. Function control relays K3 and K4 are controlled by transistors Q6 and Q5, respectively. A manual range condition is detected by Gate U5B which enables gates U5C and U5D to control Q5 and Q6. In an autorange condition, gates U5C and U5D are disabled and function control is transferred by gate U3B to RS flip-flop U3A and U3C. The mutually exclusive outputs of this flip-flop, in turn, control switches Q5 and Q6. Gates U4A and U4B operate on the set and reset lines of the RS flip-flop to enable an automatic change of functions in an autorange condition.

6-20. MAINTENANCE

6-21. Introduction

6-22. This section contains maintenance information for the Ohms Converter. Factory service information and general instructions regarding instrument access and cleaning are located in Section 4 of the manual.

6-23. Test Equipment

6-24. The resistance valves for performance testing, troubleshooting, and calibration of the Ohms Converter is listed in Table 6-2.

Table 6-2. REQUIRED RESISTANCE VALVES

STANDARD RESISTANCE VALVE	TOLERANCE
10 Ω	± 30 PPM
100 Ω	± 30 PPM
1K Ω	± 20 PPM
10K Ω	± 20 PPM
100K Ω	± 20 PPM
1M Ω	± 20 PPM
10M Ω	± 100 PPM

6-25. Fuse Replacement

6-26. The Ohms Converter contains two fuses, one of which prevents damage in the event large ac or dc voltages are inadvertently applied to the DVM input during ohms operation. The circuit will withstand a maximum applied voltage of 20 volts rms on 10 Ω through 10,000 Ω range before the fuse will blow. Up to 250V rms may continuously be applied to the 100k Ω through 10,000k Ω ranges without damage. A spare fuse is located on the ohms converter pcb, next to the in-circuit fuse.

6-27. Performance Tests

6-28. The performance tests in this section compare the Ohms Converter performance to the accuracy specifications in Section 1 of the manual to determine if the converter is in calibration. Appropriate resistance standards are connected to the input on each ohms range. The performance tests should be conducted before any instrument maintenance or calibration is attempted. The tests are also suited to receiving inspection of new converters. Performance tests should be conducted under the following environmental conditions: Ambient Temperature 23°C $\pm$ 5°C, Relative Humidity less than 70%. An instrument that fails any of the performance tests will require corrective maintenance or calibration. In case of difficulty, analysis of the test results, with reference to the troubleshooting section, should help to locate the trouble.

NOTE!

Permissible tolerances for resistance measurements are derived from the 90-day instrument specifications tained in Section 1 of the manual.

6-29. KILOHMS TEST. The kilohms function is checked at full scale on each of three ranges of the DVM. Connect each of the standard resistors shown in Table 6-3, in turn, to the INPUT terminals of the Model 8400A. Use short, low-resistance connecting leads. Set the DVM controls as shown in the table. The readout should be as indicated.

Table 6-3. KILOHMS TEST REQUIREMENTS

STANDARD RESISTANCE	MODEL 8400A		
	FUNCTION	RANGE	READOUT LIMITS
100K Ω	K Ω	100	99.988 to 100.012
1000K Ω	K Ω	1000	999.88 to 1000.12
10M Ω	K Ω	10K	9994.8 to 1005.2

6-30. OHMS TEST. The ohms function is checked at full scale on each of four ranges on the DVM. Connect equipment as shown in Figure 6-2. Connect each of the standard resistors in Table 6-4, observing appropriate readout as indicated.

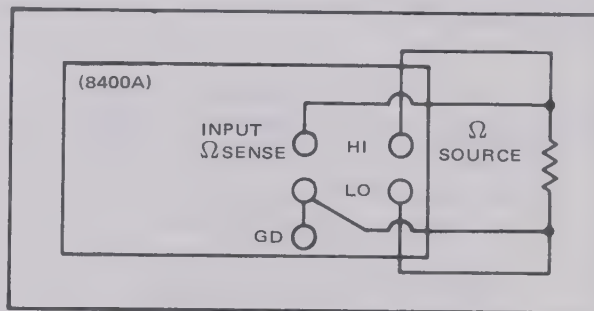


Figure 6-2. EQUIPMENT CONNECTIONS FOR OHMS TEST

Table 6-4. OHMS TEST REQUIREMENTS

STANDARD RESISTANCE	MODEL 8400A		
	FUNCTION	RANGE	READOUT LIMITS
10 Ω	Ω	10	9.9980 to 10.0020
100 Ω	Ω	100	99.987 to 100.013
1K Ω	Ω	1000	999.87 to 1000.13
10K Ω	Ω	10K	9998.7 to 10001.3

6-31. Calibration

6-32. The Ohms Converter should be calibrated every 90 days to maintain specifications (see specifications, Section 1), or whenever repairs have been made to circuitry. Calibration of the converter should be performed at an ambient room temperature of $23 \pm 5^{\circ}\text{C}$. Relative Humidity should be less than 70%. Consult Table 6-2 for recommended test equipment.

6-33. PRELIMINARY OPERATIONS

- Remove the upper dust cover retaining screws, but leave the dust cover in place on the instrument.
- Set the rear panel 115/230 volt slide switch to the 115 volt position and connect the line cord to an autotransformer set to 120 volts ac.
- Turn on the Model 8400A and allow the instrument to operate for one hour.
- Remove the upper dust cover and set the Model 8400A controls as follows:

FUNCTION	VDC, FILT
RANGE	.1
SAMPLE RATE	full clockwise

- Connect the GUARD terminal to the LO INPUT terminal and the HI SOURCE terminal to the HI INPUT terminal, and the LO SOURCE terminal to the LO INPUT terminal using the shorting links provided with the instrument.
- Short the INPUT terminals together.
- Adjust the DC ZERO control on the front panel for a zero ± 1 digit.

6-34. KILOHMS CALIBRATION

- Depress 10K and K Ω buttons.
- Remove the short between the INPUT terminals.
- Connect the resistances indicated in Table 6-5 between the INPUT terminals and perform the corresponding adjustment.

Table 6-5. K Ω RANGE CALIBRATION

RESISTANCE	RANGE	ADJUSTMENT	READOUT
10M	10K	10000K (A12R17)	10000.0
1M	1000	1000K (A12R19)	1000.00
100K	100	100K (A12R21)	100.000

NOTE!

The readout indicated in Table 6-5 should match the exact value of the calibration resistor, not the nominal value.

6-35. OHMS CALIBRATION

- Remove shorting links between the INPUT HI and SOURCE HI binding posts, and between INPUT LO and SOURCE LO binding posts.
- Connect equipment as shown in Figure 6-2.
- Depress Ω and 10K buttons on Model 8400A.
- Connect the resistance indicated in Table 6-6 as shown in Figure 6-2 and perform the corresponding adjustment.

Table 6-6. OHMS RANGE CALIBRATION

STANDARD	RANGE	ADJUSTMENT	READOUT
10K	10K	10000 Ω (A12R7)	10000.0
1K	1000	1000 Ω (A12R14)	1000.00
100 Ω	100	100 Ω (A12R10)	100.000
10 Ω	10	NONE	10.000 $\pm .006^*$
NOTE* IF MORE THAN $\pm .006$ RESET VDC ZERO AND RECALIBRATE OHMS RANGES			

- Re-install shorting links.
- 6-36. Calibration of the Ohms Converter is now complete.

6-37. TROUBLESHOOTING

6-38. Introduction

6-39. This section contains information selected to aid in troubleshooting the Ohms Converter. Before any

attempt is made to troubleshoot the converter, however, it should be verified that the trouble is actually in the converter and not caused by faulty external equipments or improper control settings. For this reason, the performance tests (paragraph 6-27) are suggested as a first step in troubleshooting. The performance tests may also help to localize the trouble to a particular section of the converter. If the performance tests fail to localize the trouble, the following information may be helpful.

6-40. TROUBLESHOOTING

- a. Depress $K\Omega$, FILT and 1000 buttons on Model 8400A.
- b. Place a 1 meg $\pm 0.01\%$ resistor across the INPUT terminals and readout 1000.00 ± 10 .

FAULT ANALYSIS

IF READOUT IS BAD, FAULT MAY BE THE REFERENCE VOLTAGE OR R17, R18, R19, R20 OR RELAY K1.

- c. Depress 100 button.
- d. Place a 100k $\pm 0.01\%$ resistor across INPUT terminals and readout 100.000 ± 0.010 .

FAULT ANALYSIS

IF READOUT IN STEP d. IS BAD, FAULT MAY LIE IN RESISTORS R21 OR R22 OR RELAY K2

- e. Depress Ω and 1000 buttons.
- f. Measure a 1000 $\pm 0.01\%$ resistor using the four-terminal measurement technique (see Figure 6-2).
- g. Readout 1000.00 ± 10 .

FAULT ANALYSIS

IF READOUT IS BAD, RESISTOR NETWORK R10, R11, R12 OR REGULATED SUPPLY, OR K2 MAY BE FAULTY.

- h. Depress 100 button.
- i. Using modified four-terminal technique measure $100 \pm 0.01\%$ resistor.

- j. Readout 100.000 ± 0.010 .

FAULT ANALYSIS

IF READOUT IS BAD, RELAY K1 OR RESISTORS R13, R14, R15, R16 OR REGULATED SUPPLY MAY BE FAULTY

6-41. LIST OF REPLACEABLE PARTS

6-42. For column entry explanations, part ordering information and basic instrument configuration Use Codes and Serial Number Effectivity List, see Section 5, paragraphs 5-1 through 5-10. See paragraph 6-43, this option subsection, for additional Use Codes and Serial Number Effectivity List assigned to this printed circuit assembly option.

6-43. SERIAL NUMBER EFFECTIVITY

6-44. A Use Code column is provided to identify certain parts that have been added, deleted, or modified during production of the Model 8400A. Each part in this option for which a use code has been assigned may be identified with a particular serial number by consulting the Use Code Effectivity List below. All parts with no code are used on all serial numbers 123 and on. NOTE: These Use Codes and Serial Number Effectivity apply to this option only. For the standard instrument configuration, see Section 5, paragraph 5-9, and for additional options, see the appropriate option subsection.

USE CODE	SERIAL NUMBER EFFECTIVITY
A	123 thru 73399
B	73400 and on

REF DESIG OR ITEM NO.	DESCRIPTION	FLUKE STOCK NO.	MFG FED SPLY CDE	MFG PART NO. OR TYPE	TOT QTY	REC QTY	USE CDE
A12	OHMS CONVERTER -02 Option Figure 6-3				REF		
C1	Cap, elect, 150 uf +50/-10%, 25V	236901			1		
C2, C7	Cap, cer, 0.01 uf $\pm 20\%$, 100V	149153			2		
C3, C4	Cap, mica, 33 pf $\pm 5\%$, 500V	160317			2		A
C3, C4, C8	Cap, mica, 33 pf $\pm 5\%$, 500V	160317			3		B
C5	Cap, Ta, 1.0 uf $\pm 20\%$, 35V	161919			1		
C6	Cap, mica, 470 pf $\pm 5\%$, 500V	148429			1		
CR1	Diode, silicon, 1 amp, 100 piv	116111			1		
CR2	Diode, zener, 20V	180463			1		
CR3	Diode, zener, 6.3V, selected & tested	288043			1		
CR4	Diode, silicon, 150 mA, 125 piv	272252			1		
CR5	Diode, zener, 10V	180406			1		
CR6 thru CR13, CR16 thru CR20	Diode, silicon, 150 mA	203323			13		
CR14	Diode, silicon, 1 amp, 600 piv	112383			1		
CR15	Diode, germanium, 80 mA, 100 piv	149187			1		
F1	Fuse, pigtail, 15 mA, 125V (one fuse provided as a spare)	285031			2		
K1	Relay, reed switch	219097			2		
	Coil, relay	272070			1		
K2	Relay, armature, DPDT, 115V Coil	309633			1		
K3, K4	Relay, reed switch	284091			2		
	Coil, relay	269019			2		
Q1	Tstr, silicon, NPN	150359			1		
Q2, Q3	Tstr, silicon, PNP	225599			2		
Q4, Q7	Tstr, silicon, NPN	218396			2		

REF DESIG OR ITEM NO.	DESCRIPTION	FLUKE STOCK NO.	MFG FED SPLY CDE	MFG PART NO. OR TYPE	TOT QTY	REC QTY	USE CDE
Q5, Q6	Tstr, silicon, PNP, selected	280198			2		
Q8	Tstr, silicon, PNP	195974			1		
R1, R9 R29	Res, comp, 10k $\pm 5\%$, $\frac{1}{4}w$	148106			3		
R2, R4	Res, met flm, 10k $\pm 1\%$, $\frac{1}{8}w$	168260			2		
R3	Res, comp, 2.2k $\pm 5\%$, $\frac{1}{4}w$	148049			1		
R5	Res, met flm, 953 $\pm 1\%$, $\frac{1}{4}w$	288555			1		
R6	Res, met flm, 619k $\pm 1\%$, $\frac{1}{8}w$	288639			1		
R7, R19	Res, var, cer met, 1k $\pm 20\%$, $\frac{1}{2}w$	267856			2		
R8, R17	Res, var, cer met, 25k $\pm 20\%$, $\frac{1}{2}w$	285213			2		
R10	Res, var, cer met, 10k $\pm 20\%$, $\frac{1}{2}w$	267880			1		
R11	Res, met flm, 46.4k $\pm 1\%$, $\frac{1}{8}w$	188375			1		
R12	Res, ww, 634.13 $\pm 0.05\%$, $\frac{1}{4}w$	292888			1		
R13	Res, met flm, 464k $\pm 1\%$, $\frac{1}{8}w$	271908			1		
R14	Res, var, cer met, 100k $\pm 20\%$, $\frac{1}{2}w$	268581			1		
R15	Res, ww, 6.983k $\pm 0.05\%$, $\frac{1}{4}w$	292896			1		
R16	Res, ww, 62k $\pm 0.05\%$, $\frac{1}{4}w$	292904			1		
R18	Res, met flm, 6.99M $\pm 0.1\%$, 2w	284968			1		
R20	Res, ww, 777.15k $\pm 0.05\%$, $\frac{3}{4}w$	277913			1		
R21	Res, var, cer met, 100 $\pm 20\%$, $\frac{1}{2}w$	267823			1		
R22	Res, ww, 70.555k $\pm 0.05\%$, $\frac{1}{2}w$	277905			1		
R23	Res, met flm, 100 $\pm 1\%$, $\frac{1}{8}w$	168195			1		
R24, R25	Res, comp, 390 $\pm 5\%$, $\frac{1}{4}w$	147975			2		
R26	Res, comp, 8.2k $\pm 5\%$, $\frac{1}{4}w$	160796			1		A
R26, R34	Res, comp, 8.2k $\pm 5\%$, $\frac{1}{4}w$	160796			2		B
R27	Res, comp, 4.7k $\pm 5\%$, $\frac{1}{4}w$	148072			1		
R28	REs, comp, 1k $\pm 5\%$, $\frac{1}{4}w$	148023			1		A

REF DESIG OR ITEM NO.	DESCRIPTION	FLUKE STOCK NO.	MFG FED SPLY CDE	MFG PART NO. OR TYPE	TOT QTY	REC QTY	USE CDE
R28, R33	Res, comp, 1k $\pm 5\%$, $\frac{1}{4}w$	148023			2		B
R30, R31	Res, comp, 560 $\pm 5\%$, $\frac{1}{4}w$	147991			2		
R32	Res, comp, 220 $\pm 5\%$, $\frac{1}{4}w$	147959			1		
U1	IC, operational amplifier	271502			1		
U2	IC, operational amplifier	284760			1		
U3	IC, DTL, triple 3-Input Nand Gate	266312			1		
U4	IC, DTL, dual 4-Input Nand	268383			1		
U5	IC, DTL, Quad 2-Input Nand Gate	268375			1		
	Fuse holder	296582			2		
	Socket, IC, 14 contact, U3, U4, U5	276527			3		

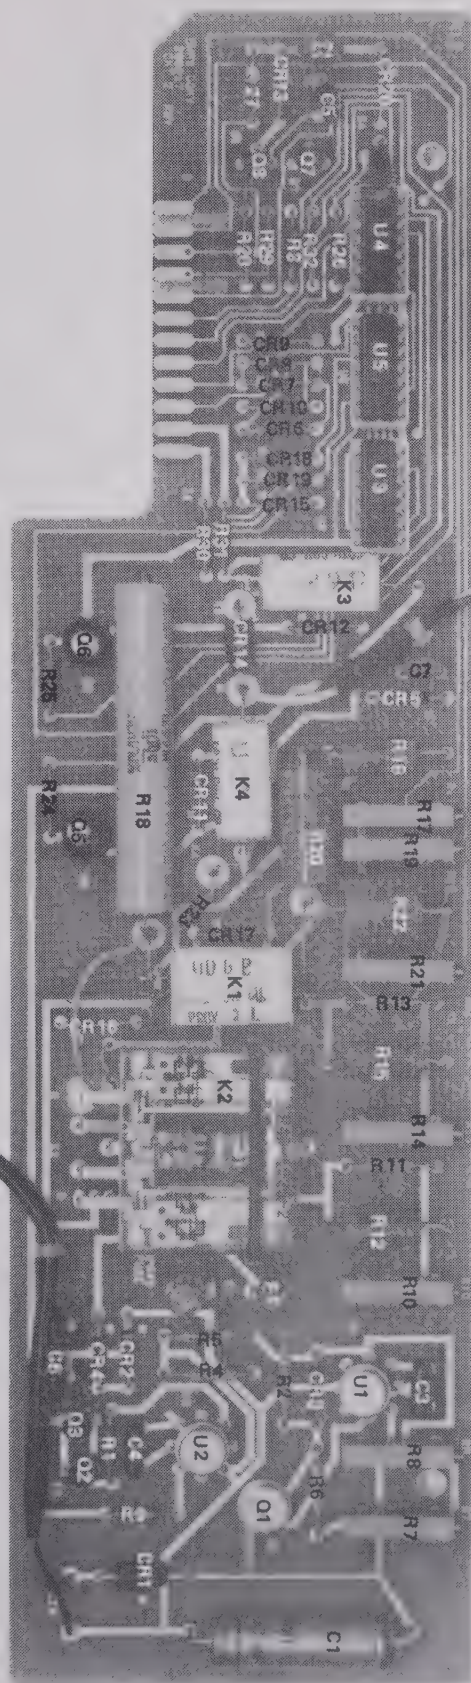


Figure 6-3. OHMS CONVERTER PCB ASSEMBLY

Option-03

Data Output Unit

6-1. INTRODUCTION

6-2. The Data Output Unit (Option-03) provides data output that is completely isolated from the analog input and is available in 8-4-2-1 BCD logic level format. Data is transferred serially via guarded toroids from the Model 8400A to the Data Output Unit. Single decade code conversion and serial-character, parallel-bit acquisitions are unique capabilities, in addition to standard full parallel output.

6-3. SPECIFICATIONS

6-4. Specifications for the Data Output Unit are located in Section 1 of the manual.

6-5. INSTALLATION

6-6. The following procedure should be used to install the Data Output Unit in the Model 8400A.

- a. Disconnect the power cord from the instrument before installing the Data Output Unit option.
- b. Remove the top dust and guard chassis covers.
- c. Determine that connector J7, on A14 Display board, is clear of obstructions and that alignment spacer is inserted between pin pairs J7-1, -2 and J7-3, -4. A second alignment spacer must be inserted between pin pairs J7-21, -22 and J7-23, -24.
- d. Determine that connector slots on rear panel for P20 and P21 on Data Output Unit boards are clear of any obstructions.
- e. Attach spring to bottom portion of guard bar on A7 Data Output Unit No. 1.
- f. Insert P21, on A7 Data Output Unit No. 1, into connector slot on rear panel while inserting P20 on A6 Data Output Unit No. 2 into rear panel connector slot. (Refer to Section 5, Figure 5-1 for physical location of A7 and A6)
- g. Insert edge of both the Data Output Units (A6 & A7) into card guides on the inner chassis bulkhead.
- h. Observe that alignment spacers on J7 line up with slots on the Data Output Unit card-edge connector.
- i. Slide both boards downward until the card-edge connector on A7 is fully engaged with J7 on A14 Display board, and A6 is seated into bracket.
- j. Lay the twisted pair cable under the top position of the rear panel and route toward transformer.
- j. Connect wires to jacks mounted on transformer so yellow mates to yellow and blue to blue.
- k. Attach guard and dust covers, connect ac power, and perform receiving inspection test of the Data Output Units as described in paragraph 6-33, Performance Test.

6-7. OPERATING INSTRUCTIONS

6-8. Operating instructions and applications information for the Model 8400A with DOU installed are located in Section 2 of the manual.

6-9. THEORY OF OPERATION

6-10. General

6-11. The Data Output Unit (DOU) receives DVM measurement data through guarded pulse transformers and, by means of appropriate control circuitry, enters this data into a self-contained, random-access digital memory. Outputs are available in positive logic, BCD 8-4-2-1, full-parallel format. A strobing operation which produces a parallel-bit serial-character format may be easily implemented by connecting outputs together in groups, as desired, and manipulating gate inputs (see DOU block diagram, Figure 6-1).

6-12. A system of output blanking is incorporated which has a threefold purpose. Firstly, it holds all outputs in an off state any time the DVM is performing a measurement or is in the digitizing process. It is during these periods that the DOU memory is being loaded; and if outputs were turned on, transient, meaningless data would be momentarily displayed. Secondly, signal conditioner settling time is automatically considered by a circuit called the programmed one-shot (POS). The POS ensures that the user obtains rated-accuracy data in the minimum possible time, regardless of function performed, by holding outputs off or blanked until valid data is obtainable. The advantages of this circuit are especially apparent when the instrument is commanded to sample

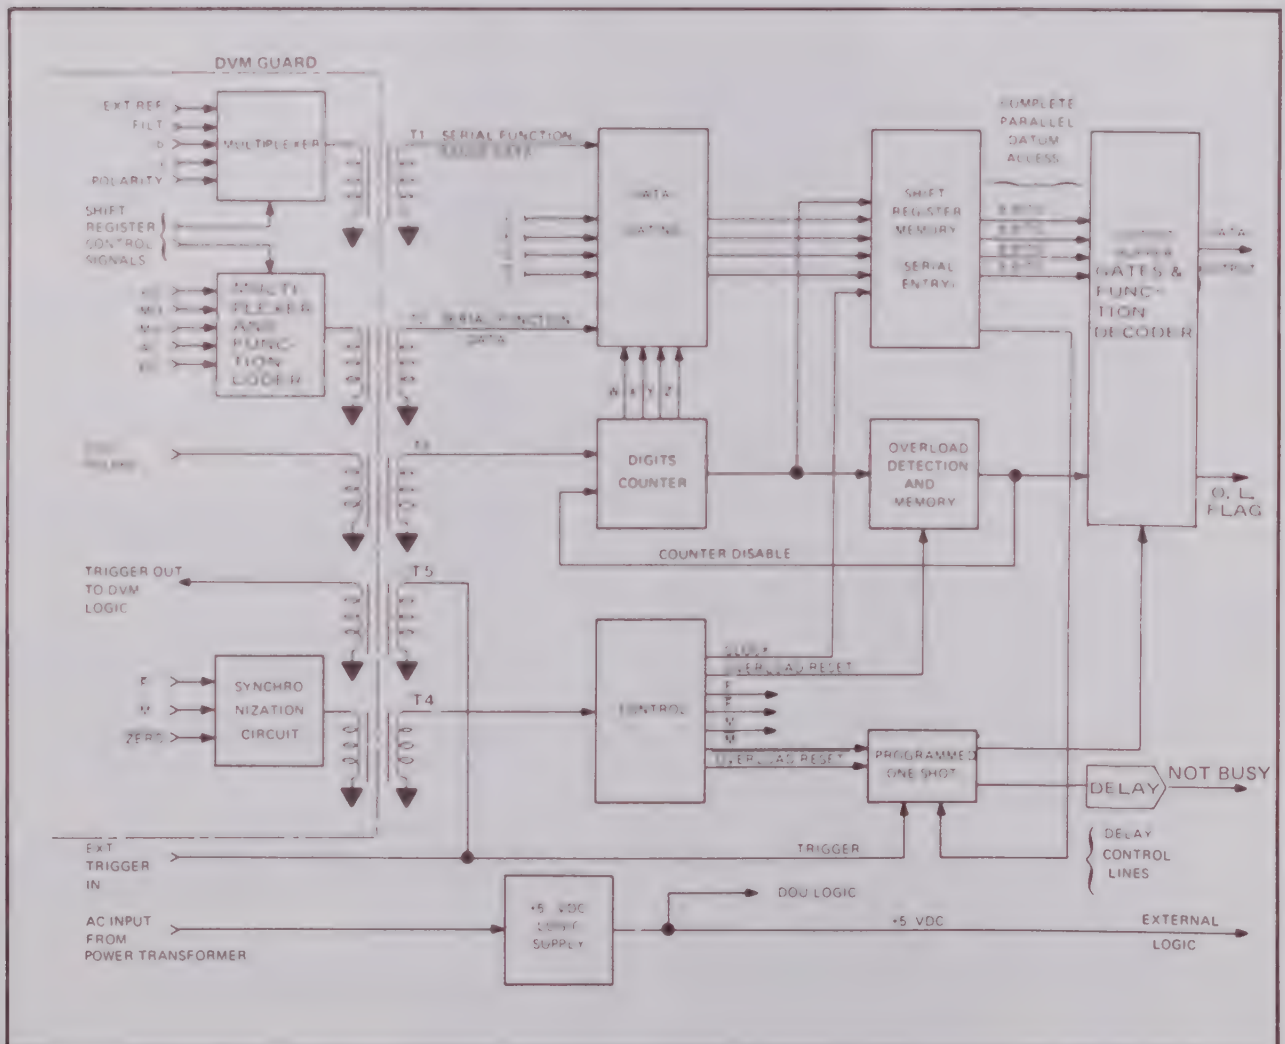


Figure 6-1. DATA OUTPUT UNIT BLOCK DIAGRAM.

upon simultaneous application of a transient signal or step change to the DVM input. The POS holds outputs off just long enough for the signal conditioner in use to settle to rated accuracy. When a different signal conditioner is called into operation by the user, the POS automatically adjusts timeout delay to the new conditions. At timeout, the POS triggers a new measurement before turning on the outputs 23 milliseconds later. Thirdly, automatic ranging is detected by the DOU, and data outputs are blanked during operations associated with that function. After the blanking process is complete, the outputs will remain on and unchanged until the DVM is again commanded to sample.

6-13. Following is an example of a typical sequence of internal events as initiated by a user-generated sample command.

- a. An unknown input and a trigger (command to sample) are applied simultaneously to the DVM.
- b. The POS reverts to its unstable state, thereby inhibiting all outputs.
- c. The DVM makes a preliminary measurement, (requiring 6 milliseconds) to determine if ranging is necessary.
- d. Autoranging takes place and the timeout is increased by 250 milliseconds for each range change.
- e. The programmed one-shot begins to time out in accordance with the function delay data registered in the DOU memory.
- f. At the end of the required settling time, the DVM is automatically commanded to sample again by the POS as it reverts to its stable state.
- g. New data is registered in the DOU memory as a result of this final sample.
- h. All the outputs are then turned on to provide function, range, polarity, and specified-accuracy numerical data. A ready flag indicates whether outputs are on or off.

6-14. Circuit Description

6-15. LOGIC NOTATION. A description of the logic symbology used in the DOU is given in Figure 6-2. A J-K flip flop that is in the "1" condition or is set "high" has a

"high" output from the "Q" terminal. The orientation of the flip flops in the schematics is the same as the flip flops shown in Figure 6-2. This method of notation enables input/output terminals of the flip flops to be identified without the necessity of redundant lettering of each device symbol. In the main, the routing of logic and control signal on the schematics is accomplished without connecting lines, which greatly reduces congestion.

6-16. MULTIPLEXERS. The DVM function, range, and polarity inputs are applied to dual multiplexer circuitry consisting of NAND gates A7U27A through D, A7U28A through D, A7U29C and A7U29D, (see DOU schematic at rear of manual). The gates comprising each multiplexer are enabled sequentially by the 6-state shift register signals. The multiplexer outputs are applied to inverter circuits consisting of NOR gates A7U31A, A7U31D, A7U31E, A7U31F, and transformers T1 and T2. The pulses produced by T1 and T2 secondaries are applied to RS flip flops composed of inverters A7U13A, A7U13B, A7U13D, A7U13E, which reconstruct the multiplexer inputs for application to the data gates. Examples of the RS flip flop outputs are shown in the timing diagram of Figure 6-3 (signals 13-8 and 13-4) and correspond to the following DVM functions and input conditions: VDC function with filter called, 1 range, negative voltage applied to input and remotely controlled. A complete list of waveforms appearing at the output of the RS flip flops is given in the troubleshooting section. (See Figure 6-9). Waveforms are labeled according to circuit location (e.g., 13-4 means I. C. U13 pin 4).

6-17. DIGITS COUNTER. The digits counter consists of J-K flip flops A6U26A, A6U26B, A6U25A and A6U25B. The input flip flop, A6U25A is toggled by positive pulses, which are transferred through the guard by A7U32C and transformer T3. The counter produces a 4-bit binary output that is entered into the memory via the data gates. The counter is reset at the beginning of each sub-period of the measurement cycle by the $\overline{F}$ signal. The W, Y, and Z counter outputs are also applied to NAND gate A6U22A, which stops the counter at a count of "11" and generates a high at the input of flip flop A6U21B. If another pulse appears at the secondary of T3, it is indicative of "12" in the first decade (i.e., instrument overload). The 12th pulse toggles flip flop A6U21B to produce an overload indication at the DOU output, A7P20-13.

6-18. DATA GATES. The data gates consist of NAND gates A7U22C, A7U23A through U23C, and A7U24A through U24D. The gates are controlled by the F, $\overline{F}$, S, and $\overline{S}$ signals so that the 10 bits of function, range, and polarity data and 20 bits of numerical data are presented to

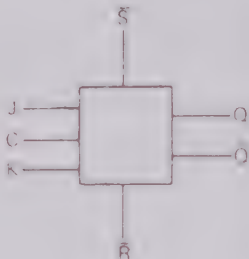
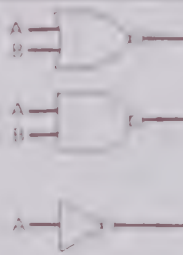
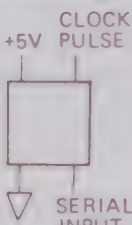
LOGIC SYMBOL	NAME	DESCRIPTION																																										
	J-K Flip Flop	Operation of the J-K flip flop is shown by the following truth tables. Note that "S" and "R" inputs are dominant over "J" and "K" inputs. <table><tr><th colspan="3">SYNCHRONOUS INPUTS</th><th colspan="4">ASYNCHRONOUS INPUTS</th></tr><tr><th>J</th><th>K</th><th>Q_{n+1}</th><th>S</th><th>R</th><th>Q</th><th>$\bar{Q}$</th></tr><tr><td>0</td><td>0</td><td>Q_n</td><td>0</td><td>0</td><td colspan="2">Undefined</td></tr><tr><td>0</td><td>1</td><td>0</td><td>0</td><td>1</td><td>1</td><td>0 Set</td></tr><tr><td>1</td><td>0</td><td>1</td><td>1</td><td>0</td><td>0</td><td>1 Reset</td></tr><tr><td>1</td><td>1</td><td>Q_n</td><td>1</td><td>1</td><td colspan="2">Normal Condition</td></tr></table>	SYNCHRONOUS INPUTS			ASYNCHRONOUS INPUTS				J	K	Q_{n+1}	S	R	Q	$\bar{Q}$	0	0	Q_n	0	0	Undefined		0	1	0	0	1	1	0 Set	1	0	1	1	0	0	1 Reset	1	1	Q_n	1	1	Normal Condition	
SYNCHRONOUS INPUTS			ASYNCHRONOUS INPUTS																																									
J	K	Q_{n+1}	S	R	Q	$\bar{Q}$																																						
0	0	Q_n	0	0	Undefined																																							
0	1	0	0	1	1	0 Set																																						
1	0	1	1	0	0	1 Reset																																						
1	1	Q_n	1	1	Normal Condition																																							
	NOR Gate NAND Gate Inverter	The following table shows gate and inverter operation. Although only two-input gates are shown, operation is identical for gates having additional inputs. <table><tr><th>A</th><th>B</th><th>NOR</th><th>NAND</th><th>INVERTER</th></tr><tr><td>0</td><td>0</td><td>1</td><td>1</td><td>1</td></tr><tr><td>0</td><td>1</td><td>0</td><td>1</td><td>1</td></tr><tr><td>1</td><td>0</td><td>0</td><td>1</td><td>0</td></tr><tr><td>1</td><td>1</td><td>0</td><td>0</td><td>0</td></tr></table>	A	B	NOR	NAND	INVERTER	0	0	1	1	1	0	1	0	1	1	1	0	0	1	0	1	1	0	0	0																	
A	B	NOR	NAND	INVERTER																																								
0	0	1	1	1																																								
0	1	0	1	1																																								
1	0	0	1	0																																								
1	1	0	0	0																																								
	Shift Register	Four 8-bit, serial-in parallel-out shift registers are used. A logical "1" at the input enters a logical "1" into the register.																																										

Figure 6-2. EXPLANATION OF LOGIC SYMBOLOGY USED IN DOU

the shift register memory at the proper times. These data bits are loaded in accordance with the load sequence (see Figure 6-4) and are steered by the data gates.

6-19. **RANDOM ACCESS MEMORY.** The DOU memory is composed of shift registers A7U10, A7U12, A7U14 and A7U16. Data is loaded serially into the shift registers. The loading sequence is controlled by clock pulses which are produced by gates A7U15A through U15D, gate A7U19B and associated circuitry. Steering signals, S and $\bar{S}$, together with the loading signal, F, develop loading pulses as shown in Figure 6-3. NAND gate A7U19B, inverter A7U13C, and associated circuitry delay the F signal for approximately 10 microseconds so that all data present at the shift register inputs will be stabilized before clocking occurs.

6-20. **CONTROL.** F and $\bar{F}$ signals are produced by an RS flip flop consisting of NOR gates A7U19A, A7U19C and associated circuitry. The trigger for the flip flop is developed by inverters A7U31B and C, A7U32A, B, and E, and transformer T4. The F and $\bar{F}$ signals are conditioned by the $\bar{F}$, M, and $\bar{ZER0}$ signals so that the F and $\bar{F}$ signals occur only during periods A through E of the DVM measurement cycle. The steering flip flop is triggered by the F signal and produces S and $\bar{S}$ signals.

6-21. The $\bar{S}$ output of the steering flip flop is applied to transistor A6Q9 and associated components, which comprise a rechargeable one-shot. This circuit is responsible for initializing control circuit conditions and providing for generation of the M signal. The sequence of operation of the

rechargeable one-shot and associated circuitry is as follows (control timing signals are shown in Figure 6-3):

- a. Measurement cycle is initiated.
- b. RS flip flop A7U19A, A7U19C is set to "1" condition (pin 2 of 19A high).
- c. Flip flop A6U20B, C is reset by $\overline{F}$.
- d. Overload flip flop A6U21B is reset by a measurement inclusion signal generated at pin 8 of flip flop A6U20B, C.
- e. Measure/store flip flop (A6U20A, D) is set by overload reset signal (signal No. 21-10).
- f. Gate A6U17A is inhibited, thereby inhibiting all output buffer gates.
- g. The steering flip flop is toggled (Middle of "A" period) and capacitor A6C14 begins to charge toward +5V.
- h. The steering flip flop is again toggled (Middle of "B" period) and capacitor A6C14 is quickly discharged to 0.9V.
- i. Steps (f) and (g) repeat for "C", "D", and "E" periods.
- j. Following "E" period, A6C14 continues to charge until A6Q9 is turned on.

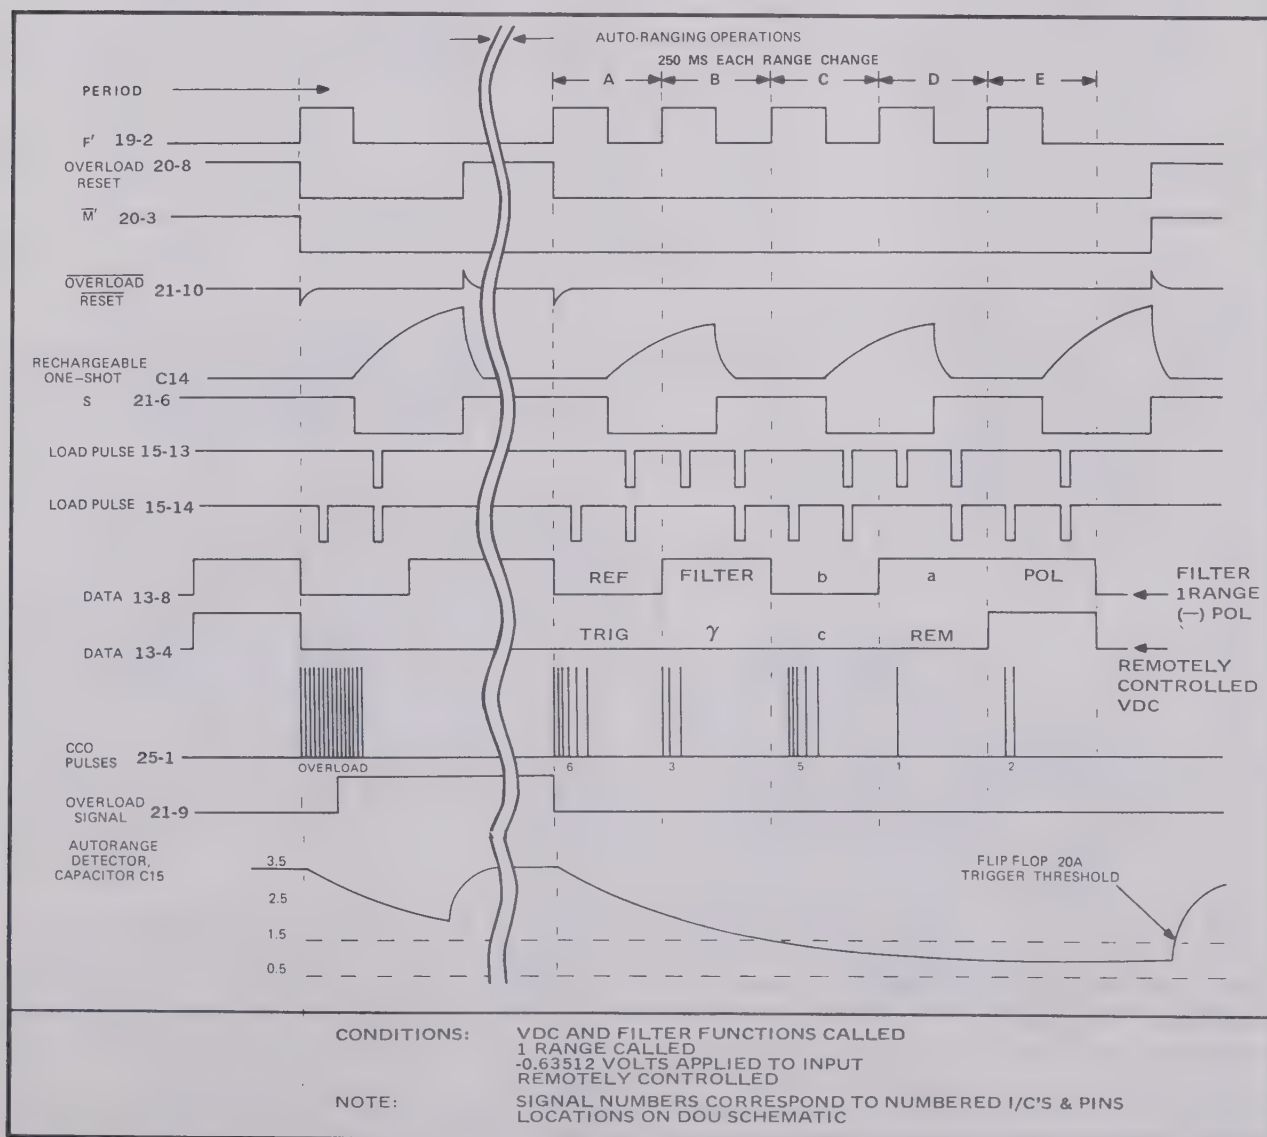


Figure 6-3. DOU TIMING DIAGRAM

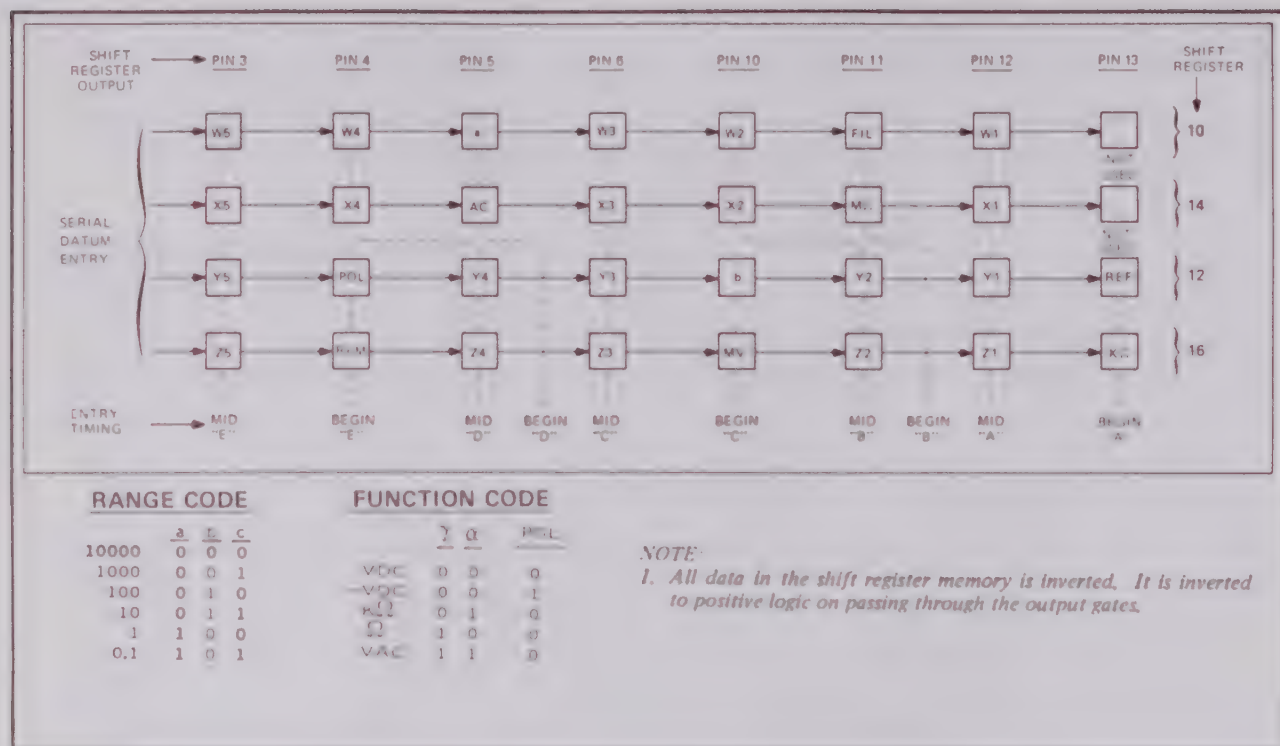


Figure 6-4. SHIFT REGISTER LOAD SEQUENCE

- k. A6Q8 then turns on and sets the overload reset flip flop A6U20B, C and the steering flip flop (A6U21A).
- l. The measure/store flip flop is reset by a negative trigger developed in the circuit of A6Q7.
- m. The output buffer gates are enabled and the data becomes available.

6-22. In addition to providing a pseudo measure/store signal, the circuit of flip flop A6U20A, D and transistor A6Q7 also function as an autorange detector. Control signal timing under autorange conditions is shown in Figure 6-5. If the decision to autorange is made (middle of "A" period), the DVM logic places the DOU in storage mode. This locks out the $\bar{F}$ signal in the DOU control circuit and, consequently, no pulses are produced in T4 secondary, excepting the first. With no F signal to toggle flip flop A6U21B the rechargeable one-shot times out and sets the overload reset flip flop to the "1" condition. The resulting signal (signal 21-9) is applied as a reset pulse to A6Q7; however, because capacitor A6C15 has not had time to discharge sufficiently, the trigger threshold of flip flop A6U20A, D is not reached and the flip flop remains in its previous state. Thus, the output buffer gates are inhibited during the

autorange operation. If the instrument had not autoranged, A6C14 would have acquired sufficient charge during the measurement cycle to enable flip flop A6U20A, D to be triggered, as shown in the timing diagram of Figure 6-3.

6-23. The programmed one-shot consists of NOR gates A6U18A, C, transistors A6Q3 through A6Q6, capacitor A6C9, and associated programming resistors. In its stable state, gate A6U18C output is high and gate A6U18A output is low. Assume that an external trigger is applied to A6P20-3. The trigger enable gate A6U18B, thereby triggering the DVM to initiate a measurement cycle. The trigger also enables gate A6U18C, and the POS then switches to its unstable state. When the POS switches states, the output of gate A6U18D goes low, resulting in gates A6U17A being inhibited. Inhibiting gate A6U17A causes all of the output data gates to be inhibited.

6-24. The timeout of POS delay is initiated as soon as the circuit is triggered, i.e., when the POS is triggered, switch A6Q3 is turned off and A6C9 begins to charge through the programming network to zero volts. Delay time is controlled by the memory, which selects resistor A6R22, R42, R45, R46, R47, R48, R52, R53, R54, R56, R57, depending on the selected DVM function. When A6C9 has accumulated sufficient charge, transistors A6Q4

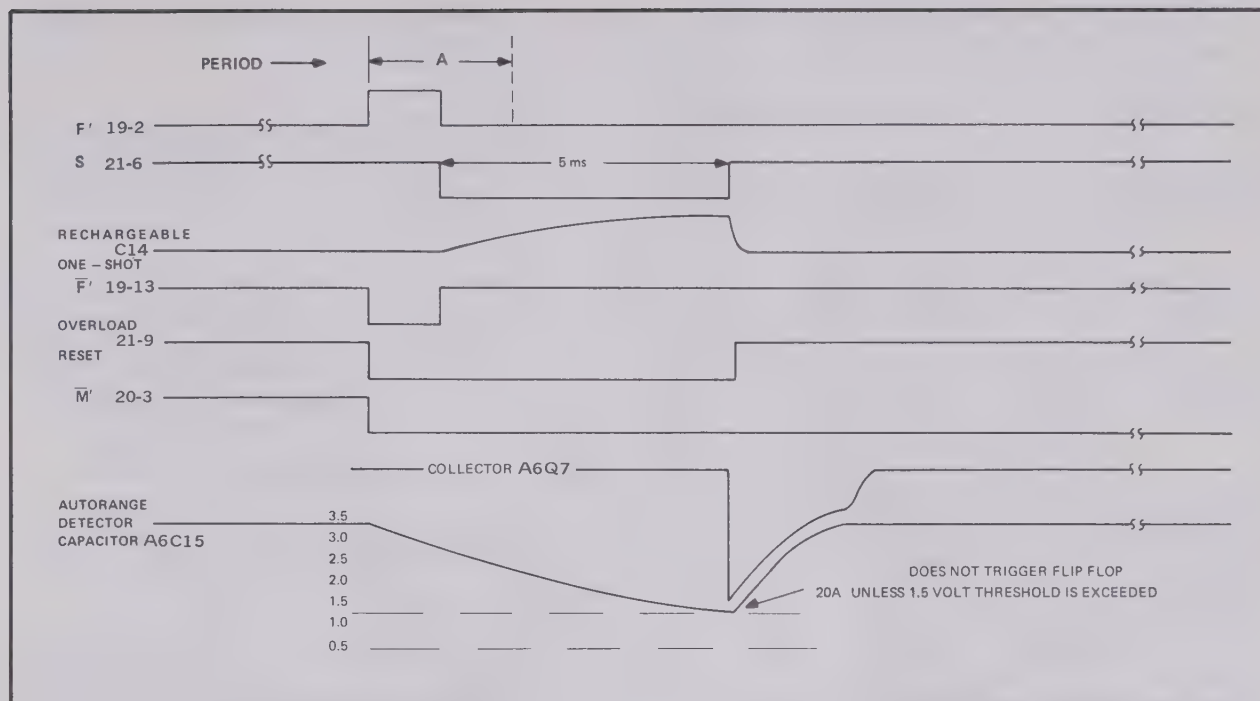


Figure 6-5. CONTROL SIGNAL TIMING DURING AUTORANGE

and A6Q5, connected to operate like an SCR, turn on, applying a positive pulse to the input of gate A6U18A through capacitor A6C24. The POS switches back to its stable state and retriggers the DVM for a final measurement.

6-25. The POS is automatically retriggered if the DVM autoranges as a result of the final measurement. For example, if a step voltage were applied to the DVM in MVDC mode, the DVM logic might not make an autorange decision before the measurement caused by POS timeout. If this occurs, NOR gate A6U18B goes high, retriggering the POS and initiating a second delay. All autorange operations that are to occur do so at this time. Termination of the second POS delay causes yet another measurement. All settling times having been considered at this time, this measurement is the last; and upon completion 30 milliseconds later, outputs are turned on and data becomes available.

6-26. In VDC mode without the FILTER function called, transistor A6Q13 is enabled. This programs the POS for fastest timeout and clamps pin 4 of gate A6U18B so that the DVM will not be retriggered by POS timeout.

6-27. +5 VOLT LOGIC SUPPLY. The +5 volt dc logic

supply is operated from a full-wave bridge rectifier and filter consisting of diodes A6CR19 through A6CR22 and capacitors A6C25 through C28. The series regulator is comprised of zener reference A6CR23, voltage amplifier A6Q10, driver A6Q11, and series pass transistor A6Q12. This supply has sufficient reserve to power the Remote Control Unit (Option 8400A-03), if installed. The +5 volts is connected to A6P6-1 and returned to A6P6-4 for that purpose.

6-28. MAINTENANCE

6-29. Introduction

6-30. This section contains maintenance information for the DOU. Factory service information and general instructions regarding instrument access and cleaning are located in Section 4 of the manual.

6-31. Test Equipment

6-32. The equipment recommended for performance testing, troubleshooting, and calibration of the DOU is listed in Figure 6-6. If the recommended equipment is not available, equivalent or better instruments may be substituted.

EQUIPMENT NOMENCLATURE	RECOMMENDED EQUIPMENT
OSCILLOSCOPE	TEKTRONIX MODEL 547
OSCILLOSCOPE PLUG-IN	TEKTRONIX MODEL 1A1
OSCILLOSCOPE PROBES	TEKTRONIX MODEL P6010
DC VOLTAGE SOURCE	FLUKE MODEL 343A DC VOLTAGE CALIBRATOR
DC DIFFERENTIAL VOLTMETER	FLUKE MODEL 885A
DOU OUTPUT READER/DISPLAY SYSTEM (CUSTOMER SUPPLIED)	

Figure 6-6. TEST AND CALIBRATION EQUIPMENT.

6-33. Performance Tests

6-34. The following performance tests exercise the DOU to determine if the unit is working properly. The tests should be conducted before maintenance or calibration is attempted. The tests are also suited to receiving inspection of new units. Performance tests should be conducted under the following environmental conditions: ambient temperature $23^{\circ}\text{C} \pm 5^{\circ}\text{C}$, relative humidity less than 70%. In case of trouble, analysis of the test results, with reference to the troubleshooting, should help to locate the trouble.

6-35. LOGIC VOLTAGE CHECK

- Connect a dc voltmeter between A6P6-1 (+) and A6P6-4 (-) of DOU NO: 2.
- If necessary, adjust potentiometer A6R38 for 5.05 ± 0.05 volts dc indication on the voltmeter.

6-36. DIGITS REGISTRATION

- Set Model 8400A controls as follows:

FUNCTION	VDC
RANGE	10
SAMPLE RATE	EXT (sample as required)

- Connect a +1.1111 volt dc test signal to the INPUT terminals.
- Command the DVM to take a reading. The DOU output and the front panel display should indicate DC +1.1111.
- Repeat steps (b) and (c) for test signal inputs of +2.2222, +4.4444, and +8.8888 volts dc. The DOU output and front panel display should correspond.

6-37. OVERLOAD INDICATOR

- Set Model 8400A controls as follows:

FUNCTION	VDC
RANGE	10
SAMPLE RATE	EXT (sample as required)

- Connect a +20 volt dc test signal to the INPUT terminals.
- Command the DVM to take a reading by applying one external sample pulse. The DOU outputs and front panel display should indicate DC +11.9999 and OVERload.

6-38. FUNCTION REGISTRATION

- Set Model 8400A controls as follows:

FUNCTION	VAC
RANGE	100
SAMPLE RATE	EXT

- Short the INPUT terminals.
- Apply one external sample pulse. The DOU outputs and front panel display should indicate VAC and a readout of 00.000 ± 2 digits.
- Repeat steps (a) through (c) for each of the following DVM functions. The DOU output and front panel display should be as indicated.

FUNCTION	DOU OUTPUT/DVM DISPLAY
K Ω	K Ω , 00.000
10 Ω	Ω , 0.0000
VDC, FILT, EXT. REF.	VDC, 00.000 FILT, EXT. REF.

6-39. OUTPUT GATES

- a. Set Model 8400A controls as follows:
- | | |
|----------|-----|
| FUNCTION | VDC |
| RANGE | 10 |
| SAMPLE | EXT |
- b. Connect a -0.0010 volt dc test signal to the INPUT terminals.
- c. Command the DVM to take a reading. The DOU output and DVM display should indicate DC - 0.0010 $\pm$ 2 digits.
- d. Short all of the following DOU output gate terminals to ground A6P6-4. The DOU output should be as indicated.

GATE TERMINALS (PIN AND CONNECTOR)	DOU OUTPUT
A6P20-26	DC, FILT, EXT.
A6P20-22	REF, AC, Ω , K Ω ,
A6P20-17	REMOTE CONTROL,
A7P21-36	OVERLOAD, EXT.
A7P21-35	TRIG.
A7P21-19	and readout of 1555.55
A7P21-13	
A7P21-1	
A7P21-25	
A7P21-5	

6-40. PROGRAMMED ONE SHOT.

- a. Set the Model 8400A controls as follows:
- | | |
|-------------|--|
| FUNCTION | VDC, FILTERED |
| RANGE | 100 |
| SAMPLE RATE | EXT (rate should be approximately 1 sample/5 seconds). |

- b. Connect oscilloscope to ready line, A6P20-8 of DOU output connector. Command instrument to sample. Delay length should be 523 $\pm$ 20 milliseconds.
- c. Set the function and range controls as follows. The delay lengths should be as indicated.

	POS Operative	Function Calls	Range Call	Observe Length (m5)
a.	Yes	VDC, Filt	100	523 $\pm$ 20 ms
b.	"	VAC, Filt	"	523 $\pm$ 42
c.	"	Ω , Filt	"	523 $\pm$ 42
d.	"	K Ω , Filt	"	523 $\pm$ 42
e.	No	K Ω , Filt	"	31 $\pm$ 2 ms
f.	Yes	VDC	1	123 $\pm$ 10 ms
g.	"	VDC	100	54 $\pm$ 3 ms
h.	"	VAC	"	123 $\pm$ 10 ms
i.	"	Ω	"	123 $\pm$ 10 ms
j.	"	K Ω	"	73 $\pm$ 6 ms

6-41. Calibration

6-42. Calibration of the DOU consists only of adjustments of the +5 volt dc logic supply. The adjustment procedure is located in paragraph 6-35.

6-43. Troubleshooting

6-44. This section contains information selected to aid in troubleshooting the DOU. Before attempting to troubleshoot the unit, however, it should be verified that the trouble is actually in the DOU and is not caused by faulty external equipments or improper control settings. For this reason, the performance tests (paragraph 6-33) are suggested as a first step in troubleshooting. The performance tests may also help to localize the trouble to a particular section of the instrument. If the performance tests fail to localize the trouble, the following information may be helpful.

6-45. Trouble analysis of the Data Output Unit is most efficiently performed by a systematic sequence of checks through the unit beginning at the malfunctioning output or outputs and working progressively backwards. As familiarity with the unit increases the operator will discover he can truncate the process omitting obviously irrelevant steps.

6-46. In any analysis, certain decisions and/or conclusions must be made. Consult Figure 6-7 for the suggested decision sequence. Figure 6-8 is a table of decision aids, which should help to determine how to make the decisions.

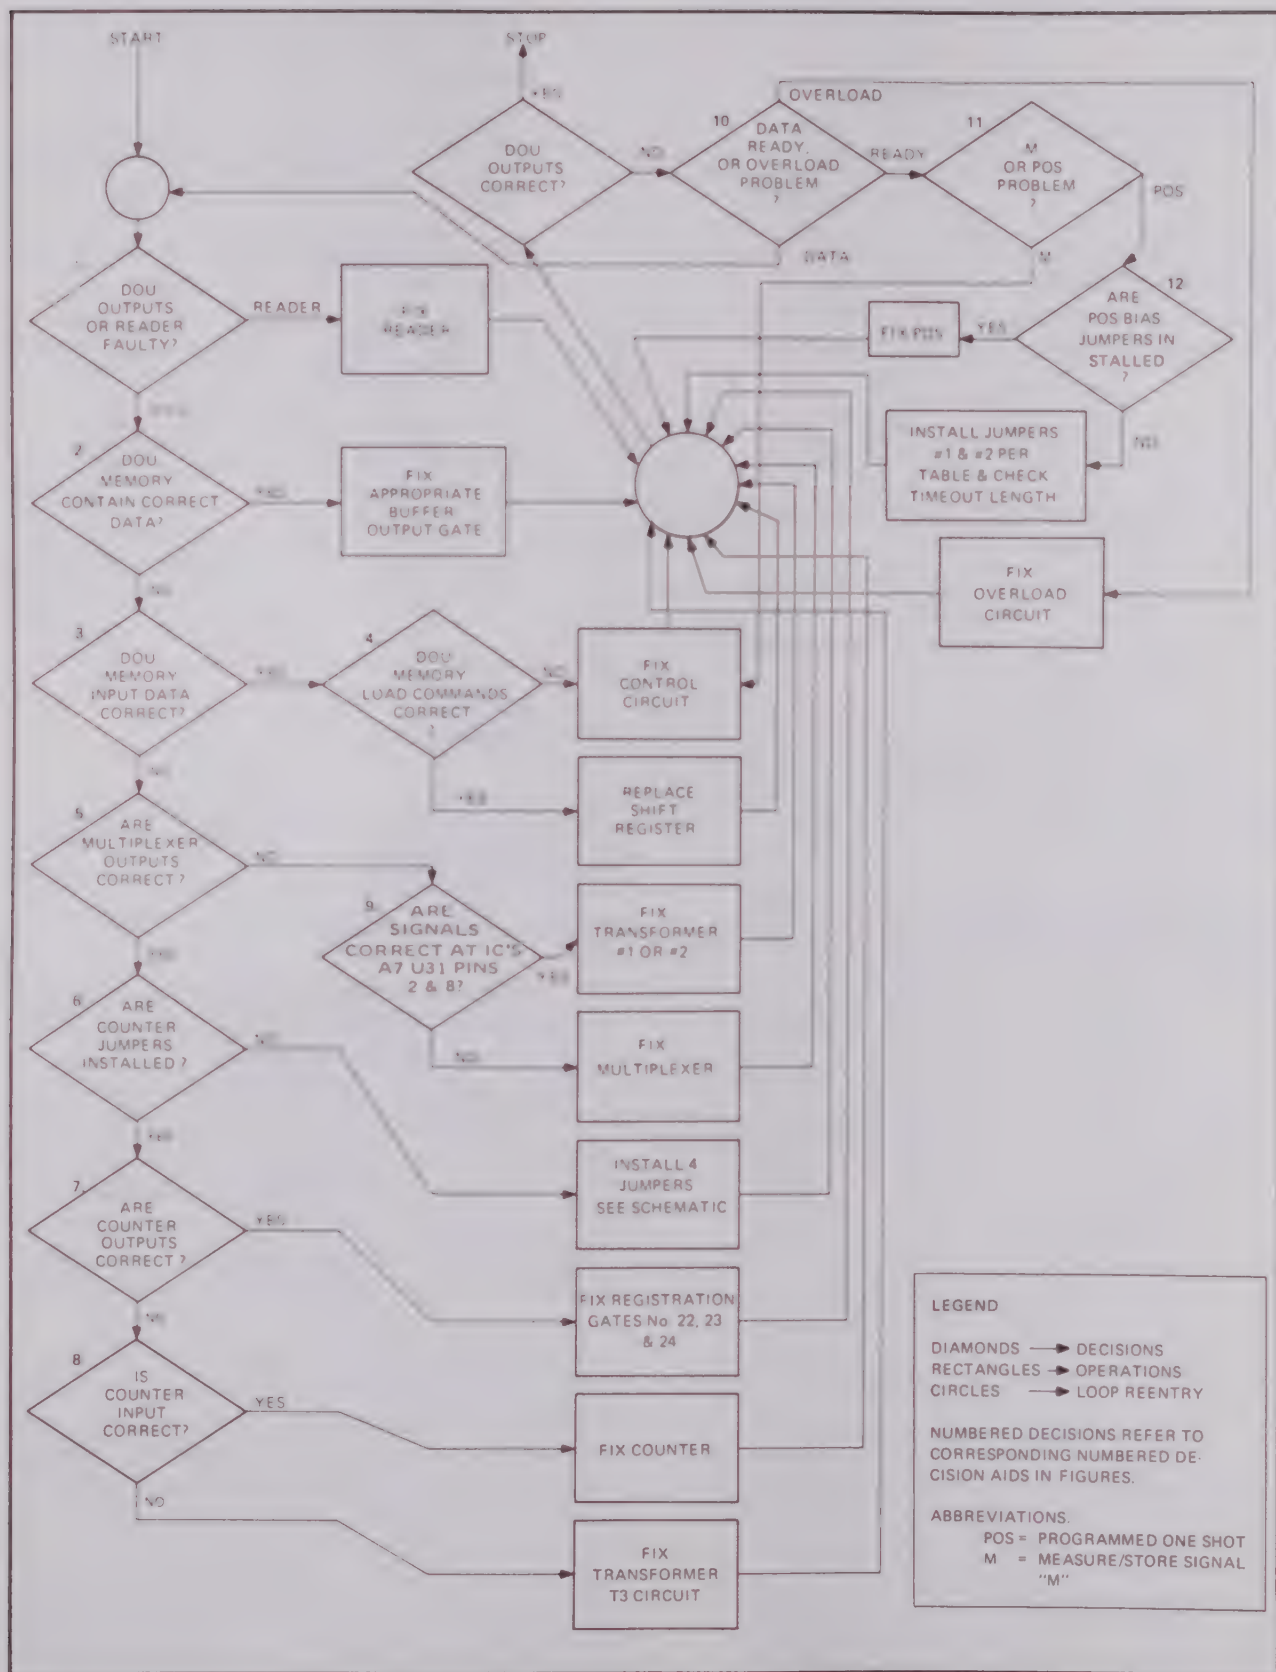


Figure 6-7. DECISION FLOW CHART DOU TROUBLE SHOOTING

1. **DOU OUTPUTS OR READER FAULTY?** This decision must be based upon a point-by-point measurement of DOU outputs at points of origin. Many short cuts are available, depending upon the nature of the reader.

EXAMPLE No. 1. Suppose all decades except the third are producing correct numbers. The third decade generates the following table:

	MODEL 8400A PANEL	READER PANEL	CONSIDER
All possible combinations shown for illustration	00000	00400	An open in the cable from DOU to reader (probably A7P21-17 DOU connector.) This is the "4" line of the 1- 2-4-8 four line BCD code.
	11111	11511	
	22222	22622	
	33333	33733	
	44444	44444	
	55555	55555	
	66666	66666	
	77777	77777	
	88888	88288	
	99999	99399	

	MODEL 8400A PANEL	READER PANEL	CONSIDER
Only these combinations need to be considered for trouble analysis.	00000	08000	An open DOU-to-reader (probably A7P21-21 DOU output connector).
	11111	19111	
	22222	20222	
	44444	42444	
	88888	88888	

EXAMPLE No. 3. Reader panel is 155555, DC+, AC, K Ω , Ω , EXT. REF., FILT., REM., TRIG., OVER.

The above display remains regardless of Model 8400A PANEL.

CHECK: Pin 32B DOU connector. If not 0 to 0.5Vdc, disconnect reader and measure again. If now 0 to 0.5V, reader is at fault—if not, look for problem in DOU ready circuit.


NOTE: The above examples assume a reader with full overranging in each decade. Other overrange patterns will not defeat the analysis if the pattern is known.

2. **DOU MEMORY CONTAIN CORRECT DATA?** It is assumed here that data outputs were determined to be faulty. This is a static test. Set Model 8400A stimulus to produce the trouble analysis information desired. Command to sample once only. Using a vtm, check data in shift register (DOU memory) 10, 12, 14, and 16. Use chart of Figure 6-5 for location of data. All data in this memory is inverted phase, (e.g., 6 would normally be represented as 0110, but it is in the memory as 1001). The chart of Figure 6-5 will prove to be a valuable troubleshooting tool for several areas of the DOU circuitry. If data in the memory is correct, the problem must be in an output buffer gate or in the first decade binary-to-BCD converter, IC11. If not, it must be determined whether a shift register is faulty. This is proven by determination that serial data input signals are correct and that load signals are correct.


Figure 6-8. DECISION AIDS (Sheet 1 of 3)

3. **DOU MEMORY INPUT DATA CORRECT?** Unfortunately this must be a dynamic test and for the uninitiated user may require observation of a properly operating unit. Set stimulus equipment (Model 8400A and input source) for desired trouble analysis information. Set internal sample command potentiometer on Model 8400A panel to EXT position and externally trigger the instrument. The rate should be 25 pps for good oscilloscope displays. Ignore reader display as it is unimportant at this point. Sync the scope with F signal and observe shift register data inputs. Refer to waveshapes at points 13-8 and 13-4 and refer to the waveshape index, Figure 6-9. These waveforms are multiplexed with numerical data from the counter and inverted by registration gates IC22, IC23, and IC24 on A7 PCB. Study the schematic and Figures 6-4, 6-9 to visualize what appearance these signals should have for various combinations of data. A table is not given as there would be 256^3 possible variations. It is much easier to determine what a particular combination should produce and will require only a few seconds for an experienced operator using Figure 6-5. Again, remember that all data in memory is inverted phase.

EXAMPLE: -.026391 VDC, FILT, REM. CONT.

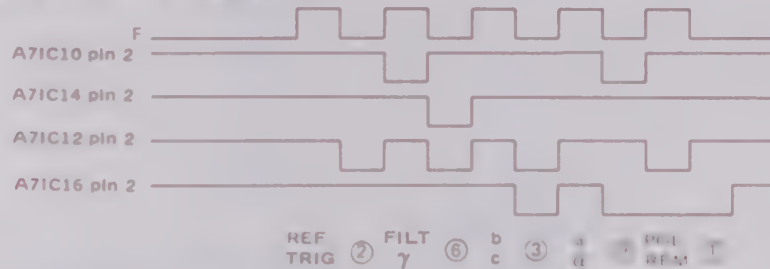

4. **DOU LOAD COMMANDS CORRECT?** Refer to the following load signals. Use the same setup as in part 3 of this figure. A dual-trace scope is useful.

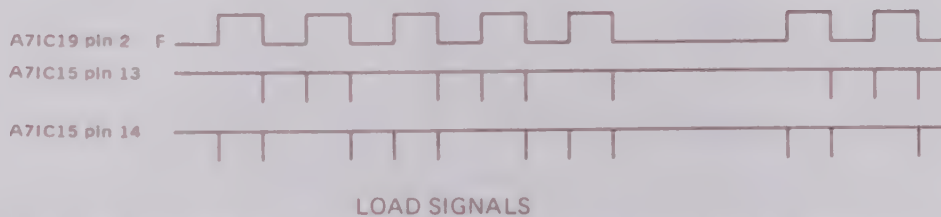

If the load commands are correct, then something may be wrong with the operation of one of the shift registers. If replacement does not solve the problem, one of the shift register output may be shorted.


5. **ARE MULTIPLEXER OUTPUTS CORRECT?** Use the same setup as in part 3 of this figure. Figures 6-10 and 6-11 give tables which illustrate all possible waveforms at IC13 pin 4 and IC13 pin 8 of A7 Assembly respectively. If the waveforms are correct, registration gates A7IC23 and A7IC24 may be faulty.
6. **ARE COUNTER JUMPERS INSTALLED?** With reader connected, check continuity between the following points on Data Output Unit No. 2 (A6):

P20-9 & P20-25	} A6 DOU Output Connector
P20-5 & P20-21	
P20-7 & P20-23	
P20-11 & P20-19	

Figure 6-8. DECISION AIDS (Sheet 2 of 3)

7. **ARE COUNTER OUTPUTS CORRECT?** Use the same setup as in part 3 of this figure. Consider counter outputs only during second half of each subperiod as follows:


EXAMPLE: .67219 on Model 8400A panel.

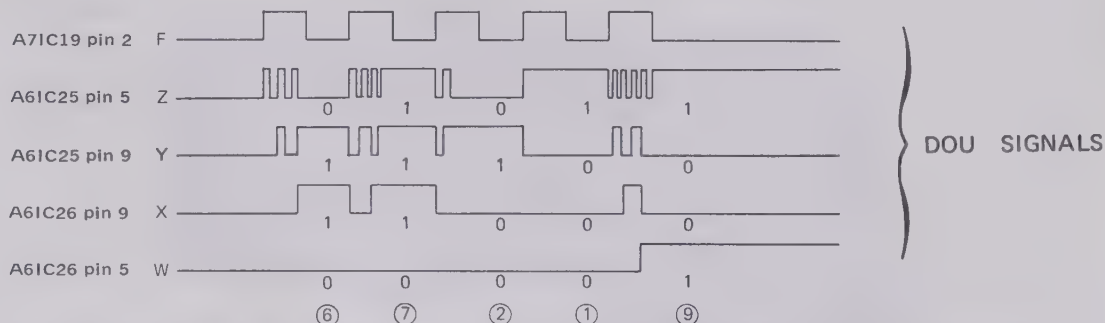

Again, correct counter operation is indicative of a problem in registration gates IC22, IC23 and IC24.

8. **IS COUNTER INPUT CORRECT?** Use same setup as in part 3 of this figure. The same example as in part 7 is used.

EXAMPLE:

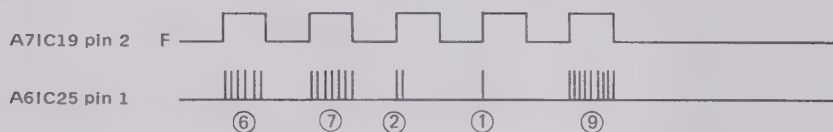

Correct input but incorrect outputs are indicative of counter malfunction.

9. **ARE SIGNALS CORRECT AT A71C31 pins 2 & 8?** This DOU circuit is inside the guard. Therefore, the scope must be synced to a signal inside the guard. Use zero signal. If multiplexer outputs (test portion of part 5) are incorrect but observations of part 9 are normal, the transformer circuits of T1 or T2 may be faulty. Signals at pins 2 and 8 of A7U31 should have waveforms like Figure 6-9. If not, multiplexers may be at fault or wires may be broken between DOU input terminals and the connector inside the guard box.
10. **DATA, READY OR OVERLOAD PROBLEM?** This is a static test. Command Model 8400A to sample only once, with SAMPLE RATE control on front panel in external position, then observe. If numerals, range, polarity, or function data is faulty, it will be observable on the reader (monitor). If the reader is either blank or displaying 1555.55 VDC+, FILT, REM., AC, KΩ, Ω, or EX. REF., OVER, TRIG. then the ready line is probably high. The overload display should coincide with a numeral display of 119999 and will be visible on the reader.
11. **M OR POS PROBLEM?** Command to sample only once, with SAMPLE RATE control in external position. Check A6U18 pin 10 for 0 to 0.5V (POS) and A6U17 pin 2 for 3.5 to 4.5V ($\bar{M}$ signal). If M is low it is likely that POS will be high, but the cause will be $\bar{M}$, which comes from the control circuit. If $\bar{M}$ is normal but POS is high, the programmed one-shot is faulty.
12. **ARE POS BIAS JUMPERS INSTALLED?** Visually check to insure that jumpers No. 1 and 2 are installed or jumpers No. 1 or No. 2 and A6R50 in accordance with delay length table. (This is a factory installation procedure and jumper installation need only be verified as indicated.)

Figure 6-8. DECISION AIDS (Sheet 3 of 3)

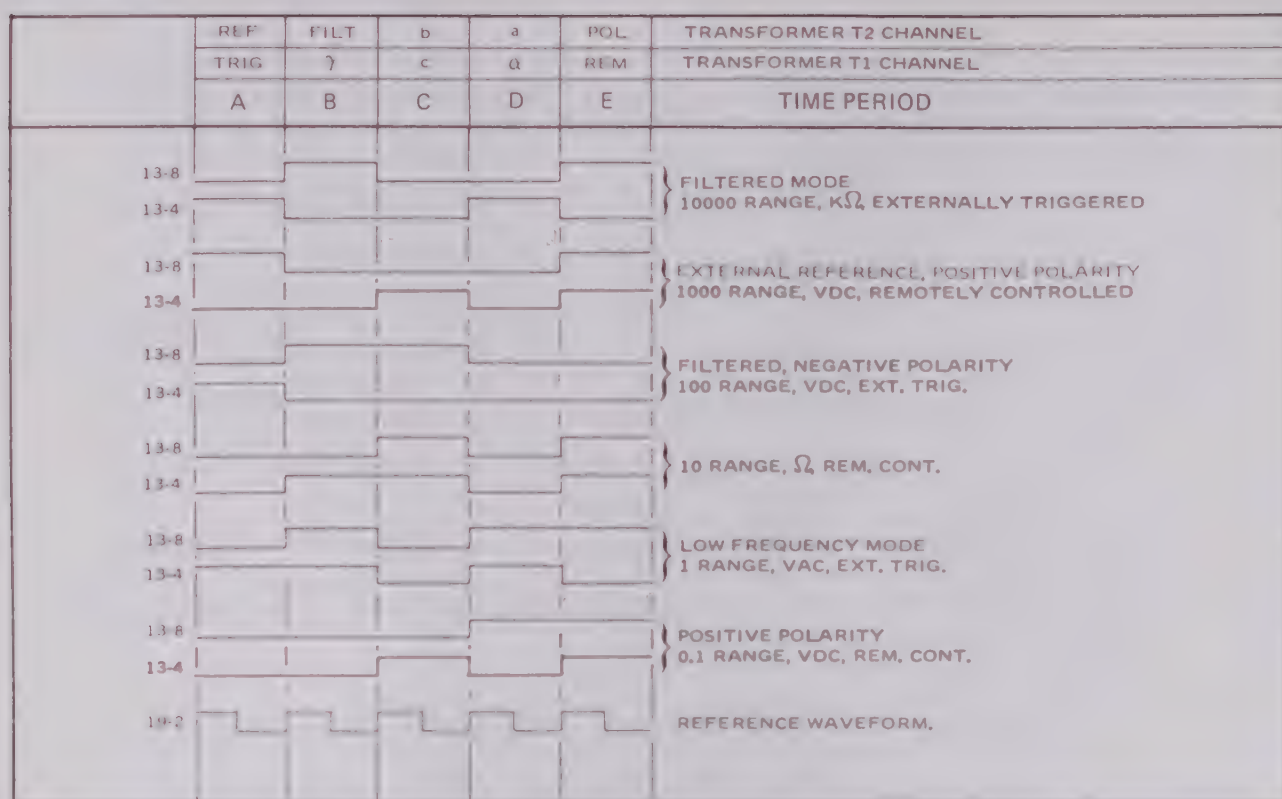


Figure 6-9. EXAMPLE WAVEFORMS FOR TROUBLESHOOTING

6-47. LIST OF REPLACEABLE PARTS

6-48. For column entry explanations, part ordering information and basic instrument configuration Use Codes

and Serial Number Effectivity List, see Section 5, paragraphs 5-1 through 5-10. See paragraph 6-50, this option subsection, for additional Use Codes and Serial Number Effectivity List assigned to this printed circuit assembly option.

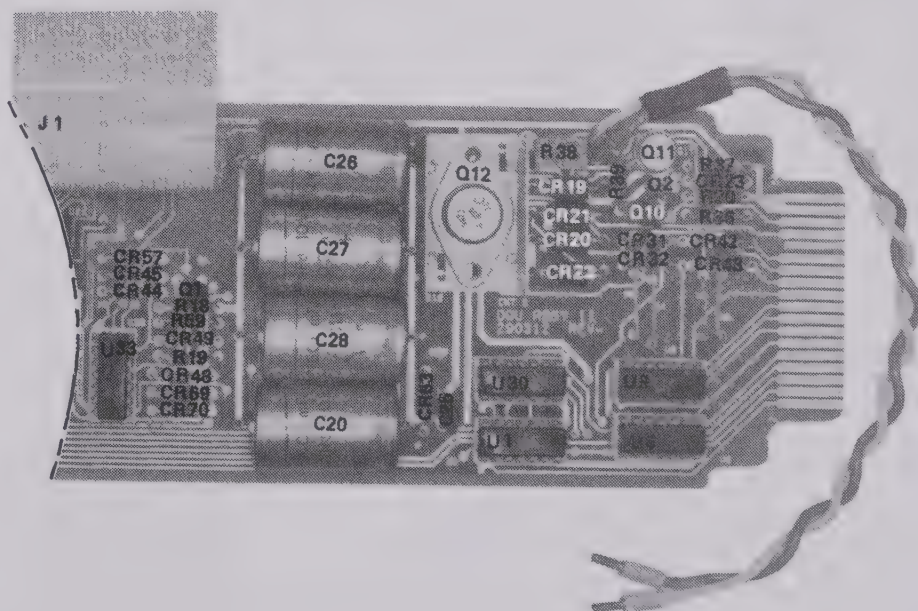
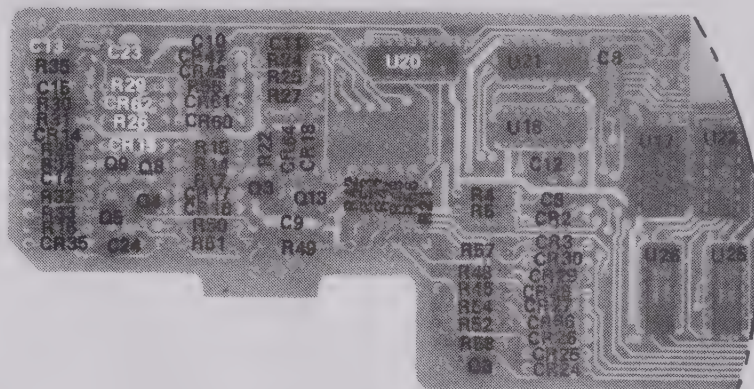


Figure 6-10. DATA OUTPUT NO. 2 PRINTED CIRCUIT BOARD ASSEMBLY

REF DESIG OR ITEM NO.	DESCRIPTION	FLUKE STOCK NO.	MFG FED SPLY CDE	MFG PART NO. OR TYPE	TOT QTY	REC QTY	USE CDE
	DATA OUTPUT -03 Option						
	DATA OUTPUT NO. 2				REF		
	Figure 6-10						
C6, C12, C24, C25, C31	Cap, cer, 0.0012 uf $\pm 10\%$, 500V	106732			5		
C8	Cap, plstc, 0.22 uf $\pm 10\%$, 250V	194803			1		
C9	Cap, Ta, 3.3 uf $\pm 5\%$, 20V	271230			1		
C10, C13, C30, C32, C33, C35, C36, C40	Cap, cer, 0.01 uf $\pm 20\%$, 100V	149153			8		
C11	Cap, Ta, 2.2 uf $\pm 10\%$, 20V	160226			1		
C14	Cap, Ta, .33 uf $\pm 5\%$, 20V	271338			1		
C15	Cap, Ta, 0.68 uf $\pm 10\%$, 35V	182790			1		
C20, C26, C27, C28	Cap, elect, 1600 uf $+50/-10\%$, 10V	272732			4		
C23, C29	Cap, cer, 0.025 uf $\pm 2\%$, 100V	168435			2		
CR2, CR14, CR18, CR31, CR32, CR42 thru CR49, CR60 thru CR63, CR71, CR72	Diode, germanium, 80 mA, 100 piv	149187			19		

REF DESIG OR ITEM NO.	DESCRIPTION	FLUKE STOCK NO.	MFG FED SPLY CDE	MFG PART NO. OR TYPE	TOT QTY	REC QTY	USE CDE
CR3, CR15, CR16, CR17, CR24 thru CR30, CR35, CR57, CR64, CR66, CR69, CR70, CR100	Diode, silicon, 150 mA	203323			18		
CR19 thru CR22	Diode, silicon, 1 amp, 100 piv	116111			4		
CR23	Diode, zener, 3.9V, 20 mA	113316			1		
CR23	Diode zener, 4.3V	180455			1		L
J1	Connector, PCB to cable, 34 contact	295337			1		
Q1, Q2, Q6, Q7, Q8	Tstr, silicon, NPN	218396			5		
Q3, Q9, Q13	Tstr, silicon, PNP	195974			3		
Q4	Tstr, semicon, silicon NPN	218081			1		
Q5	Tstr, silicon, PNP Order by model and option no. (8400A 03 option)	229898			1		
Q10	Tstr, silicon, NPN	168708			1		
Q11	Tstr, silicon, NPN	150359			1		
Q12	Tstr, silicon, NPN	288381			1		
R4, R5, R30, R31, R61, R62,	Res, comp, 4.7k $\pm 5\%$, $\frac{1}{4}w$	148072			8		

REF DESIG OR ITEM NO.	DESCRIPTION	FLUKE STOCK NO.	MFG FED SPLY CDE	MFG PART NO. OR TYPE	TOT QTY	REC QTY	USE CDE
R63, R64,							
R14, R15	Res, comp, 2.7k $\pm 5\%$, $\frac{1}{4}w$	170720			2		
R16	Res, comp, 47k $\pm 5\%$, $\frac{1}{4}w$	148163			1		
R17	Res, comp, 6.8k $\pm 5\%$, $\frac{1}{4}w$	148098			1		
R18, R59	Res, comp, 680 $\pm 5\%$, $\frac{1}{4}w$	148007			2		
R19, R20, R21, R25, R26, R27	Res, comp, 10k $\pm 5\%$, $\frac{1}{4}w$	148106			6		
R22	Res, fxd, met flm, 1.62k $\pm 1\%$, 1/8w	283697			1		
R24, R55	Res, comp, 1k $\pm 5\%$, $\frac{1}{4}w$	148023			2		
R28	Res, comp, 220 $\pm 5\%$, $\frac{1}{4}w$	147959			1		
R29	Res, comp, 1.8k $\pm 5\%$, $\frac{1}{4}w$	175042			1		
R32	Res, comp, 2.2k $\pm 5\%$, $\frac{1}{4}w$	148049			1		
R33	Res, comp, 3.3k $\pm 5\%$, $\frac{1}{4}w$	148056			1		
R34	Res, comp, 27k $\pm 5\%$, $\frac{1}{4}w$	148114			1		
R35	Res, comp, 15k $\pm 5\%$, $\frac{1}{4}w$	148148			1		
R36	Res, comp, 3.9k $\pm 5\%$, $\frac{1}{4}w$	148064			1		
R37	Res, comp, 5.6k $\pm 5\%$, $\frac{1}{4}w$	148080			1		
R38	Res, var, cer met, 500 $\pm 10\%$, 1w	291120			1		
R39	Res, met flm, 182 $\pm 1\%$, 1/8w	20020			1		
R42	Res, comp, 150k $\pm 5\%$, $\frac{1}{4}w$	182212			1		
R45, R47, R53, R56	Res, fxd, met flm, 105k $\pm 1\%$, 1/8w	291294			4		
R46	Res, met flm, 20.5k $\pm 1\%$, $\frac{1}{4}w$	261669			1		

REF DESIG OR ITEM NO.	DESCRIPTION	FLUKE STOCK NO.	MFG FED SPLY CDE	MFG PART NO. OR TYPE	TOT QTY	REC QTY	USE CDE
R48, R54	Res, met flm, 6.81k $\pm 1\%$, 1/8w	268417			2		A
R48, R54	Res, met flm, 20.5k $\pm 1\%$, 1/8w	261669			2		B
R49	Res, fxd, met flm, 274k $\pm 1\%$, 1/8w	237297			1		
R50	Res, comp, factory selected				1		
R51	Res, met flm, 140k $\pm 1\%$, 1/8w	233148			1		
R52	Res, met flm 6.81k $\pm 1\%$, 1/8w	268417			1		
R57	Res, met flm, 2.15k $\pm 1\%$, 1/8w	293712			1		A
R57	Res, met flm, 1.87k $\pm 1\%$, 1/8w	267229			1		B
R58	Res, comp, 56k $\pm 5\%$, 1/4w	170738			1		
U1	IC, DTL, Hex Inverter	268367			1		
U8, U9, U30, U33	IC, DTL, Quad 2-Input Nand Gate	268375			4		
U17	IC, DTL, Quad 2-Input Nand Power Gate	288597			1		
U18	IC, TTL, Quad 2-Input Nor Gate	268540			1		
U20	IC, TTL, Quad 2-Input Nand Gate	292953			1		
U21, U25, U26	IC, DTL, Dual JK Flip-Flop	288811			3		
U22	IC, DTL, Triple 3-Input Nand Gate	266312			1		
	Socket, IC, 14 contact	276527			10		
	Socket, IC, 14 contact	291542			2		
	 Order by model and option number (8400A-03)						

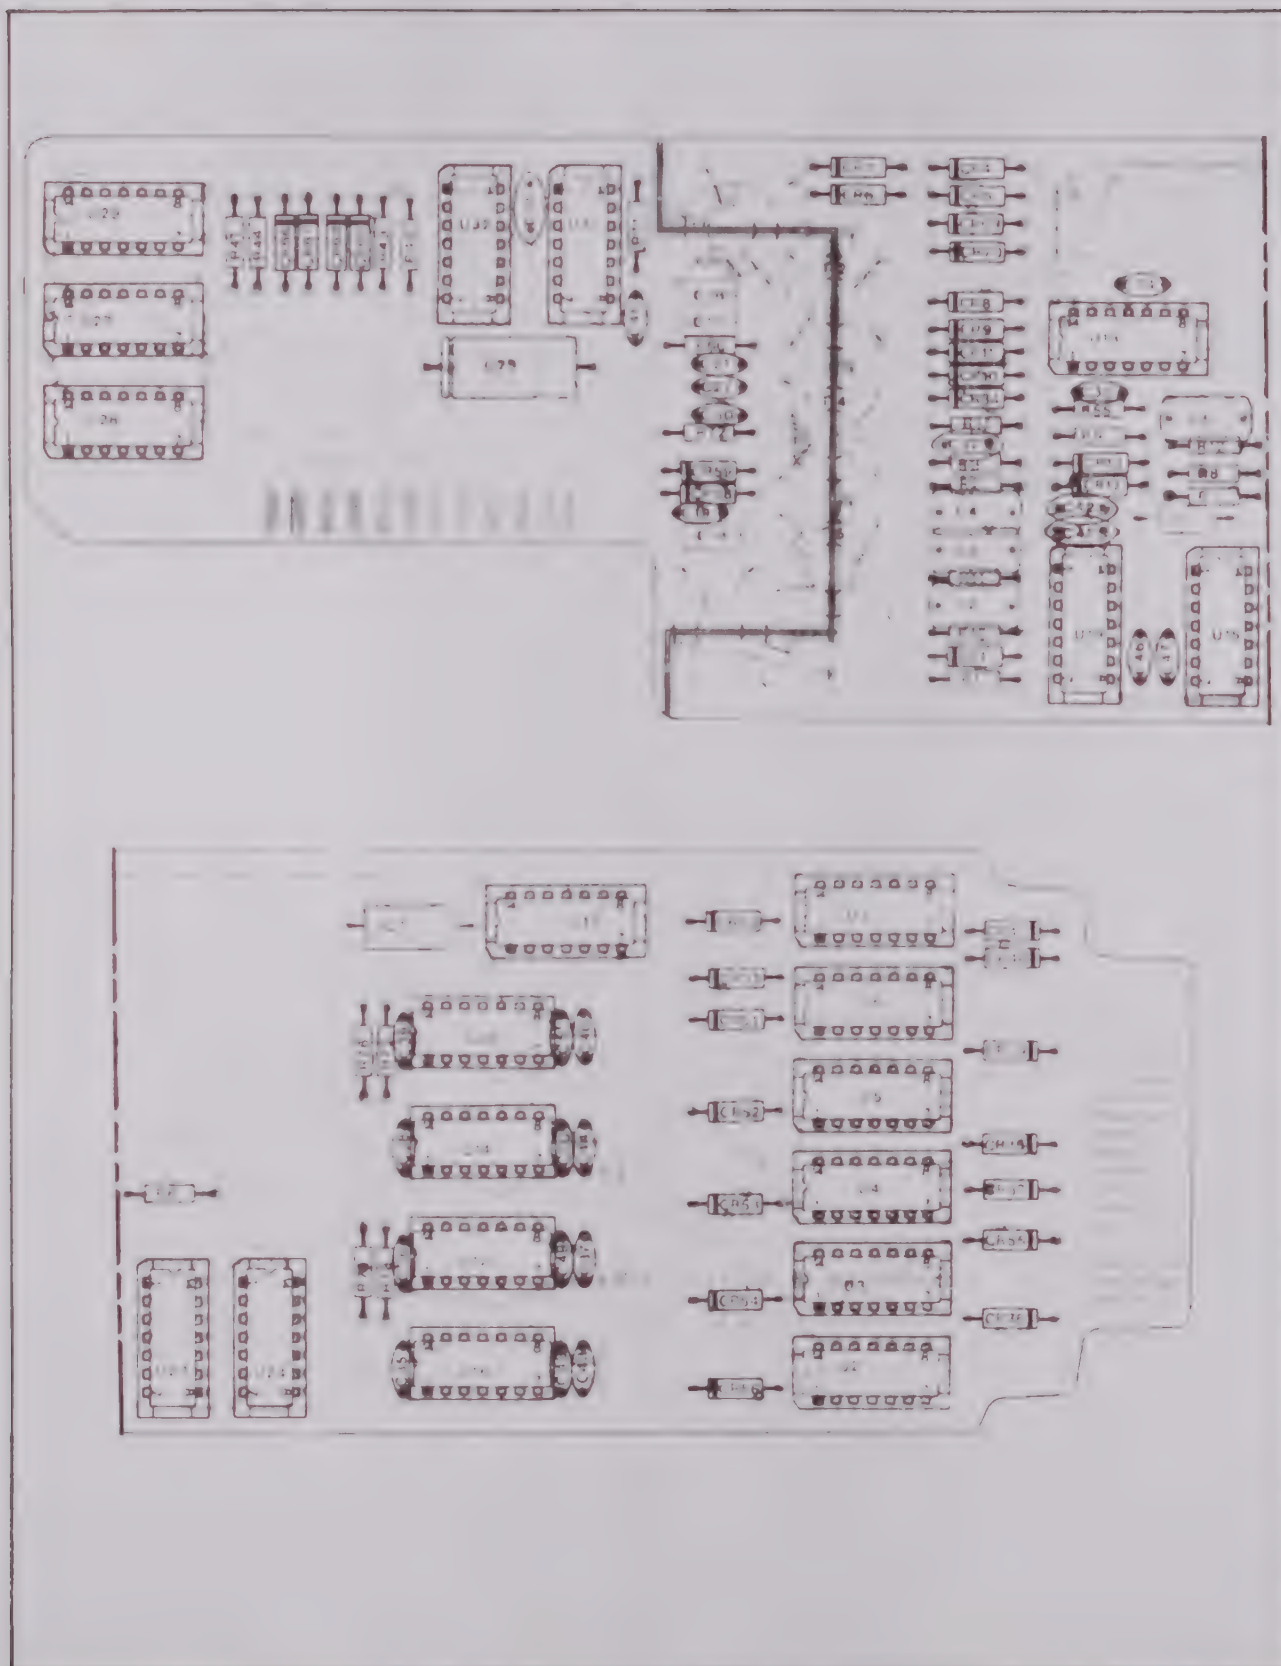


Figure 6-11. DATA OUTPUT NO. 1 PRINTED CIRCUIT BOARD ASSEMBLY

REF DESIG OR ITEM NO.	DESCRIPTION	FLUKE STOCK NO.	MFG FED SPLY CDE	MFG PART NO. OR TYPE	TOT QTY	REC QTY	USE CDE
A7	DATA OUTPUT NO.1 Figure 6-11				REF		
C1	Cap, tant, 33 uf $\pm 10\%$, 10V	182832			1		
C2, C4	Cap, plstc, 0.1 uf $\pm 10\%$, 250V	161992			2		
C3, C5	Cap, plstc, 0.027 uf $\pm 10\%$, 250V	267120			2		
C6, C8 thru C15, C20, C23 thru C28	Used on D.O. U. No. 2						
C7	Cap, Ta, 0.68 uf $\pm 10\%$, 35V	182790			1		
C16, C17, C18	Cap, cer, 0.22 uf $\pm 20\%$, 50V	309849			3		
C19, C21, C22, C30, C33, C34, C37, C40, C43 thru C51	Cap, cer, 0.01 uf $\pm 20\%$, 100V	149153			17		
C29	Cap, elect, 200 uf $+50/-10\%$, 10V	236935			1		
C31	Cap, cer, .005 uf $\pm 20\%$, 50V	175232			1		
C32, C41, C42	Cap, cer, .025 uf $\pm 20\%$, 50V	168435			3		
C35 thru C39	Cap, cer, .0012 uf $\pm 10\%$, 500V	106732			4		

REF DESIG OR ITEM NO.	DESCRIPTION	FLUKE STOCK NO.	MFG FED SPLY CDE	MFG PART NO. OR TYPE	TOT QTY	REC QTY	USE CDE
CR1, CR4 thru CR13, CR33, CR34, CR36 thru CR41, CR50 thru CR56, CR58, CR59, CR65 thru CR70	Diode, germanium, 80 mA, 100 piv	149187			34		
CR2, CR3, CR14 thru CR32, CR35, CR42 thru CR49, CR57, CR60 thru CR64	Not Used						
P22	Connector, PCB to cable, 34 contact	295337			1		
R1, R11	Res, comp, 100 $\pm 5\%$, $\frac{1}{4}w$	147926			2		
R2,R3 R72	Res, comp, 220 $\pm 5\%$, $\frac{1}{4}w$	147959			3		
R4,R5, R14 thru R39, R45 thru R54	Not Used						
R6,R7 R13	Res, comp, 3.9k $\pm 5\%$, $\frac{1}{4}w$	148064			3		

REF DESIG OR ITEM NO.	DESCRIPTION	FLUKE STOCK NO.	MFG FED SPLY CDE	MFG PART NO. OR TYPE	TOT QTY	REC QTY	USE CDE
R8, R40, R41, R43, R44	Res, comp, 470 $\pm 5\%$, $\frac{1}{4}w$	147983			5		
R9, R55	Res, comp, 12k $\pm 5\%$, $\frac{1}{4}w$	159731			2		
R10	Res, comp, 10k $\pm 5\%$, $\frac{1}{4}w$	148106			1		
R12	Res, comp, 1k $\pm 5\%$, $\frac{1}{4}w$	148023			1		
R60, R71	Res, comp, 390 $\pm 5\%$, $\frac{1}{4}w$	147075			2		
R73 thru R76	Res, comp, 27 $\pm 5\%$, $\frac{1}{4}w$	160812			4		
T1 thru T5	Transformer, pulse	275362			5		
U1, U8, U9, U17, U18, U20, U21, U22, U25, U26, U30	Not Used						
U2 thru U7, U11, U24, U27, U28, U29	IC, DTL, Quad 2-Input Nand Gate	268375			11		
U10, U12, U14, U16	IC, TTL, 8-Bit Shift Register	272138			4		

REF DESIG OR ITEM NO.	DESCRIPTION	FLUKE STOCK NO.	MFG FED SPLY CDE	MFG PART NO. OR TYPE	TOT QTY	REC QTY	USE CDE
U13, U32	IC, DTL, Hex Inverter	268367			2		
U15, U19	IC, TTL, Quad 2-Input Nor Gate	268540			2		
U23	IC, DTL, triple 3-Input Nand Gate	266312			1		
U31	IC, TTL, Hex Inverter	292979			1		
	Socket, IC, 14 contact	276527			17		
	Socket, IC, 14 contact Low profile	291542			4		
	 Order by model and option no. (8400A-03 option)						

6-49. SERIAL NUMBER EFFECTIVITY

6-50. A Use Code column is provided to identify certain parts that have been added, deleted, or modified during production of the Model 8400A. Each part in this option for which a use code has been assigned may be identified with a particular printed circuit board serial number by consulting the Use Code Effectivity List below. All parts with no code are used on all printed circuit boards with

serial numbers 123 and on. NOTE: These Use Codes and Serial Number Effectivity apply to this option printed circuit board assembly only. For the standard instrument configuration, see Section 5, paragraph 5-9, and for additional options, see the appropriate option subsection.

USE CODE	SERIAL NUMBER EFFECTIVITY
A	Serial number 123 through 148.
B	Serial number 149 and on.

Option - 04

Remote Control Unit

6-1. INTRODUCTION

6-2. The A5 Remote Control Unit (Option-04) enables the Model 8400A to be programmed remotely. The RCU provides the capability of controlling all functions and ranges, with logic interlocking provided to make it impossible to call two or more incompatible functions simultaneously.

6-3. SPECIFICATIONS

6-4. Specifications for the Remote Control Unit are located in Section 1 of the manual.

6-5. INSTALLATION

6-6. The following procedure is to be used to install the Remote Control Unit in the Model 8400A (refer to Section 5, Figure 5-1).

- a. Disconnect the power cord from the instrument.
- b. Remove the top dust and guard chassis covers.
- c. Determine that connector J5, on the A14 Display board, is clear of obstructions and that alignment spacers are inserted between pin pairs J5-1, -2; J5-3, -4 and J5-7, -8; J5-9, -10.
- d. Determine that connector slot on rear panel for P19 on Remote Control Unit board is clear of any obstructions.
- e. Attach spring to bottom portion of guard bar.

- f. Insert P19 into connector slot on rear panel (refer to Section 5, Figure 5-1).
- g. Insert edge of Remote Control Unit board into card guide on the inner chassis bulkhead.
- h. Observe that alignment spacers on J5 line up with slots on the Remote Control Unit card-edge connector.
- i. Slide pcb downward until the card-edge connector is fully engaged with J5 on A14 Display board.
- j. Attach top guard and chassis covers, connect ac power, and perform receiving inspection test of the Remote Control Unit as described in paragraph 6-27, Performance Test.

6-7. OPERATING INSTRUCTIONS

6-8. Operation of the DVM with the A5 Remote Control Unit installed is covered in Section 2.

6-9. THEORY OF OPERATION

6-10. General

6-11. The RCU functional block diagram is given in Figure 6-1. The input function and range commands are applied to coders and then delivered to a multiplexer. The multiplexer receives sequential address information from a counter and, combined with the range and function codes, applies control information to two isolation pulse transformers. The serial output of these two pulse transformers

is applied to the shift register for conversion back to 8 time slots which is then buffered and decoded and presented for

use. For the following discussion refer to Schematic Diagram 8400A-1011, Figure 6-1 and Figure 6-2.

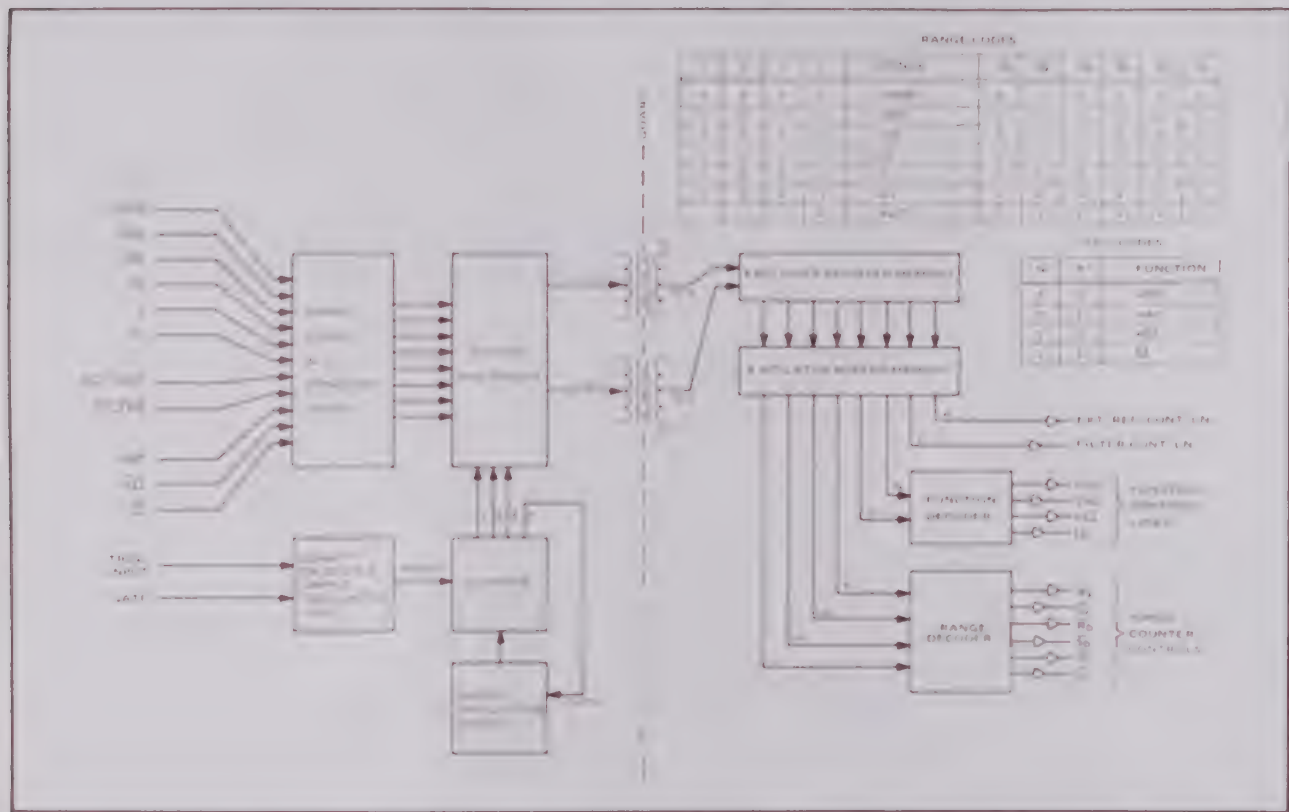


Figure 6-1. 8400A REMOTE CONTROL UNIT BLOCK DIAGRAM

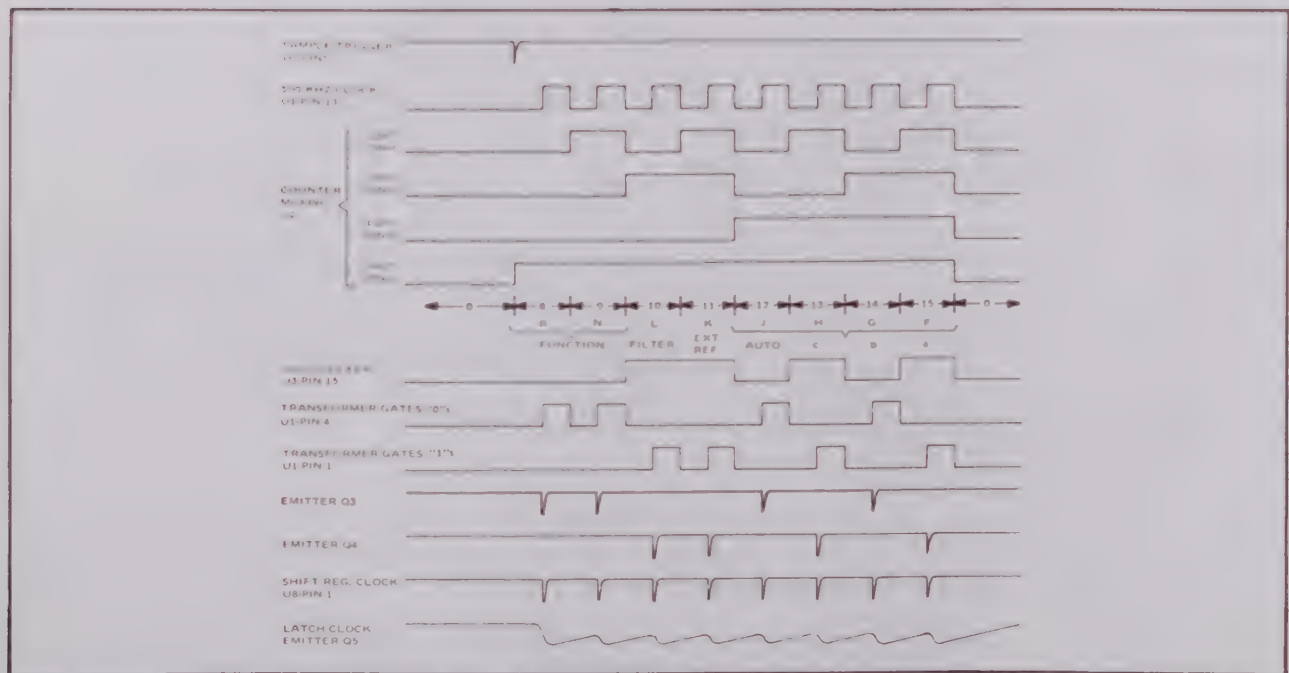


Figure 6-2. REMOTE CONTROL SAMPLE LOAD SEQUENCE

6-12. Circuit Description

6-13. **FUNCTION AND RANGE CODERS.** The purpose of the function and range coders is to compress the 12 input lines into 8 channels with function/range interlocking. Transistor Q15, inverters U15 A, C, F and diodes CR2, 3, 4, 5, 12, 19 and 20 combined are the function/range interlocking feature which disallows incorrect function and range combinations. Gates U5A, U5B, U6A through U6D present encoded range and function information to the digital multiplexer. Table 6-1 shows Function codes and Table 6-2 shows Range codes.

Table 6-1. FUNCTION CODES

INPUTS			RESULTING COMMAND	INFORMATION CHANNEL	
VAC	K Ω	Ω		N	R
1	1	1	VDC	0	0
0	1	1	VAC	0	1
1	0	1	K Ω	1	0
1	1	0	Ω	1	1

Table 6-2. RANGE CODES

FUNCTION COMMANDS POSSIBLE WITH THESE RANGES	RCU INPUTS						RANGE INFORMATION CHANNEL				OUTPUTS						RESULTING RANGE
	10k	1k	100	10	1	0.1	F	G	H	J	Ra	Sa	Rb	Sb	Rc	Sc	
Ω , K Ω , AC, DC	1	1	1	1	1	1	1	1	1	0	1	1	1	1	1	1	AUTO
Ω , K Ω	0	1	1	1	1	1	0	0	0	1	0	1	0	1	0	1	10k
Ω , K Ω , AC, DC	1	0	1	1	1	1	0	0	1	1	0	1	0	1	1	0	1k
Ω , K Ω , AC, DC	1	1	0	1	1	1	0	1	0	1	0	1	1	0	0	1	100
Ω , AC, DC	1	1	1	0	1	1	0	1	1	1	0	1	1	0	1	0	10
AC, DC	1	1	1	1	0	1	1	0	0	1	1	0	0	1	0	1	1
DC ONLY	1	1	1	1	1	0	1	0	1	1	1	0	0	1	1	0	0.1

6-14. **COUNTER AND GATED OSCILLATOR.** The purpose of the counter and gated oscillator circuitry is to supply sequential address information to the multiplexer in response to the 8 bit set pulses from the Schmitt Trigger and Sample Oscillator Circuitry. The 8 bit set pulses reset the counter to an 8 state (i.e. 1000). The counter U2 then releases the gated oscillator and allows it to oscillate at 500 kHz. Gates UIC and UID, capacitors C1, C2 and resistors R1, R2 are the gated 500 kHz oscillator circuitry. The output of the gated oscillator is applied to the counter U2. When enabled, the oscillator causes the counter to cycle through eight states. (Refer to Table 6-3). As soon as state "0" (i.e. 000) is reached by the counter, the oscillator is disabled by the counter, which in turn stops the counter from further counting. This sequence will not start again until an 8 bit set pulse is received by the counter from the Schmitt Trigger circuitry.

6-15. **SCHMITT TRIGGER AND SAMPLE OSCILLATOR.** The purpose of the Schmitt Trigger and Sample Oscillator is to set the sample rate of the RCU. Gates U4A through U4D, capacitors C3 and C4, resistors R3, R4, R5 and diodes CR30 and CR31 comprise the Schmitt Trigger and Sample Oscillator circuitry. There are two possible

modes of operation for this circuitry: continuous or triggered command mode.

6-16. **CONTINUOUS COMMAND MODE.** In this mode of operation, P19-33 (EXTERNAL COMMAND ENTRY) and P19-35 (AUTO COMMAND DEFEAT) must be at logic level "1" (+5V dc or open). A "1" command simultaneously present at pin 1 of gate U4A and pin 5 of gate U4B will cause gates U4A, B, C and D to oscillate. The frequency of

Table 6-3. COUNTER SEQUENCE

STATE	COMMENTS
0000	Oscillator is enabled at this point and count sequence begins.
1000	
1001	
1011	
1010	
1100	
1101	
1110	
1111	Oscillator is disabled at this point.
0000	

the oscillation is 2kHz as determined by R3, C4. Each pulse in the 2kHz pulse train at pin 8 of U4C acts as the 8 bit set pulse for counter U2. Thus, commands are updated at a 2kHz rate. Since this rate is faster than the instrument can respond, command appears continuous.

6-17. **TRIGGERED COMMAND MODE.** In this mode of operation, P19-35 (AUTO COMMAND DEFEAT) is held at logic level "0" and an external trigger is applied to P19-33 (EXTERNAL COMMAND ENTRY). With a logic level "0" at P19-35 gate U4A is disabled. The application of an external pulse to P19-33 will enable the schmitt trigger circuit, gates U4B, C and D, resulting in a negative pulse presented to the counter. As in the continuous command mode, this pulse initiates the command update cycle.

6-18. **DIGITAL MULTIPLEXER.** The Digital Multiplexer U3 is a medium scale integrated circuit constructed to connect various input signals, one at a time, to a single two-phase output in response to certain input addresses. Table 6-4 defines its operation. The output is serialized into eight time slots; each is 1μs in length.

6-19. **PULSE TRANSFORMER CIRCUITRY.** The purpose of this circuitry is to couple the serialized information to the shift register and provide isolation. Gates U1A and U1B pass the serialized information to primaries of pulse transformers T1 and T2 through buffer Q1, Q2. Gate U1A passes logic "1" information, and gate U1B passes Logic "0" information. The secondaries of T1 and T2 impose their respective logic to buffers Q4 and Q5 and thereby to the shift register.

6-20. **8 BIT SHIFT REGISTER MEMORY.** J-K flip flops U7A & B, U8A & B, U9A & B and U10A & B com-

prise the shift register. Diodes CR10, CR11, resistors R23, R24 comprise the clock network for the flip flops. The loading of the shift register occurs at pins 2 and 3 of U7A. The logic sequentially shifts through the flip flops until the last pulse of the loading cycle is loaded into U7A. At this time the shift register is fully loaded and will not change until another loading cycle occurs.

6-21. **8 BIT LATCH BUFFER MEMORY.** U11 and latch clock network, transistor Q5, diodes CR6 and CR7 plus capacitor C5, comprise the 8 Bit Latch Buffer Memory circuit. During the loading cycle of the 8 bit shift register memory circuit, transistor Q5 is turned on, which disconnects the inputs of ICU11 to preclude undesirable pulsing of output lines during the loading cycle. After the shift register is fully loaded, transistor Q5 turns off, thereby allowing the outputs of U11 to assume the states of the present inputs.

6-22. **DECODERS.** Decoder-buffers U12, U13, U14 and transistors Q6-Q11 decode the U11 latch information to the same format as seen on the inputs. Diodes CR21, CR22 provide for external reference lockout in Ohms and KΩ functions as is done by the front panel pushbuttons when the instrument is commanded locally.

6-23. MAINTENANCE

6-24. Introduction

6-25. This section contains maintenance information for the Remote Control Unit. Factory service information and general instructions regarding instrument access and cleaning are located in Section 4 of the manual.

Table 6-4. MULTIPLEXER OPERATION

IF THE INPUT ADDRESS IS:			THEN OUTPUT PIN 15 HAS THE SIGNIFICANCE	AND OUTPUT PIN 14 HAS THE SIGNIFICANCE	CHANNEL INFORMATION IS:
PIN 13	PIN 12	PIN 11			
0	0	0	R (pin 1)	$\overline{R}$	FUNCTION BIT
0	0	1	N (pin 2)	$\overline{N}$	FUNCTION BIT
0	1	0	L (pin 3)	$\overline{L}$	FILTER
0	1	1	K (pin 4)	$\overline{K}$	EXTERNAL REFERENCE
1	0	0	J (pin 5)	$\overline{J}$	AUTORANGE
1	0	1	H (pin 6)	$\overline{H}$	RANGE LSB
1	1	0	G (pin 7)	$\overline{G}$	RANGE BIT
1	1	1	F (pin 9)	$\overline{F}$	RANGE MSB

6-26. Performance Test

P19-2 or 4 or 6 (common).

6-27. The following performance test exercises each RCU input to determine if the unit is working properly. The performance test should be conducted before any instrument maintenance is attempted. The test should be conducted under the following environmental conditions: Ambient Temperature 0°C to 50°C, Relative Humidity less than 70%. An instrument that fails the performance test will require corrective maintenance. In case of difficulty, analysis of the test results, with reference to the troubleshooting section, should help to locate the trouble.

6-28. To test the RCU, proceed as follows:

a. Supply +5 volts dc to the RCU, P19-9 (+5V dc) and

- b. Press REMOTE FUNCTION switch on the Model 8400A front panel.
- c. Activate each of the combination of functions and ranges shown in column 1 and 2 of Figure 6-3 by contact closure between the appropriate pin and common of the RCU connector (refer to Table 2-5 of Section 2 for connector pin assignments). Observe the resulting front panel display and verify correct response for each call combination listed in Figure 6-3. Function annunciator will not show option functions if the pertinent option is not installed.

COMMANDED		DVM RESPONSE												
		FUNCTIONS								RANGES				
FUNCTIONS	RANGES	DC	AC	KΩ	Ω	X REF	FILT	OVER	.1	1	10	100	1000	10K
FILT, EXT REF*	.1	0			0	0			0					
	1	0			0	0				0				
	10	0			0	0					0			
	100	0			0	0						0		
	1000	0			0	0							0	
	NONE	0			0	0			Down ranges from 1000 to .1					
FILT, EXT REF,* Ω*	10			0							0			
	100			0		0						0		
	1000			0		0							0	
	10K			0		0								0
FILT, EXT REF,* KΩ	100		0			0						0		
	1000		0			0							0	
	10K		0			0								0
	NONE		0			0			Autoranges in the following order: 10,000K, 1000K, 100K, 10Ω and STOP					
EXT* REF, VAC*	1		0		0					0				
	10		0		0						0			
	100		0		0							0		
	1000		0		0								0	
	NONE		0		0				Downranges from 1000 to 1					
* Options Disregard DVM response for these functions if option is not installed.														

Figure 6-3. REMOTE CONTROL UNIT TEST REQUIREMENTS

6-29. Calibration

6-30. The RCU does not require calibration.

6-31. Troubleshooting

6-32. This section contains information designed to aid in troubleshooting the RCU. Before attempting to troubleshoot the RCU, however, it should be verified that the

trouble is actually in the instrument and is not caused by faulty external equipments or improper control settings. For this reason, the performance test (paragraph 6-26) is suggested as a first step in troubleshooting. The performance test may also help to localize the trouble to a particular section of the instrument. If the performance test fails to localize the trouble, the trouble analysis flow chart in Figure 6-4 and code information in Figure 6-5 may be helpful.

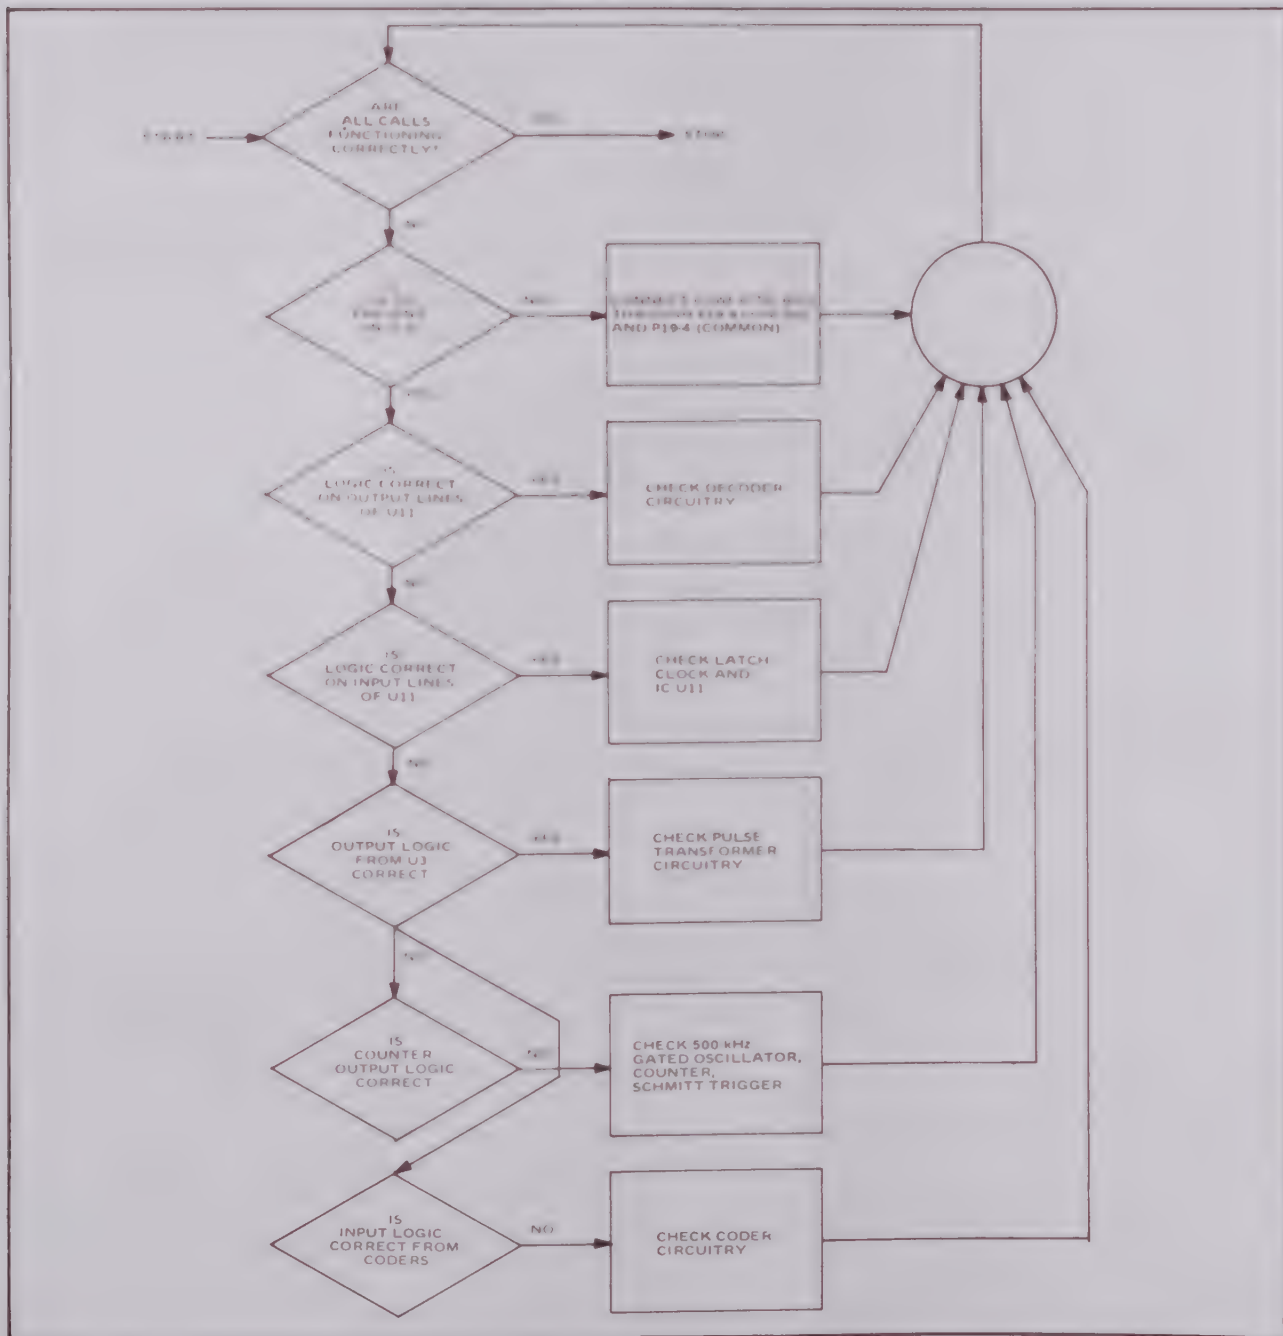


Figure 6-4. REMOTE CONTROL UNIT TROUBLE ANALYSIS (FLOW CHART)

RANGE CODES					FCT. CODES		
F	G	H	J	RANGE	N	R	FUNCTION
			0	AUTO	0	0	VDC
0	0	0	1	10,000	0	1	VAC
0	0	1	1	1000	1	0	K Ω
0	1	0	1	100	1	1	Ω
0	1	1	1	10			
1	0	0	1	1			
1	0	1	1	0.1			

Figure 6-5. FUNCTION AND RANGE CODES

6-33. LIST OF REPLACEABLE PARTS

6-34. For column entry explanations, part ordering information and basic instrument configuration Use Codes and Serial Number Effectivity List, see Section 5, paragraphs 5-1 through 5-10. See paragraph 6-35, this option subsection, for additional Use Codes and Serial Number Effectivity List assigned to this printed circuit assembly option.

6-35. SERIAL NUMBER EFFECTIVITY

6-36. A Use Code column is provided to identify certain parts that have been added, deleted, or modified during

production of the Model 8400A. Each part in this option for which a use code has been assigned may be identified with a particular printed circuit board serial number by consulting the Use Code Effectivity List below. All parts with no code are used on all printed circuit boards with serial numbers 123 and on. NOTE: These Use Codes and Serial Number Effectivity apply to this option printed circuit board only. For the standard instrument configuration, see Section 5, paragraph 5-9, and for additional options, see the appropriate option subsection.

USE CODE	SERIAL NUMBER EFFECTIVITY
A	Serial number 123 through 313
B	Serial number 314 and on

REF DESIG OR ITEM NO.	DESCRIPTION	FLUKE STOCK NO.	MFG FED SPLY CDE	MFG PART NO. OR TYPE	TOT QTY	REC QTY	USE CDE
A5	REMOTE CONTROL -04 Option				REF		
	Figure 6-6						
C1, C2	Cap, mica, 1500 pf $\pm 5\%$, 500V	148361			2		
C3	Cap, mylar, .01 uf $\pm 20\%$, 100V	149753			1		B
C3, C6	Cap, cer, 1200 pf $\pm 10\%$, 500V	106732			2		A
C6, C15	Cap, cer, 1200 pf $\pm 10\%$, 500V	106732			2		B
C4	Cap, Ta, 0.68 uf $\pm 10\%$, 35V	182790			1		A
C4	Cap, Ta, 3.3 uf $\pm 10\%$, 35V	182808			1		B
C5	Cap, Ta, 1 uf $\pm 20\%$, 35V	161919			1		
C7	Cap, elect, 200 uf $+50/-10\%$, 1-V	236935			1		
C8	Cap, cer, 0.01 uf $+80/-20\%$, 500V (Deleted)	105668			1		A B
C9	Cap, mica, 33pf $\pm 5\%$, 500V	160317			1		B
C10, C11	Cap, cer, .025 uf $\pm 20\%$, 50V	168435			2		B
C12, C13	Cap, cer, .005 uf $\pm 20\%$, 50V	175232			2		B
C14	Cap, Tan, 39 uf $\pm 20\%$, 20V	163915			1		B
CR1 thru CR12, CR19 thru CR28	Diode, germanium, 80 mA, 100 piv	149187			22		
CR13 thru CR18, CR29 thru CR36	Diode, silicon, 150 mA	203323			14		A
CR13 thru CR18, CR29 thru CR32, CR36	Diode, silicon, 150 mA	203323			11		B

REF DESIG OR ITEM NO.	DESCRIPTION	FLUKE STOCK NO.	MFG FED SPLY CDE	MFG PART NO. OR TYPE	TOT QTY	REC QTY	USE CDE
Q1,Q2, Q12 thru Q15	Tstr, silicon, NPN	218396			6		A
Q1,Q2, Q12, Q15	Tstr, silicon, NPN	218396			4		B
Q3,Q4, Q5,Q8, Q9	Tstr, silicon, PNP	195974			5		
Q6,Q7, Q10, Q11	Tstr, silicon, PNP, selected	280198			4		
R1,R2	Res, comp, 820 $\pm 5\%$, $\frac{1}{4}w$	148015			2		
R3	Res, comp, 47 $\pm 5\%$, $\frac{1}{4}w$	147892			1		
R4,R5	Res, comp, 1k $\pm 5\%$, $\frac{1}{4}w$	148023			2		B
R4,R5, R20	Res, comp, 4.7k $\pm 5\%$, $\frac{1}{4}w$	148072			3		A
R6,R7	Res, comp, 100 $\pm 5\%$, $\frac{1}{4}w$	147926			2		
R8,R9	Res, comp, 330 $\pm 5\%$, $\frac{1}{4}w$	147967			2		
R10, R19	Res, comp, 3.3k $\pm 5\%$, $\frac{1}{4}w$	148056			2		
R11	Res, comp, 2.2k $\pm 5\%$, $\frac{1}{4}w$	148049			1		
R12, R25	Res, comp, 10k $\pm 5\%$, $\frac{1}{4}w$	148106			2		
R13, R18	Res, comp, 270 $\pm 5\%$, $\frac{1}{4}w$	160804			2		A
R13, R18, R20	Res, comp, 270 $\pm 5\%$, $\frac{1}{4}w$	160804			3		B
R14 thru R17	Res, comp, 390 $\pm 5\%$, $\frac{1}{4}w$	147975			4		
R21, R22	Res, comp, 15k $\pm 5\%$, $\frac{1}{4}w$	148114			2		

REF DESIG OR ITEM NO.	DESCRIPTION	FLUKE STOCK NO.	MFG FED SPLY CDE	MFG PART NO. OR TYPE	TOT QTY	REC QTY	USE CDE
R23, R24	Res, comp, 1.2k $\pm$ 5%, $\frac{1}{4}$ w	190371			2		
R26, R27	Res, comp, 4.7k $\pm$ 5%, $\frac{1}{4}$ w	148072			2		B
T1, T2	Transformer, pulse	275362			2		
U1	IC, TTL, Quad 2-Input Nor Gate	288845			1		
U2	IC, DTL, Binary Counter	267153			1		
U3	IC, TTL, Digital Multiplexer	288852			1		
U4	IC, TTL, Quad 2-Input Nand Gate	292953			1		B
U4, U6, U12, U13, U14	IC, DTL, Quad 2-Input Nand Gate	268375			5		A
U5	IC, DTL, dual 4-Input Nand	268383			1		
U6, U12, U13, U14	IC, DTL, Quad 2-Input Nand Gate	268375			4		B
U7	IC, TTL, dual J-K Flip-Flop	268441			1		
U8, U9, U10	IC, DTL, dual J-K Flip-Flop	288803			3		
U11	IC, TTL, 8-Bit Latch	288837			1		
U15	IC, DTL, Hex Inverter	268367			1		
	Socket, IC, 14 contact, U1, U2, U4, U5, U6, U8, U9, U10 & U12 thru U15	276527			12		
	Socket, IC, 16 contact, U3 & U7	276535			2		
	Socket, IC, 24 contact, U11	292946			1		

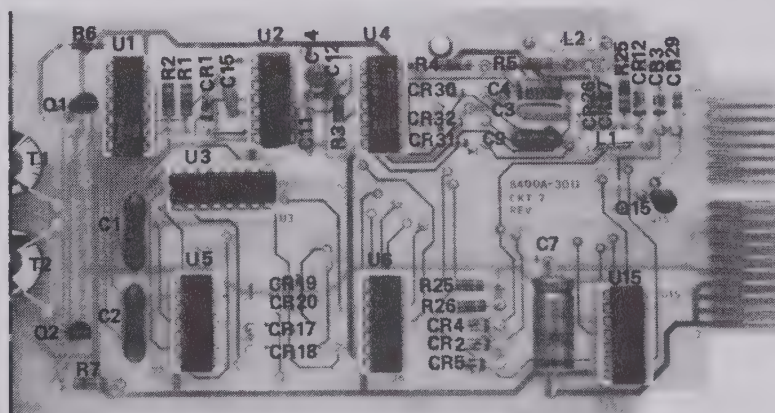
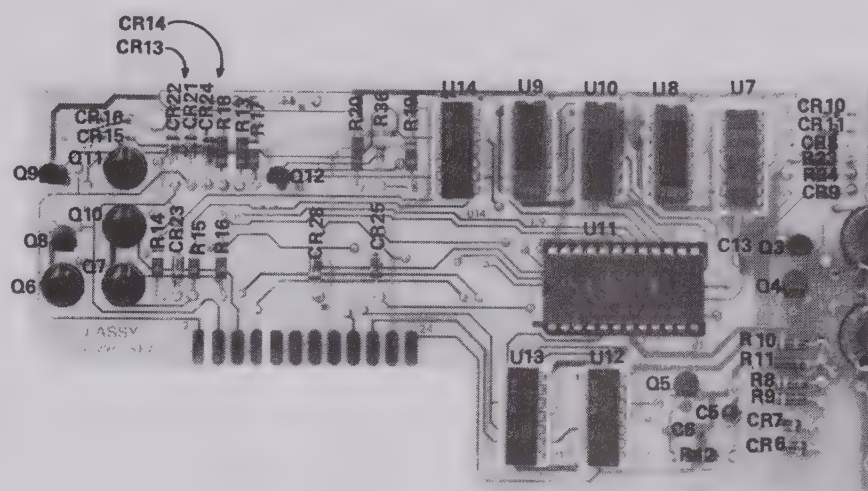


Figure 6-6. REMOTE CONTROL UNIT PCB ASSEMBLY

Option-05

DC External Reference

6-1. INTRODUCTION

6-2. The DC External Reference (Option -05) enables the user to substitute an external voltage for the internal reference of the Model 8400A. The principal use of the DVM when operated in this manner is for four-wire voltage ratio measurements: $\pm$ dc to dc, and ac to dc.

6-3. SPECIFICATIONS

6-4. Specifications for the DC External Reference are located in Section 1 of the manual.

6-5. INSTALLATION

6-6. The following procedure should be used to install the DC External Reference option in the Model 8400A.

NOTE

The DC External Reference option is not field installable in 8400A mainframes serial No. 634 and below.

- a. Disconnect power cord from line power.
- b. Remove the Model 8400A top dust cover and top inner guard chassis cover.
- c. Determine that connector J3 on A14 Display board is clear of obstructions and that alignment keys are inserted between pin pairs J3-1, -2; J3-3, -4 and J3-13, -14; J3-15, -16.
- d. Remove connector mounting bracket located on rear portion of inner chassis, next to power transformer.
- e. Mount the DC External Reference connector to the connector bracket with orientation as shown on the rear panel decal. The lug attached to pin 1 of the connector is to be attached to the guard chassis through one of the mounting screws on the DC External Reference connector.
- f. Reinstall connector mounting bracket on the inner chassis.
- g. Align DC External Reference board with vertical card guides mounted on inner chassis bulkhead.
- h. Align rubber grommet with slot in rear inner chassis and slide grommet into slot.
- i. Slide DC External Reference board downward while observing that alignment keys on J3 are in proper alignment with the slots in the printed circuit board.
- j. Engage printed circuit board fully in J3 connector.
- k. Attach guard and top dust covers, connect power cord to line power, and perform receiving inspection test of DC External Reference assembly as described in paragraph 6-26, Performance Test.

6-7. OPERATING INSTRUCTIONS

6-8. Operating instructions for the Model 8400A with DC External Reference installed are located in Section 2 of the manual.

6-9. THEORY OF OPERATING

6-10. General

6-11. The DC External Reference unit consists basically of an input divider, an isolation circuit, and a buffer amplifier, as shown in Figure 6-1.

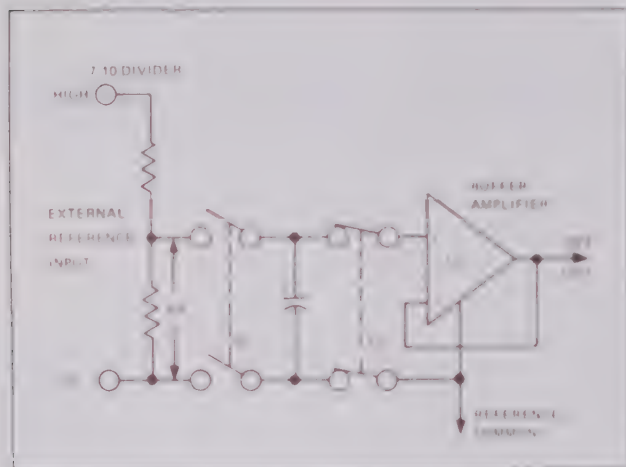


Figure 6-1. DC EXTERNAL REFERENCE SIMPLIFIED DIAGRAM.

The input divider produces an output that is 7/10 of the reference input voltage. The circuit is designed to operate with a reference input voltage between +1 and +10.5 volts dc. The isolation circuit provides a means of isolating the input common of the DC External Reference unit from the output common of the DC External Reference unit. This is necessary to provide 4 terminal ratio capability, and because the Model 8400A input common terminal (LO) and the instrument common are not equivalent. In fact, the LO instrument INPUT terminal is the actual input to the A/D Converter and can have a potential of ± 12 volts dc with respect to instrument common. Switches S1 and S2 are arranged so that when one is closed, the other is open. S1 is closed during a non-critical portion of the measurement cycle (A/D zero time) and capacitor C is allowed to charge to voltage E_R . When S2 is closed, the output of A_1 must be E_R .

6-12. Circuit Description

6-13. INPUT DIVIDER. The input divider consists of resistors R3 through R5. The input divider is adjusted by resistor R4, (10V CAL control). Capacitor C1 together with the divider resistors form an RC filter which improves the signal to noise ratio.

6-14. ISOLATION CIRCUIT. Input dual MOSFET Q9 functions as switch S1 in the simplified diagram and JFET

switches Q4 and Q5 function as switch S2. Transistors Q1 and Q2 are gate drivers for switches Q4 and Q5. Using the reference voltage for the collector supply of Q2 assures that the gate signal of Q4 never goes positive with respect to its source and drain terminals. The gate of Q5 is clamped to within 0.2 volts of common by diode CR3. Resistor R11 limits the current through CR3 and capacitor C4 compensates for the capacity of CR3.

6-15. BUFFER AMPLIFIER. The buffer amplifier consists of super beta transistor Q8 followed by operational amplifier U1. Transistor Q7 and resistor R23 comprise a constant current source for amplifier Q8. Resistor R29 provides base current for the input terminal of transistor Q8. Transistor Q6 and associated circuitry provide a constant current source for the collectors of Q8. Transistor Q8 is bootstrapped by the output of amplifier U1, via resistors R15 and R16, to increase the SMRR of the buffer amplifier. Frequency compensation is provided by capacitors C7, C8. Capacitor C6 holds the input voltage to the buffer amplifier during the time switches Q4 and Q5 are off. The reference voltage in the A/D Converter is sensed through resistor R28, thereby compensating for line drops. Low sense (reference common) also originates in the Logic and A/D assemblies. Diodes CR8 and CR9 provide feedback to the voltage follower input when reed relay K1 is open, thereby maintaining amplifier output within 0.5 volts of the voltage on C2 and thus controlling the gate drive for Q4. Resistors R30 through R32, coupled with resistor R28, generate small corrections in the output reference voltage to compensate small errors proportional to the voltage difference between the input common and circuit common.

6-16. VOLTAGE DISTRIBUTION. Voltage distribution is shown in the simplified schematic Figure 6-2. Since Q9 is a P-channel enhancement mode device, a negative gate voltage of 2 volts or more is needed to ensure that the transistor is on. Zero volts or a positive gate voltage turns the transistor off. As shown in the figure, the upper switch needs a minimum of -7.25 volts to turn on and a maximum of ~ 20 volts to turn off under all possible operating circumstances.

6-17. The MOSFET gate driver is redrawn in Figure 6-3 to show the peak voltages. When Q3 is saturated, CR4 is back biased. When the transistor is cutoff, C5 charges to 8 volts because of the 12 volt drop across the zener. This voltage subtracts from the collector voltage giving the voltage shown.

6-18. DISABLE AND PROTECTION CIRCUITS. When the external reference is called, relay K1 is energized by Q10 and the internal reference disable line is pulled to +5V. Input protection is provided by diodes CR1 and CR2 and fuse F1.

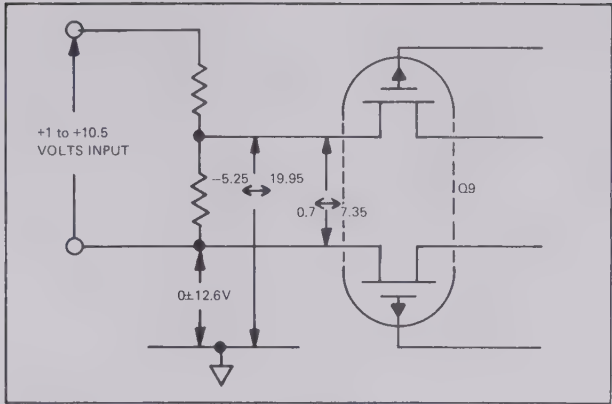


Figure 6-2. VOLTAGE DISTRIBUTION IN MOSFET Q9.

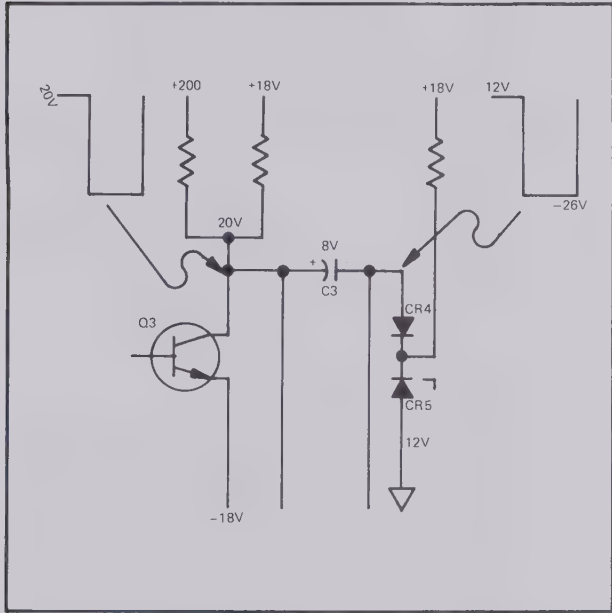


Figure 6-3. GATE DRIVER VOLTAGES.

6-19. MAINTENANCE

6-20. Introduction

6-21. This section contains maintenance information for the DC External Reference. Factory service information and general instructions regarding instrument access and cleaning are located in Section 4 of the manual.

6-22. Fuse Replacement

6-23. There are two fuses located on the DC External Reference board. F1 is the active fuse and is to be replaced with the SPARE FUSE when necessary. Both fuses are 15 ma, pigtail fuses.

6-24. Test Equipment

6-25. The following equipment is recommended for performance testing, troubleshooting, and calibration of the DC External Reference. If the recommended equipment is not available, equivalent or better instruments may be substituted.

EQUIPMENT NOMENCLATURE	RECOMMENDED EQUIPMENT
DC Voltage Source	Fluke Model 343A DC Voltage Calibrator
Kelvin Varley Divider	Fluke Model 720A
Oscilloscope	Tektronix Model 547
Oscilloscope Plug-IN	Tektronix Model 1A1

6-26. Performance Test

6-27. The performance test in this section compares the DC External Reference performance to the accuracy specifications in Section 1 of the manual to determine if the unit is in calibration. To test the unit, a reference voltage is applied to the DC External Reference input terminals, a dc voltage is applied to the DVM INPUT terminals, and proper DVM readout is verified. The performance test should be conducted before any instrument maintenance or calibrating is attempted. The test is also suited to receiving inspection of new units. Performance test should be conducted under the following environmental conditions: ambient temperature $23^{\circ}\text{C} \pm 5\text{C}$, relative humidity less than 70%. An instrument that fails the performance test will require corrective maintenance or calibration. In case of difficulty, analysis of the test results, with reference to the troubleshooting section, should help to locate the trouble.

NOTE!

Permissible tolerances for voltage and resistance measurements are derived from the 90-day instrument specifications contained in Section 1 of the manual.

6-28. To test the DC External Reference unit, proceed as follows:

- Connect the dc voltage source to the Model 8400A as shown in Figure 6-4.

- b. Set the Model 8400A controls as follows:
- | | |
|----------|--------------|
| POWER | ON |
| FUNCTION | EXT REF, VDC |
| RANGE | 10 |
- c. Set the dc voltage source controls for 10 volt dc output.
- d. The Model 8400A readout should be $+10.0000 \pm 0.0007$.

6-29. Calibration

6-30. The DC External Reference Unit should be calibrated every 90 days or whenever repairs have been made to circuitry which may affect the calibration accuracy. Calibration of the unit should be performed at an ambient temperature of $23^{\circ}\text{C} \pm 2^{\circ}\text{C}$. Relative humidity should be less than 70%. Consult paragraph 6-4 for recommended test equipment.

6-31. PRELIMINARY OPERATIONS

- Remove the top dust cover retaining screws but leave the dust cover in place on the instrument.
- Set the rear panel 115/230 volt slide switch to the 115 volt position and connect the line cord to an autotransformer set to 120 volts ac.
- Connect equipment as shown in Figure 6-4.
- Turn on the Model 8400A and allow the instrument to operate for one hour.

6-32. ALIGNMENT

- a. Set Model 8400A controls as follows:

FUNCTION	EXT REF, VDC
RANGE	10
SAMPLE RATE	as desired

- Set the 720A dials to 8005000.
- Set the 343A output to 10 volts.
- Adjust DC EXT REF 10V CAL (A3R4) in the DC External Reference Unit for a readout of 8.0050 ± 1 digit.
- Set the 343A output to 2 volts.
- Adjust DC EXT REF 2V CAL (A3R20) in the DC External Reference Unit for a readout of 8.0050 ± 1 digit.
- Repeat steps (b) through (f), as required, until no more adjustment is necessary.
- Set the 343A output to 10.000 volts.
- Record DVM reading.
- Reverse the input to the DVM only. DVM reading should be within 2 digits of value recorded in step (i).
- Reverse the input to the DVM only, and set calibrator to 5.0 volts.
- DVM readout should be 8.0050 ± 3 digits.
- Disconnect calibration equipment from Model 8400A.

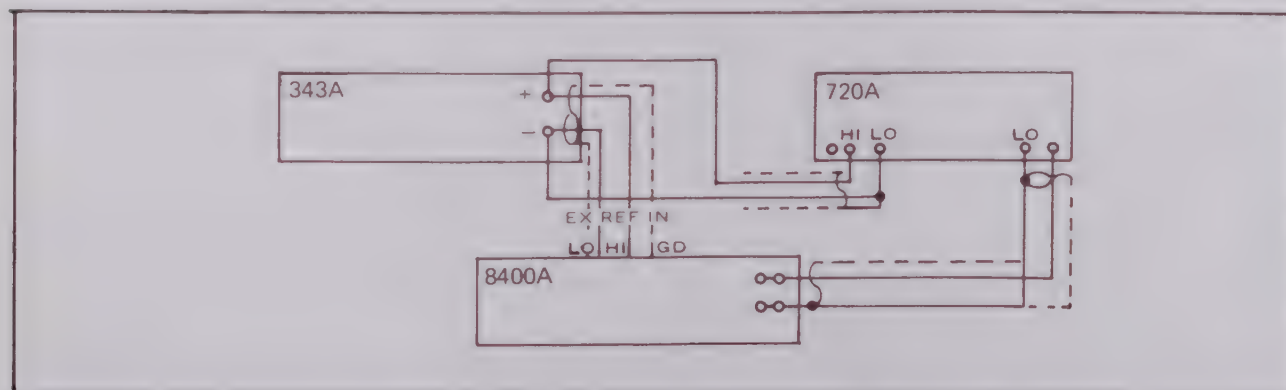


Figure 6-4. EQUIPMENT CONNECTIONS FOR DC EXTERNAL REFERENCE UNIT CALIBRATION.

6-33. Troubleshooting

6-34. This section contains information designed to aid in troubleshooting the DC External Reference Unit. Before attempting to troubleshoot the unit, however, it should be verified that the trouble is actually in the unit and is not caused by faulty external equipments or improper control settings. For this reason, the performance test (paragraph 6-26) is suggested as a first step in troubleshooting. The performance test may also help to localize the trouble to a particular section of the instrument. If the performance test fails to localize the trouble, the following information may be helpful.

6-35. **OSCILLOSCOPE CONNECTIONS.** To observe waveforms on the DC External Reference Unit, it will be necessary to synchronize the oscilloscope with the $\overline{\text{ZERO}}$ signal. Connect a lead from the scope external trigger input to A8TP3, with scope common connected to A8TP1. Connect the scope input probe also to A8TP3 and adjust the scope trigger controls so that it triggers on the negative going edge of the $\overline{\text{ZERO}}$ pulse.

6-36. **VOLTAGE AND WAVEFORM CHECKS.** If the reference voltage stays at about 7 volts no matter what the input reference voltage is, check transistor Q10, diode CR13, or transistor A8Q24.

6-37. If the reference output voltage is zero or negative, check the gate drives of Q9, Q4, and Q5. If either of the waveforms of Q9 are not correct (stylized waveforms are shown in Figure 6-5), check to see if the same defective waveform appears at other than the gate terminals of Q9; if it does, Q9 is defective and should be replaced. If Q9 does not check bad, gate driver Q3 is probably defective.

6-38. If the waveforms are correct, connect the external reference input LO terminal to instrument common and apply 10 ± 0.1 volts to the external reference input HI terminal. The resulting voltage across capacitor C1 should be 7 ± 0.1 volts. The voltage across C2 should be equal to the voltage across C1 less the amount drained by the measurement instrument. The voltage across both C1 and C2 will be pulled high if the output of U1 is higher than 8 volts. No voltage or extremely low voltage across C2 indicates Q9 is bad. Check integrated circuit U1 to see if pin 2 is low or high with respect to pin 3. If it is low, the output at pin 6 of U1 should be +18 volts; if it is high, the output should be -18 volts. The combined voltage developed across R17, R18, R21 and R22 should be about 9.2 volts. If not, check the following components in the order given: U1, Q7, or Q8. If the unit operates normally with the LO reference input terminal connected to DVM common but does not operate properly with the LO terminal high or low with respect to DVM common, suspect Q9, Q5, CR4, or CR5.

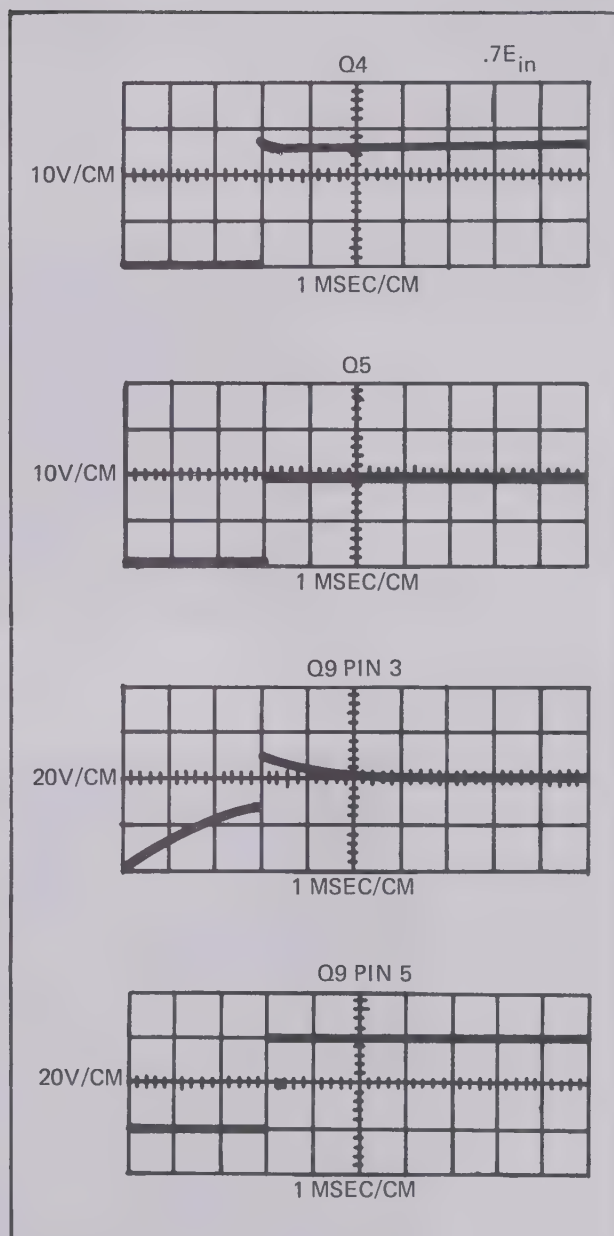


Figure 4-24. DC External Reference Stylized Waveforms

6-39. LIST OF REPLACEABLE PARTS

6-40. For column entry explanations, part ordering information and basic instrument configuration Use Codes and Serial Number Effectivity List, see Section 5, paragraphs 5-1 through 5-10. See paragraph 6-41, this option subsection, for additional Use Codes and Serial Number Effectivity List assigned to this printed circuit assembly option.

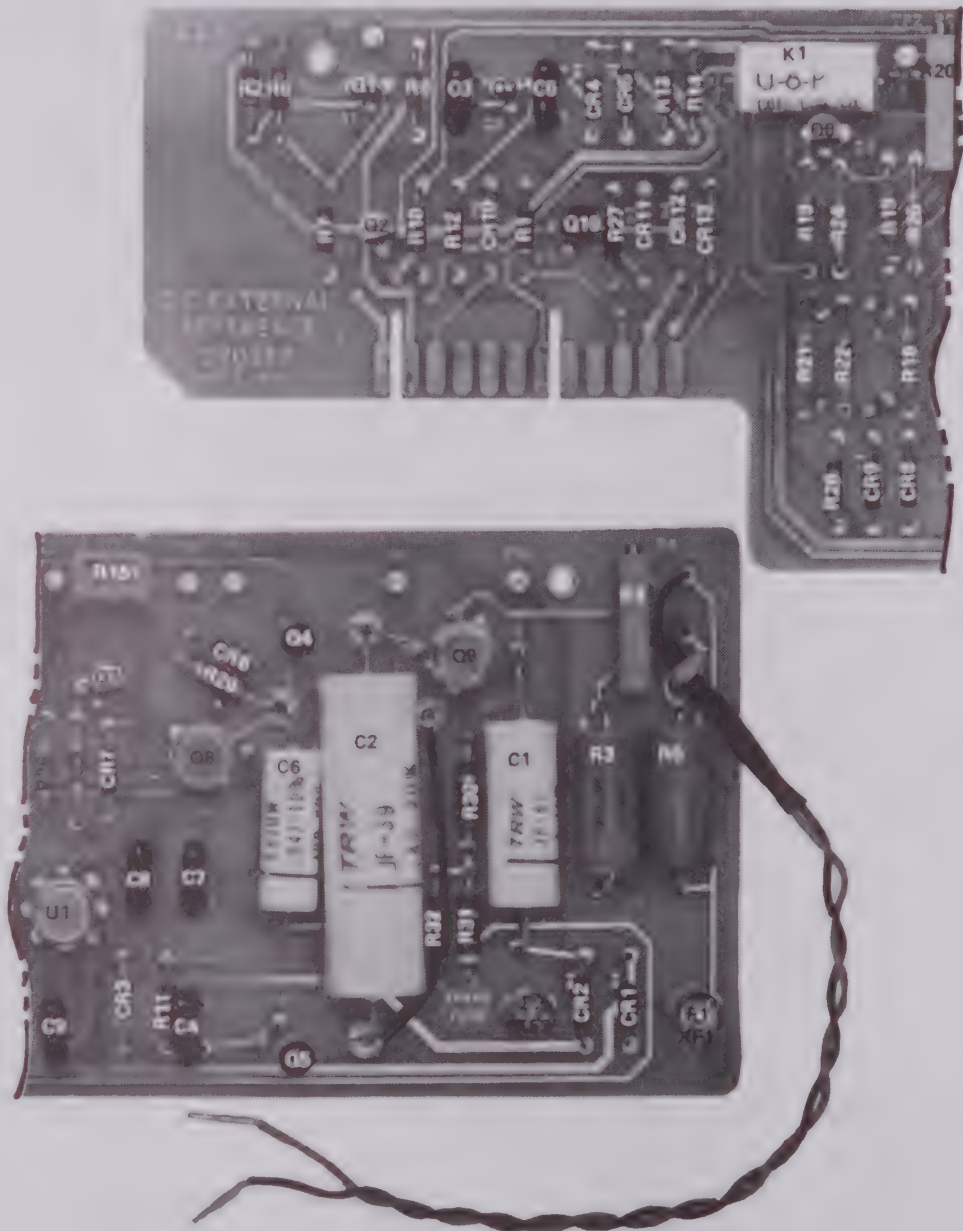


Figure 6-6. DC EXTERNAL REFERENCE

REF DESIG	DESCRIPTION	STOCK NO	TOT QTY	REC QTY	USE CODE
A3	DC EXTERNAL REFERENCE		REF		
	Figure 6-6				
C1	Cap, plstc, 0.1 uf $\pm 20\%$, 120V	167460	1		
C2	Cap, plstc, 0.47 uf $\pm 20\%$, 120V	190553	1		
C3	Cap, mica, 100 pf $\pm 5\%$, 500V	148494	1		
C4	Cap, mica, 47 pf $\pm 5\%$, 500V	148536	1		
C5, C7, C8	Cap, mica, 220 pf $\pm 5\%$, 500V	170423	3		
C6	Cap, plstc, 0.047 uf $\pm 10\%$, 120V	260562	1		
C9	Cap, mica, 33 pf $\pm 5\%$, 500V	160317	1		
CR1, CR2, CR4, CR6, CR7, CR8, CR9	Diode, silicon, 150 mA, 125 piv	272252	7		
CR3	Diode, fast switching, germanium, 40 mA, 50 piv	180505	1		
CR5	Diode, zener, 5.1V	159780	1		
CR10, CR13	Diode, germanium, 80 mA, 100 piv	149187	2		
CR11, CR12	Diode, silicon, 150 mA	203323	2		
F1, F2	Fuse, pigtail, 15 mA, 125V (F2 fuse is a spare)	285031	2		
K1	Relay, Reed switch	219097	1		
	Coil, relay	269019	1		
Q1, Q6, Q10	Tstr, silicon, PNP	195974	3		
Q2, Q3, Q7	Tstr, silicon, NPN	218396	3		
Q4, Q5	Tstr, J-FET, N-channel	271924	2		
Q8	Tstr, silicon, NPN, Super beta dual monolithic	284075	1		
Q9	Tstr, FET, dual, P-channel	268011	1		
R1	Res, comp, 4.7k $\pm 5\%$, 1/4w	148072	1		
R2	Res, comp, 33k $\pm 5\%$, 1/4w	148155	1		
R3, R5	Res, set, ext ref, divider	278309	1		
R4, R20	Res, var, cer met 5k $\pm 20\%$, 1/2w	267872	2		
R6	Not used				
R7, R8, R13	Res, comp, 22k $\pm 5\%$, 1/4w	148130	3		
R9	Res, comp, 6.8k $\pm 5\%$, 1/4w	148098	1		
R10, R28	Res, comp, 12k $\pm 5\%$, 1/4w	159731	2		

REF DESIG	DESCRIPTION	STOCK NO	TOT QTY	REC QTY	USE CODE
R11	Res, comp, 120k $\pm 5\%$, 1/4w	193458	1		
R12	Res, comp, 2.2M $\pm 5\%$, 1/4w	198390	1		
R14	Res, comp, 180k $\pm 5\%$, 1/4w	193441	1		
R15	Res, var, cer met, 1k $\pm 10\%$, 1w	285155	1		
R16	Res, met flm, 1.54k $\pm 1\%$, 1/8w	289066	1		
R17, R21	Res, selected in test (R17 not shown on art)		2		
R18, R22	Res, met flm, 215k $\pm 1\%$, 1/8w	289470	2		
R19	Res, met flm, 2k $\pm 1\%$, 1/8w	235226	1		
R23	Res, met flm, 140k $\pm 1\%$, 1/8w	289439	1		
R24	Res, met flm, 7.15k $\pm 1\%$, 1/8w	260356	1		
R25	Res, met flm, 82.5k $\pm 1\%$, 1/8w	246223	1		
R26	Res, met flm, 8.66k $\pm 1\%$, 1/8w	260364	1		
R27	Res, comp, 1k $\pm 5\%$, 1/4w	148023	1		
R29, R30, R32	Res, comp, 100M $\pm 10\%$, 1/2w	190520	3		
R31	Res, comp, 4.7M $\pm 10\%$, 1/2w	108308	1		
U1	IC, operational amplifier	271502	1		
X11	Fuse holder	296582	2		
	Cable, Ref, input	304030	1		
	Terminal, teflon, feed thru, 4 lead	281865	4		
	 R17 and R21 factory selected at time of test.				
	 This option is not field installable in main-frame S/N 634 and below.				

6-41. SERIAL NUMBER EFFECTIVITY

6-42. A Use Code column is provided to identify certain parts that have been added, deleted, or modified during production of the Model 8400A. Each part in this option for which a use code has been assigned may be identified with a particular printed circuit board serial number by consulting the Use Code Effectivity List below. All parts with no code are used on all printed circuit boards with

serial numbers 123 and on. NOTE: These Use Codes and Serial Number Effectivity apply to this option printed circuit board assembly only. For the standard instrument configuration, see Section 5, paragraph 5-9, and for additional options, see the appropriate option subsection.

USE	
CODE	SERIAL NUMBER EFFECTIVITY

Option—06

AC External Reference

6-1. INTRODUCTION

6-2. The A4 AC External Reference Converter (Drawing No. 8400A-1008) when used in conjunction with the A13 AC Converter and the 8400A DVM provides three terminal ac to ac voltage ratio measurement capability through three ranges of 1, 10, and 100. The AC External Reference Converter rectifies the ac input voltage to a dc voltage which becomes the instrument reference voltage.

6-3. SPECIFICATIONS

6-4. Specifications for the AC External Reference Converter are located in Section 1 of the manual.

6-5. INSTALLATION

6-6. The following procedure should be used to install the AC External Reference Converter option in the Model 8400A.

NOTE

The AC External Reference option is not field installable in 8400A mainframes serial No. 634 and below.

- a. Disconnect power cord from line power.
- b. Remove the Model 8400A top dust cover and inner guard chassis cover.
- c. Determine that connector J4 on A14 Display board is clear of obstructions and that alignment keys are inserted between pin pairs J4-1, -2; J4-3, -4 and J4-15, -16; J4-17, -18.
- d. Remove connector mounting bracket located on rear portion of inner chassis, next to power transformer.

- e. Mount the AC External Reference Converter connector to the connector bracket with orientation as shown on the rear panel decal. The lug attached to pin 1 of connector is to be mounted to the guard chassis through one of the mounting screws on the DC External Reference Connector.
- f. Remount connector bracket back to the inner chassis.
- g. Align AC External Reference Converter board with vertical card guides mounted on inner chassis bulkhead.
- h. Align rubber grommet with slot in rear inner chassis and slide grommet into slot.
- i. Slide AC External Reference Converter board downward while observing that alignment keys in J4 are in proper alignment with the slots in the printed circuit board.
- j. Engage printed circuit board fully in J4 connector.
- k. Attach guard and top dust covers, connect power cord to line power, and perform receiving inspection test of DC External Reference assembly as described in paragraph 6-22, Performance Test.

6-7. OPERATING INSTRUCTIONS

6-8. Operation of the DVM with the A4 AC External Reference Converter Option 8400-06 installed is covered in Section 2, Operating Instructions.

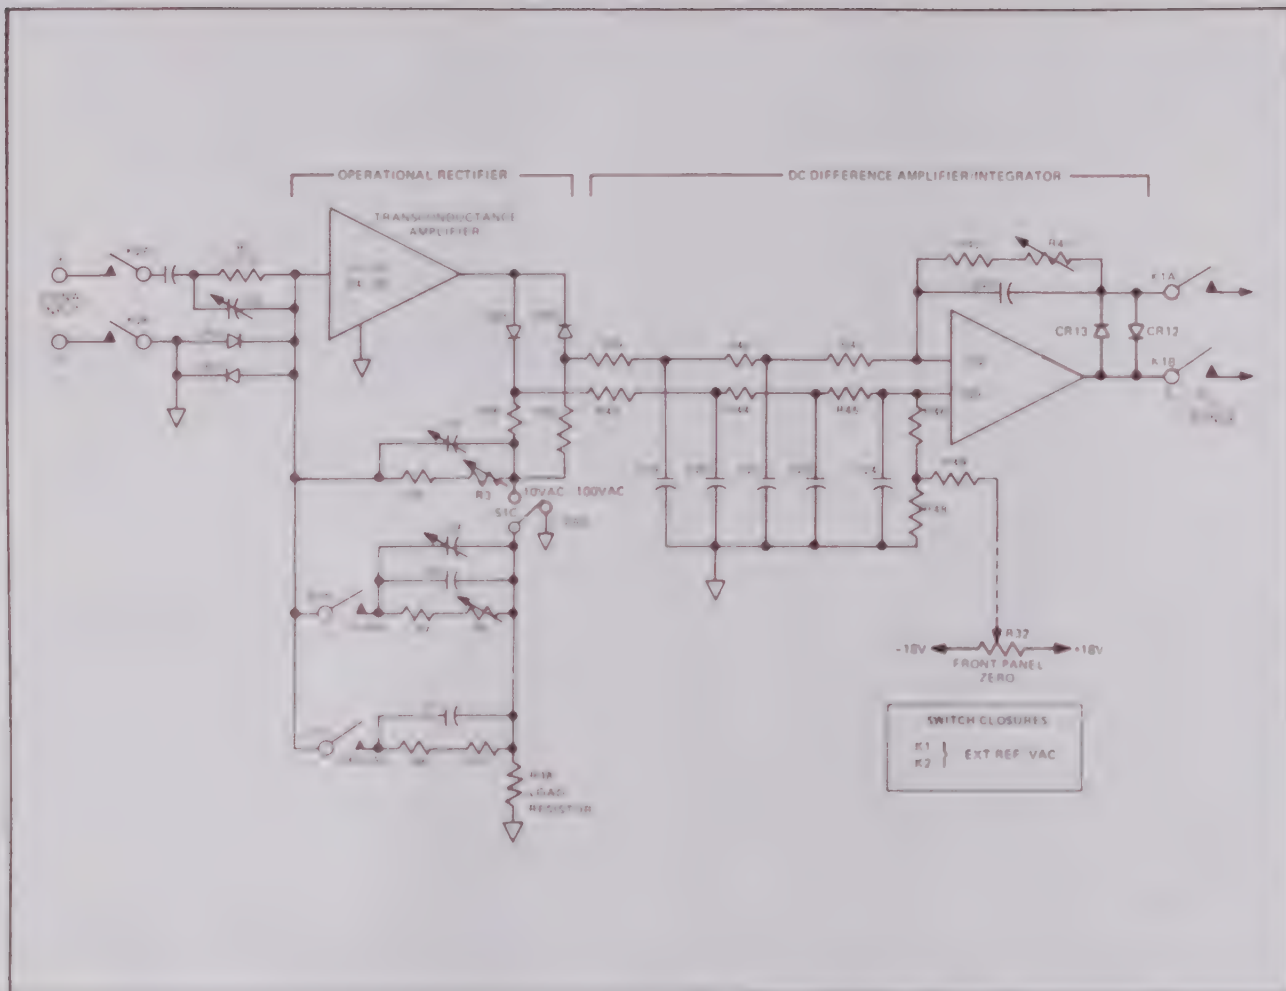


Figure 6-1. BLOCK DIAGRAM AC EXTERNAL REFERENCE CONVERTER.

6-9. THEORY OF OPERATION

6-10. General

6-11. The A4 AC External Reference Converter consists of two basic parts as shown in Figure 6-1: an operational rectifier and a dc difference amplifier integrator. The operational rectifier consists of an inverting trans-conductance amplifier and load resistor with negative feedback arranged to provide a loop gain of about 5×10^3 at mid-band. The feedback is changed with switch S1 for range purposes. The input resistor is 1.11 megohms and provides 1.11 megohm input impedance at the AC Ext. Ref. input jacks. A symmetrical half-wave rectifier placed between the amplifier and load resistor develops equal positive and negative dc voltages proportional to the amplifier output current. At full scale, this current is near two milliamps. The two output waveforms are shown in Figure 6-2.

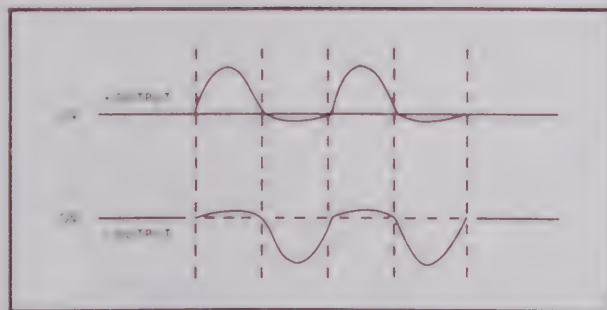


Figure 6-2. RECTIFIER OUTPUT WAVEFORMS

6-12. The dc difference amplifier/integrator filters the output waveforms of Figure 6-2 and amplifies the difference between them by a factor of 3.33, providing a buffered voltage which becomes the instrument reference voltage. A minimum three sections of filtering are provided at all times.

6-13. Circuit Description

6-14. **OPERATIONAL RECTIFIER.** Input FET Q1 functions as a source follower, while transistor Q2 provides a low impedance guard voltage which is used to bootstrap most of the capacity that otherwise would appear between the FET gate and circuit common. The first two differential pairs are in dual in-line package U1. Together with Q4 and Q5, they develop the required gain. Transistors Q3 and Q6 function as current sources, with values such that clipping due to overload is symmetrical. Changes in capacitor charges are small and amplifier recovery time is minimized. Transistor Q7 compensates for capacitance losses in the diodes.

6-15. **DC-DIFFERENCE AMPLIFIER/INTEGRATOR.** The filter network, which provides the input to the amplifier/integrator, consists of resistors R39, R40, R41, R43, R44, R45 and capacitors C19, C20, C21, C22. Capacitors C19, C21, and C23 form matched pairs with capacitors C20, C22, and C24, respectively, to maintain good common-mode rejection. Gain for the dc amplifier is provided by monolithic operational amplifier U2, thereby providing a total loop gain at dc of about 5×10^5 .

6-16. **RANGE AND FUNCTION CONTROL.** The A4 AC External Reference Converter input and output relays, K1 and K2, are driven by the combination of front panel pushbuttons and Q8. The range control of the External Reference Converter is controlled by switch S1A, B, and C for selection of ranges 1, 10, 100. Transistor Q10 provides an interlocking feature which prevents the AC External Reference Converter from operating on any function but VAC. Switch S1 has a fourth position (DC ONLY) which prevents the AC External Reference from operating under any circumstances. This feature allows AC/DC ratios to be measured without removing the AC Ext. Ref. option from the mainframe, and the DC External Reference option is present.

6-17. MAINTENANCE

6-18. Introduction

6-19. This section contains maintenance information specifically intended for the AC External Reference Converter. Factory service information and general instructions regarding instrument access and cleaning are located in Section 4 of the Manual.

6-20. Test Equipment

6-21. The following equipment is recommended for testing, troubleshooting, and calibrating the AC External Reference Converter. If the recommended equipment is not available, equivalent or better instruments may be substituted.

EQUIPMENT NOMENCLATURE	RECOMMENDED EQUIPMENT
AC Voltage Source	HP Model 745A AC Calibrator with companion 1000 volt amplifier.
Multimeter	Fluke Model 8100A Digital Multimeter
Oscilloscope	Tektronix Model 547
Oscilloscope Plug-In	Tektronix Model IA1

6-22. Performance Test

6-23. The performance test in this section compares the AC External Reference Converter performance to the accuracy specifications in Section 1 of the manual to determine if the converter is in calibration. To test the unit, a reference voltage is applied to the AC External Reference input terminals, an ac voltage is applied to the DVM INPUT Terminals, and proper DVM readout is verified. The performance test should be conducted before any instrument maintenance or calibration is attempted. The test is also suited to receiving inspection of new units. The performance test should be conducted under the following environmental conditions after 1 hour warm up: ambient temperature $23^{\circ}\text{C} \pm 5^{\circ}\text{C}$, relative humidity less than 70%. An instrument that fails the performance test will require corrective maintenance or calibration. In case of difficulty, analysis of the test results with reference to the troubleshooting section, should help to locate the trouble.

NOTE!

Permissible tolerances for ac voltage measurements are derived from the 90-day instrument specifications contained in Section 1 of the manual.

6-24. To test the AC External Reference Converter unit, proceed as follows:

- a. Connect the ac voltage source to the Model 8400A as shown in Figure 6-3.
- b. Set the DVM controls as follows:
FUNCTION VAC, EXT REF, FILT
RANGE Manually selected, as required.
- c. Apply each of the test signals shown in Table 6-1 to the INPUT terminals of the DVM. The readout should be as indicated.

Table 6-1. AC EXTERNAL REFERENCE CHECK

STEP	INPUT		RANGE		READOUT
	FREQ	VOLTS	8400A	A4S1	
1	10 kHz	1	1	1	.99945 to 1.00055
2	10 kHz	10	10	10	9.9945 to 10.0055
3	10 kHz	100	100	100	99.945 to 100.055
4	10 kHz	10	100	100	99.900 to 100.100

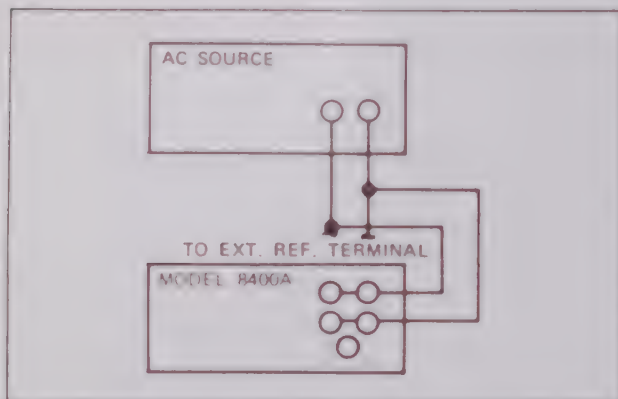


Figure 6-3. EQUIPMENT CONNECTION FOR TESTING.

6-25. Calibration

The AC External Reference Converter should be calibrated every 90 days or whenever repairs have been made to circuitry. Calibration of the converter should be performed at an ambient room temperature of $23^{\circ}\text{C} \pm 5^{\circ}\text{C}$. Relative humidity should be less than 70%. Consult paragraph 6-20 for recommended test equipment.

NOTE!

Since calibration matches the AC External Reference to the AC Converter option - 01, the

alignment of the latter should be verified before attempting to align the former. Refer to this section, Section 6, of this manual for the AC Converter (-01) option information.

6-26. PRELIMINARY OPERATIONS

- a. Remove the upper dust cover retaining screws, but leave the dust cover in place on the instrument.
- b. Set the rear panel 115/230 volts slide switch to the 115 volt position and connect the line cord to an autotransformer set to 120 volts ac.
- c. Turn on and allow the instrument to operate for one hour.

6-27. AC CONVERTER ALIGNMENT

- a. Set the DVM controls as follows:
FUNCTION VAC
INPUT RANGE 100
EXT REF RANGE 100
SAMPLE RATE Fully clockwise
- b. Connect the GUARD terminal to the LO input terminal using the shorting link provided.
- c. Connect a shorting jumper between the input terminals.
- d. Adjust AC ZERO (A13R50) for 000.00 on the readout.
- e. Remove the short between the INPUT terminals.
- f. Select the 100 range on the front panel. Connect AC Ext. Ref. INPUT and front panel INPUT together and apply 100V 1 kHz to the input. Turn external reference on from front panel. Readout should be near full scale (uncalibrated). While changing input between 100Vac and 20Vac, adjust the Ext. Ref. linearity, A4R32, for the same reading, ± 1 digit, with either voltage.
- g. Perform the checks and adjustments contained in Table 6-2.

6-28. Calibration of the AC Ext. Ref. Converter is now complete.

Table 6-2. AC EXTERNAL REFERENCE
CONVERTER RANGE CALIBRATION

STEP	INPUT		RANGE		ADJUSTMENT	READING TOLERANCE
	FREQ	VOLTS	8400A	S1		
1	1 kHz	100.000	100	100	100V 1 kHz (A4R47)	.99.995 to 100.005
2	50 kHz	100.000	100	100	100V 50 kHz (A4C2)	.99.995 to 100.005
3	20 kHz	100.000	100	100	Check Only	.99.995 to 100.005
4	1 kHz	10.0000	10	10	10V 1 kHz (A4R5)	.9.9995 to 10.0005
5	50 kHz	10.0000	10	10	10V 50 kHz (A4C4)	.9.9995 to 10.0005
6	100 kHz	10.0000	10	10	Check Only	.9.9800 to 10.0200
7	1 kHz	1.0000	1	1	1V 1 kHz (A4R3)	.99995 to 1.00005
8	50 kHz	1.0000	1	1	1V 50 kHz (A4C3)	.99995 to 1.00005
9	100 kHz	1.0000	1	1	Check Only	.99800 to 1.00200
10	20 kHz	1.0000	1	1	Check Only	.99995 to 1.00005

6-29. Troubleshooting

6-30. This section contains information selected to aid in troubleshooting the AC External Reference Converter. Before attempting to troubleshoot the unit, however, it should be verified that the trouble is actually in the converter and is not caused by faulty external equipment or improper control settings. For this reason, the performance test (paragraph 6-22) is suggested as a first step in troubleshooting. The performance test may also help to localize trouble to a particular section of the instrument. If the performance test fails to localize the trouble, the following information may be helpful.

6-31. POWER SUPPLY VOLTAGE CHECK

6-32. In this test, each of the supply voltages for the AC External Reference Converter is checked at the pin connectors. This test verifies only presence of voltages; a detailed check of the DVM power supply voltages is given in Section 4.

- a. Connect the oscilloscope common to TP2 of the converter. Use the internal dc oscilloscope trigger. Set the scope controls for dc voltage measurement, and check the following voltages:

Connector Pin No.	Required Voltage
3	-18 volts
1	+18 volts

6-33. SEVERE CONVERTER MALFUNCTIONS

- a. Symptom: Full-scale output with shorted input.

Procedure: If dc voltage at TP3 and ac voltage on TP2 are zero, then troubleshoot converter output difference amplifier/integrator, and associated circuits.

If the dc voltage on TP3 is greater than $\pm 1V$ (normal is less than 10 mV) check for defective Q1 through Q6, U1, C11, C21 or associated circuits.

If ac voltage is present on TP2, check for open or shorted feedback circuit or defective component in amplifier causing oscillation.

- b. Symptom: Zero output with input applied.

Procedure: If ac voltage on TP2 is zero, check for open or short in ac circuit between input and Q1.

If ac voltage does appear on TP2 (full scale is approximately 0.25V rms) check S1 or troubleshoot output difference amplifier/integrator.

- c. Symptom: Range of operation does not correspond to range selected.

Procedure: Check S1 for proper range selection.

6-34. LIST OF REPLACEABLE PARTS

6-35. For column entry explanations, part ordering information and basic instrument configuration Use Codes and Serial Number Effectivity, see Section 5, paragraphs 5-1 through 5-10. See paragraph 6-36, this option subsection, for additional Use Codes and Serial Number Effectivity List assigned to this printed circuit assembly option.

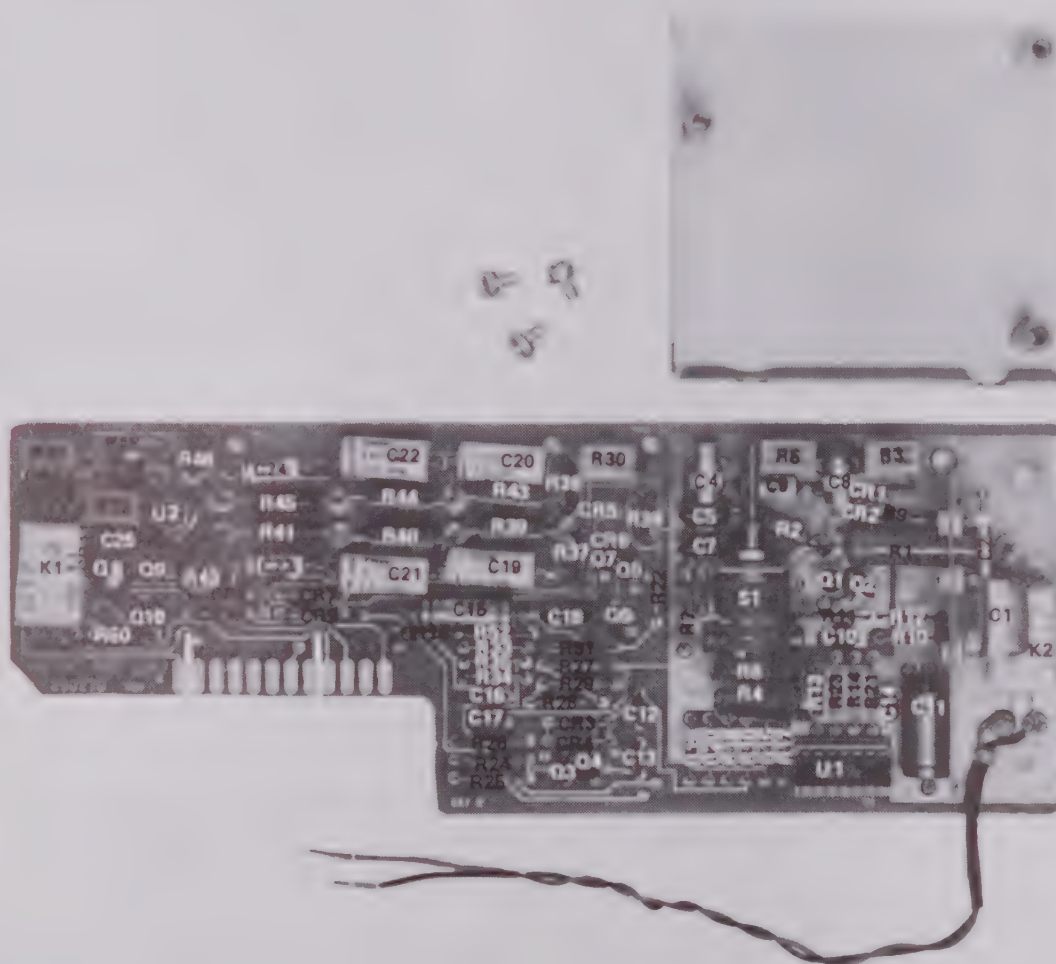


Figure 6-4. AC EXTERNAL REFERENCE PCB ASSEMBLY

REF DESIG	DESCRIPTION	STOCK NO	TOT QTY	REC QTY	USE CODE
A4	AC EXTERNAL REFERENCE -06 Option Figure 6-4		REF		
C1	Cap, plstc, 0.22 uf $\pm 10\%$, 250V	194803	1		
C2	Cap, var, teflon, 0.25 - 1.5 pf, 2 kV	273151	1		
C3, C4	Cap, var, air, 0.8 - 10 pf, 250V	229930	2		
C5	Cap, mica, 12 pf $\pm 5\%$, 500V	175224	1		
C6, C8	Not Used				
C7	Cap, mica, 220 pf $\pm 5\%$, 500V	170423	1		
C9	Cap, cer, 3 pf $\pm 10\%$, 500V	226316	1		
C10, C14	Cap, Ta, 4.7 uf $\pm 20\%$, 20V	161943	2		
C11	Cap, elect, 125 uf $+50/-10\%$, 16V	186296	1		
C12, C13	Cap, cer, 500 pf $\pm 10\%$, 1 kV	105692	2		
C15	Cap, elect, 50 uf $+50/-10\%$, 25V	168823	1		
C16, C17	Cap, cer, 0.01 uf $\pm 20\%$, 100V	149153	2		
C18	Cap, mica, 27 pf $\pm 5\%$, 500V	177998	1		
C19/C20, C21/ C22	Cap, plstc, 1 uf, Matched pairs (Replace in pairs)	288225	2		
C23, C24	Cap, plstc, 0.033 uf, Matched pair	290155	1		
C25	Cap, mica, 33 pf $\pm 5\%$, 500V	160317	1		
CR1 thru CR4	Diode, silicon, 100 mA at 1.5V	261370	4		
CR5, CR6	Diode, silicon, 100 mA at 1.5V	161810	2		
CR7 thru CR10, CR14	Diode, germanium, 80 mA, 100 piv	149187	5		
CR11 thru CR13	Diode, silicon, 150 mA	203323	3		
K1	Relay, reed switch	219097	2		
	Coil, relay	272070	2		
K2	Relay, reed switch	284091	2		
	Coil, relay	272070	REF		
Q1	Tstr, FET, N-channel	246066	1		
Q2, Q6	Tstr, silicon, NPN	218081	2		

REF DESIG	DESCRIPTION	STOCK NO	TOT QTY	REC QTY	USE CODE
Q3, Q4, Q5, Q7	Tstr, silicon, PNP	229898	4		
Q8	Tstr, silicon, PNP, selected	280198	1		
Q9, Q10	Tstr, silicon, NPN	218396	2		A
Q9, Q10	Tstr, silicon, NPN	168708	2		B
R1	Res, met flm, 1.11M	269092	1		
R2	Res, met flm, 276k				
R3	Res, var, cer met, 2k $\pm 10\%$, 1w	285163	1		
R4	Res, ww, 29.53k $\pm 0.1\%$, $\frac{1}{2}w$	277657	1		
R5	Res, var, cer met, 200 Ω $\pm 10\%$, 1w	285148	1		
R6	Res, ww, 2.573k $\pm 0.1\%$, $\frac{1}{2}w$	277665	1		
R7	Res, met flm, 10 Ω $\pm 1\%$, 1/8w	268789	1		
R8	Res, comp, 620 Ω $\pm 5\%$, $\frac{1}{4}w$	221903	1		
R9	Res, met flm, 49.9k $\pm 1\%$, 1/8w	268821	1		
R10	Res, comp, 8.2k $\pm 5\%$, $\frac{1}{4}w$	160796	1		
R11, R26	Res, met flm, 590 Ω $\pm 1\%$, 1/8w	261883	2		
R12, R33, R53	Res, comp, 10k $\pm 5\%$, $\frac{1}{4}w$	148106	3		
R13	Res, comp, 15k $\pm 5\%$, $\frac{1}{4}w$	148114	1		
R14	Res, met flm, 84.5k $\pm 0.5\%$, 1/8w	229492	1		
R15, R18	Res, comp, 120k $\pm 5\%$, $\frac{1}{4}w$	193458	2		
R16, R17	Res, comp, 11k $\pm 5\%$, $\frac{1}{4}w$	221580	2		
R19, R20	Res, comp, 47 Ω $\pm 5\%$, $\frac{1}{4}w$	147892	2		
R21, R22	Res, met flm, 40.2k $\pm 1\%$, 1/8w	235333	2		
R23	Res, met flm, 82.5k $\pm 1\%$, 1/8w	246223	1		
R24, R28	Res, met flm, 10k $\pm 1\%$, 1/8w	168260	2		
R25, R27	Res, met flm, 21.5k $\pm 1\%$, 1/8w	168278	2		
R29	Res, met flm, 1.21k $\pm 1\%$, 1/8w	229146	1		
R30, R32	Res, var, cer met 100k $\pm 10\%$, 1w	288308	2		
R31	Res, comp, 10M $\pm 5\%$, $\frac{1}{4}w$	194944	1		
R34	Res, comp, 22k $\pm 5\%$, $\frac{1}{4}w$	148130	1		

REF DESIG	DESCRIPTION	STOCK NO	TOT QTY	REC QTY	USE CODE
R35	Res, comp, 2.2k $\pm 5\%$, $\frac{1}{4}w$	148049	1		
R36, R37	Res, ww, 1.196k $\pm 0.1\%$, $\frac{1}{4}w$	299610	2		
R38	Res, ww, 125 Ω $\pm 0.1\%$, $\frac{1}{4}w$	249284	1		
R39, R40, R43, R44	Res, ww, 130k $\pm 0.1\%$, $\frac{1}{4}w$	285361	4		
R41, R45	Res, ww, 40k $\pm 0.1\%$	271403	2		
R42, R46	Res, ww, 1M $\pm 0.1\%$	271411	2		
R47	Res, var, cer met, 10k $\pm 10\%$, 1w	285171	1		
R48	Res, met flm, 100 Ω $\pm 1\%$, 1/8w	168195	1		
R49	Res, met flm, 487k $\pm 1\%$, 1/8w	237206	1		
R50	Res, comp, 430 Ω $\pm 5\%$, $\frac{1}{4}w$	203869	1		
R51	Res, comp, 6.2k $\pm 5\%$, $\frac{1}{4}w$	221911	1		
R53	Res, comp, 120k $\pm 5\%$, $\frac{1}{4}w$	193458	2		D
R54	Res, comp, 120k $\pm 5\%$, $\frac{1}{4}w$	193458	Ref		D
S1	Switch, rotary	295535	1		C
U1	IC, 5-Transistor Array	248906	1		
U2	IC, operational amplifier	288928	1		
	Socket, IC, 14 contact, U1	276527	1		
	 This option is not field installable in mainframes S/N 634 and below.				

6-36. SERIAL NUMBER EFFECTIVITY

A Use Code column is provided to identify certain parts that have been added, deleted, or modified during production of the Model 8400A. Each part in this option for which a use code has been assigned may be identified with a particular printed circuit board serial number by consulting the Use Code Effectivity List below. All parts with

no code are used on all printed circuit boards with serial numbers 123 and on. NOTE: These Use Codes and Serial Number Effectivity apply to this option printed circuit board assembly only. For the standard instrument configuration, see Section 5, paragraph 5-9, and for additional options, see the appropriate option subsection.

USE CODE	SERIAL NUMBER EFFECTIVITY
A	Serial number 123 thru 132.
B	Serial number 133 and on.
C	Serial number 123, 125, 128, 131, 133 and on.
D	Serial number 148 and on.

Option -07

Rear Input

6-1. INTRODUCTION

6-2. The Rear Input Option provides INPUT HI, INPUT LO, Ω SENSE, Ω SOURCE and GUARD terminals at the rear of the instrument, in parallel with the front panel terminals.

6-3. INSTALLATION

6-4. The following procedure should be used to install the Rear Input Option:

- a. Remove the instrument top dust and chassis guard covers.
- b. Remove A13 AC CONVERTER from instrument if instrument is so optioned.
- c. Remove connector bracket on inner chassis, right rear portion.
- d. Mount Rear Input Connector onto the connector bracket top slot. Ensure that the lug which is attached to connector pin 2 is affixed to the inner guard chassis with one of the connector mounting screws.
- e. Remount connector bracket to inner chassis.
- f. Lay the Rear Input harness along side the Right side of the inner chassis and between the A14 Display PCB and TB1. Clamp harness to inner chassis.
- g. Connect Rear Input harness to terminals on rear of the front panel binding posts as follows:

RED — INPUT HI
BLACK — INPUT LO
YELLOW — HI Ω SOURCE
BROWN — LO Ω SOURCE
- h. Install the A13 AC Converter if instrument is so optioned.
- i. Attach guard and instrument dust cover.

6-5. LIST OF REPLACEABLE PARTS

6-6. For column entry explanations, part ordering information and basic instrument configuration Use Codes and Serial Number Effectivity List, see Section 5, paragraphs 5-1 through 5-10. See paragraph 6-7, this option subsection for additional Use Codes and Serial Number Effectivity List assigned to this option.

REF DESIG	DESCRIPTION	STOCK NO	TOT QTY	REC QTY	USE CODE
	REAR INPUT -07 Option		REF		
	Cable, rear input	311639	1		
	Hardware kit, option	321661	1		
	Cable clamps	165951	2		

6-7. SERIAL NUMBER EFFECTIVITY

6-8. A Use Code column is provided to identify certain parts that have been added, deleted, or modified during production of the Model 8400A. Each part in this option for which a use code has been assigned may be identified with a particular printed circuit board serial number by consulting the Use Code Effectivity List below. All parts

with no code are used on all Rear Input Options with serial numbers 123 and on. NOTE: These Use Codes and Serial Number Effectivity apply to this option assembly only. For the standard instrument configuration, see Section 5, paragraph 5-9, and for additional options, see the appropriate option subsection.

USE SERIAL NUMBER EFFECTIVITY
CODE

Option -09

True RMS Converter

6-1. INTRODUCTION

6-2. Equipped with Option -09, the Model 8400A provides true rms measurement capabilities through the four

AC ranges. A choice of input coupling for the True RMS Converter is available to the operator. Choosing ac coupling allows measurement of the ac component of the input voltage. Choosing direct coupling provides measurement of the ac plus dc components.

6-3. SPECIFICATIONS

For Measurement of DC-Coupled (AC + DC) Voltages or AC Only.

RANGES	1, 10, 100, 1000 VAC
Overrange	20%, 1100V RMS maximum on 1000V range
Resolution	0.001% range
Overload	1100V RMS any range (1500V peak AC)
Superimposed DC (AC only)	1100V DC (Peak AC plus DC may not exceed $\pm 1500V$)
Max. Crest Factor	7 at full-scale and increasing down scale per: $7X \sqrt{\frac{V \text{ Range}}{V \text{ Input}}}$

ACCURACY	AC + DC		AC ONLY
	D.C.	50Hz-10kHz	
90 days, (18°C to 28°C) (0.001V - 1100V ⁽¹⁾)	±(0.1% of input + 0.03% of range)	±(0.1% of input + 0.03% of range)	±(0.1% of input + 0.012% of range)
	10kHz-30kHz ⁽²⁾	±(0.2% of input + 0.06% of range)	±(0.2% of input + 0.04% of range)
	30kHz-50kHz ⁽²⁾	±(0.3% of input + 0.12% of range)	±(0.3% of input + 0.1% of range)
	20Hz-50Hz	±(0.5% of input + 0.03% of range)	±(0.5% of input + 0.012% of range)
	10Hz-20Hz	±(1.0% of input + 0.06% of range)	±(1.0% of input + 0.04% of range)
	50kHz-100kHz ⁽²⁾	±(1.0% of input + 0.3% of range)	±(1.0% of input + 0.3% of range)
	100kHz-300kHz ⁽²⁾	±(2.0% of input + 0.5% of range)	±(2.0% of input + 0.5% of range)

(1) With inputs above 500V multiply accuracy by $\left[\frac{2000V + V \text{ input}}{2000V} \right]$

(2) Input volt x hertz, product should not exceed 2×10^7 .

Temperature Coefficients (0°C to 18°C and 28°C to 50°C)

DC and 10 Hz - 10 kHz (AC + DC)	±(0.004% Inp. + 0.004% Range)
10 Hz - 10 kHz (AC only)	±(0.004% Inp. + 0.001% Range)

Input Impedance 1 Megohm, shunted by less than 150 p.f.

NOISE REJECTION

Common Mode (with up to 100 Ω unbalance in either lead)
DC to 60 Hz

Greater than 120 db

RESPONSE TIME (to a reading withing 0.1% of range when measuring step change inputs and using external trigger)

Filter "out" 100 milliseconds maximum⁽⁴⁾

Filter "in" 500 milliseconds maximum

(For readings less than 10% Range, double indicated times).

(4) Above 400Hz for rated accuracies.

6-4. KIT INSTALLATION

6-5. Use the following procedure for installing True RMS Converters received as kits:

- a. With DVM disconnected from power source, remove top dust cover and inner guard cover.
- b. Locate AC Converter position on right side of instrument, as viewed from front panel.
- c. Insert True RMS Converter Assembly into AC converter position, fully engaging board edge connector into mating connector.
- d. Route red and black wires through rubber grommet above front card guide.
- e. Connect red and black wires to grey terminal block mounted under grommets on front of bulkhead (see Figure 6-1).

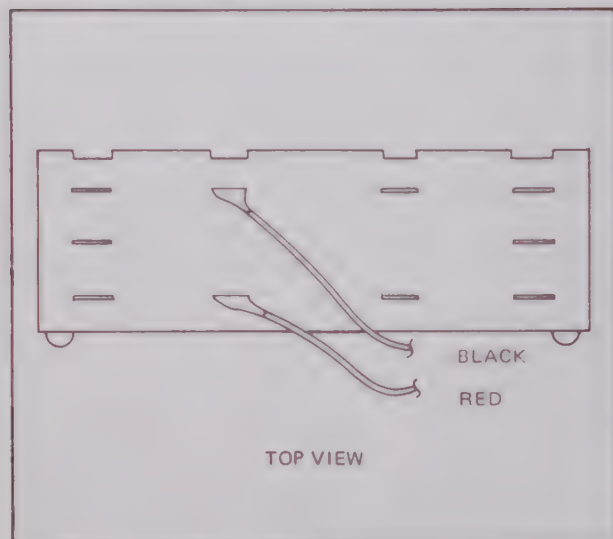


Figure 6-1. TERMINAL BLOCK

- f. Install new guard cover and set INPUT COUPLING switch on converter to either AC or DC. Install dust cover.

6-6. OPERATION

6-7. True rms measurements are performed with the 8400A DVM by pressing the VAC FUNCTION pushbutton and the desired RANGE pushbuttons (1, 10, 100, 1000 or AUTO). Input coupling selection is accomplished by removing the top dust cover and setting the INPUT COUPLING switch to either AC (ac component only) or DC (ac plus dc components).

6-8. THEORY OF OPERATION

6-9. General Description

6-10. The True RMS Converter provides a dc voltage, proportional to the rms value of the applied INPUT voltage, to the A/D Converter for digitizing and subsequent display on the front panel readout. A simplified diagram of the circuits involved in the rms conversion process is illustrated in Figure 6-2. As shown in the diagram, the RMS Converter consists, basically, of a Range Amplifier and RMS Detector. Output voltage from the Range Amplifier is 1 volt rms ac, maximum, for a full scale INPUT voltage. A scaled output voltage from the Range Amplifier is applied to the RMS Detector's Balance Amplifier where any negative going signals are inverted. The output of the Balance Amplifier is summed with the output of the Range Amplifier at the summing junction of the Squaring Amplifier. This provides a rectified version of the Range Amplifier output. The rectified signal is processed by the Squaring Amplifier, Integrating Amplifier, and Square Root Amplifier, respectively. These three amplifiers perform squaring, integrating, and square rooting functions which result in a dc voltage proportional to the rms value of the INPUT voltage.

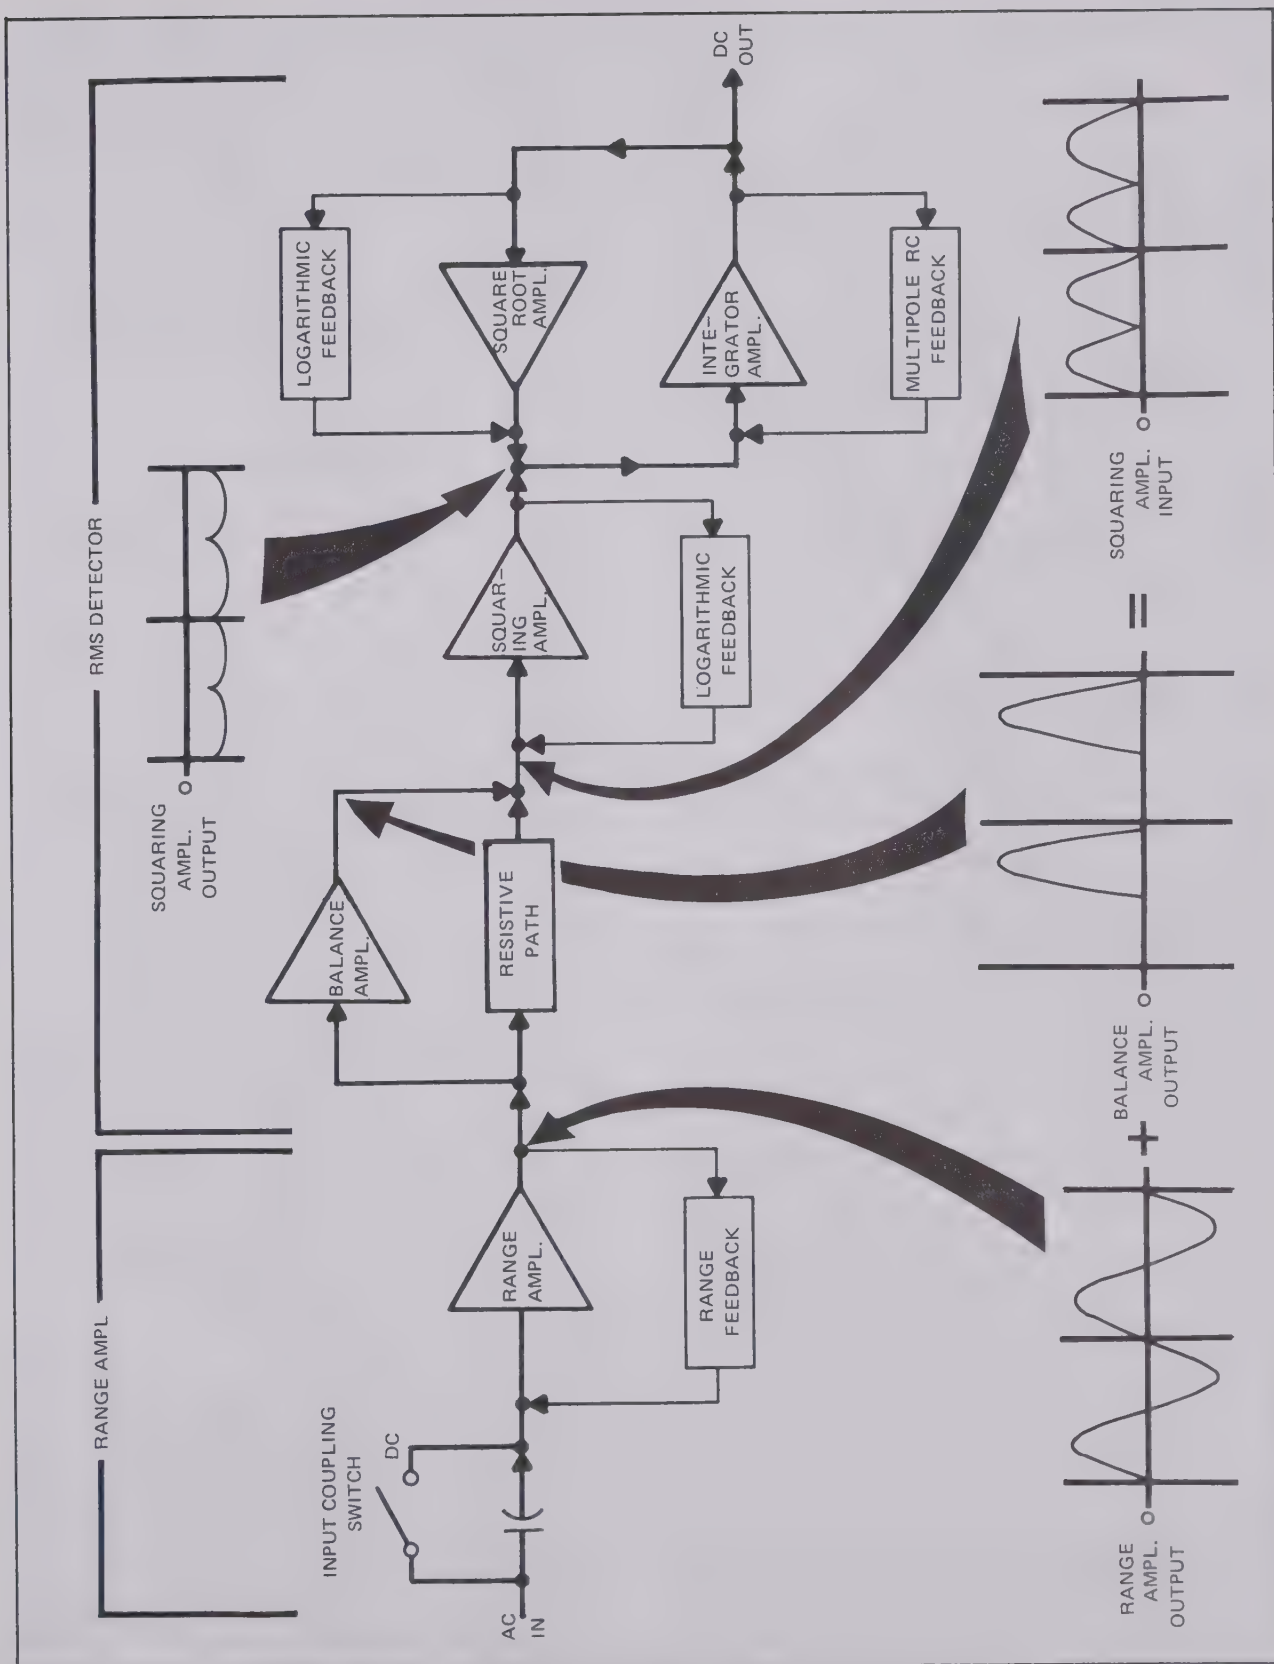


Figure 6-2. TRUE RMS CONVERTER BLOCK DIAGRAM

6-11. Circuit Description

6-12. RANGE AMPLIFIER

6-13. The Range Amplifier scales the applied input voltage to the Converter to 1 volt rms ac for a full scale input. Basically, the Range Amplifier is an inverting operational amplifier whose gain changes as the range changes. Voltage gains of -1 , -10 , -100 , and -1000 correspond with the 1 through 1000 volt ranges, respectively. Active elements of the Range Amplifiers are Q1, Q2, Q5 and U3 with protection diodes CR6, CR7, CR18, CR20, CR21, and CR22. Transistor Q2 drives the guard at the summing point of the operational amplifier, and Q5 switches C5 into feedback path in the 10, 100, and 1000 volt ranges. Diodes CR6, CR7, CR21, and CR22 provide clipping for input overload protection to Q1. Diodes CR18 and CR20 provide overload clipping at the output of the Range Amplifier for protection of the following circuitry.

6-14. BALANCE AMPLIFIER

6-15. The Balance Amplifier is a rectifying amplifier with a gain of -1 that changes all negative going signals from the Range Amplifier output to positive voltages prior to summing with the Range Amplifier output from R33. Balance Gain adjustment (R32) controls the input to the Balance Amplifier, such that positive and negative signals at the summing junction of R31, R33 and U5 will be equal in magnitude. Active components of the Balance Amplifier are CR15, Q6, Q9, Q10, and U4. Balance Zero Adjustment, R42, is an adjustment for zeroing the input of U4. Primary or low frequency signal path is through U4 followed by CR15 and final output stage Q10. At frequencies above a few hundred kilohertz, amplification takes place through Q6 followed by Q10. The final output stage, Q10, has a current source load, CL1, which maintains a high amplifier output impedance for driving CR14 and CR16. Any stray capacitance in CR14 and CR16 is compensated by Q9. Transistor Q9 samples the waveform driving CR14 and CR16 and feeds back a capacitive charge through C17 to the input of the Balance Amplifier.

6-16. SQUARING AMPLIFIER

6-17. The Squaring Amplifier is an inverting operational amplifier with non-linear feedback through matched transistors Q8A and Q12A. These transistors transform the input current into an output voltage that is the logarithm of the input current. Since this operation is performed twice (by Q8A and Q12A), the output voltage is twice the log of

the input current. Therefore, the amplifier essentially accomplishes a squaring operation ($2 \log X = \log X^2$). U5 is an integrated operational amplifier which is paralleled by Q7 at high frequencies in a manner similar to Q6 in the Balance Amplifier. AC Zero Adjustment, R45, provides for zeroing of U5, and has the greatest effect, of all other zero adjusts, for overall converter zero. Both amplifying paths, U5 and Q7, share the common final output stage, Q11. Output voltage from Q11 is sampled by Q12B which provides a current to the summing point of the Integrator Amplifier. Potentiometer R38 provides an adjustment for crest factor gain.

6-18. INTEGRATOR AMPLIFIER

6-19. The Integrator Amplifier consists primarily of U7 and U8, and is a complex multipole integrator which acts as a three pole filter. Voltage at terminal 2 of U7 is held at zero, and all of the current applied is passed through the feedback elements R56, R65, and whichever feedback capacitors are switched into the circuit. Switchable capacitors are connected through FET's Q13, Q14, Q16 and Q17 by operation of the FILT switch on the instrument front panel. If the FILT/RMS DC switch is depressed, the FET's are turned on, and the capacitors are a part of the feedback circuitry. Since each switchable capacitor is paralleled by a non-switchable capacitor, some filtering action takes place in the Integrator Amplifier whether the FILT/RMS DC switch is depressed or not. Amplifier U7 and associated multipole feedback circuitry provides the integration for the Integrator Amplifier. Amplifier U8 is a unity gain, high input impedance, low output impedance amplifier. Three poles of feedback for U7 consist of C30, R68 and C32, and R69 and C33. Capacitor C29 can be switched in parallel with C30, C34 with C32, C35 with C33, and C28 with C27. Output from U8 is the output of the total Integrator Amplifier which is then applied to the A-to-D Converter and to the Square Root Amplifier.

6-20. SQUARE ROOT AMPLIFIER

6-21. The Square Root Amplifier consists of the input resistor R57, the trimming and selection resistors R61, R62, R63, and R64, the feedback transistor Q8B, protection diode CR19, and amplifier U6. Diode CR19 acts as a feedback path to prevent saturation of U6 should input polarity to the amplifier reverse. The Square Root Amplifier uses logarithmic feedback to produce a square root of the input in a manner similar to that used by the Squaring Amplifier. The square root process is accomplished by matched transistors Q8B and Q12B. Resistors R48, R79, and R80 are factory selected for overall converter temperature coef-

ficient and linearity. Some or none of these resistors may be installed.

6-22. MAINTENANCE

6-23. Introduction

6-24. Maintenance information, described in the following paragraphs, is specifically intended for the True RMS Converter Assembly. Service information and general instructions regarding instrument access and cleaning are described in Section 4 of the Instruction Manual. Test equipment for calibrating and troubleshooting the True RMS Converter is listed in Table 6-1. If the recommended equipment is not available, equipment having, at least, equivalent specifications may be used.

6-25. Calibration

6-26. The True RMS Converter should be calibrated every 90 days, or whenever repairs have been made to circuitry. Calibration of the converter should be performed at an ambient temperature of $28^{\circ}\text{C} \pm 5^{\circ}\text{C}$. Relative humidity should be less than 70%.

6-27. PRELIMINARY OPERATIONS

- Remove top dust cover screws, but leave the cover in place.
- Set rear panel 115/230 volt switch to 115 volt position. Connect line cord to autotransformer set to 120 volts ac.

- Turn instrument on and allow one hour for warm-up.

6-28. RANGE AMPLIFIER ZERO

- Short the HI and LO INPUT terminals. Select VAC, FILT, and 10 RANGE pushbuttons. Place AC-DC switch on RMS converter to DC. This switch is accessible through the top guard cover.

NOTE!

For Option -09's without dc coupling, connect jumper wire across input coupling capacitor C1.

- Connect high lead of external dc voltmeter to body of C11 (10V 50kHz adjustment) via a 10k isolation resistor. Connect low lead to the 8400A LO INPUT terminal.
- Adjust R12 (Range Zero Adjust) for external voltmeter indication of $0 \pm 30\mu\text{V}$.
- Remove external voltmeter and INPUT short.

6-29. BALANCE AMPLIFIER ZERO

- Apply -0.1V dc to INPUT terminals from dc voltage source. Note 8400A reading.
- Reverse input voltage polarity to $+0.1\text{V}$ dc.
- Adjust R42 (Balance Zero Adjust) for reading noted in step a.
- Repeat steps a and b until difference between readings for each polarity is within 10 digits.

Table 6-1. TEST EQUIPMENT

NOMENCLATURE	REQUIRED SPECIFICATIONS	RECOMMENDED EQUIPMENT
AC Voltage Source	1mV and 1000V @ 500Hz 1V, 10V, 1000V @ 500Hz and 50kHz $\pm 0.03\%$ 1000V @ 50kHz $\pm 0.3\%$	Fluke Model 5200A AC Calibrator and 5205A power Amplifier
DC Voltage Source	10V $\pm 0.01\%$	Fluke Model 341A DVM Calibrator
DC Differential Voltmeter	100 μV Range $\pm 0.005\%$	Fluke Model 895A Differential Voltmeter
RMS Differential Voltmeter	100Hz @ $\pm 0.05\%$ Crest Factor of 10	Fluke Model 931A True RMS Differential Voltmeter
Oscilloscope	General Purpose	Tektronix 544 W/Type L Plug-In and Low Capacitance Probe
Pulse Generator	50 Ω Source Impedance, 5V max. across 50 Ω , (+) and (-) pulse polarity, Rise and Fall Time $< 50\text{ ns}$	HP 8003A Pulse Generator

6-30. BALANCE GAIN

- Apply -10V dc to INPUT terminals. Note 8400A reading.
- Reverse input voltage polarity to +10V dc.
- Adjust R32 (Balance Gain Adjust) for 8400A reading equivalent to step a.
- Repeat steps a through c until difference between readings for each polarity is within 10 digits.
- Remove dc voltage source.

6-31. AC ZERO

- Select 1 RANGE and AC INPUT COUPLING. Apply 0.001 volts at 500 Hz to INPUT terminals.
- Adjust R45 (AC Zero Adjust) for reading of $.00100 \pm 3$ digits.
- Remove ac input voltage.

6-32. CALIBRATION ADJUSTMENT/CHECK

6-33. Before performing calibration, allow one hour "warm-up" with outer covers installed. Refer to Table 6-2; apply each of the rms voltages at the specified frequencies to the INPUT terminals and, if necessary, perform the indicated adjustments to complete the calibration. If R64 (1000V, 500Hz adjustment) is not within adjustment range, refer to paragraph titled "Course Calibration."

6-34. COURSE CALIBRATION

6-35. Use the following procedure only when R64 is out of adjustment range.

- Connect any opened shorting links (1, 2, or 4) across course calibration resistors R61, R62 or R63.
- Select the 1000 volt range and apply 500V @ 500 Hz to the INPUT terminals.
- Adjust the "1000V, 500 Hz" control (R64) for a minimum reading.
- Cut open the appropriate link or links as indicated below depending upon the 8400A reading.

READING	CUT LINKS
465.7 - 470.1	1, 2, 4
470.1 - 474.3	2, 4
474.3 - 478.7	1, 4
478.7 - 482.5	4
482.5 - 486.9	1, 2
486.9 - 491.1	2
491.1 - 495.5	1
495.5 - 500	NONE


- Repeat the "Calibration Adjustment/Check" paragraph to complete calibration.

6-36. Troubleshooting

6-37. The troubleshooting procedure presents a technique for isolating a malfunction to one of the five amplifier circuits within the RMS Converter. Troubleshooting procedures for the power supply, command voltages, and relays are located in Option -01 troubleshooting section of the Instruction Manual. Before using any of these procedures, ensure that the malfunction is within the RMS Converter and not due to operator error, faulty test leads, etc. Refer to Figure 6-3 for location of adjustments and test points.

Table 6-2. CALIBRATION ADJUSTMENT/CHECK

INPUT		RANGE	ADJUSTMENT		TOLERANCE
VOLTAGE (RMS VOLTS)	FREQUENCY		NAME	REF DESIG.	
500.0	500Hz	1000	1000V 500Hz	R64	} ± 10 digits
500.0	50kHz	1000	1kV 50kHz	C4	
1.0000	500Hz	1	1V 500Hz	R14	
1.0000	50kHz	1	1V 50kHz	C9	
10.000	500Hz	10	10V 500Hz	R16	
10.000	50kHz	10	10V 50kHz	C11	
100.00	500Hz	100	100V 500Hz	R18	
100.00	50kHz	100	100V 50kHz	C14	

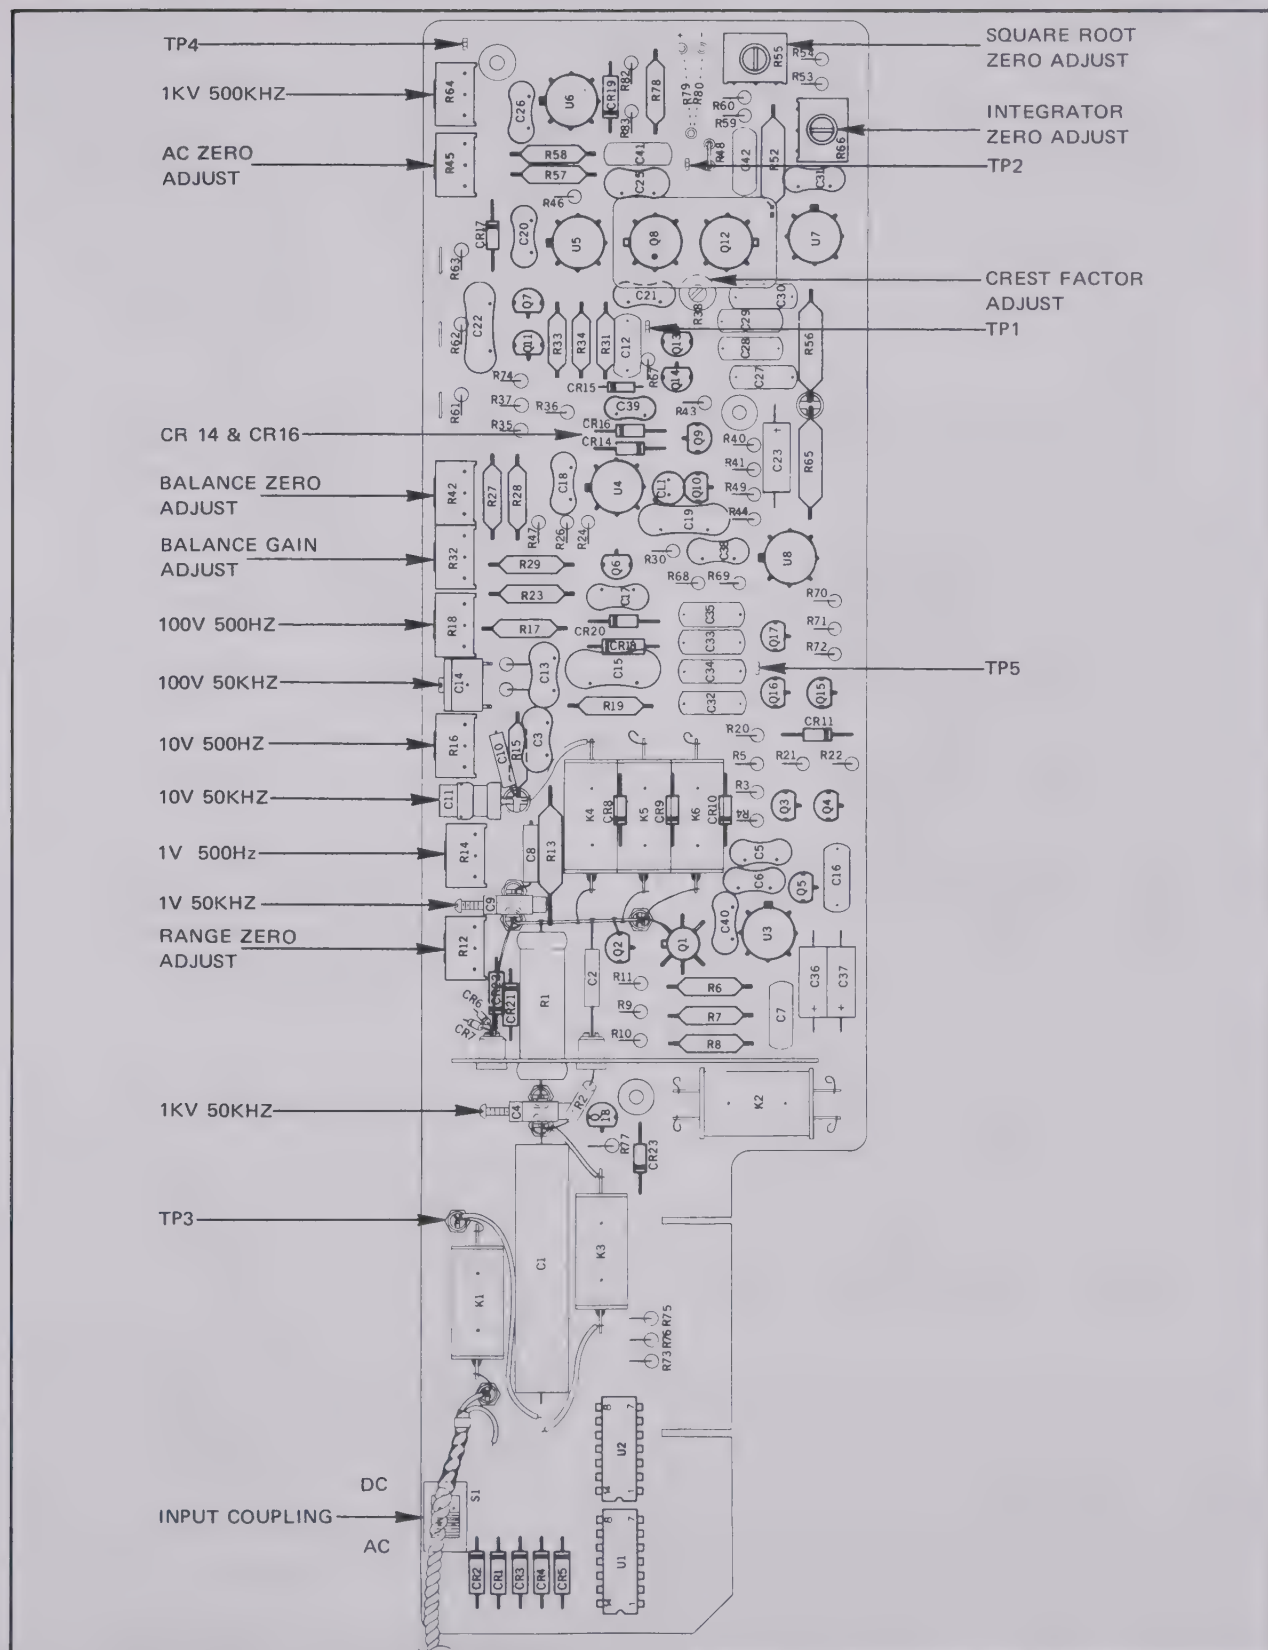

6-38. TROUBLESHOOTING PROCEDURE

- a. Turn instrument on and allow to operate for at least 10 minutes. Erroneous indications may be observed if instrument does not have sufficient "warm-up" time.
- b. Depress VAC and any range button.
- c. Connect DC voltmeter between TP4 and common (shield).
- d. Short HI to LO INPUT terminals. DC voltmeter should indicate within 100 millivolts of zero.

—FAULT ANALYSIS—

If indication is incorrect, go to step f.

- e. Remove input terminal short and apply full range voltage at 500Hz. The dc voltmeter should indicate within 9.95 to 10.05 volts.

—FAULT ANALYSIS—

If indication is incorrect, go to step j.

- f. Remove any INPUT voltage or short. Short TP1 to common (shield).

—FAULT ANALYSIS—

If dc voltmeter indication changes to within 100 millivolts of zero, go to step j.

- g. Short TP1 and TP2 to TP5.
- h. Connect dc voltmeter high lead to TP4. DC voltmeter should indicate within 100 microvolts of zero and adjustable with R66 (Integrator Amplifier Zero Adjust).

—FAULT ANALYSIS—

If indication is incorrect, troubleshoot Integrator Amplifier circuit.

- i. Remove short at TP2 (maintain short between TP1 and common) and connect high lead of dc voltmeter to TP2. DC voltmeter should indicate within 200 millivolts of zero and be adjustable with R55 (Square Root Amplifier Zero Adjust).

—FAULT ANALYSIS—

If indication is incorrect, troubleshoot Square Root Amplifier circuit.

- j. Remove any input voltage, disconnect dc voltmeter and all shorts.
- k. Connect a dc coupled scope with low capacitance probe to the threaded body of C11 (10V 50 kHz adjust) and common.
- l. With no input voltage applied to 8400A, scope should indicate zero volts. With full range voltage at 500 Hz applied to 8400A, scope should indicate a clean sinewave of 2.8 volts peak-to-peak.

—FAULT ANALYSIS—

If scope indication is incorrect, troubleshoot Range Amplifier circuit.

- m. Move scope probe to cathode of CR16 or anode of CR14.
- n. With no input voltage applied to 8400A, scope should indicate within 100 millivolts of zero. With full range voltage at 500Hz applied to 8400A scope should indicate a clean halfwave rectified sinewave of 1.4 volts peak.

—FAULT ANALYSIS—

If scope indication is incorrect, troubleshoot Balance Amplifier Circuit.

- o. Move scope probe to TP1.
- p. With no input voltage applied to 8400A, scope should indicate within 100 millivolts of zero. With full range voltage at 500 Hz applied to 8400A, scope should indicate approximately -1.2 volts dc with a clean ac "scallop" superimposed.

—FAULT ANALYSIS—

If scope indication is incorrect, troubleshoot Squaring Amplifier.

6-39. PRE-CALIBRATION ADJUSTMENTS

6-40. Three adjustments within the RMS Converter are not readjusted during routine calibration. These adjustments are the Square Root Zero, Integrator Zero, and Crest Factor. It is recommended that these three adjustments be attempted only if previously moved or if components are replaced within the converter. Procedure for performing these adjustments is as follows:

- a. With power off, extend the RMS Converter from the 8400A mainframe and remove shield from converter. Turn on power and allow instrument 10 minutes to stabilize.
- b. Short INPUT terminals. Short TP1 and TP2 to common (shield). Connect dc voltmeter (Table 6-1) between TP4 (+) and TP5 (-).
- c. Adjust R66, Integrator Zero Adjust, for 0 volts ± 100 microvolts.
- d. Remove short from TP2 and connect dc voltmeter (+) lead to TP2.
- e. Adjust R55, Square Root Zero, for 0 volts ± 200 millivolts.

- f. Remove short from TP1 and disconnect dc voltmeter.
- g. Complete Preliminary Operations of calibration procedure starting with paragraph 6-27 thru 6-31.
- h. Connect equipment as diagramed in Figure 6-4. Set Model 8400A to ac coupling and auto range.

NOTE!

The following adjustment procedure is for crest factor. Crest factor (cf) is the relationship between the peak and rms value, such that

$$cf = V_{Peak}/V_{RMS}$$

- i. Adjust generator repetition rate for 100 pulses per second (10 msec) and pulse width for a maximum indication on Model 931. (This will be a symmetrical waveform.)
- j. Adjust generator negative output amplitude control for 1 volt rms indication on 931. This establishes a waveform with crest factor of 1. Note Model 8400A reading.
- k. Adjust generator amplitude control for 4 volts peak to peak indication on scope and pulse width con-

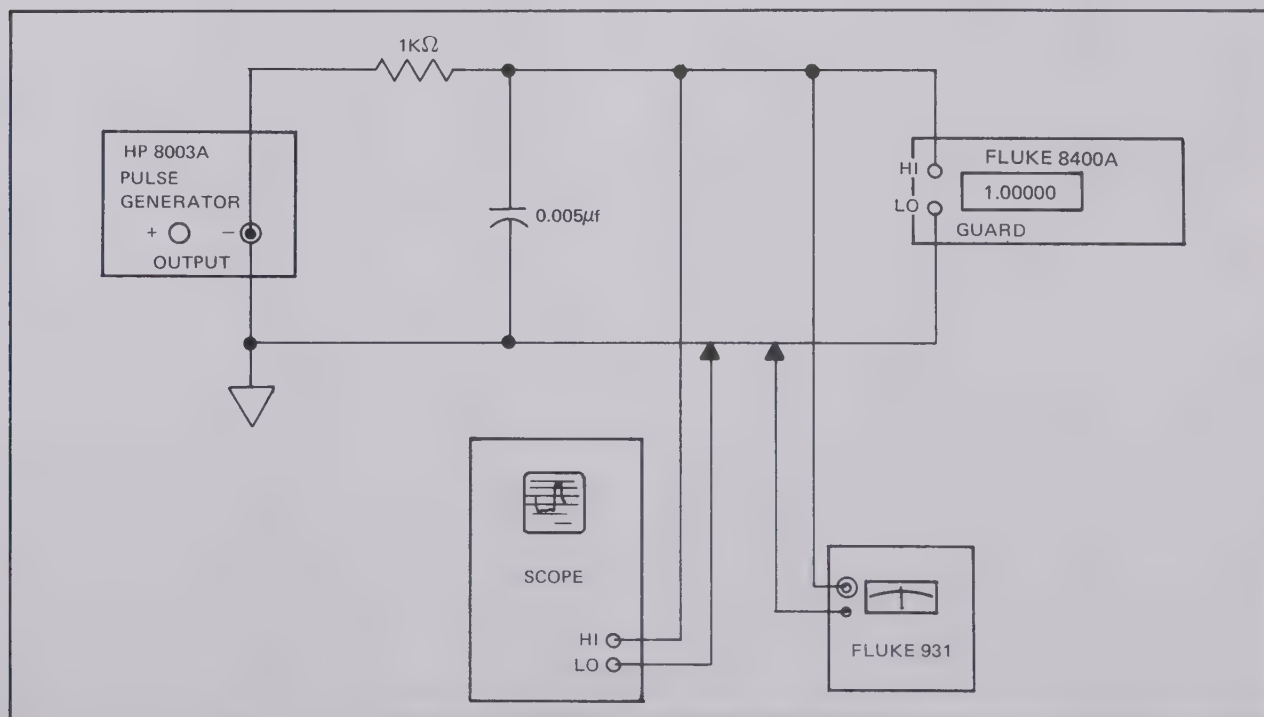


Figure 6-4. EQUIPMENT CONNECTIONS FOR CREST FACTOR ADJUST

trol for 1 volt RMS indication on Model 931. This establishes a waveform with crest factor of 4.

- l. Adjust R38 (Crest Factor Adjust) for Model 8400A indication noted in step j.
- m. Repeat steps b through e until difference between readings for crest factors of 1 and 4 is less than 10 digits.
- n. Check positive polarity pulse with crest factor of 4 by connecting equipment to pulse generator positive output and make adjustments described in step k.
- o. 8400A indication should be within 30 digits of finalized value noted in step j.
- p. Turn power off. Disconnect all test equipment from 8400A. Re-install shield on RMS Converter and install the converter in 8400A mainframe. Install top guard and dust cover. Turn on instrument and allow to "warm-up" for one hour before performing Calibration Adjustment/Check, paragraph 6-30.

6-40. MATCHED COMPONENTS

6-41. A few components within the RMS Converter are matched at the factory. Two transistors, Q8 and Q9, are matched to each other. Resistors R56, R76, and R77 are factory selected for overall converter temperature coefficient and linearity which also affects Q8 and Q9. Should any of these components require replacement, a complete matched set will have to be ordered. In the case of replacement, the total set must be installed. Depending upon the

matched set received, some or none of the three resistors may be included. Therefore, in positions where there is no resistor to install, a bus wire must be installed. Refer to List of Replaceable Parts for ordering information.

6-42. LIST OF REPLACEABLE PARTS

6-43. For column entry explanations, part ordering information and basic instrument configuration Use Codes and Serial Number Effectivity List, see Section 5, paragraphs 5-1 through 5-10. See paragraph 6-44, this option subsection, for additional Use Codes and Serial Number Effectivity List assigned to this printed circuit assembly option.

6-44. SERIAL NUMBER EFFECTIVITY

6-45. A Use Code column is provided to identify certain parts that have been added, deleted, or modified during production of the Model 8400A. Each part in this option for which a use code has been assigned may be identified with a particular printed circuit board serial number by consulting the Use Code Effectivity List below. All parts with no code are used on all printed circuit boards with serial numbers 123 and on. NOTE: These Use Codes and Serial Number Effectivity apply to this option printed circuit board only. For the standard instrument configuration, see Section 5, paragraph 5-9, and for additional options, see the appropriate option subsection.

USE CODE	SERIAL NUMBER EFFECTIVITY
A	123 thru 54300
B	54400 and on.

REF DESIG	DESCRIPTION	STOCK NO	TOT QTY	REC QTY	USE CODE
A22	RMS CONVERTER (-09 Option) Figure 6-	339309	REF		
C1	Cap, plstc, 0.22 uf $\pm$ 20%, 1200V	268904	1		
C2	Cap, porc, 2.7 pf $\pm$ 0.25 pf, 1700V	340745	1		
C3	Cap, mica, 220 pf $\pm$ 5%, 500V	170423	1		
C4,C9	Cap, var, teflon, 0.25 - 1.5 pf, 2kV	218206	2		
C5	Cap, mica, 22 pf $\pm$ 5%, 500V	148551	1		
C6	Cap, mica, 8 pf $\pm$ 10%, 500V	216986	1	A B	
C6	Cap, mica, 4 pf $\pm$ 10%, 500V	190397			
C7,C34	Cap, plstc, 0.1 uf $\pm$ 10%, 250V	161992	2		
C8	Cap, porc, 2.2 pf $\pm$ 0.25 pf, 1700V	340273	1		
C10	Cap, porc, 27 pf $\pm$ 5%, 500V	344283	1		
C11	Cap, var, air, 0.8 - 10 pf, 250V	229930	1		
C12,C16, C41,C42	Cap, plstc, 0.047 uf $\pm$ 10%, 250V	162008	4		
C13	Cap, mica, 330 pf $\pm$ 1%, 500V	226142	1		
C14	Cap, var, cer, 9 - 35 pf, 350V	289637	1		
C15	Cap, mica, 3600 pf $\pm$ 2%, 500V	176644	1		
C17	Cap, mica, 15 pf $\pm$ 5%, 500V	148569	1		
C18,C20	Cap, mica, 27 pf $\pm$ 5%, 500V	177998	2		
C19,C22	Cap, mica, 1000 pf $\pm$ 5%, 500V	178387	2		
C21,C40	Cap, mica, 2 pf $\pm$ 0.5 pf, 500V	175208	2		
C23,C36, C37	Cap, Ta, 15 uf $\pm$ 10%, 20V	153056	3		
C24	Not Used				
C25	Cap, mica, 390 pf $\pm$ 5%, 500V	148437	1		
C26,C31, C38	Cap, mica, 33 pf $\pm$ 5%, 500V	160317	3		
C27,C30	Cap, plstc, 6800 pf $\pm$ 10%, 250V	342881	2		
C28,C29	Cap, plstc, 0.022 uf $\pm$ 10%, 250V	234484	2		
C32,C35	Cap, plstc, 0.033 uf $\pm$ 10%, 250V	234492	2		
C33	Cap, plstc, 4700 pf $\pm$ 10%, 250V	342873	1		

REF DESIG	DESCRIPTION	STOCK NO	TOT QTY	REC QTY	USE CODE
C39	Cap, plstc, 0.1 μ f $\pm$ 10%, 250V	161992			B
CL1	Current regulator FET	285106	1		
CR1 thru CR5	Diode, germanium, 80 mA, 100 piv	149187	5		
CR6,CR7, CR20	Diode, silicon, 100 mA at 1.5V	261370	3		
CR8,CR9, CR10,CR11, CR17,CR23	Diode, silicon, 150 mA	203323	6		
CR12,CR13	Not Used				
CR14,CR16	Diode, silicon, 100 mA at 1.5V	161810	2		
CR15,CR18	Diode, zener, 10V	246611	2		
CR19	Diode, silicon, 10 mA, 2 piv	180554	1		
CR21,CR22	Diode, zener, 6.8V	260695	2		
K1,K3	Relay, reed switch	284091	2		
	Coil, relay	269019	5		
	Foil wrap	313833	2		
K2A,K2B, K4,K5,K6	Relay reed switch	289850	5		
	Coil, relay (K2)	272070	1		
	Coil, relay (K4,K5,K6)	269019	REF		
	Foil wrap (K4,K5,K6)	280008	3		
Q1	Tstr, FET, dual, N-channel	267963	1		
Q2,Q6,Q7	Tstr, FET, N-channel	343103	3		
Q3,Q101,Q18 Q9	Tstr, silicon, NPN	218396	3		
	Tstr, sil, NPN	218081	1		B
Q4,Q11,Q15	Tstr, silicon, PNP	195974	3		
Q5,Q13,Q14 Q16,Q17	Tstr, FET, N-channel	288324	5		
Q8,Q12	Part of matched set		1		
R1	Res, met flm, 1M $\pm$ 0.1%, 1w	340265	1		
R2,R11	Res, comp, 12k $\pm$ 5%, 1/4w	159731	2		
R3,R4,R5, R47	Res, comp, 51k $\pm$ 5%, 1/4w	193334	4		
R6,R7,R31	Res, met flm, 50k $\pm$ 0.1%, 1/8w	340257	3		

REF DESIG	DESCRIPTION	STOCK NO	TOT QTY	REC QTY	USE CODE
R8	Res, met flm, 48.7k $\pm$ 1%, 1/8w	267385	1		
R9,R20, R35,R53, R59,R67, R70	Res, comp, 1M $\pm$ 5%, 1/4w	182204	7		
R10	Res, comp, 390 Ω $\pm$ 5%, 1/4w	147975	1		
R12,R42, R45	Res, var, cermet, 1M $\pm$ 10%, 1/2w	334722	3		
R13	Res, met flm, 995k $\pm$ 0.1%, 1/2w	340158	1		
R14,R64	Res, var, cermet, 10k $\pm$ 10%, 1/2w	385171	2		
R15	Res, met flm, 110.6k $\pm$ 0.1%, 1/8w	340224	1		
R16	Res, var, cermet, 1k $\pm$ 10%, 1/2w	285155	1		
R17	Res, met flm, 10.05k $\pm$ 0.1%, 1/8w	340216	1		
R18	Res, var, cermet, 100 Ω $\pm$ 10%, 1/2w	285130	1		
R19	Res, met flm, 1.001k $\pm$ 0.1%, 1/8w	340208	1		
R21,R72, R75	Res, comp, 22k $\pm$ 5%, 1/4w	148130	3		
R22	Res, comp, 300k $\pm$ 5%, 1/4w	234682	1		
R23	Res, met flm, 4.975k $\pm$ 0.1%, 1/8w	340232	1		
R24	Res, comp, 5.1k $\pm$ 5%, 1/4w	193342	1		
R25	Not Used				
R26	Res, comp, 3.9k $\pm$ 5%, 1/4w	148064	1		
R27	Res, met flm, 1M $\pm$ 1%, 1/8w	268797	1		
R28	Res, met flm, 100 Ω $\pm$ 1%, 1/8w	168195	1		
R29	Res, met flm, 5k $\pm$ 0.1%, 1/8w	340240	1		
R30,R37	Res, comp, 6.8k $\pm$ 5%, 1/4w	148098	2		
R32	Res, var, cermet, 50 Ω $\pm$ 10%, 1/2w	285122	1		
R33	Res, met flm, 100k $\pm$ 0.1%, 1/8w	340166	1		
R34	Res, met flm, 35.7k $\pm$ 1%, 1/8w	288480	1		
R36	Res, comp, 68 Ω $\pm$ 5%, 1/4w	247918	1		
R38	Res, var, cermet, 3 Ω $\pm$ 25% 1/2w	347963	1		
R39	Not Used				

REF DESIG	DESCRIPTION	STOCK NO	TOT QTY	REC QTY	USE CODE
R40	Res, comp, 5.6k $\pm$ 5%, 1/4w	148080	1		
R41	Res, comp, 56k $\pm$ 5%, 1/4w	170738	1		
R43,R82	Res, comp, 1k $\pm$ 5%, 1/4w	148023	2		
R44	Res, comp, 9.1k $\pm$ 5%, 1/4w	193318	1		
R46	Res, comp, 560 Ω $\pm$ 5%, 1/4w	147991	1		
R48	Part of matched set, may not be installed		1		
R49,R83	Res, comp, 330 Ω $\pm$ 5%, 1/4w	147967	2		
R50	Res, comp, 100 Ω $\pm$ 5%, 1/4w	147926	1		
R51,R77	Res, comp, 82k $\pm$ 5%, 1/4w	188458	2		
R52	Res, met flm, 2M $\pm$ 1%, 1/4w	340323	1		
R54,R60	Res, comp, 470 Ω $\pm$ 5%, 1/4w	147983	2		
R55,R66	Res, var, cermet, 1M $\pm$ 10%, 1/4w	276691	2		
R56,R65	Res, met flm, 1M $\pm$ 0.25%, 1/4w	340133	2		
R57	Res, met flm, 465k $\pm$ 0.25%, 1/8w	340315	1		
R58	Res, met flm, 499k $\pm$ 1%, 1/8w	268813	1		
R61	Res, met flm, 8.87k $\pm$ 1%, 1/8w	294967	1		
R62	Res, met flm, 17k $\pm$ 1%, 1/8w	236802	1		
R63	Res, met flm, 34k $\pm$ 1%, 1/8w	261602	1		
R68	Res, comp, 200k $\pm$ 5%, 1/4w	248781	1		
R69	Res, comp, 750k $\pm$ 5%, 1/4w	221937	1		
R71	Res, comp, 470k $\pm$ 5%, 1/4w	188441	1		
R73	Res, comp, 47k $\pm$ 5%, 1/4w	148163	1		
R74	Res, comp, 20k $\pm$ 5%, 1/4w	221614	1		
R76	Res, comp, 180k $\pm$ 5%, 1/4w	193441	1		
R78	Res, met flm, 10 Ω $\pm$ 1%, 1/8w	268789	1		
R79,R80	Part of matched set, one or none may be installed				
R81	Not Used				
S1	Switch, slide SPDT	271478	1		
U1	IC, DTL, triple 3-Input Nand Gate	266312	1		
U2	IC, DTL, Quad 2-Input Nand Gate	288597	1		

REF DESIG	DESCRIPTION	STOCK NO	TOT QTY	REC QTY	USE CODE
U3	IC, operational amplifier	329912	1		
U4	IC, operational amplifier	225961	1		
U5	IC, operational amplifier	288928	1		
U6,U7	IC, operational amplifier	284760	2		
U8	IC, operational amplifier	271502	1		
	Cable, Input	304048	1		
	Heat dissipator	347732	1		
	Cover, pcb	339366	1		
1 Q8, Q12, R48, R79, and R80 form a factory matched set. If any of these components require replacement, complete set must be installed. Order "TC Matched Set" part number 361048.					

Accessory

Rack Mounting Fixtures

6-1. INTRODUCTION


6-2. The Model 8400A can be mounted in a standard 18-inch or 24-inch deep equipment rack. The rack mounting kits are as follows:


KIT NAME	RACK KIT NO.
18-inch Rack Slide	M00-260-610
24-inch Rack Slide	M00-280-610
Rack Ears	M03-203-601

6-3. INSTALLATION

6-4. Procedures for installation of rack mounting kits are given in the following illustrations. Each illustration is identified with a form number in the lower lefthand corner. This form number is related to the kit number as follows:

FORM NO.	RACK KIT
A404a	M03-203-601
A405	M00-260-610, M00-280-610

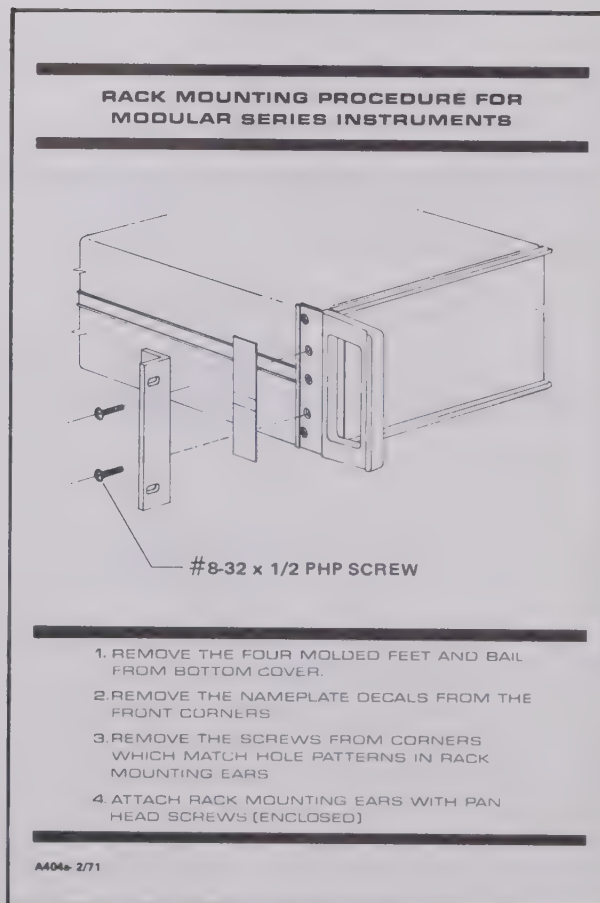

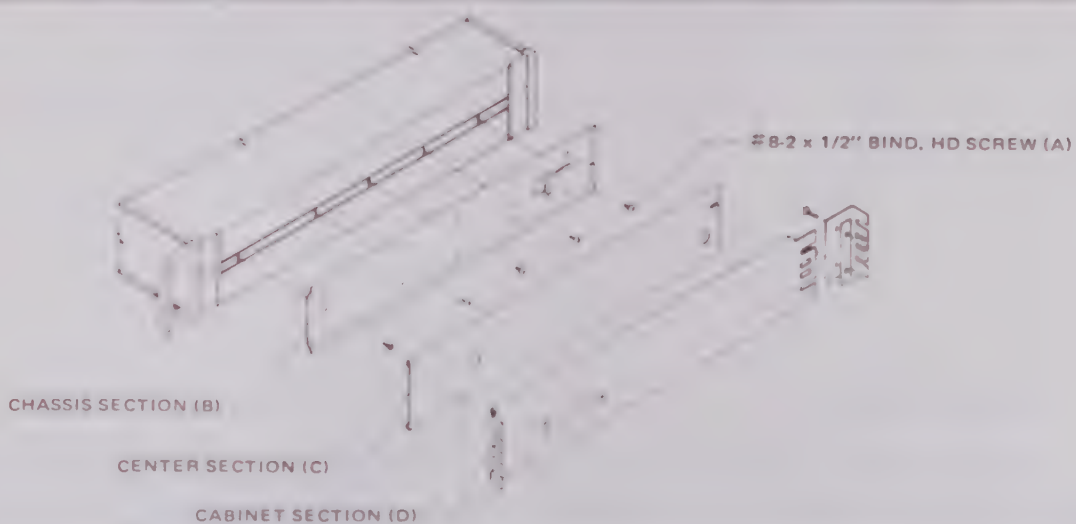

1. REMOVE SIDE TRIM DECAL AND BOTTOM FEET FROM INSTRUMENT
2. ATTACH CHASSIS SECTION (B) OF SLIDE TO INSTRUMENT WITH #8-32 x 1/2" PHP SCREWS (A) (ENCLOSED) AS FOLLOWS:
 - A. FOR 3-1/2", 7" AND 10-1/2" HIGH INSTRUMENTS UTILIZE THE CENTER ROW MOUNTING HOLES
 - B. FOR 5-1/4" AND 8-3/4" HIGH INSTRUMENTS UTILIZE EITHER THE UPPER OR LOWER ROW OF MOUNTING HOLES
3. INSTALL CABINET SECTION (D) AND CENTER SECTION (C) OF SLIDE INTO RACK (EXTENSION ANGLE BRACKET AND HARDWARE ENCLOSED)
4. EXTEND CENTER SECTION (C) OF SLIDE TOWARD OPERATOR UNTIL IT LOCKS IN EXTENDED POSITION
5. DEPRESS SPRING LOCK ON CHASSIS SECTION (B) AND INSERT INSTRUMENT BETWEEN EXTENDED SLIDE SECTIONS

Form No. A405-3/71 Rev. 1

Accessory

DOU, RCU Mating Connector

6-1. INTRODUCTION

6-2. The mating connector shown in Figure 6-1 is required for interface between the Remote Control Unit and the programming equipment. It also provides interface between Data Output Unit No. 1 & 2 and external equipment. This connector is obtained when either option is ordered, or can be obtained by ordering from the factory, referencing FLUKE PART NO. 321687.

6-3. ASSEMBLY INSTRUCTIONS

6-4. Wiring and assembly of the mating connector is done as follows:

- a. Solder the wiring to the appropriate terminals of the connector. Refer to Figure 6-1, detail I for terminal locations. Functional pin assignments for

the Remote Control Unit and the Data Output Unit No. 1 & 2 can be found in Section 2.

- b. Mount alignment spacers (F) between proper pins on Connector (B). Spacer positions are given in Figure 6-2.
- c. Mount Connector (B) into Backshell half (C). Refer to detail II of Figure 6-1.
- d. Mount Backshell half (A) onto Backshell half (C). When correctly mounted together, the Backshell halves snap in place.
- e. Secure Backshell halves (A) and (C) together with 4 screws (D), supplied.
- f. Secure Connector (B) to Backshell halves (A) and (C) with two screws (E), supplied.

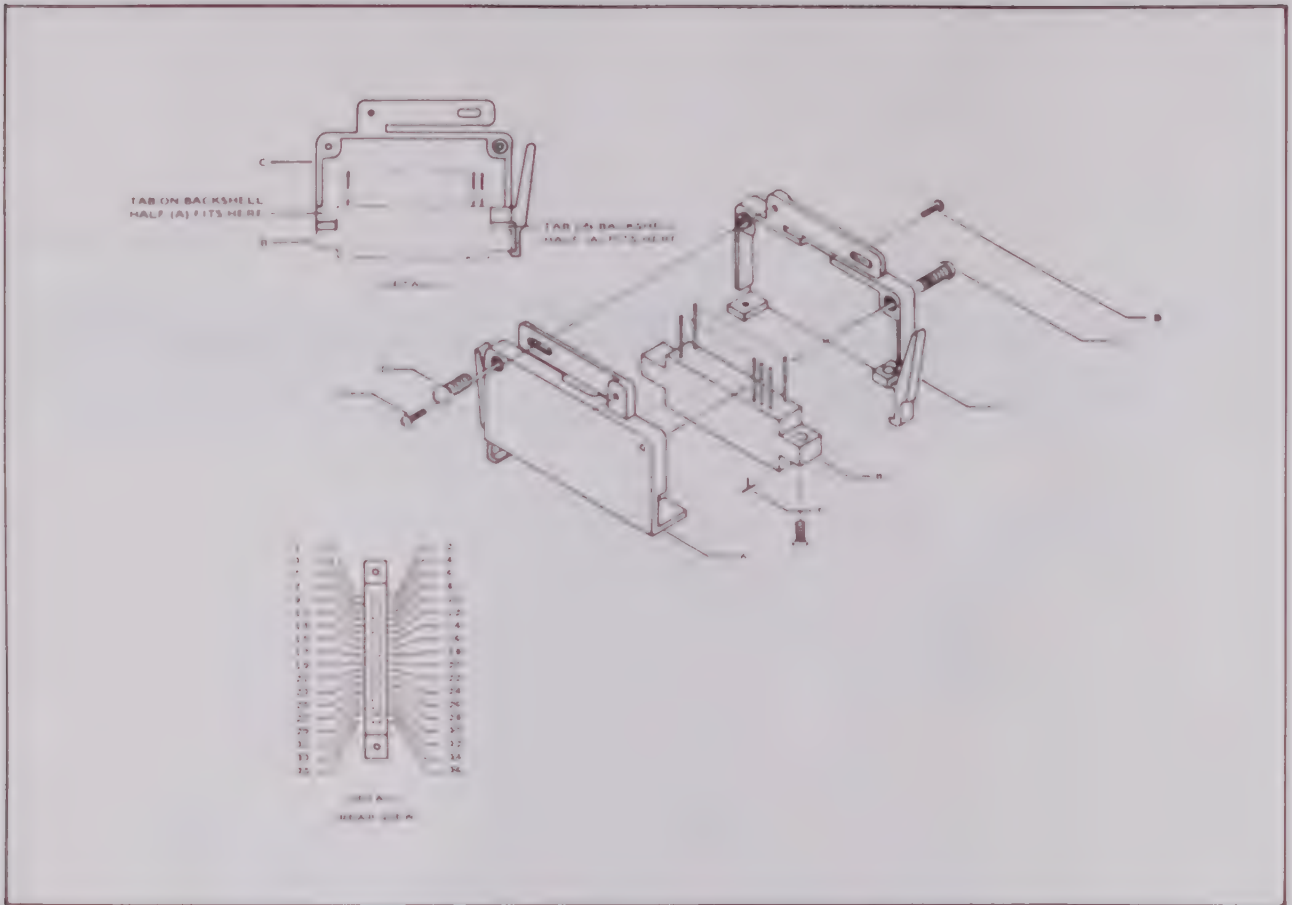


Figure 6-1. DOU, RCU MATING CONNECTOR

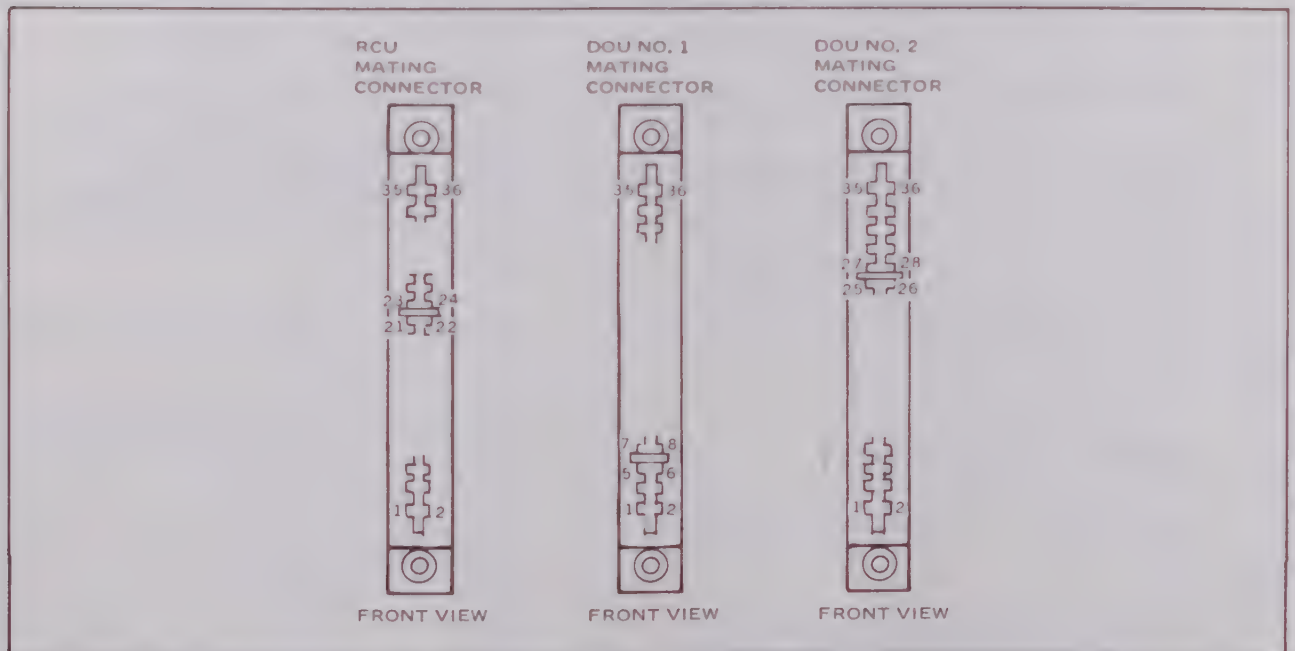


Figure 6-2. ALIGNMENT SPACER POSITIONS

Accessory

External Reference Mating Connector

6-1. INTRODUCTION

6-2. The mating connector shown in Figure 6-1 is required for interface between the DC and AC External Reference connector and the external equipment. This connector is obtained when either option is ordered, or can be obtained by ordering from the factory by referencing FLUKE PART NO. 321679.

6-3. ASSEMBLY INSTRUCTIONS

6-4. Wiring and assembly of the mating connector is done as follows:

- a. Solder the wiring to Terminals (B).
- b. Insert Terminals (B) in Connector (A). Refer to Figure 6-1 for terminal locations. Rear panel decal on instrument shows pin connections from External Reference Assembly to Connector.
- c. Mount Cable Clamps (C) onto Connector (A) and secure with hardware (D) to Connector (A).
- d. Secure both halves of Cable Clamp (C) together with screws (E).

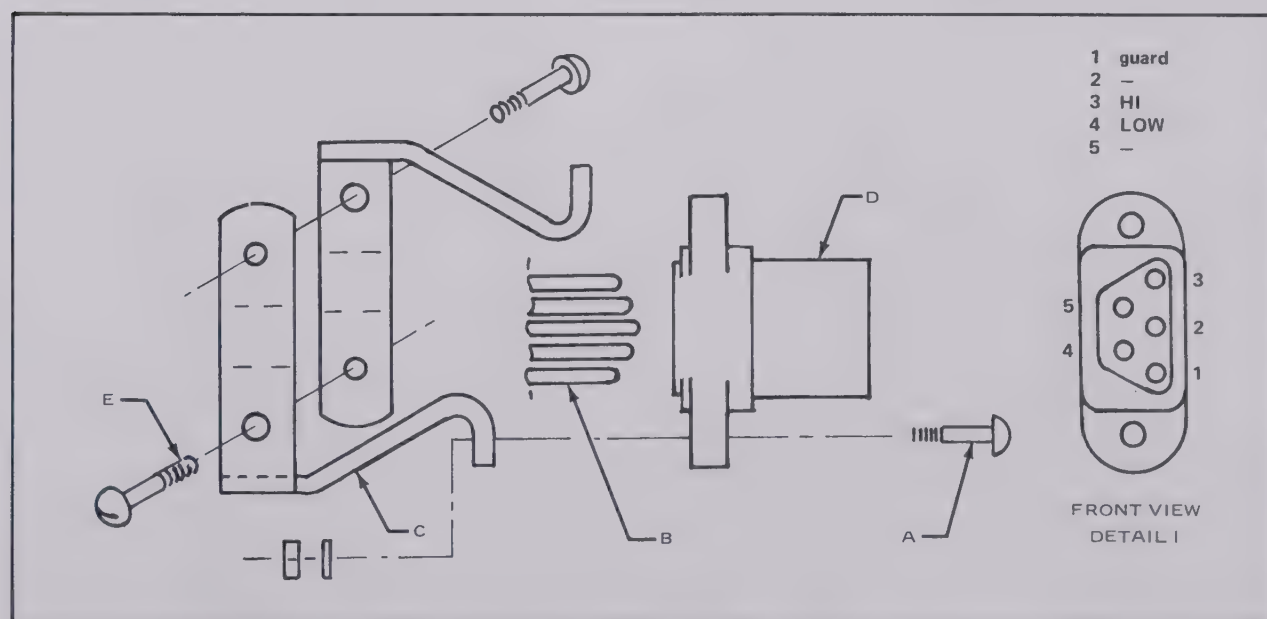


Figure 6-1. EXTERNAL REFERENCE MATING CONNECTOR

Accessory

Rear Input Mating Connector

6-1. INTRODUCTION

6-2. The mating connector shown in Figure 6-1 is required for interface between the rear panel INPUT connector and external equipment. This connector is obtained when the Rear Input Option (-07) is ordered, or can be obtained from the factory by referencing FLUKE PART NO. 321661.

6-3. ASSEMBLY INSTRUCTIONS

6-4. Wiring and assembly of the mating connector is done as follows:

- a. Solder wiring to connector pins (B).
- b. Insert connector pins (B) into Connector (A). Refer to Figure 6-1 for terminal locations. Refer to the rear panel decal for functional pin assignments.
- c. Mount and secure Cable Clamps (C) onto Connector (A) with proper hardware (D).
- d. Secure Cable Clamps (C) together with screws (E).

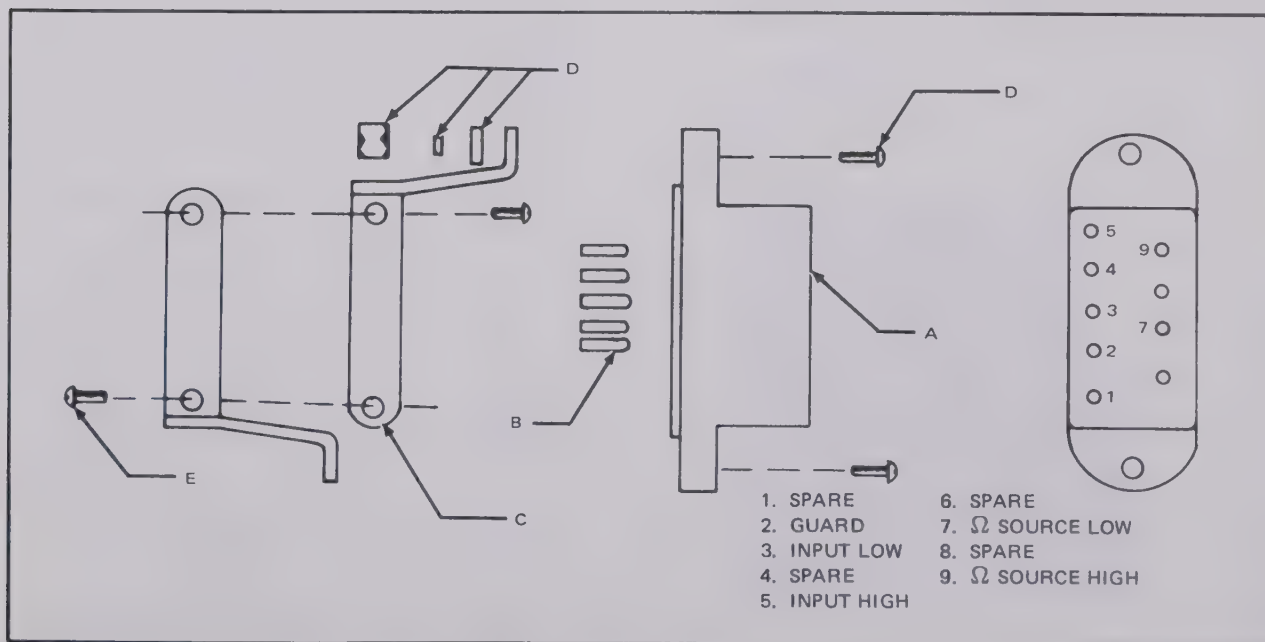


Figure 6-1. REAR INPUT MATING CONNECTOR

Accessory Extender Card

6-1. INTRODUCTION

6-2. The Extender Card shown in Figure 6-1 is available as an Accessory for the FLUKE 8400A digital voltmeter. This accessory permits the printed circuit boards in the Model 8400A to be extended for servicing. The Extender Card can be obtained by ordering it under FLUKE PART NO. 298265.

6-3. INSTALLATION

6-4. To install a printed circuit board on the Extender Card proceed as follows:

- a. Disconnect 8400A from line power.
- b. Remove top dust and guard covers from instrument.
- c. Locate the printed circuit board to be serviced and remove it from the instrument.
- d. Install the Extender Card into the connector vacated by the removal of the printed circuit board.
- e. Install the printed circuit board into the connector on the Extender Card. The printed circuit board must face the same direction as it did when installed into the instrument.
- f. Connect 8400A to line power and turn on instrument. The printed circuit board can now be serviced.

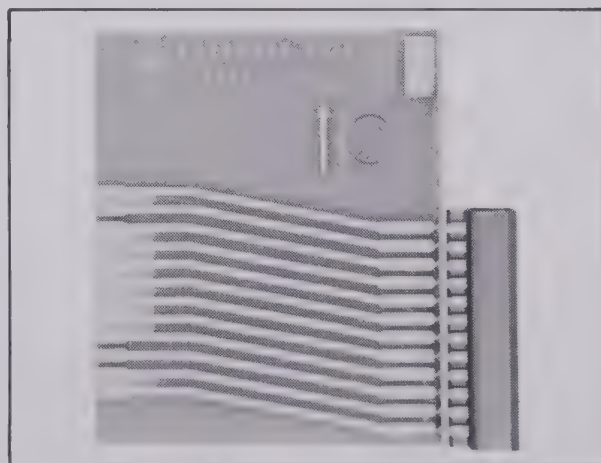


Figure 6-1. EXTENDER CARD

ACCESSORY INFORMATION

MODEL 80F-5 VOLTAGE DIVIDER

6-1. INTRODUCTION

6-2. The Accessory Model 80F-5 Voltage Divider allows measurement of up to 5k volts dc to be made using FLUKE 800, 900, and 8000 series voltmeters. Division ratio of this accessory is 1000:1. Accuracy and stability of

the division ratio is ensured using special metal film resistors having matched temperature coefficients.

6-3. Physical design of the Model 80F-5 allows direct mating to the input terminals of the FLUKE voltmeters. A high voltage probe facilitates connection to the measure-

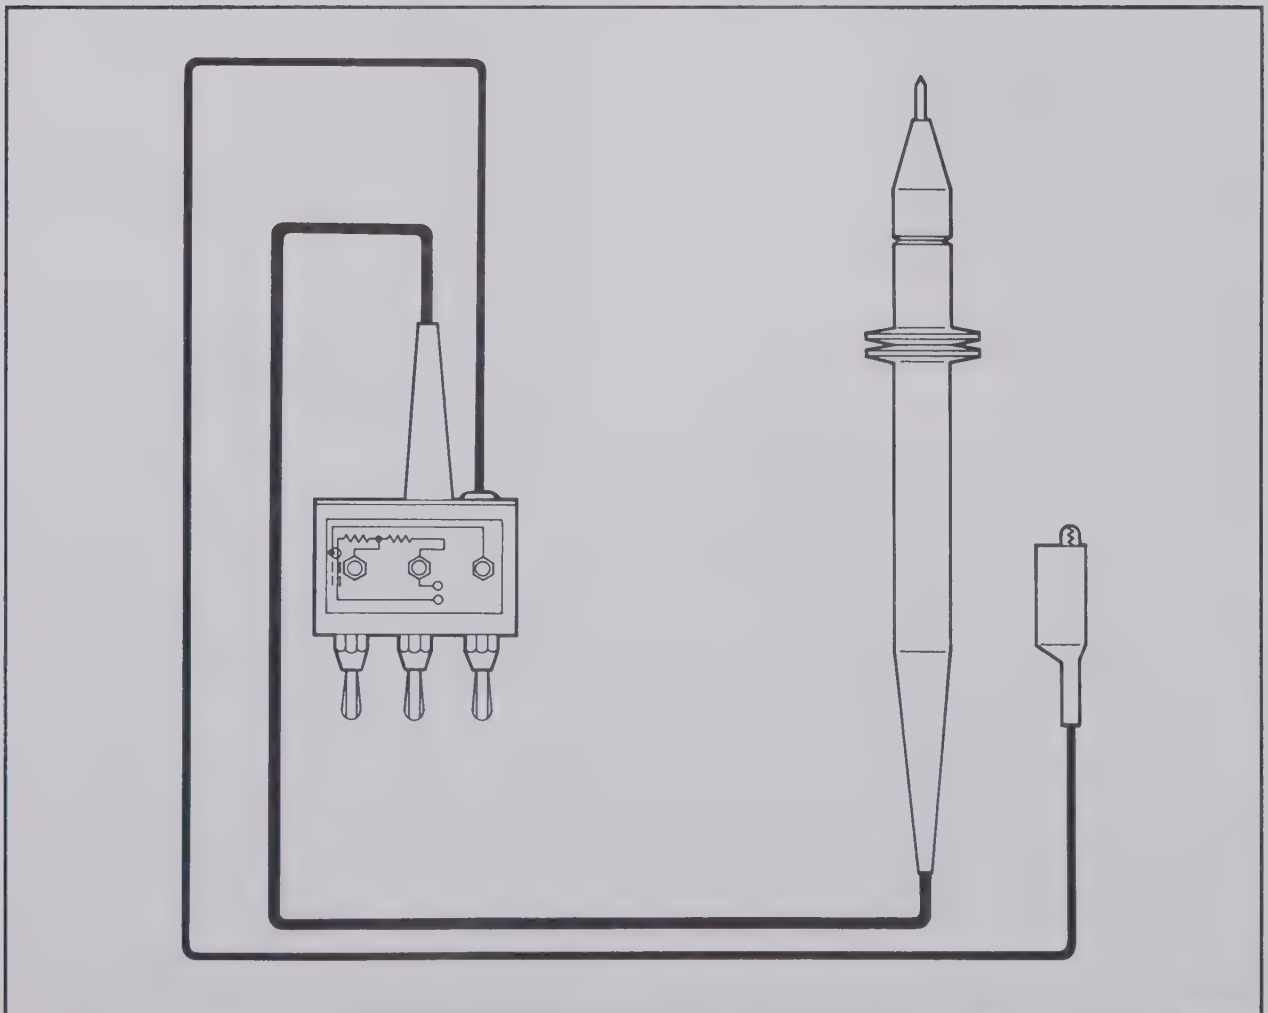


Figure 6-1. MODEL 80F-5 VOLTAGE DIVIDER

ment source. Maintenance is minimized by encapsulation of the divider components.

6-4. Three versions of the Model 80F-5 are available. The basic Model 80F-5 is used with voltmeters having a 10 megohm input resistance. An (01) Option is provided for voltmeters having an 11 megohm input resistance, and an (02) Option is provided for voltmeters having an infinite input resistance (10^3 megohms or greater) at null.

6-5. SPECIFICATIONS

6-6. Electrical

DIVISION RATIO

1000:1

RATIO ACCURACY

+0.05% of input from 500 to 5000 vdc.

RATIO ACCURACY STABILITY

+0.02 per month
+0.1% per year

} Calibrated by internal adjustment

VOLTAGE COEFFICIENT

Less than 20 ppm total from 0 to 5000 vdc.

TEMPERATURE COEFFICIENT

0.001% /°C

INPUT RESISTANCE

50 Megohms

MAXIMUM INPUT VOLTAGE

5000 vdc

REQUIRED VOLTMETER INPUT RESISTANCE:

80F-5	80F-5 (01)	80F-5 (02)
10 Megohms	11 Megohms	Infinite at null (10^3 megohms or greater)

MAXIMUM OUTPUT VOLTAGE

5 vdc

6-7. Environmental

OPERATING:

Temperature Range – 0°C to 50°C

Humidity – 0 to 80%

Altitude Range – 0 to 10,000 feet

NON-OPERATING:

Altitude Range – 0 to 50,000 feet

6-8. Mechanical

DIMENSIONS

2.28 inches high x 1.52 inches wide x 1.525 inches deep.

WEIGHT:

20 ounces (340 grams)

6-9. OPERATING INSTRUCTIONS

- Connect the Model 80F-5 output terminals directly to the INPUT terminals of the FLUKE voltmeter.
- Select the appropriate dc voltage range on the FLUKE voltmeter.
- Deenergize the high voltage source to be measured.
- Connect the ground clip (–) and probe (+) to respective low and high sections of the high voltage source.

WARNING!

Lethal voltages will be present between the ground clip and probe of the 80F-5 when the high voltage source is energized.

- Energize the high voltage source. Multiply the FLUKE voltmeter indication by 1000 to obtain the magnitude of the high voltage.

6-10. MAINTENANCE

6-11. General

6-12. The Model 80F-5 requires a minimum amount of maintenance. All that is required is occasional cleaning and calibration.

6-13. Cleaning

6-14. Accumulation of dust or dirt particles between the output terminals of the Model 80F-5 can be removed using clean dry pressurized air. Stubborn particles can be removed following an application of isopropyl alcohol.

6-15. Calibration

6-16. The Model 80F-5 division ratio should be checked every month or every year depending on the accuracy requirement. Ratio accuracy stability is specified at $\pm 0.01\%$ per month and $\pm 0.05\%$ per year. Calibration should be accomplished only after the Model 80F-5 has been in non-operating state for at least four hours at a temperature of 23°C.

6-17. Test equipment requirements are a stable 1000 volt dc source such as the FLUKE Model 332B Voltage Calibrator and the FLUKE voltmeter. To calibrate the Model 80F-5, perform the following steps:

NOTE

The input resistance of the voltmeter must match that of the 80F-5. See paragraph 6-6, REQUIRED VOLTMETER INPUT RESISTANCE.

- Calibrate the FLUKE voltmeter.

- b. Install the Model 80F-5 on the FLUKE voltmeter input terminals.
- c. Unscrew the strain relief on the input cable of the Model 80F-5 and remove the front cover.
- d. Select the appropriate dc voltage range on the FLUKE voltmeter.
- e. Apply 1000 volts dc to the Model 80F-5 high voltage probe.
- f. Adjust the variable resistor on the Model 80F-5 for a 1.0 volt dc indication on the FLUKE voltmeter.
- g. Remove the voltage from the Model 80F-5 high voltage probe.
- h. Install the Model 80F-5 front cover and strain relief.

ACCESSORY INFORMATION

MODEL 80F-15 VOLTAGE DIVIDER

6-1. INTRODUCTION

6-2. The Accessory Model 80F-15 Voltage Divider allows measurement of up to 15k volts dc to be made using FLUKE 800, 900, and 8000 series voltmeters. Division ratio of this accessory is 1000:1. Accuracy and stability of

the division ratio is ensured using special metal film resistors having matched temperature coefficients.

6-3. Physical design of the Model 80F-15 allows direct mating to the input terminals of the FLUKE voltmeters. A high voltage probe facilitates connection to the measurement

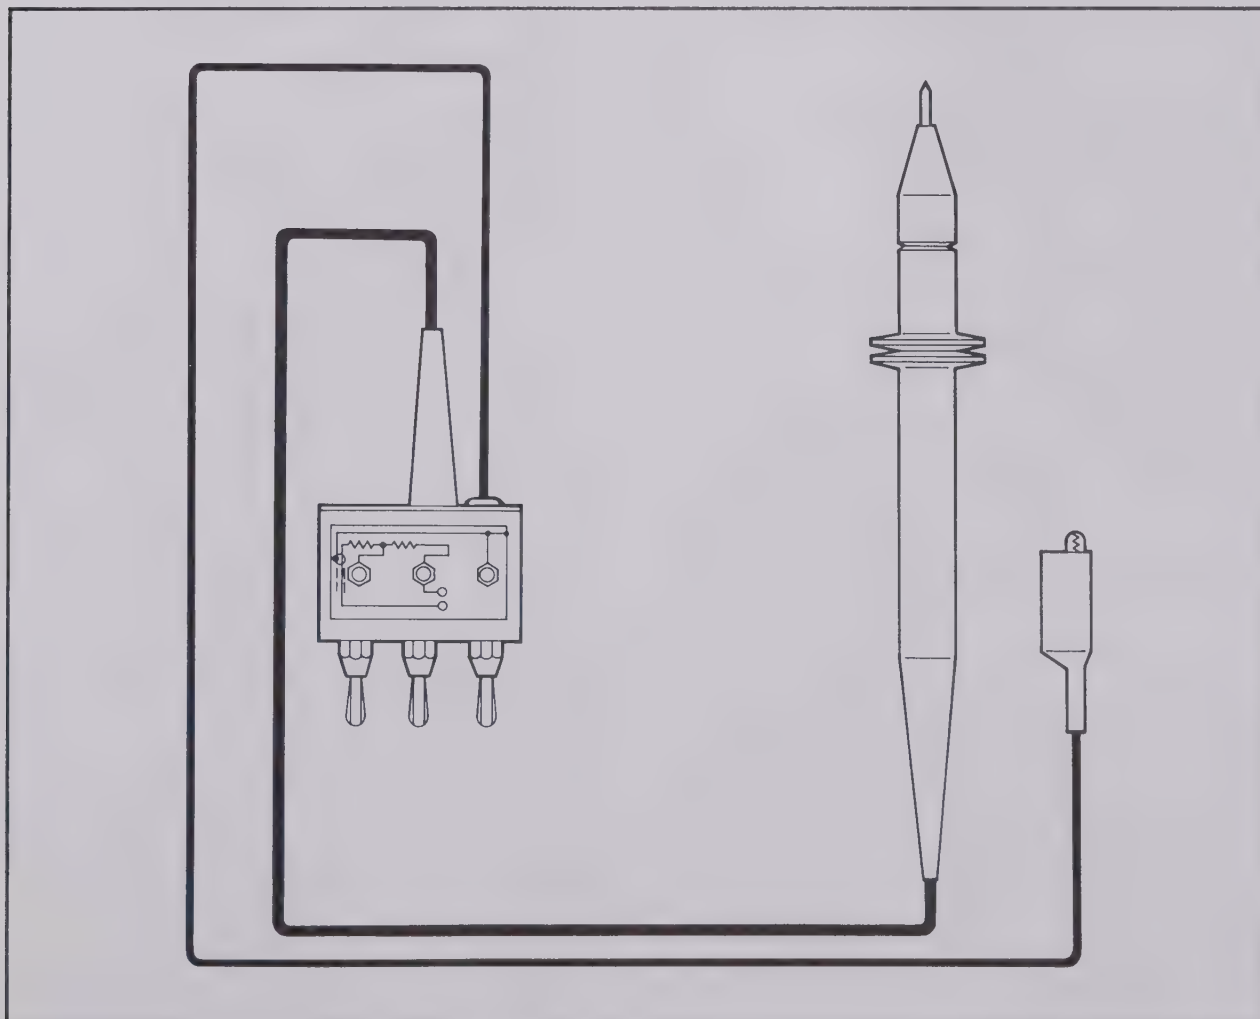


Figure 6-1. MODEL 80F-15 VOLTAGE DIVIDER

source. Maintenance is minimized by encapsulation of the divider components.

6-4. Three versions of the Model 80F-15 are available. The basic Model 80F-15 is used with voltmeters having a 10 megohm input resistance. An (01) Option is provided for voltmeters having an 11 megohm input resistance, and an (02) Option is provided for voltmeters having an infinite input resistance (10^3 megohm or greater) at null.

6-5. SPECIFICATIONS

6-6. Electrical

DIVISION RATIO

1000:1

RATIO ACCURACY

+0.05% of input from 1,000 to 15,000 vdc.

RATIO ACCURACY STABILITY

+0.02% per month
+0.1% per year

Calibrated by internal adjustment

VOLTAGE COEFFICIENT

Less than 20 ppm total from 0 to 15,000 vdc.

TEMPERATURE COEFFICIENT

0.001%/°C

INPUT RESISTANCE

100 Megohms

MAXIMUM INPUT VOLTAGE

15,000 vdc

REQUIRED VOLTMETER INPUT RESISTANCE:

80F-15	80F-15 (01)	80F-15 (02)
10 Megohms	11 Megohms	Infinite at null (10^3 megohms at greater)

MAXIMUM OUTPUT VOLTAGE:

15 vdc

6-7. Environmental

OPERATING:

Temperature Range – 0°C to 50°C

Humidity – 0 to 80%

Altitude Range – 0 to 10,000 feet

NON-OPERATING:

Altitude Range – 0 to 50,000 feet

6-8. Mechanical

WEIGHT:

24 ounces (680 grams)

DIMENSIONS:

2.725 inches high x 2.69 inches wide x 1.525 inches deep.

6-9. OPERATING INSTRUCTIONS

- Connect the Model 80F-15 output terminals directly to the INPUT of the FLUKE voltmeter.
- Select the appropriate dc voltage range on the FLUKE voltmeter.
- Deenergize the high voltage source to be measured.
- Connect the ground clip (–) and probe (+) to respective low and high sections of the high voltage source.

WARNING!

Lethal voltages will be present between the ground clip and probe of the 80F-15 when the high voltage source is energized.

- Energize the high voltage source. Multiply the FLUKE voltmeter indication by 1000 to obtain the magnitude of the high voltage.

6-10. MAINTENANCE

6-11. General

6-12. The Model 80F-15 requires a minimum amount of maintenance. All that is required is occasional cleaning and calibration.

6-13. Cleaning

6-14. Accumulation of dust or dirt particles between the output terminals of the Model 80F-15 can be removed using clean dry pressurized air. Stubborn particles can be removed following an application of isopropyl alcohol.

6-15. Calibration

6-16. The Model 80F-15 division ratio should be checked every month or every year depending on the accuracy requirement. Ratio accuracy stability is specified at $\pm 0.01\%$ per month and $\pm 0.05\%$ per year. Calibration should be accomplished only after the Model 80F-15 has been in the non-operating state for at least four hours at a temperature of 23°C.

6-17. Test equipment requirements are a stable 1000 volt dc source such as the FLUKE Model 332B Voltage Calibrator and the FLUKE voltmeter. To calibrate the Model 80F-15, perform the following steps:

NOTE

The input resistance of the voltmeter must match that of the 80F-15. See paragraph 6-6, REQUIRED VOLTMETER INPUT RESISTANCE.

- a. Calibrate the FLUKE voltmeter.
- b. Install the Model 80F-15 on the FLUKE voltmeter input terminals.
- c. Unscrew the strain relief on the input cable of the Model 80F-15 and remove the front cover.
- d. Select the appropriate dc voltage range on the FLUKE voltmeter.
- e. Apply 1000 volts dc to the Model 80F-15 high voltage probe.
- f. Adjust the variable resistor on the Model 80F-15 for a 1.0 volt dc indication on the FLUKE voltmeter.
- g. Remove the voltage from the Model 80F-15 high voltage probe.
- h. Install the Model 80F-15 front cover and strain relief.

ACCESSORY INFORMATION

MODEL 80-RF HIGH FREQUENCY PROBE

6-1. INTRODUCTION

62. The Model 80-RF High Frequency Probe allows measurements over a frequency range of 100 kHz to 500 MHz from 0.25 to 30 volts when using FLUKE voltmeters having an input impedance of 10 megohms $\pm 10\%$. The accuracy of measurement is $\pm 5\%$ from 100 kHz to 100 MHz and $\pm 7\%$ to 500 MHz. The probe operates into any dc voltmeter having an input impedance of 10 megohms $\pm 10\%$. A shielded dual-banana plug on the probe permits direct connection to the voltmeter input.

6-3. SPECIFICATIONS

6-4. Electrical

VOLTAGE 0.25V to 30V

RESPONSE: Responds to peak value of input. Calibrated to read rms value of a sine wave input.

AC TO DC TRANSFER ACCURACY:

Loaded with 10 megohms $\pm 10\%$.

	100 KHz — 100 MHz	100 MHz — 500 MHz
+10°C to +30°C	$\pm 5\%$	$\pm 7\%$
-10°C to +40°C	$\pm 7\%$	$\pm 15\%$

$< \pm 3$ db at 10 kHz and 700 MHz.

INPUT IMPEDANCE: 4 megohms shunted by 2 ± 0.5 pf.

MAXIMUM INPUT: 30 volts rms AC, 200 volts DC.

6-5. General

CABLE CONNECTIONS: Shielded dual banana plug
Fits all standard 3/4-inch dual banana connectors.

CABLE LENGTH: 4 ft(121.9 cm) minimum.

WEIGHT: 3-1/2 oz. net.

ACCESSORIES SUPPLIED Ground Lead
Straight Tip
Hook Tip
High Frequency Adapter

6-6. OPERATING INSTRUCTIONS

6-7. Connect the shielded dual banana plug directly to the voltmeter input terminals, GND to COMMON or LO. Affix the appropriate probe tip to the probe body, then connect the probe to the high frequency circuit under test. When using the Straight or Hook Tip the ground clip must be connected to the test circuit. When using the high frequency adaptor with appropriate 50 ohm connectors, the ground clip is not required.

6-8. The Straight Tip or Hook Tip supplied with the probe can be used for measurements up to 100 MHz. For measurements above 100 MHz the High Frequency Adapter allows connections to 50 ohm terminations. Ensure that the probe is used in conjunction with dc voltmeters having 10 M Ω $\pm 10\%$ input impedance to meet its specifications.

6-9. The maximum input to the probe is 30 volts rms ac, or 200 volts dc. These factors may be used in combination so that an ac signal may be measured riding on a dc voltage of up to 200 volts. However, it must be noted that if ac superimposed on dc is being measured, the dc level must not be changed by more than 200 volts or the resulting transient is apt to damage the diodes inside the probe.

6-10. THEORY OF OPERATION

6-11. Figure 6-1 contains a schematic diagram of the probe. C1 is a dc blocking capacitor, CR1 is used as a detector, and R1, R3, CR2, R2, and Rin form a divider network. C1, charging through CR1 during the negative half cycle of the input produces a positive dc voltage at the CR1-R1 junction which equals the negative peak value of the input signal. The divider network reduces this to the rms value of the input. It can be seen that the probe must be operated into a 10 M Ω load in order to maintain the proper division ratio.

6-12. CR2 provides compensation for the non-linearity of the detector. R3 is a selected part having a value of 50 k Ω to 100 k Ω , as required for proper divider action.

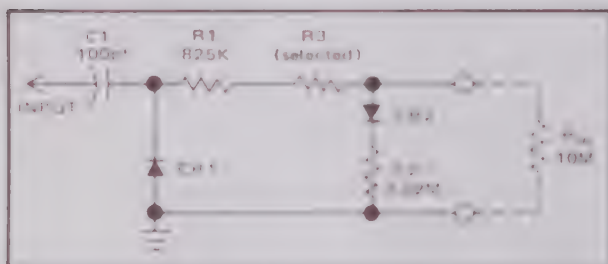


Figure 6-1. SCHEMATIC

6-13. MAINTENANCE

6-14. Performance Checks

6-15. The following checks verify the probe AC to DC Transfer accuracy.

6-16. **LOW FREQUENCY RESPONSE.** Connect equipment as shown in Figure 6-2, and perform the following steps.

- With equipment as shown in connection "A" adjust the ac signal source for an output of 3.000 volts rms at 100 kHz as measured on the DVM.
- In connection "B" with the DVM set to measure dc, observe a probe output of 3.15 to 2.85 volts.
- Placing cables back in connection "A", decrease the ac signal source by 10db (0.95 volts).
- Moving back to connection "B", observe a voltmeter indication of between 1.00 and 0.90 volts (10 db down from 3 volts).

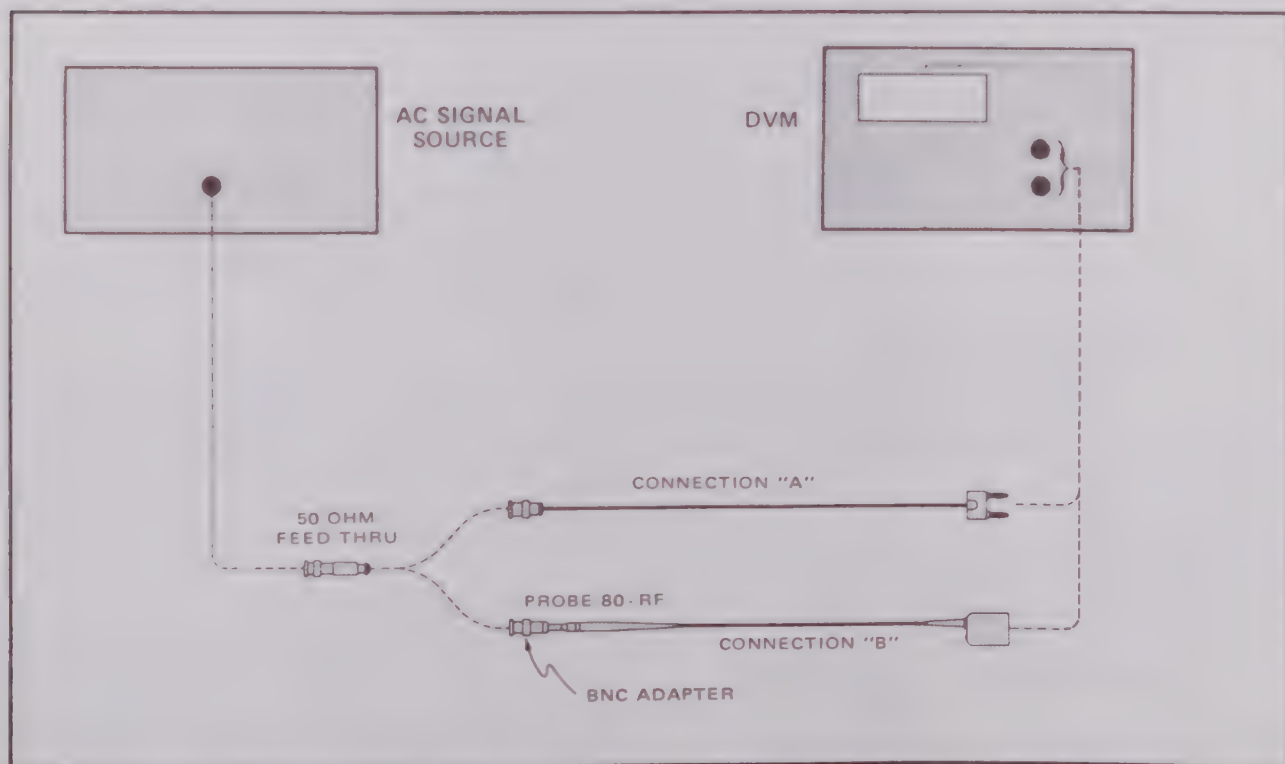


Figure 6-2. LOW FREQUENCY RESPONSE CHECK

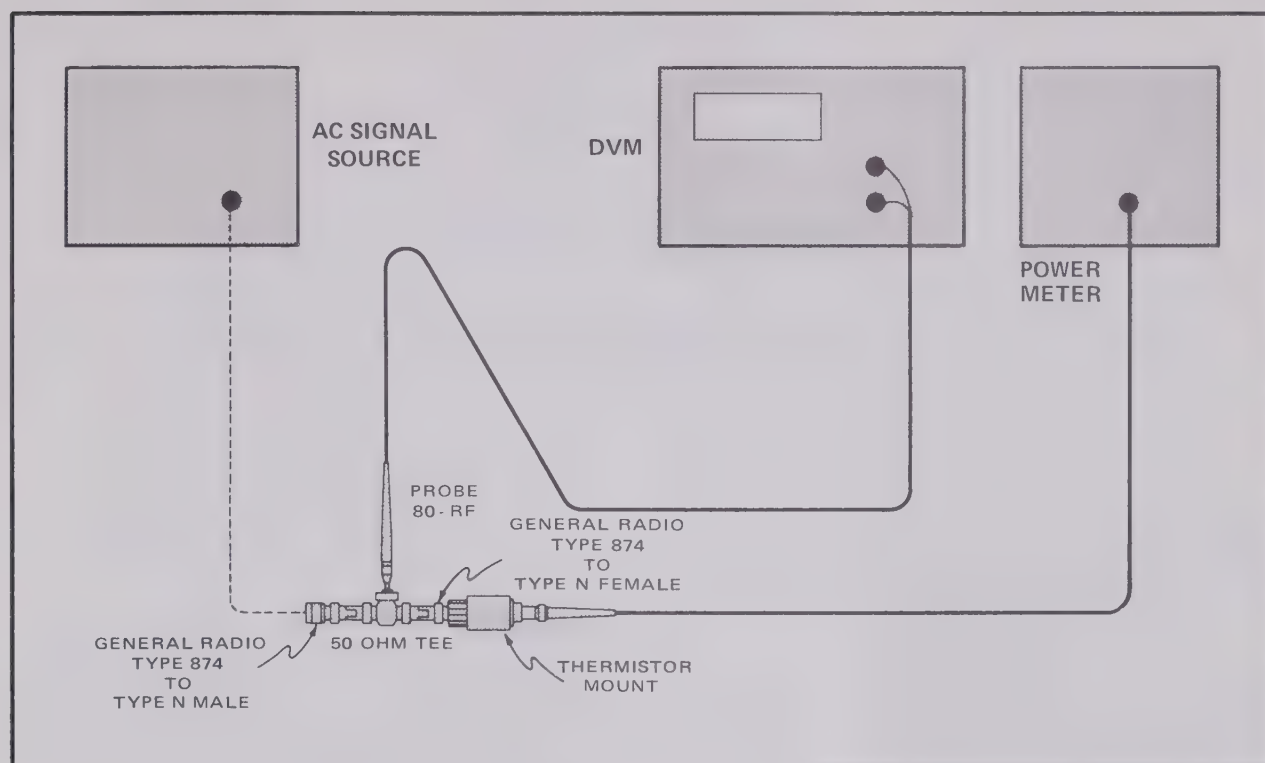


Figure 6-3. HIGH FREQUENCY RESPONSE CHECK

- e. In connection "A", decrease the ac signal source an additional 10 db (to 0.3 volts) as indicated by the voltmeter in its ac function.
- f. Back to "B", observe a voltmeter reading of .315 to .285 vdc.
- g. Return the ac signal source back to 3,000 vrms.
- h. Repeat steps a through g with frequencies of 500 kHz, 1 MHz, and 10 MHz.

6-17. **HIGH FREQUENCY RESPONSE.** Connect equipment to the 80-RF probe as shown in Figure 6-3, and perform the following steps:

- a. Set the ac signal source at 100 MHz with an output level of 10 milliwatts as indicated on the power meter. Ensure that the ac signal source has stabilized at 10 millivolts output.
- b. Observe that the voltmeter indication is between 0.757 and 0.657 volts. (0.707 volts corresponds to 10 milliwatts in 50 ohms).

- c. Repeat the above for frequencies of 200 MHz, 300 MHz, 400 MHz, and 480 MHz.

6-18. Calibration

6-19. Should the 80-RF require recalibration, perform the following steps:

- a. Perform steps a and b in paragraph 6-16, with a frequency of 1 MHz.
- b. Observe the dc voltmeter indication; a reading below 3 volts calls for a decrease in the value of R3, a reading above 3 volts calls for an increase in R3. Resistor R3 should be a 1/8 W metal film type. In a probe that is working properly, a 30 k Ω change in R3 will produce about a 1% reading deviation.

6-20. Cleaning

6-21. The Model 80-RF requires a minimum amount of cleaning. Accumulation of dust or dirt particles between the output terminals of the Model 80-RF can be removed using clean dry pressurized air. Stubborn particles can be removed following an application of isopropyl alcohol.

ACCESSORY INFORMATION

MODEL A90 CURRENT SHUNT

6-1. INTRODUCTION

6-2. The Model A90 Current Shunt is designed for use with any high-impedance ac or dc voltmeter capable of accurately measuring 100 millivolts. Six Fluke precision wire wound and strip resistors provide a 100 millivolt full-scale output for each of six pushbutton current ranges: 0.1, 1, 10, 100, and 1000 milliamperes and 10 amperes

(ac or dc). Basic accuracy is specified over a frequency range of dc to 4 kHz for the 10 ampere range and dc to 10 kHz for the milliampere ranges.

6-3. The instrument is supplied in half-rack case so that it may be conveniently mounted side-by-side with other half-rack instruments in a standard 19-inch rack. A carrying handle detents into custom non-marring feet and serves as a tilt-up bail for bench use.




Figure 6-1. MODEL A90 CURRENT SHUNT

Table 6-1. ACCURACY OF A90 (1 year, 15°C - 35°C)

RATED CURRENT RANGE	E BURDEN (APPROX.)	SHUNT R	"OUTPUT" AT RATED CURRENT	"OUTPUT" ACCURACY AS % OF CURRENT INPUT	
				DC ONLY	DC TO 10 KHZ AC
0.1 ma	100 mv	1 k Ω	100 mv	$\pm 0.1\%$	$\pm 0.1\%$
* 0.1 ma	100 mv	1 k Ω	100 mv	+0.0% -0.2%	+0.0% -0.2%
1.0 ma	100 mv	100 Ω	100 mv	$\pm 0.1\%$	$\pm 0.1\%$
10 ma	100 mv	10 Ω	100 mv	$\pm 0.1\%$	$\pm 0.1\%$
100 ma	102 mv	1 Ω	100 mv	$\pm 0.1\%$	$\pm 0.1\%$
1A	120 mv	0.1 Ω	100 mv	$\pm 0.1\%$	$\pm 0.2\%$
10A	300 mv	0.01 Ω	100 mv	$\pm 0.2\%$	$\pm 0.3\%$ (to 4 kHz)

* With 1 M Ω Input R Voltmeter.

When Input R is >10 M Ω , use non-asterisked 0.1 ma specification.

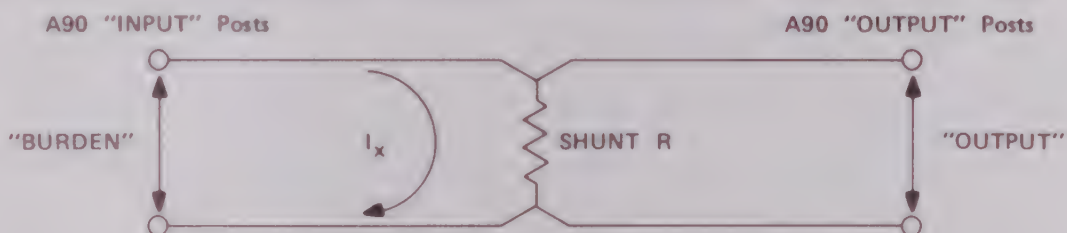

Simplified diagram illustrating terms used in table.

6-4. SPECIFICATIONS

6-5. Electrical

RANGE

0.1, 1, 10, 100, and 1000 milliamps and 10 amperes.

ACCURACY

Table 6-1 gives accuracy specifications for the Model A90 only. Total current measurement accuracy is also dependent on the accuracy and input impedance of the voltmeter being used.

SENSITIVITY

100 millivolts full scale.

OVERLOAD

Model A90 will not be damaged by 100% overload on each range below 10 amperes or by 50% overload on the 10 ampere range.

6-6. Mechanical

CURRENT SELECTION

Pushbutton, each range.

CONNECTORS

Positive (+) and negative (-) INPUT and OUTPUT binding posts with separate input posts for 10 ampere range.

DIMENSIONS

The Model A90 outline drawing is shown in Figure 6-2.

RACK MOUNTING KITS (OPTIONAL)

MEE-7014: Side-by-side Half-rack Mounting Kit

MEE-7006: Center Rack Mounting Kit

MEE-7013: Left or right of center Mounting Kit.

6-7. AUXILIARY ELECTRICAL SPECIFICATIONS

6-8. Tables 6-2 through 6-6 provide accuracy specifications for the Model A90 when used with Fluke Models

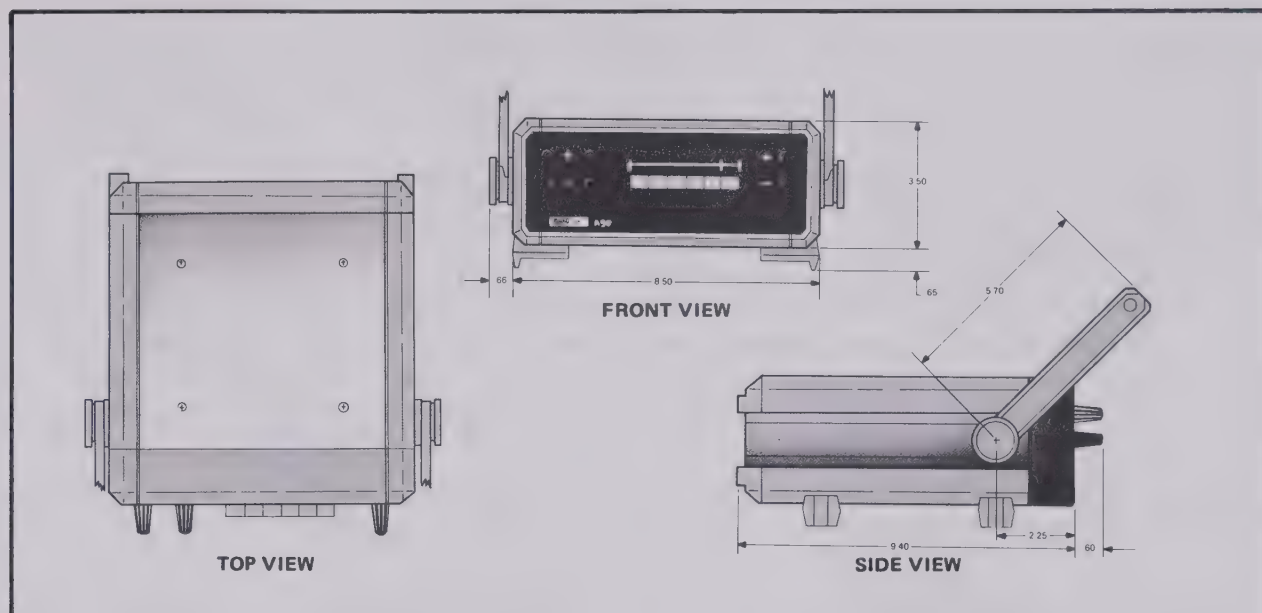


Figure 6-2. MODEL A90 OUTLINE DRAWING

Table 6-2. A90/8100A ACCURACY. 30 days, @ 23°C ±5°C.

DC ACCURACY		
CURRENT RANGE	SPECIFICATION	
0.1 ma	±(0.12% of current input + 0.1 ua)	
1.0 ma	±(0.12% of current input + 1.0 ua)	
10 ma	±(0.12% of current input + 10 ua)	
100 ma	±(0.12% of current input + 0.1 ma)	
1A	±(0.12% of current input + 1.0 ma)	
10A	±(0.22% of current input + 10 ma)	
AC ACCURACY		
CURRENT RANGE	30 Hz – 50 Hz	50 Hz – 10 kHz
0.1 ma	+(0.5% of current input + 1.0 ua) –(0.7% of current input + 1.0 ua)	+(0.2% of current input + 0.5 ua) –(0.4% of current input + 0.5 ua)
1.0 ma	±(0.6% of current input + 10 ua)	±(0.3% of current input + 5.0 ua)
10 ma	±(0.6% of current input + 0.1 ma)	±(0.3% of current input + 50 ua)
100 ma	±(0.6% of current input + 1.0 ma)	±(0.3% of current input + 0.5 ma)
1A	±(0.7% of current input + 10 ma)	±(0.4% of current input + 5.0 ma)
10A	±(0.8% of current input + 100 ma)	±(0.5% of current input + 50 ma)*
* 10A specified to 4 kHz only.		
For:	<u>DC CURRENT</u>	<u>AC CURRENT</u>
	V _r = 1v	V _r = 1v
	V _{dfs} = ±.1000	V _{dfs} = .1000

Table 6-3. A90/8300A ACCURACY

DC CURRENT ACCURACY		
MEASUREMENTS WITHOUT MV/OHMS OPTION INSTALLED		
CURRENT RANGE	24 hr @ 23°C ±1°C	90 days @ 23°C ±5°C
0.1 ma	±(0.1% of current input + 0.1 ua)	±(0.11% of current input + 0.3 ua)
1.0 ma	±(0.1% of current input + 1.0 ua)	±(0.11% of current input + 3.0 ua)
10 ma	±(0.1% of current input + 10 ua)	±(0.11% of current input + 30 ua)
100 ma	±(0.1% of current input + 0.1 ma)	±(0.11% of current input + 0.3 ma)
1A	±(0.1% of current input + 1.0 ma)	±(0.11% of current input + 3.0 ma)
10A	±(0.2% of current input + 10 ma)	±(0.21% of current input + 30 ma)
$V_r = 10 \text{ VDC}$ $V_{dfs} = 0.1000$ (Readout also will display "DC +" or "DC -").		
MEASUREMENTS WITH MV/OHMS OPTION (8300A-02) INSTALLED		
CURRENT RANGE	90 days @ 23°C ±5°C	
0.1 ma	±(0.11% of current input + 0.01 ua)	
1.0 ma	±(0.11% of current input + 0.1 ua)	
10 ma	±(0.11% of current input + 1.0 ua)	
100 ma	±(0.11% of current input + 10 ua)	
1A	±(0.11% of current input + 0.1 ma)	
10A	±(0.21% of current input + 1.0 ma)	
$V_r = 100 \text{ MV (0.1v)}$ $V_{dfs} = 100.000$ (Readout will also display MV DC + or MV DC-)		
AC CURRENT ACCURACY		
MEASUREMENTS WITH AC OPTION 8300A-01 INSTALLED		
90 days @ 23°C ±5°C using AC Zero control periodically.		
CURRENT RANGE	30 Hz – 50 Hz	50 Hz – 10 kHz
0.1 ma	+(0.5% of current input + 0.05 ua) –(0.7% of current input + 0.05 ua)	+(0.1% of current input + 0.05 ua) –(0.3% of current input + 0.05 ua)
1.0 ma	±(0.6% of current input + 0.5 ua)	±(0.2% of current input + 0.5 ua)
10 ma	±(0.6% of current input + 5.0 ua)	±(0.2% of current input + 5.0 ua)
100 ma	±(0.6% of current input + 50 ua)	±(0.2% of current input + 50 ua)
1A	±(0.7% of current input + 0.5 ma)	±(0.3% of current input + 0.5 ma)
10A	±(0.8% of current input + 5.0 ma)	±(0.4% of current input + 5.0 ma)*
$V_r = 1 \text{ VAC}$ $V_{dfs} = .10000$ (Readout will also display "AC") *10A specified to 4 kHz only.		

Table 6-4. A90/9500A SPECIFICATIONS

ACCURACY WHEN UNKNOWN CURRENT IS 20% OR MORE OF A90 CURRENT RANGE. (23°C ±1°C)					
CURRENT RANGE	20 Hz — 50 Hz			50 Hz — 10 kHz	
0.1 ma	+(0.3% of current input + 0.02 ua) –(0.5% of current input + 0.02 ua)			+(0.05% of current input + 0.015 ua) –(0.25% of current input + 0.015 ua)	
1.0 ma	±(0.4% of current input + 0.2 ua)			±(0.15% of current input + 0.15 ua)	
10 ma	±(0.4% of current input + 2.0 ua)			±(0.15% of current input + 1.5 ua)	
100 ma	±(0.4% of current input + 20 ua)			±(0.15% of current input + 15 ua)	
1A	±(0.5% of current input + 0.2 ma)			±(0.25% of current input + 0.15 ma)	
10A	±(0.6% of current input + 2.0 ma)			±(0.35% of current input + 1.5 ma)*	
ACCURACY WHEN UNKNOWN CURRENT IS BETWEEN 10% AND 20% OF A90 CURRENT RANGE.					
A90 INPUT (% OF CURRENT RANGE)	% OF INPUT ABSOLUTE ACCURACY 20 Hz — 50 Hz @ 23°C ±1°C FOR A90 CURRENT RANGE				
	0.1 ma		1 ma — 100 ma	1A	10A
	+	—			
10-11%	0.53%	0.73%	± 0.63%	±0.73%	±0.83%
12-14%	0.50%	0.70%	± 0.60%	±0.70%	±0.80%
15-17%	0.47%	0.67%	± 0.57%	±0.67%	±0.77%
18-20%	0.44%	0.64%	± 0.54%	±0.64%	±0.74%
A90 INPUT (% OF CURRENT RANGE)	% OF INPUT ABSOLUTE ACCURACY 50 Hz — 10 kHz @23°C ±1°C FOR A90 CURRENT RANGE				
	0.1 ma		1 ma — 100 ma	1A	10A*
	+	—			
10-11%	0.23%	0.43%	±0.33%	±0.43%	±0.53%
12-14%	0.20%	0.40%	±0.30%	±0.40%	±0.50%
15-17%	0.17%	0.37%	±0.27%	±0.37%	±0.47%
18-20%	0.13%	0.33%	±0.23%	±0.33%	±0.43%
V _r = .1v					
V _{dfs} = .10000					
TC = 0.005% of current input/°C 20 Hz —50 Hz					
0.004% of current input/°C 50 Hz — 10 kHz					
* 10A is specified to 4 kHz only.					

8100A, 8300A, 9500A, 891A, 893A, and 931B. Table 6-7 gives V_r and V_{dfs} for each of the voltmeters listed in the tables in addition to various other Fluke voltmeters, where

V_r = Voltage range to be used on the voltmeter
 and V_{dfs} = Nominal voltmeter reading with full-scale current in A90 shunt.

6-9. INSTALLATION

6-10. There are three rack-mount kits available, at additional cost, for use with the Model A90. Kit MEE-7014 allows the Model A90 to be mounted side-by-side with another half-rack instrument in a standard 19-inch rack. Kit MEE-7006 supplies hardware necessary to mount the

Table 6-5. A90/891A AND 893A ACCURACY (Sheet 1 of 2)

WITH 891A AND 893A – DC ACCURACY		
CURRENT RANGE	@ 23°C ±2°C	@ 15°C –35°C
0.1 ma	±(0.11% of current input + 0.02 ua)	±(0.12% of current input + 0.02 ua)
1.0 ma	±(0.11% of current input + 0.2 ua)	±(0.12% of current input + 0.2 ua)
10 ma	±(0.11% of current input + 2.0 ua)	±(0.12% of current input + 2.0 ua)
100 ma	±(0.11% of current input + 20 ua)	±(0.12% of current input + 20 ua)
1A	±(0.11% of current input + 0.2 ma)	±(0.12% of current input + 0.2 ma)
10A	±(0.21% of current input + 2.0 ma)	±(0.22% of current input + 2.0 ma)
$V_r = 1V$ $V_{Bfs} = 0.10000$		
WITH 893A – AC ACCURACY @ 23°C ±2°C		
CURRENT RANGE	50 Hz – 10 kHz	
0.1 ma	+(0.05% of current input + 0.025 ua) –(0.25% of current input + 0.025 ua)	
1.0 ma	±(0.15% of current input + 0.25 ua)	
10 ma	±(0.15% of current input + 2.5 ua)	
100 ma	±(0.15% of current input + 25 ua)	
1A	±(0.25% of current input + 0.25 ma)	
10A	±(0.35% of current input + 2.5 ma)*	
WITH 893A – AC ACCURACY @ 15°C –35°C		
CURRENT RANGE	5 Hz – 10 Hz	10 Hz – 20 Hz
0.1 ma	+(1.0% of current input + 0.25 ua) –(1.2% of current input + 0.25 ua)	+(0.5% of current input + 0.1 ua) –(0.7% of current input + 0.1 ua)
1.0 ma	±(1.1% of current input + 2.5 ua)	±(0.6% of current input + 1.0 ua)
10 ma	±(1.1% of current input + 25 ua)	±(0.6% of current input + 10 ua)
100 ma	±(1.1% of current input + 0.25 ma)	+(0.6% of current input + 0.1 ma)
1A	±(1.2% of current input + 2.5 ma)	±(0.7% of current input + 1.0 ma)
10A	±(1.3% of current input + 25 ma)	±(0.8% of current input + 10 ma)
893A – AC ACCURACY @ 15°C –35°C.		
CURRENT RANGE	20 Hz – 50 Hz	50 Hz – 10 kHz
0.1 ma	+(0.15% of current input + 0.025 ua) –(0.35% of current input + 0.025 ua)	+(0.1% of current input + 0.025 ua) –(0.3% of current input + 0.025 ua)
1.0 ma	±(0.25% of current input + 0.25 ua)	±(0.2% of current input + 0.25 ua)
10 ma	±(0.25% of current input + 2.5 ua)	±(0.2% of current input + 2.5 ua)
100 ma	±(0.25% of current input + 25 ua)	±(0.2% of current input + 25 ua)
1A	±(0.35% of current input + 0.25 ma)	±(0.3% of current input + 0.25 ma)
10A	±(0.45% of current input + 2.5 ma)	±(0.4% of current input + 2.5 ma)*

Table 6-5. A90/891A AND 893A ACCURACY (Sheet 2 of 2)

V_r	=	1v (AC or DC)
V_{dfs}	=	0.10000
* 10A is specified to 4 kHz only.		

Table 6-6. A90/931B SPECIFICATIONS

ACCURACY WHEN UNKNOWN CURRENT IS 10% OR MORE OF A90 CURRENT RANGE				
CURRENT RANGE	% OF INPUT ABSOLUTE ACCURACY			SPECIFICATIONS 30 Hz – 10 kHz
	2 Hz – 3 Hz	3 Hz – 5 Hz	5 Hz – 30 Hz	
0.1 ma	+1.0% –1.2%	+0.5% –0.7%	+0.2% –0.4%	+(0.05% of current input + 5 na) –(0.25% of current input + 5 na)
1.0 ma	±1.1%	±0.6%	±0.3%	±(0.15% of current input + 50 na)
10 ma	±1.1%	±0.6%	±0.3%	±(0.15% of current input + 0.5 ua)
100 ma	±1.1%	±0.6%	±0.3%	±(0.15% of current input + 5 ua)
1A	±1.2%	±0.7%	±0.4%	±(0.25% of current input + 50 ua)
10A	±1.3%	±0.8%	±0.5%	±(0.35% of current input + 0.5 ma)*
TC=	±0.1%/°C	±0.05%/°C	±0.025%/°C	±0.0025%/°C
V_r = 100 MV V_{dfs} = 100.000 *10A is specified to 4 kHz only.				

Table 6-7. “ V_r ” AND “ V_{dfs} ” FOR VOLTMETERS OF TABLES 6-2 THROUGH 6-6

VOLTMETER	“ V_r ”	“ V_{dfs} ”
8300A (Without MV/Ohms)	10v	.010
8100A, 871A, 873A, 881A, 883A, 885A, 887A, 891A, 893A	1v	.100
801, 803, 801B, 803B, 803D, 821A, 823A, 825A	0.5v	.100
9500A, 910A	0.1v	.100
8300A (With MV/Ohms), 931A, 931B	100 MV	100.0
V_r = Voltage range to be used on the voltmeter. V_{dfs} = Nominal voltmeter reading with full-scale current in A90 shunt.		

instrument in the center of the rack. Kit MEE-7013 supplies two different sized rack ears so that the instrument can be mounted to the left or to the right of rack center.

6-11. OPERATING INSTRUCTIONS

6-12. A description of Model A90 controls and terminals is given in Figure 6-3.

6-13. Equipment Connections

6-14. It is recommended that the Model A90 always be used in the “LO” lead as shown in Figure 6-4A. When used in the “HI” lead, as shown in Figure 6-4B, the distributed capacitance, C_{DIST} , loads the source. When connected in the “HI” lead, the voltmeter guard should either be connected as shown or else the voltmeter should be battery operated.

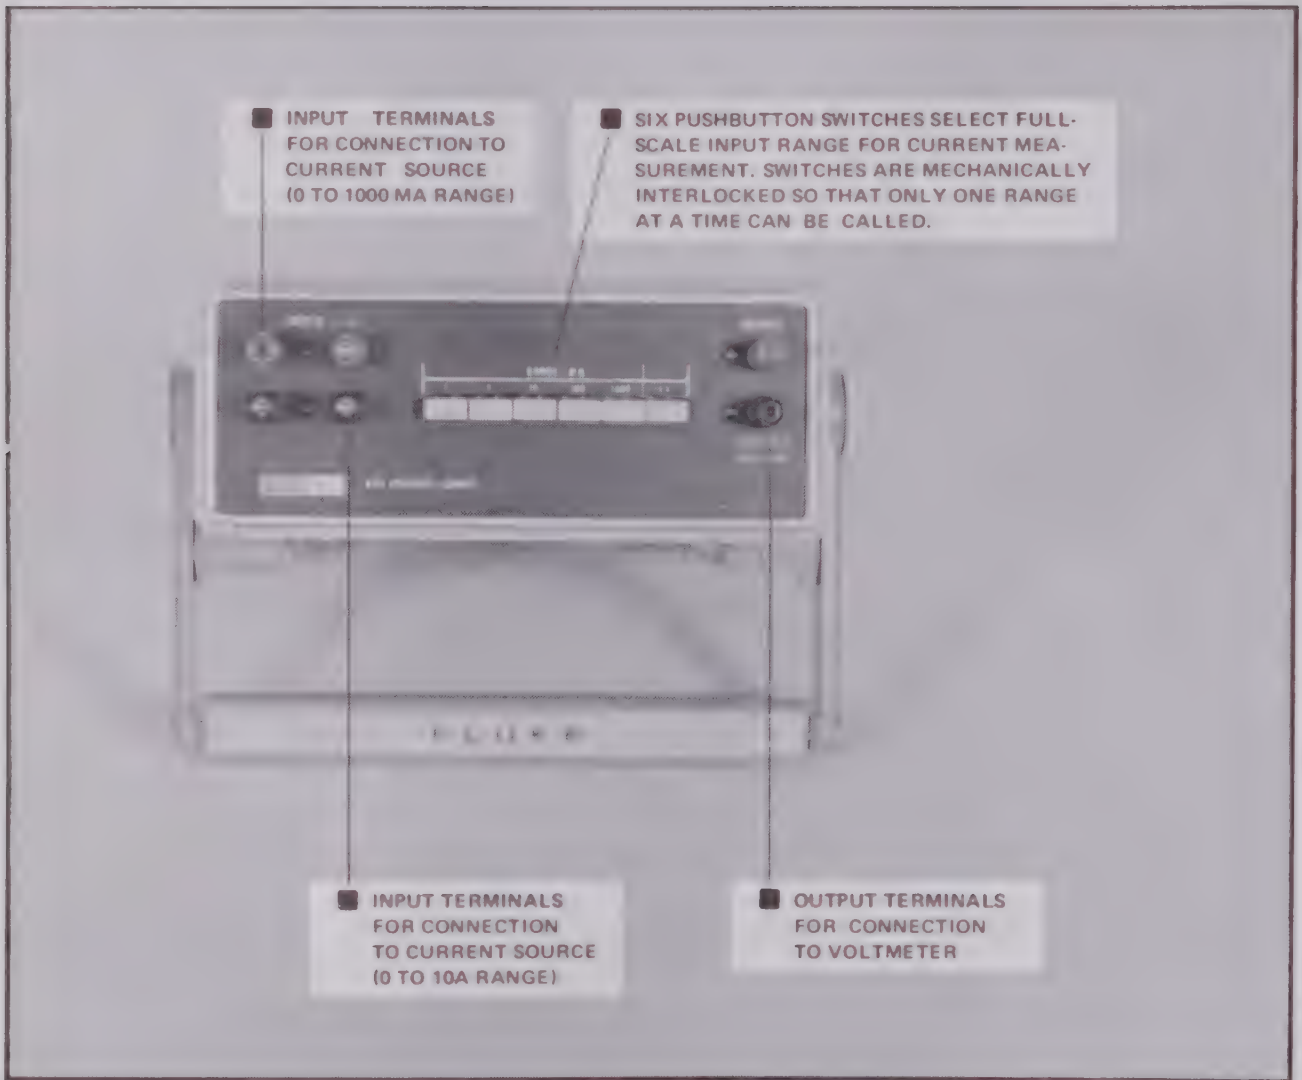


Figure 6-3. MODEL A90 CONTROLS AND TERMINALS.

6-15. At high ac currents, performance of the A90 may depend upon the manner in which the current leads are connected to the input binding posts. Optimum performance is obtained when the input current leads are twisted.

6-16. Voltmeter Impedance

6-17. The input impedance of the voltmeter which is used with the Model A90 is significant with regard to total measurement accuracy. As indicated in the specifications, Model A90 measurement accuracy is derated for voltmeters having finite input impedance. As the voltmeter input capacity increases, the Model A90 response rolls off at the high end; and as the voltmeter input resistance decreases, the response shifts downward, resulting in negative measurement errors.

6-18. Combining Model A90 And Voltmeter Specifications

6-19. Combined specifications for the A90 when used with various Fluke voltmeters is given in Tables 6-2 through 6-6. When the A90 is used with other voltmeters, the following information may be used to combine specifications.

6-20. Equation 1 (Figure 6-5) is used to combine A90 and voltmeter specifications for overall accuracy. The "W" term is taken from Table 6-1, and the "X", "Y" and "Z" terms are taken from voltmeter specifications (data sheets). All Fluke voltmeter specifications, except the Model 910A, contain the "X" term; they usually list the "Y" term and occasionally the "Z" term. Model 910A accuracy specifi-

$$I_x = I_r \times \frac{V_d}{V_{dfs}}$$

Where: I_x = magnitude of unknown current in units of A90 "RANGE" used. (i.e. ma or amps).

I_r = A90 Rated Current "RANGE".

V_d = Voltmeter reading.

V_{dfs} = Nominal Voltmeter reading with rated current flowing in A90. " V_{dfs} " and " V_r " are tabulated in Table 6-7 for each voltmeter listed in Tables 6-2 through 6-6. Note that " V_{dfs} " multiplies or divides " V_d " by powers of 10 so it is simple to manipulate.

EQUATION 2. CONVERTING VOLTAGE READINGS TO CURRENT

Example: An 8100A reads =.0643 when used with an A90 in the 10 ma range. What current is flowing?

I_r = 10 ma (A90 "Rated Current Range")

V_d = .0643 (Voltmeter reading)

V_{dfs} = .1000 (From Table 6-7)

Answer: $I_x = 10 \text{ ma} \times \frac{.0643}{.1000} = 6.43 \text{ ma}$

Figure 6-6. Equation 2 – CONVERTING VOLTAGE READINGS TO CURRENT

6-29. Test Equipment

6-30. Test equipment required for calibration and testing of the Model A90 is shown in Table 6-8. If the recommended equipment is not available, other equivalent equipment may be used.

Table 6-8. LIST OF TEST EQUIPMENT

NAME	RECOMMENDED EQUIPMENT
Constant Current Source	Fluke Model 382A
DC Differential Voltmeter	Fluke Model 895A or 885A
Low-Thermal Leads	
4-Terminal Ohmmeter	Fluke Model 8300A with Option -02

6-31. Calibration

6-32. PRELIMINARY CHECKS. Make the resistance checks shown in Table 6-9. Values are approximate since check is intended to show only gross errors, such as defective or open resistors.

6-33. .1 MA AND 1 MA RANGE CHECKS. Connect the ohmmeter and A90, as shown in Figure 6-7, for 4-terminal resistance measurements, and perform the following steps:

- Set the A90 to the .1 MA range. The ohmmeter should indicate between 1.00050 and 0.99950 kilohms. If the measured resistance is not within these limits, the .1 MA shunt, R6, is defective and must be replaced.
- Set the A90 to the 1 MA range. The ohmmeter should indicate between 100.07 and 99.93 ohms. If the measured resistance is not within these limits, the 1 MA shunt, R5, is defective and must be replaced.

6-34. 10 MA, 100 MA, AND 1000 MA RANGE CHECKS. Connect the constant current generator, differential voltmeter, and A90 as shown in Figure 6-8 and perform the following steps:

- Set the A90 to the 10 MA range.
- Set the differential voltmeter controls as follows:

RANGE	1 Volt
NULL Sensitivity	100 μ V
Readout Dials	0.100000

Table 6-9. RESISTANCE CHECKS

OHMMETER CONNECTIONS	MODEL A90	
	RANGE	APPROXIMATE RESISTANCE (OHMS)
INPUT Terminals	1 MA	1000
	1 MA	100
	10 MA	10
	100 MA	1
	1000 MA	0.1
	10A	∞
INPUT (10A Terminals)	10A	0.01
OUTPUT Terminals	10A	0.01
	1000 MA	0.1
	100 MA	1
	10 MA	10
	1 MA	100
	1 MA	1000

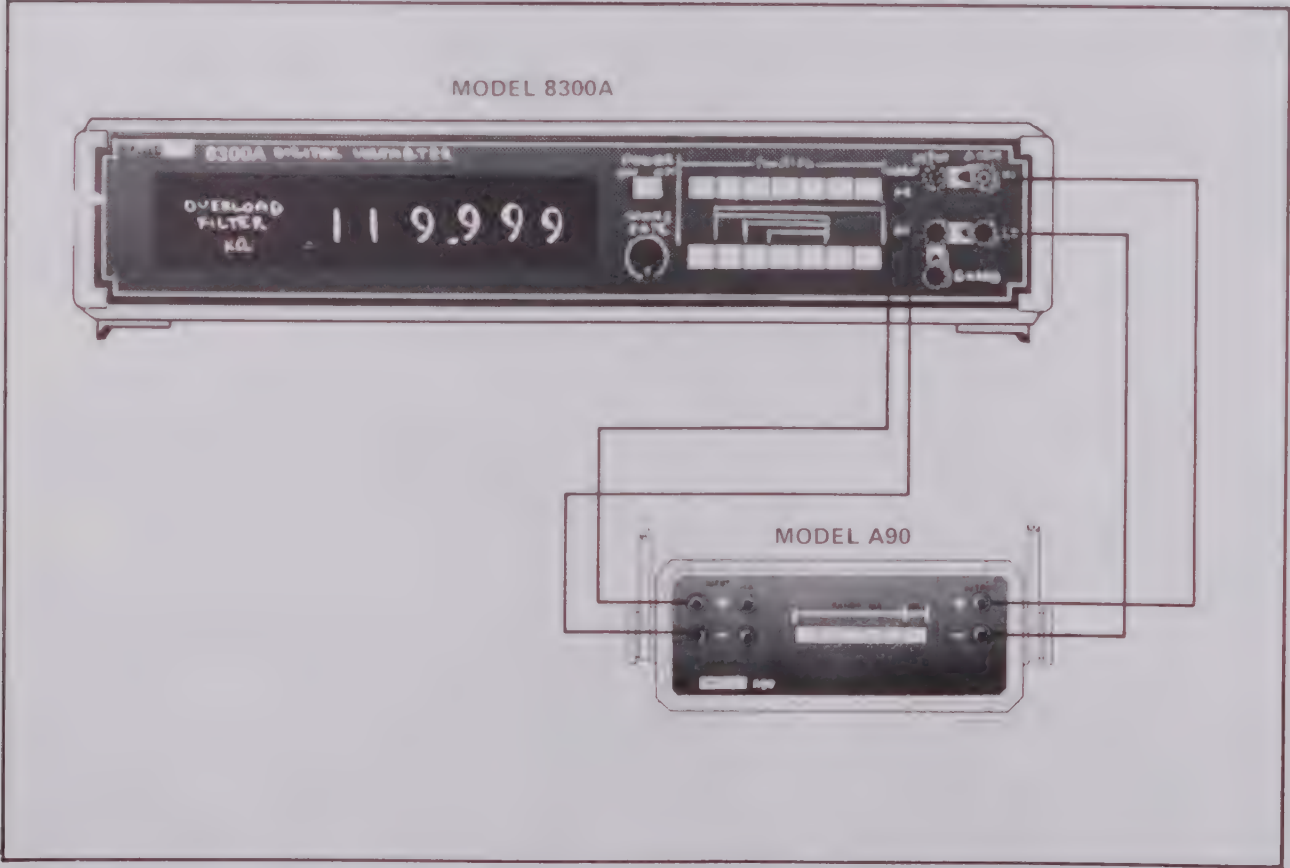


Figure 6-7. EQUIPMENT CONNECTIONS – .1 MA AND 1 MA RANGE CHECKS

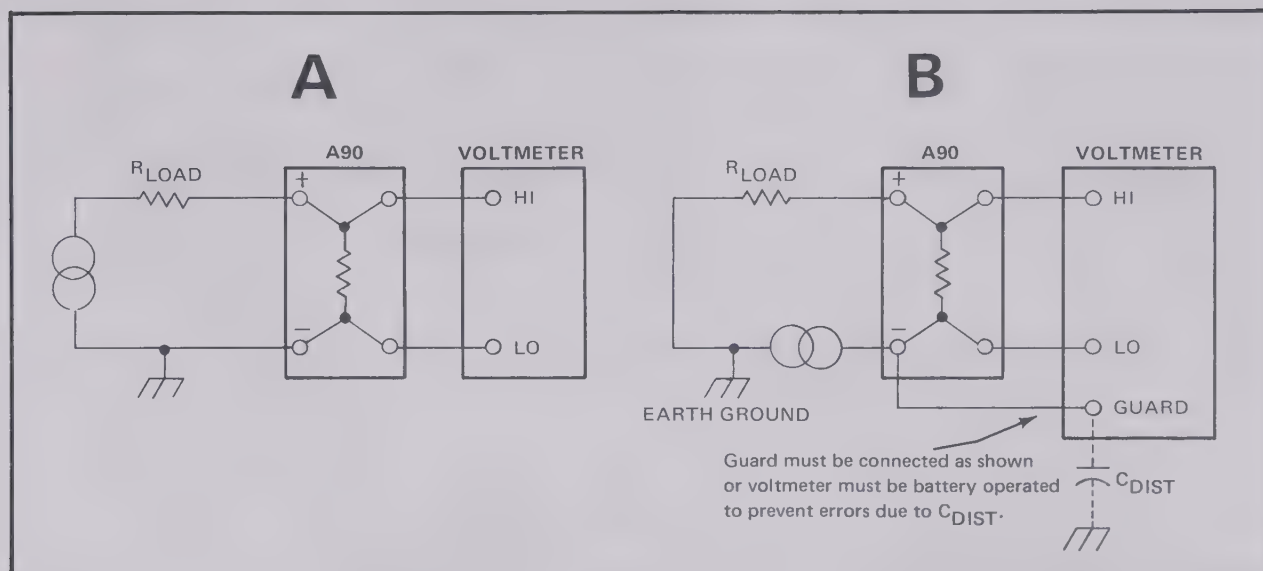


Figure 6-4. EQUIPMENT CONNECTIONS FOR CURRENT MEASUREMENT.

EQUATION 1. COMBINING A-90 SPECIFICATION WITH VOLTMETER SPECIFICATION.

A-90 Specification

(from Table 6-1)

Voltmeter Specification

(from Voltmeter Data Sheet)

$$\begin{array}{c}
 \pm \left| \begin{array}{c} W \\ \hline \end{array} \right| \% \quad \quad \quad \pm \left(\left| \begin{array}{c} X \\ \hline \end{array} \right| \% \text{ of input} + \left| \begin{array}{c} Y \\ \hline \end{array} \right| \% \text{ of range} + \left| \begin{array}{c} Z \\ \hline \end{array} \right| \text{ uv} \right) \\
 \downarrow \quad \quad \quad \downarrow \quad \quad \quad \downarrow \quad \quad \quad \downarrow \\
 \text{Vr} = \text{Lowest voltmeter range} \\
 \text{that will measure 100 MV} \\
 = + \left[(W + X) \% \text{ of current input} + \frac{\text{Vr}}{0.1} \times \left(Y + \frac{Z}{10000} \right) \% \text{ of current range} \right]
 \end{array}$$

EXAMPLE 1: Accuracy using 10 ma DC A-90 range with 891A.

A-90 Specification

(from Table 6-1)

891A Specification

(from 891A Data Sheet)

$$\begin{array}{c}
 \pm \left| \begin{array}{c} 0.1 \\ \hline \end{array} \right| \% \quad \quad \quad \pm \left(\left| \begin{array}{c} 0.01 \\ \hline \end{array} \right| \% \text{ of input} + \left| \begin{array}{c} 0.001 \\ \hline \end{array} \right| \% \text{ of range} + \left| \begin{array}{c} 10 \\ \hline \end{array} \right| \text{ uv} \right) \\
 \downarrow \quad \quad \quad \downarrow \quad \quad \quad \downarrow \quad \quad \quad \downarrow \\
 \text{Vr} = 1.0 \\
 (891A's 1v DC Range) \\
 = \pm \left[(0.1 + 0.01) \% \text{ of current input} + \frac{1.0}{0.1} \times (0.001 + \frac{10}{10,000}) \% \text{ of current range} \right] \\
 = \pm \left[0.11\% \text{ of current input} + 0.02\% \text{ of current range} \right] \\
 = \pm \left[0.11\% \text{ of current input} + 2 \text{ ua} \right]
 \end{array}$$

Figure 6-5. EQUATION 1 – COMBINING A90 AND VOLTMETER SPECIFICATIONS (Sheet 1 of 2)

EXAMPLE 2: Accuracy using 0.1 ma AC A-90 range with 873A at 1 kHz.

Model 873A has 1 megohm input impedance in its AC mode so separate accuracy statements are required for positive and negative limits of error for measurements made on the A-90's 0.1 ma range.

Positive Limit of Error

A-90 Specification

873A Specification

$$\begin{aligned}
 &+ \left[(0.0 + 0.2) \% \text{ of current input} + \frac{1}{0.1} \left(0 + \frac{25}{10000} \right) \% \text{ of current range} \right] \\
 &+ \left[0.2\% \text{ of current input} + 0.025\% \text{ of current range} \right]
 \end{aligned}$$

Diagram annotations: Arrows point from "0.0" to "0.0", from "0.2" to "0.2", from "1" to "1", from "0.1" to "0.1", from "0" to "0", and from "25" to "25". A note "Vr is 873A's 1v AC Range" points to the "1" term. A note "No 'Y' Term In Spec." points to the "0" term.

Negative Limit of Error

$$\begin{aligned}
 &= - \left[(0.2 + 0.2) \% \text{ of current input} + 0.025\% \text{ of current range} \right] \\
 &= - \left[0.4\% \text{ of current input} + 0.025\% \text{ of current range.} \right]
 \end{aligned}$$

Figure 6-5 EQUATION 1 COMBINING A90 AND VOLTMETER SPECIFICATIONS (Sheet 2 of 2)

cation consists of "Y" term only. If "X", "Y", or "Z" do not appear in a voltmeter accuracy specification, it should be treated as a zero in Equation 1. The voltmeter must be used on the lowest range that can measure 100 millivolts. This range is assigned the symbol " V_r " in Equation 1. V_r is always stated as volts, i.e., 100 millivolt range equals 0.1 volts for V_r .

6-21. Equation 2 (Figure 6-6) may be used to convert the voltmeter voltage reading to current.

6-22. THEORY OF OPERATION

6-23. The schematic diagram of the Model A90 is located at the back of the manual. In the milliamperage ranges, current is directed through the appropriate shunt resistor by switches S1A through S5A, and the corresponding output voltage is connected to the output terminals through switches S1 through S5, decks B and C. In 10 ampere range, the input current is applied directly to the shunt resistor, and the output voltage is connected to the output terminals through switch S6.

6-24. All shunt resistors are four-terminal shunts or are connected in a four-terminal switching arrangement so that lead resistance does not affect measurement accuracy.

6-25. MAINTENANCE

6-26. The following paragraphs contain instructions for cleaning and calibrating the Model A90.

6-27. Cleaning

6-28. The instrument should be cleaned periodically to remove dust, grease, and other contamination. The following procedure should be adhered to when cleaning the instrument:

- Remove loose contamination with low-pressure, clean, dry air.
- Clean front panel and exterior surfaces with anhydrous ethyl alcohol or a soft cloth dampened in a mild solution of detergent and water.

CAUTION!

Do not use aromatic hydrocarbons or chlorinated solvents on the front panel, because they will react with the Lexan binding posts.

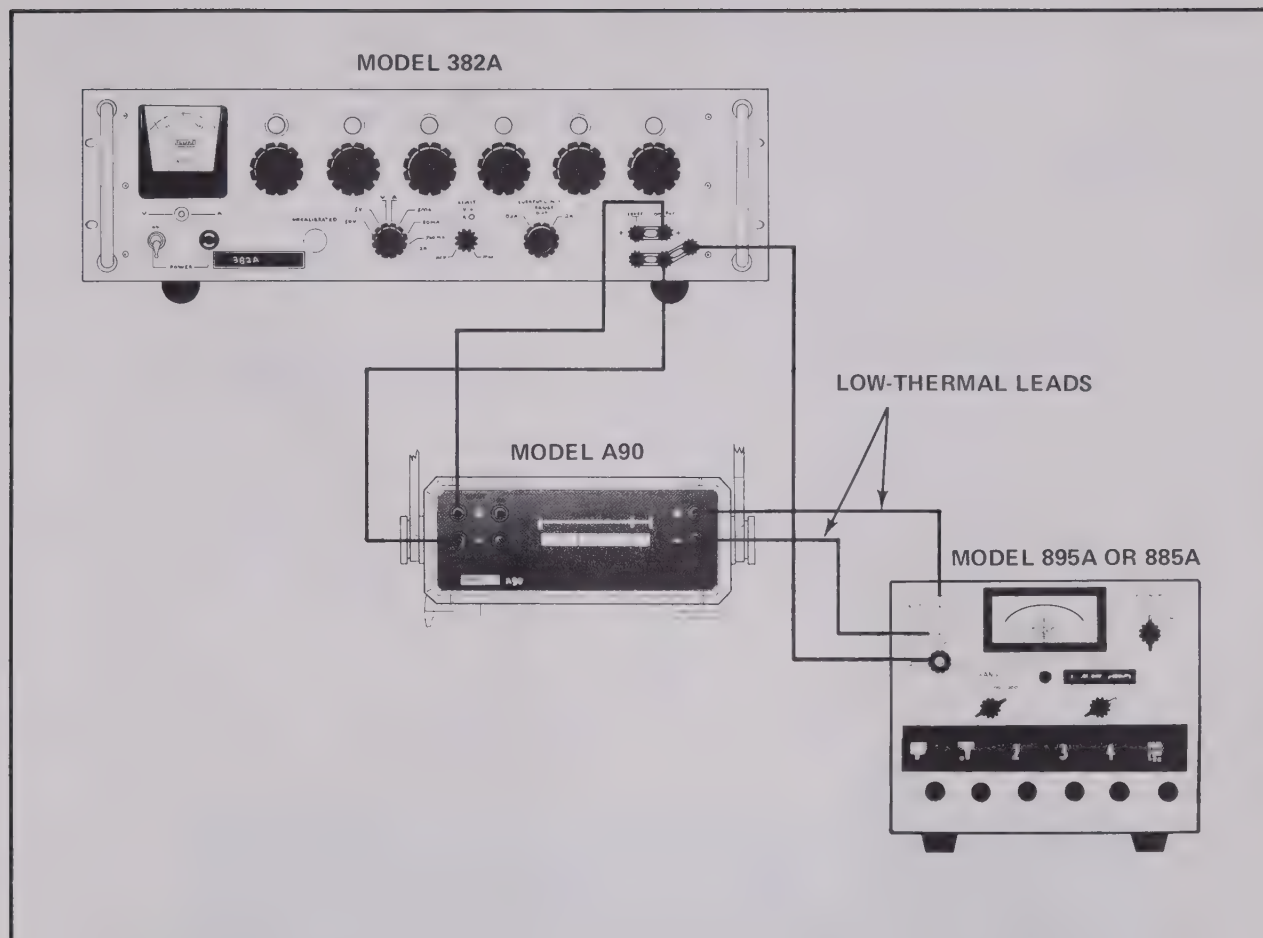


Figure 6-8. EQUIPMENT CONNECTIONS – 10 MA, 100 MA, AND 1000 MA RANGE CHECKS

- c. Set the constant current generator for 10.0000 milliamperes output. The differential voltmeter should indicate null within ± 80 microvolts. If the voltmeter does not indicate within these limits, the 10 MA shunt, R4, is defective and must be replaced.
- d. Change the A90 range to 100 MA and the constant current generator output to 100 milliamperes. The differential voltmeter should indicate null within ± 80 microvolts. If the voltmeter does not indicate within these limits, the 100 MA shunt, R3, is defective and must be replaced.
- e. Change the A90 range to 1000 MA and the constant current generator output to 1000 milliamperes. The differential voltmeter should indicate null within ± 80 microvolts. If the $+80$ microvolt limit is not met, the 1000 MA shunt, R2, should be replaced. If the -80 microvolt limit is

not met, R2 is low in ohmic value and can be trimmed to its desired value by carefully removing a small amount of material from the edge of the shunt using a whetstone.

6-35. 10 AMPERE RANGE CHECK. Connect equipment as shown in Figure 6-8, leaving the constant current generator temporarily disconnected from the A90, and perform the following steps:

- a. Set the differential voltmeter controls as follows:

RANGE	1 Volt
NULL Sensitivity	100 μ V
Readout Dials	0.00000

The voltmeter should indicate less than ± 4 microvolts of thermal offset. If more than ± 4 microvolts of offset is observed, check for cold solder joints or possible thermal generators in the test

setup. When thermal offset has been reduced to within ± 4 microvolts, proceed to step (b).

b. Connect the constant current generator to the 10 AMP binding posts of the A90 and set the A90 to the 10A range.

c. Set the differential voltmeter controls as follows:

RANGE	1 Volt
NULL Sensitivity	100 μ V
Readout Dials	.020000

d. Set the constant current generator output to 2 amperes. The voltmeter should indicate null within ± 80 microvolts. If the +80 microvolt limit is not met, the 10 ampere shunt, R1, should be replaced. If the -80 microvolt limit is not met, R1 is low in ohmic value and can be trimmed to its desired value by carefully removing a small amount of material from the edge of the shunt using a whetstone.

6-36. LIST OF REPLACEABLE PARTS

REF DESIG	INDEX NO	DESCRIPTION	STOCK NO	MFR	MFR PART NO	TOT QTY	REC QTY	USE CODE
		CURRENT SHUNT – Figure 6-9	A90					
		Shunt PCB Assembly (See Figure 6-9)	A90-403	89536	A90-403	1		
J1, J2, J5		Binding post, red, +	275552	89536	275552	3		
J3, J4, J6		Binding post, black –	275560	89536	275560	3		
		Cover, bottom	224360	89536	224360	1		
		Cover, top	224352	89536	224352	1		
		Foot	230037	89536	230337	4		
		Handle, carrying	231423	89536	231423	1		
		Panel, front	A90-208	89536	A90-208	1		
		Panel, rear	A90-209	89536	A90-209	1		

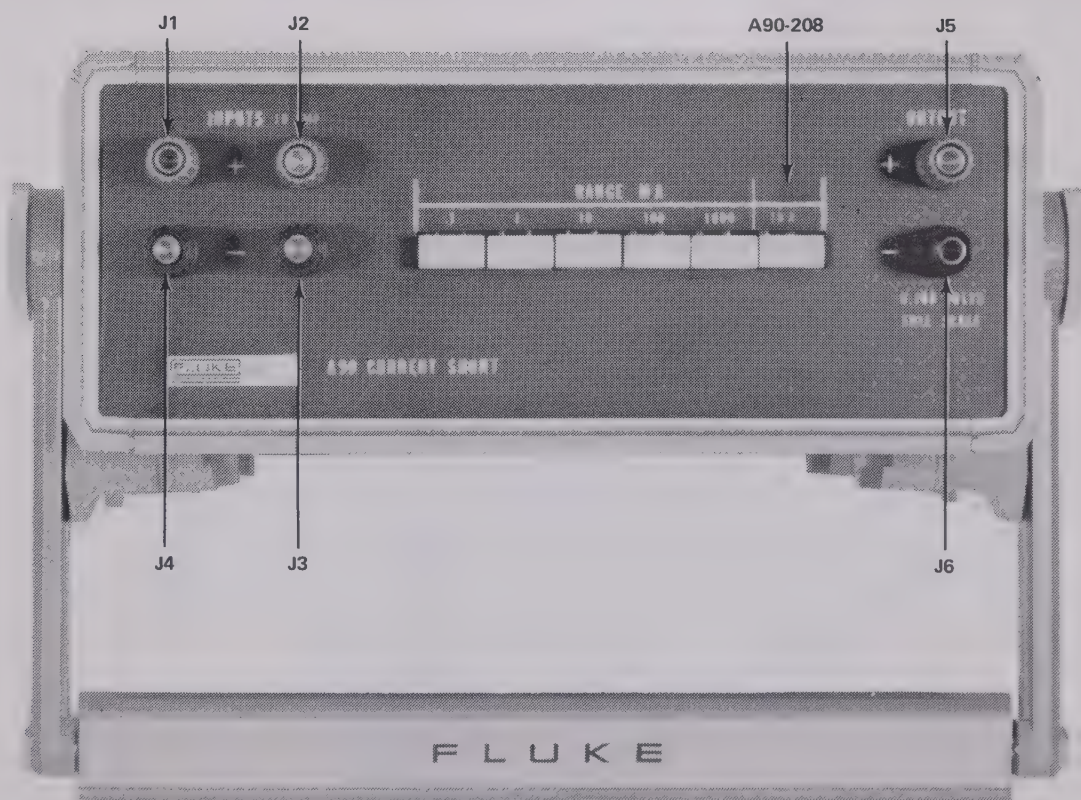


Figure 6-9. MODEL A90 CURRENT SHUNT (Sheet 1 of 2)

REF DESIG	INDEX NO	DESCRIPTION	STOCK NO	MFR	MFR PART NO	TOT QTY	REC QTY	USE CODE
		SHUNT PCB ASSEMBLY — Figure 6-9	A90-403	89536	A90-403	REF		
R1		Res, ww, $0.010\Omega \pm 0.2\%$, 1w	34-4022	89536	34-4022	1		
R2		Res, ww, $0.10\Omega \pm 0.1\%$, 1w	224121	89536	224121	1		
R3		Res, ww, $1.0\Omega \pm 0.1\%$, $\frac{1}{2}$ w	224089	89536	224089	1		
R4		Res, ww, $10\Omega \pm 0.1\%$, $\frac{1}{2}$ w	224071	89536	224071	1		
R5		Res, ww, $100\Omega \pm 0.03\%$, $\frac{1}{2}$ w	155846	89536	155846	1		
R6		Res, ww, $1\text{ K}\Omega \pm 0.04\%$, $\frac{1}{2}$ w	131706	89536	131706	1		
S1 thru S6		Switch assembly, RANGE MA	A90-802	89536	A90-802	1		


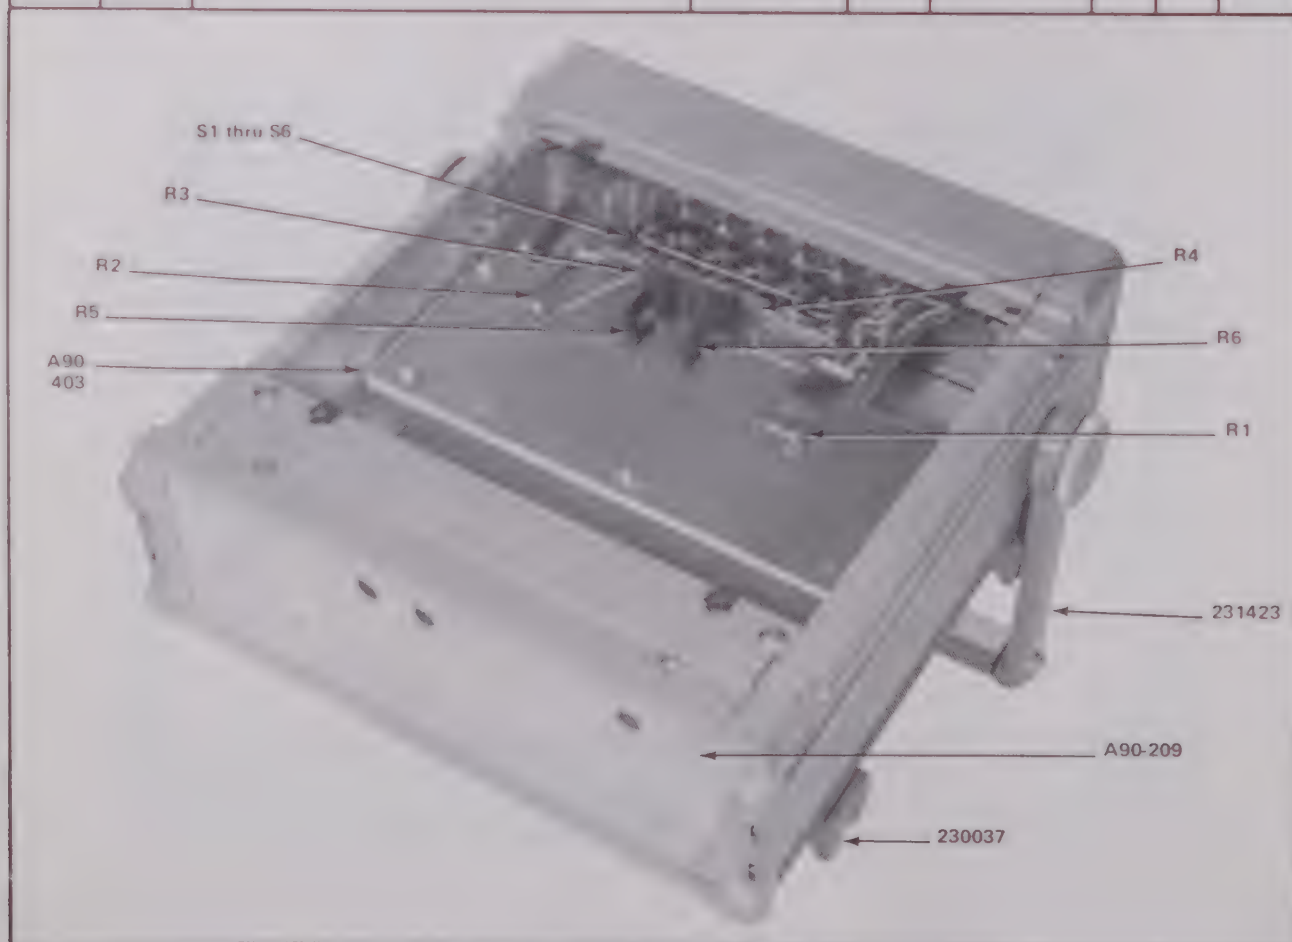


Figure 6-9. MODEL A90 CURRENT SHUNT (Sheet 2 of 2)

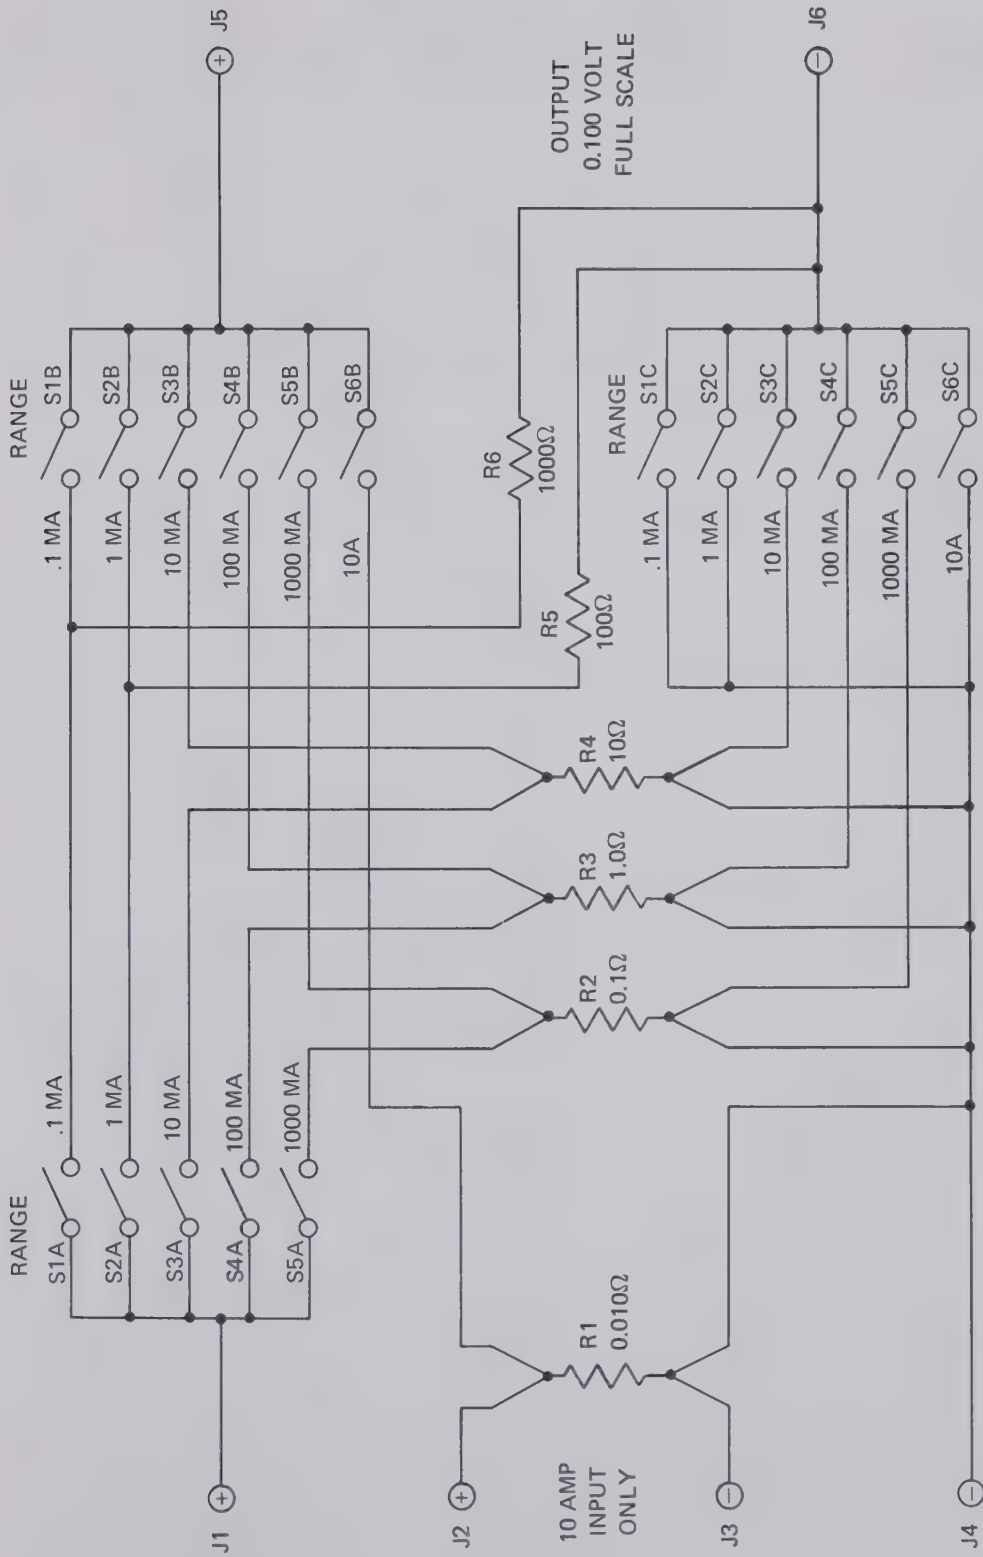

FUNCTIONAL SCHEMATIC DIAGRAM

MODEL A90

CURRENT SHUNT

REV
SER. NO. 123 & ON
8

FLUKE
JOHN FLUKE MFG. CO., INC.
P.O. Box 7428 Seattle, Washington 98133

Section 7

General Information

7-1. This section of the manual contains generalized user information as well as supplemental information to the

Lists of Replaceable parts contained in Section 5. The following information is presented in this section:

TABLE	TITLE	PAGE
7-1.	List of Abbreviations	7-2
7-2.	Federal Supply Codes for Manufacturers	7-3
7-3.	Fluke Technical Service Centers	7-7
7-4.	International Service Centers	7-7
7-5.	Sales Representatives-Domestic	7-8
7-6.	Sales Representatives-International	7-9

Table 7-1. LIST OF ABBREVIATIONS AND SYMBOLS

A or amp	ampere	H	henry	pF	picofarad
ac	alternating current	hd	heavy duty	pn	part number
af	audio frequency	hf	high frequency	po or pos	positive
ad	analog-to-digital	Hz	hertz	pot	potentiometer
assy	assembly	IC	integrated circuit	p-p	peak-to-peak
AWG	american wire gauge	if	intermediate frequency	ppm	parts per million
B	bel	in	inch(es)	PRoM	programmable read-only memory
bcd	binary coded decimal	int	internal	psi	pound-force per square inch
C	Celsius	I/O	input/output	RAM	random-access memory
cap	capacitor	k	kilo (10^3)	rf	radio frequency
ccw	counterclockwise	kHz	kilohertz	rms	root mean square
cer	ceramic	k Ω	kiloohm(s)	RoM	read-only memory
cermet	ceramic to metal (seal)	kV	kilovolt(s)	s or sec	second (time)
cir	circuit	LF	low frequency	scope	oscilloscope
cm	centimeter	LED	light-emitting diode	sh	shield
cmr	common mode rejection ratio	LSB	least significant bit	Si	silicon
comp	composition	LSd	least significant digit	sn	serial number
cont	continue	M	mega (10^6)	sr	shift register
cr	cathode ray tube	m	milli (10^{-3})	Ta	tantalum
cw	clockwise	mA	milliampere(s)	tb	terminal board
da	digital-to-analog	max	maximum	tc	temperature coefficient or temperature compensating
dal	digital-to-analog converter	mf	metal film	tcx	temperature compensated crystal oscillator
dB	decibel	MHz	megahertz	tp	test point
dc	direct current	mm	millimeter	μ or μ	micro (10^{-6})
dmm	digital multimeter	ms	millisecond	uhf	ultra high frequency
dvm	digital voltmeter	msb	most significant bit	μ s or μ s	microsecond(s) (10^{-6})
elect	electrolytic	MSD	most significant digit	uut	unit under test
ext	external	MTBF	mean time between failures	V	volt
F	farad	MTTR	mean time to repair	v	voltage
F	Fahrenheit	mV	millivolt(s)	var	variable
FET	Field-effect transistor	mv	multivibrator	vco	voltage controlled oscillator
f	flip-flop	M Ω	megohm(s)	vhf	very high frequency
freg	frequency	n	nano (10^{-9})	vlf	very low frequency
FSTN	federal stock number	nc	not applicable	W	watt(s)
g	gram	NC	normally closed	ww	wire wound
G	giga (10^9)	no or neg	negative	xfmr	transformer
gd	guard	NO	normally open	xstr	transistor
Ge	germanium	ns	nanosecond	xtal	crystal
GHz	gigahertz	opnl ampli	operational amplifier	xtlo	crystal oscillator
gms	guaranteed minimum value	p	pico (10^{-12})	Ω	ohm(s)
gnd	ground	para	paragraph	μ	micro (10^{-6})
		pcb	printed circuit board		

Table 7-2. FEDERAL SUPPLY CODES FOR MANUFACTURERS

00213 Nytronics Comp. Group Inc. Subsidiary of Nytronics Inc. Formerly Sage Electronics Rochester, New York	03797 Eldema Div. Genisco Technology Corp. Compton, California	05574 Viking Industries Chatsworth, California	07597 Burndy Corp. Tape/Cable Div. Rochester, New York
00327 Welwyn International, Inc. Westlake, Ohio	03877 Transistron Electronic Corp. Wakefield, Massachusetts	05704 Replaced by 16258	07792 Lerma Engineering Corp. Northampton, Massachusetts
00656 Aerovox Corp. New Bedford, Massachusetts	03888 KDI Pyrofilm Corp. Whippany, New Jersey	05820 Wakefield Engineering Inc. Wakefield, Massachusetts	07910 Teledyne Semiconductor Formerly Continental Device Hawthorne, California
00686 Film Capacitors, Inc. Passaic, New Jersey	03911 Clairex Electronics Div. Clairex Corp. Mt. Vernon, New York	06001 General Electric Co. Electronic Capacitor & Battery Products Dept. Columbia, South Carolina	07933 - use 49956 Raytheon Co. Semiconductor Div. HQ Mountain View, California
00779 AMP Inc. Harrisburg, Pennsylvania	03980 Muirhead Inc. Mountainside, New Jersey	06136 Replaced by 63743	08225 Industro Transistor Corp. Long Island City, New York
01121 Allen-Bradley Co. Milwaukee, Wisconsin	04009 Arrow Hart Inc. Hartford, Connecticut	06383 Panduit Corp. Tinley Park, Illinois	08261 Spectra Strip Corp. Garden Grove, California
01281 TRW Electronic Comp. Semiconductor Operations Lawndale, California	04062 Replaced by 72136	06473 Bunker Ramo Corp. Amphenol SAMS Div. Chatsworth, California	08530 Reliance Mica Corp. Brooklyn, New York
01295 Texas Instruments, Inc. Semiconductor Group Dallas, Texas	04202 Replaced by 81312	06555 Beede Electrical Instrument Co. Penacook, New Hampshire	08806 General Electric Co. Miniature Lamp Products Dept. Cleveland, Ohio
01537 Motorola Communications & Electronics Inc. Franklin Park, Illinois	04217 Essex International Inc. Wire & Cable Div. Anaheim, California	06739 Electron Corp. Littleton, Colorado	08863 Nylomatic Corp. Norrisville, Pennsylvania
01686 RCL Electronics Inc. Manchester, New Hampshire	04221 Aemco, Div. of Midtex Inc. Mankato, Minnesota	06743 Clevite Corp. Cleveland, Ohio	08988 - use 53085 Skottie Electronics Inc. Archbald, Pennsylvania
01730 Replaced by 73586	04222 AVX Ceramics Div. AVX Corp. Myrtle Beach, Florida	06751 Components, Inc. Semcor Div. Phoenix, Arizona	09214 G.E. Co. Semi-Conductor Products Dept. Power Semi-Conductor Products OPN Sec. Auburn, New York
01884 - use 56289 Sprague Electric Co. Dearborn Electronic Div. Lockwood, Florida	04423 Telonic Industries Laguna Beach, California	06860 Gould Automotive Div. City of Industry, California	09353 C and K Components Watertown, Massachusetts
02114 Ferroxcube Corp. Saugerties, New York	04645 Replaced by 75376	06961 Vernitron Corp., Piezo Electric Div. Formerly Clevite Corp., Piezo Electric Div. Bedford, Ohio	09423 Scientific Components, Inc. Santa Barbara, California
02131 General Instrument Corp. Harris ASW Div. Westwood, Maine	04713 Motorola Inc. Semiconductor Products Phoenix, Arizona	06980 Eimac Div. Varian Associates San Carlos, California	09922 Burndy Corp. Norwalk, Connecticut
02395 Rason Mfg. Co. Brooklyn, New York	04946 Standard Wire & Cable Los Angeles, California	07047 Ross Milton, Co., The South Hampton, Pennsylvania	09969 Dale Electronics Inc. Yankton, S. Dakota
02533 Snelgrove, C.R. Co., Ltd. Don Mills, Ontario, Canada M3B 1M2	05082 Replaced by 94988	07115 Replaced by 14674	10059 Barker Engineering Corp. Formerly Amerace, Amerace ESNA Corp. Kenilworth, New Jersey
02606 Fenwal Labs Div. of Travenel Labs. Morton Grove, Illinois	05236 Jonathan Mfg. Co. Fullerton, California	07138 Westinghouse Electric Corp., Electronic Tube Division Horsehead, New York	11236 CTS of Berne Berne, Indiana
02660 Bunker Ramo Corp., Conn Div. Formerly Amphenol-Borg Electric Corp. Broadview, Illinois	05245 Components Corp. now Corcom, Inc. Chicago, Illinois	07233 TRW Electronic Components Cinch Graphic City of Industry, California	11237 CTS Keene Inc. Paso Robles, California
02799 Aero Capacitors, Inc. Chatsworth, California	05277 Westinghouse Electric Corp. Semiconductor Div. Youngwood, Pennsylvania	07256 Silicon Transistor Corp. Div. of BBF Group Inc. Chelmsford, MA	11358 CBS Electronic Div. Columbia Broadcasting System Newburyport, MN
03508 General Electric Co. Semiconductor Products Syracuse, New York	05278 Replaced by 43543	07261 Aumet Corp. Culver City, California	11403 Best Products Co. Chicago, Illinois
03614 Replaced by 71400	05279 Southwest Machine & Plastic Co. Glendora, California	07263 Fairchild Semiconductor Div. of Fairchild Camera & Instrument Corp. Mountain View, California	11503 Keystone Columbia Inc. Warren, Michigan
03651 Replaced by 44655	05397 Union Carbide Corp. Materials Systems Div. New York, New York	07344 Bircher Co., Inc. Rochester, New York	11532 Teledyne Relays Hawthorne, California
	05571 - use 56289 Sprague Electric Co. Pacific Div. Los Angeles, California		

Table 7-2. FEDERAL SUPPLY CODES FOR MANUFACTURERS (Continued)

11711 General Instrument Corp Rectifier Division Hickville, New York	14099 Semtech Corp. Newbury Park, California	17069 Circuit Structures Lab Burbank, California	24655 General Radio Concord, Massachusetts
11726 Qualidyne Corp Santa Clara, California	14140 Edison Electronic Div. Mc Gray-Edison Co. Manchester, New Hampshire	17338 High Pressure Eng. Co., Inc. Oklahoma City, Oklahoma	24759 Lenox-Fugle Electronics Inc. South Plainfield, New Jersey
12014 Chicago Rivet & Machine Co. Bellwood, Illinois	14193 Cal-R Inc formerly California Resistor, Corp Santa Monica, California	17545 Atlantic Semiconductors, Inc. Asbury Park, New Jersey	25088 Siemen Corp. Isilen, New Jersey
12040 National Semiconductor Corp Danbury, Connecticut	14298 American Components, Inc. an Insilco Co Conshohocken, Pennsylvania	17856 Siliconix, Inc. Santa Clara, California	25403 Amperex Electronic Corp. Semiconductor & Micro-Circuits Div Slatersville, Rhode Island
12060 Diodes, Inc. Chatsworth, California	14655 Cornell Dublier Electronics Division of Federal Pacific Electric Co. Govt. Control Dept Newark, New Jersey	17870 Replaced by 14140	27014 National Semiconductor Corp. Santa Clara, California
12136 Philadelphia Handle Co Camden, New Jersey	14752 Electro Cube Inc San Gabriel, California	18178 Vactec Inc Maryland Heights, Missouri	27264 Molex Products Downers Grove, Illinois
12300 Potter Brumfield Division AMF Canada LTD Guelph, Ontario, Canada	14869 Replaced by 96853	18324 Signetics Corp Sunnyvale, California	28213 Minnesota Mining & Mfg. Co. Consumer Products Div. St. Paul, Minnesota
12323 Presin Co., Inc. Shelton, Connecticut	14936 General Instrument Corp. Semi Conductor Products Group Hicksville, New York	18736 Voltronics Corp Manover, New Jersey	28425 Serv-Link formerly Bibbman Industries Fort Worth, Texas
12327 Freeway Corp. formerly Freeway Washer & Stamping Co Cleveland, Ohio	14936 Elec Trol Inc. Saugus, California	18927 G T E Sylvania Inc Precision Material Group Parsippany, New Jersey	28478 Detroit Controls Div Detroit Corporation Milwaukee, Wisconsin
12443 Budd Co. The, Polychem Products Plastic Products Div Bridgeport, PA	15801 Fenwal Electronics Inc. Div. of Kiehl-Walter and Co., Inc Framingham, Massachusetts	19451 Perme Machinery & Supply Co. Seattle, Washington	28480 Hewlett Packard Co. Corporate H.Q. Palo Alto, California
12615 U.S. Terminals Inc. Cincinnati, Ohio	15818 Teledyne Semiconductors, formerly Ameico Semiconductor Mountain View, California	19701 Electro Midland Corp. Mepco-Electra Inc Mineral Wells, Texas	28520 Heyman Mfg. Co. Kenilworth, New Jersey
12617 Hamlin Inc. Lake Mills, Wisconsin	15849 Litton Systems Inc. Usoco Div formerly Usoco Inc. Van Nuys, California	20584 Enochs Mfg. Inc. Indianapolis, Indiana	29083 Monsanto Co., Inc. Santa Clara, California
12697 Clarostat Mfg. Co. Dover, New Hampshire	15898 International Business Machines Corp Essex Junction, Vermont	20851 Self-Organizing Systems, Inc. Dallas, Texas	29604 Stackpole Components Co. Raleigh, North Carolina
12749 James Electronics Chicago, Illinois	15909 Replaced by 14140	21604 Buckeye Stamping Co Columbus, Ohio	30148 A B Enterprise Inc. Ahoskie, North Carolina
12856 Micrometals Sierra Madre, California	16258 Space-Lok Inc Burbank, California	21845 Solitron Devices Inc Transistor Division Riviera Beach, Florida	30323 Illinois Tool Works, Inc. Chicago, Illinois
12954 Dickson Electronics Corp. Scottsdale, Arizona	16299 Corning Glass Electronic Components Div. Raleigh, North Carolina	22767 ITT Semiconductors Palo Alto, California	31091 Optimax Inc. Colmar, Pennsylvania
12969 Unitrode Corp. Watertown, Massachusetts	16332 Replaced by 28478	23050 Product Comp. Corp. Mount Vernon, New York	32539 Mura Corp. Great Neck, New York
13103 Thermalloy Co., Inc. Dallas, Texas	16473 Cambridge Scientific Ind. Div. of Chemed Corporation Cambridge, Maryland	23732 Tracor Inc. Rockville, Maryland	32767 Griffith Plastic Corp. Burlingame, California
13327 Solitron Devices Inc. Tappan, New York	16742 Paramount Plastics Fabricators, Inc. Downey, California	23880 Stanford Applied Engrng. Santa Clara, California	32879 Advanced Mechanical Components Northridge, California
13511 Amphenol Cadre Div. Bunker-Ramo Corp. Los Gatos, California	16758 Delco Electronics Div. of General Motors Corp. Kokomo, Indiana	23936 Pamotor Div., Wm. J. Purdy Co. Burlingame, California	32897 Erie Technological Products, Inc. Frequency Control Div. Carlisle, Pennsylvania
13606 - use 56289 Sprague Electric Co. Transistor Div. Concord, New Hampshire	17001 Replaced by 71468	24248 Replaced by 94222	32997 Bourns Inc. Trimpot Products Division Riverside, California
13839 Replaced by 23732		24355 Analog Devices Inc. Norwood, Massachusetts	33173 General Electric Co. Products Dept. Owensboro, Kentucky

Table 7-2. FEDERAL SUPPLY CODES FOR MANUFACTURERS (Continued)

34333 Silicon General Westminister, California	70563 Amperite Company Union City, New Jersey	73293 Hughes Aircraft Co. Electron Dynamics Div. Torrence, California	77969 Rubbercraft Corp. of CA. LTD. Torrance, California
34335 Advanced Micro Devices Sunnyvale, California	70903 Belden Corp. Geneva, Illinois	73445 Amperex Electronic Corp. Hicksville, LI, New York	78189 Shakeproof Div. of Illinois Tool Works Inc. Elgin, Illinois
34802 Electromotive Inc. Kenilworth, New Jersey	71002 Birnback Radio Co., Inc. Freeport, LI New York	73559 Carling Electric Inc. West Hartford, Connecticut	78277 Sigma Instruments, Inc. South Braintree, Massachusetts
37942 Mallory, P.R. & Co., Inc. Indianapolis, Indiana	71400 Bussmann Mfg. Div. of McGraw-Edison Co. Saint Louis, Missouri	73586 Circle F Industries Trenton, New Jersey	78488 Stackpole Carbon Co. Saint Marys, Pennsylvania
42498 National Radio Melrose, Massachusetts	71450 CTS Corp. Elkhart, Indiana	73734 Federal Screw Products, Inc. Chicago, Illinois	78553 Eaton Corp. Engineered Fastener Div. Tinnerman Plant Cleveland, Ohio
43543 Nytronics Inc. Transformer Co. Div. Geneva, New York	71468 ITT Cannon Electric Inc. Santa Ana, California	73743 Fischer Special Mfg. Co. Cincinnati, Ohio	79136 Walde Kohinoor Inc. Long Island City, New York
44655 Ohmite Mfg. Co. Skokie, Illinois	71482 Clare, C.P. & Co. Chicago, Illinois	73899 JFD Electronics Co. Components Corp Brooklyn, New York	79497 Western Rubber Company Goshen, Indiana
49671 RCA Corp. New York, New York	71590 Centrelab Electronics Div. of Globe Union Inc. Milwaukee, Wisconsin	73949 Guardian Electric Mfg. Co. Chicago, Illinois	79963 Zierick Mfg. Corp. Mt. Kisko, New York
49956 Raytheon Company Lexington, Massachusetts	71707 Coto Coil Co., Inc. Providence, Rhode Island	74199 Quan Nichols Co. Chicago, Illinois	80031 Electro-Midland Corp., Mepco Div. A North American Phillips Co. Morristown, New Jersey
50088 Mostek Corp. Carrollton, Texas	71744 Chicago Miniature Lamp Works Chicago, Illinois	74217 Radio Switch Corp. Marlboro, New Jersey	80145 LFE Corp., Process Control Div. formerly API Instrument Co. Chesterland, Ohio
50579 Litronix Inc. Cupertino, California	71785 TRW Electronics Components Cinch Connector Operations Div. Elk Grove Village, Chicago, Illinois	74276 Signalite Div. General Instrument Corp. Neptune, New Jersey	80183 - use 56289 Sprague Products North Adams, Massachusetts
51605 Scientific Components Inc. Linden, New Jersey	72005 Driver, Wilber B., Co. Newark, New Jersey	74306 Piezo Crystal Co. Carlisle, Pennsylvania	80294 Bourns Inc., Instrument Div. Riverside, California
53021 Sangamo Electric Co. Springfield, Illinois	72092 Replaced by 06980	74542 Hoyt Elect. Instr. Works Penacook, New Hampshire	80583 Hammarlund Mfg. Co., Inc. Red Bank, New Jersey
54294 Cutler-Hammer Inc. formerly Shallcross, A Cutter-Hammer Co. Selma, North Carolina	72136 Electro Motive Mfg. Co. Williamantic, Connecticut	74970 Johnson E.F., Co. Waseca, Minnesota	80640 Stevens, Arnold Inc. South Boston, Massachusetts
55026 Simpson Electric Co. Div. of Am. Gage and Mach. Co. Elgin, Illinois	72259 Nytronics Inc. Pelham Manor, New Jersey	75042 TRW Electronics Components IRC Fixed Resistors Philadelphia, Pennsylvania	81073 Grayhill, Inc. La Grange, Illinois
56289 Sprague Electric Co. North Adams, Massachusetts	72619 Dialight Div. Amperex Electronic Corp. Brooklyn, New York	75376 Kurz-Kasch Inc. Dayton, Ohio	81312 Winchester Electronics Div. of Litton Industries Inc. Oakville, Connecticut
58474 Superior Electric Co. Bristol, Connecticut	72653 G.C. Electronics Div. of Hydrometals, Inc. Brooklyn, New York	75378 CTS Knights Inc. Sandwich, Illinois	81439 Therm-O-Disc Inc. Mansfield, Ohio
60399 Torin Corp. formerly Torrington Mfg. Co. Torrington, Connecticut	72665 Replaced by 90303	75382 Kulka Electric Corp. Mount Vernon, New York	81483 International Rectifier Corp. Los Angeles, California
63743 Ward Leonard Electric Co., Inc. Mount Vernon, New York	72794 Dzus Fastener Co., Inc. West Islip, New York	75915 Littlefuse Inc. Des Plaines, Illinois	81590 Korry Mfg. Co. Seattle, Washington
64834 West Mfg. Co. San Francisco, California	72928 Gulton Ind. Inc. Gudeman Div. Chicago, Illinois	76854 Oak Industries Inc. Switch Div. Crystal Lake, Illinois	81741 Chicago Lock Co. Chicago, Illinois
65092 Weston Instruments Inc. Newark, New Jersey	72982 Erie Tech. Products Inc. Erie, Pennsylvania	77342 AMF Inc. Potter & Brumfield Div. Princeton, Indiana	82305 Palmer Electronics Corp. South Gate, California
66150 Winslow Tele-Tronics Inc. Eaton Town, New Jersey	73138 Beckman Instruments Inc. Helipot Division Fullerton, California	77638 General Instrument Corp. Rectifier Division Brooklyn, New York	82389 Switchcraft Inc. Chicago, Illinois
70485 Atlantic India Rubber Works Chicago, Illinois			

Table 7-2. FEDERAL SUPPLY CODES FOR MANUFACTURERS (Continued)

82415 North American Phillips Controls Corp. Frederick, Maryland	88245 Litton Systems Inc. Usco Div. Van Nuys, California	91934 Miller Electric Co., Inc. Div of Aunet Woonsocket, Rhode Island	97966 Replaced by 11358
82872 Roanwell Corp. New York, New York	88419 Cornell-Dubilier Electronic Div. Federal Pacific Co. Fuquay-Varian, North Carolina	92194 Alpha Wire Corp. Elizabeth, New Jersey	98094 Replaced by 49956
82877 Rotron Inc. Woodstock, New York	88486 Plastic Wire & Cable Jewitt City, Connecticut	93332 Sylvania Electric Products Semiconductor Products Div. Woburn, Massachusetts	98159 Rubber-Teck, Inc. Gardena, California
82879 ITT Royal Electric Div. Pawtucket, Rhode Island	88690 Replaced by 04217	94145 Replaced by 49956	98278 Malco A Microdot Co., Inc. Connector & Cable Div. Pasadena, California
83003 Varo Inc. Garland, Texas	89536 Flyke, John Mfg. Co., Inc. Seattle, Washington	94154 - use 94988 Wagner Electric Corp. Tung-Sol Div. Newark, New Jersey	98291 Sealectro Corp. Mamaroneck, New York
83058 Carr Co., The United Can Div. of TRW Cambridge, Massachusetts	89730 G.E. Co., Newark Lamp Works Newark, New Jersey	94227 Southco Inc. formerly South Chester Corp. Lester, Pennsylvania	98388 Royal Industries Products Div. San Diego, California
83298 Bendix Corp Electric Power Division Eatontown, New Jersey	90201 Mallory Capacitor Co. Div of P.R. Mallory Co., Inc. Indianapolis, Indiana	95146 Aico Electronic Products Inc. Lawrence, Massachusetts	98743 Replaced by 12749
83330 Smith, Herman H., Inc. Brooklyn, New York	90211 - use 56385 Square D Co Chicago, Illinois	95263 Leecraft Mfg. Co Long Island City, New York	98925 Replaced by 14433
83478 Rubbercraft Corp. of America, Inc. West Haven, Connecticut	90215 Best Stamp & Mfg. Co. Kansas City, Missouri	95264 Replaced by 98278	99120 Plastic Capacitors, Inc. Chicago, Illinois
83594 Burrroughs Corp. Electronic Components Div. Plainfield, New Jersey	90303 Mallory Battery Co. Div. of Mallory Co., Inc. Tarrytown, New York	95275 Vitramon Inc. Bridgeport, Connecticut	99217 Bell Industries Elect. Comp. Div. formerly Southern Elect. Div. Burbank, California
83740 Union Carbide Corp. Battery Products Div. formerly Consumer Products Div. New York, New York	91084 Essex International Inc. Suglex IWP Div. Newmarket, New Hampshire	95303 RCA Corp Receiving Tube Div. Cincinnati, Ohio	99392 STM Oakland, California
84171 Arco Electronics Great Neck, New York	91293 Johanson Mfg. Co. Boonton, New Jersey	95348 Gordo's Corp. Bloomfield, New Jersey	99515 ITT Jennings Monrovia Plant Div. of ITT Jennings formerly Marshall Industries Capacitor Div. Monrovia, California
84411 TRW Electronic Components TRW Capacitors Ogallala, Nebraska	91407 Replaced by 58474	95354 Methode Mfg. Corp. Rolling Meadows, Illinois	99779 - use 29587 Bunker-Ramo Corp. Barnes Div. Landsdowne, Pennsylvania
84613 Fuse Indicator Corp Rockville, Maryland	91502 Associated Machine Santa Clara, California	95712 Bendix Corp Electrical Components Div. Microwave Devices Plant Franklin, Indiana	99800 American Precision Industries Inc. Delevan Division East Aurora, New York
84682 Essex International Inc. Industrial Wire Div. Peabody, Massachusetts	91506 Augat Inc. Attleboro, Massachusetts	95987 Weckesser Co. Inc. Chicago, Illinois	99942 Centrelab Semiconductor Centrelab Electronics Div. of Globe-Union Inc. El Monte, California
86577 Precision Metal Products, of Malden Inc. Stoneham, Massachusetts	91637 Dale Electronics Inc Columbus, Nebraska	96733 San Fernando Electric Mfg. Co. San Fernando, California	Toyo Electronics (R-Ohm Corp.) Irvine, California
86684 Radio Corp. of America Electronic Components Div. Harrison, New Jersey	91662 Elco Corp. Willow Grove, Pennsylvania	96853 Gulton Industries Inc. Measurement and Controls Div. formerly Rustek Instruments Co. Manchester, New Hampshire	National Connector Minneapolis, Minnesota
86928 Seastrom Mfg. Co., Inc. Glendale, California	91737 - use 71468 Gremar Mfg. Co., Inc. ITT Cannon/Gremar Santa Ana, California	96881 Thomson Industries, Inc. Manhasset, New York	
87034 Illuminated Products Inc. Subsidiary of Oak Industries Inc. Anahiem, California	91802 Industrial Devices, Inc. Edgewater, New Jersey	97540 Master Mobile Mounts Div. of Whitehall Electronics Corp. Ft. Meyers, Florida	
88219 Gould Inc. Industrial Div. Trenton, New Jersey	91833 Keystone Electronics Corp. New York, New York	97913 Industrial Electronic Hdware Corp. New York, New York	
	91836 King's Electronics Co., Inc. Tuckahoe, New York	97945 Penwalt Corp. SS White Industrial Products Div. Piscataway, New Jersey	
	91929 Honeywell Inc. Micro Switch Div. Freeport, Illinois		

Table 7-3. FLUKE TECHNICAL SERVICE CENTERS

United States**CALIFORNIA****Burbank**

Fluke Western Technical Center
Mike Nagy, Service Manager
2020 N. Lincoln St.
Zip: 91504
Tel. (213) 849-4641

Santa Clara

Fluke Western Technical Center
Tom Marshall, Service Manager
2359 De La Cruz Blvd.
Zip: 95050
Tel. (408) 985-1200

COLORADO**Denver**

Fluke Southwestern
Technical Center
Mel Suelzle, Service Manager
1980 S. Quebec St.
Unit 4
Zip: 80231
Tel. (303) 750-1228

FLORIDA**Orlando**

Fluke S.E. Technical Center
Jesse Morse, Service Manager
P.O. Box 6578
940 N. Fern Creek Ave.
Zip: 32803
Tel. (305) 896-2296

ILLINOIS**Des Plaines**

Fluke Midwestern
Technical Center
Bruce Hunt, Service Manager
1287 N. Rand Road
Zip: 60016
Tel. (312) 298-7470

MARYLAND**Kensington**

Fluke Midwestern
Technical Center
John Hines, Service Manager
11501 Huff Court
Zip: 20795
Tel. (301) 881-5300

MASSACHUSETTS**Lexington**

Fluke N.E. Technical Center
Dick Zemba, Service Manager
109 Massachusetts Ave.
Zip: 02173
Tel. (617) 861-8620

MINNESOTA**Minneapolis**

Fluke Midwestern
Technical Center
Robert Wayne, Br. Manager
10800 Lyndale Ave. So.
Zip: 55420
Tel. (612) 884-4541

NEW JERSEY**Totowa**

Fluke Eastern Technical Center
Al La Fleur, Service Manager
500 Union Blvd.
Zip: 07512
Tel. (201) 742-3215

NEW YORK**Farmingdale, LI**

Fluke Eastern Technical Center
Charles Vanek, Br. Manager
59 Central Ave. Unit 3
Zip: 11735
Tel. (516) 752-1078

Rochester

Fluke Eastern Technical Center
Wayne Roth, Br. Service Manager
4515 Culver Road
Zip: 14622
Tel. (716) 342-6940

NORTH CAROLINA**Greensboro**

Fluke S.E. Technical Center
Dwain Cox, Service Manager
P.O. Box 9619
1310 Beaman Place
Zip: 27408
Tel. (919) 273-1918

WASHINGTON**Mountlake Terrace**

John Fluke Mfg. Co., Inc.
Bill Fetrow, Tech. Service Spvr.
7001 - 220th Ave. S.W.
Zip: 98043
Tel. (206) 774-2206

Canada**ALBERTA****Calgary**

Fluke Canadian Technical Center
Dave Racinsky, Service Manager
3829 - 12th St. N.E.
Zip: T2E 6M5
Tel. (403) 261-0780

ONTARIO**Mississauga**

Fluke Canadian Technical Center
Herb Duval, Service Manager
6427 Northam Drive
Zip: L4V 1J5
Tel. (416) 678-1500

Table 7-4. INTERNATIONAL SERVICE CENTERS

CENTRAL & SOUTH AMERICA**ARGENTINA**

Coasin S.A.
Miguel Volpe, Service Manager
Virrey del Pino 4071
Buenos Aires, Argentina
Tel: 523185

BRAZIL

Ambriex S.A.
Col. Josue Dantas Martins Filho
Rua Ceara, 104 - 2° e 3° Andares
ZC-29
Rio de Janeiro GB, Brazil
Tel: 264-7406

Adolfo Tovomaro Ichiki,
Service Manager
Rua Tupi, 535
01233 Sao Paulo SP, Brazil
Tel: 52-7806 & 0912

ECUADOR

Proteco Coasin CIA, Ltda.
Ing Jaime Jaramillo
Apartado 228A
Quito, Ecuador
Tel: 526759

MEXICO

Mexitek, S.A.
Enrique Batista Mangas,
Service Manager
Eugenia 408
Department 1
Mexico 12, D.F.
Mexico
Tel: 5360910 - 5239751

VENEZUELA

Coasin C.A.
Leslie Dunia, Service Manager
Apdo. Postal 50939
Sabana Grande No. 1
Caracas 105, Venezuela
Tel: 722311 - 728662

EUROPE**FRANCE**

M.B. Electronique S.A.
Serge Pison, Service Manager
29, Rue Emile Duclaux
92150, Suresnes, France
Tel: 7723111 (108)

NETHERLANDS

C.N. Rood N.V.
Sieb Hoekstra, Service Manager
Cort van der Lindenstraat 11-13
P.O. Box 42
Rijswijk ZH 2100
Tel: 070-996360

Fluke (Nederland) B.V.
Henk Lit, Service Manager
P.O. Box 5053
Zevenheuvelenweg 53
Tilburg, Netherlands
Tel: (13) 673973

NORWAY

Morgenstjerne & Co. A/S
Finn Schjervan
Konghellegate 3
P.O. Box 6688, Rodelokka
Oslo 5, Norway
Tel: 472 356110

UNITED KINGDOM

Fluke International Corporation
Ed Cutter, Service Manager
Garnet Close
Watford, WD2 4TT
England
Tel: 0923-33066

AFRICA, ASIA & AUSTRALIA**AUSTRALIA**

Elmeasco Instruments Pty. Ltd.
Andrew McKean,
Service Manager
P.O. Box 30
Concord, N.S.W.
Australia 2137
Tel: (02) 736-2888

HONG KONG

Gilman & Co., Ltd.
J.B. Tetlow
P.O. Box 56
Hong Kong
Tel: 227011 (14)

INDIA

Hinditron Services Pvt. Ltd.
Chandu Vagal,
Service Manager
69/A.L. Jagmohandas Marg
Bombay - 400 006, India
Tel: 365344

IRAN

Berkeh Company Ltd.
Tom Payne
20 Salm Road, Roosevelt Ave.
Tehran, Iran
Tel: 828294 831564

ISRAEL

R.D.T. Electronics Engineering
Ltd.
Shamai Ram-nof,
Service Manager
46, Sokolov Street
Ramat Hasharon 47235 Israel
Tel: 483211

JAPAN

Toyo Trading Company Ltd.
Mr. Adachi, Service Manager
P.O. Box 5014
International Tokyo
Tokyo 100-31, Japan
Tel: (03) 279-0771

SOUTH AFRICA

Fluke (Pty) Ltd.
P.O. Box 13091
Benoni 1511
Transvaal
Republic of South Africa
Tel: 011-849-6811

For areas not listed, contact
the Fluke Technical Center
nearest you or contact Fluke
directly at Mountlake Ter-
race, WA.

Table 7-5. SALES REPRESENTATIVES - DOMESTIC

John Fluke Mfg. Co., Inc.

P.O. Box 43210, Mountlake Terrace, WA 98043

Tel: (206) 774-2211 Toll Free: (800) 426-0361 TWX: 910-449-2850 Telex: 32-0013 Cable: Fluke

United States**ALABAMA**

Huntsville
BCS Associates, Inc.
P.O. Box 1273
3322 S. Memorial Parkway
Zip 35807
Tel: (205) 881-6220

ALASKA

Anchorage
Harry Lang & Associates
1406 W. 47th Ave.
Zip 99503
Tel: (907) 279-5741

ARIZONA

Phoenix
Barnhill Associates, Inc.
1118 E. McDowell Drive
Suite 200, AZ 85001
Tel: (602) 947-7841

CALIFORNIA

Los Angeles
Instrument Specialists
Sales Group
John Fluke Mfg. Co., Inc.
2020 North Lincoln Street
Pasadena, CA 91104
Tel: (213) 849-7181
Santa Clara
Instrument Specialists
Sales Group
John Fluke Mfg. Co., Inc.
2359 De La Cruz Blvd.
Zip 95050
Tel: (408) 244-1505

COLORADO

Denver
Barnhill Associates, Inc.
1980 S. Quebec Street, Unit 4
Zip 80231
Tel: (303) 750-1222

CONNECTICUT

Hartford
BCS Associates, Inc.
P.O. Box 6574
940 N. Fern Creek Ave.
Zip 32803
Tel: (305) 896-4881

FLORIDA

Orlando
BCS Associates, Inc.
P.O. Box 6574
940 N. Fern Creek Ave.
Zip 32803
Tel: (305) 896-4881

GEORGIA

Decatur
BCS Associates, Inc.
2522 Tanglewood Road
Zip 30033
Tel: (404) 321-0980

HAWAII

Honolulu
Industrial Electronics, Inc.
P.O. Box 135
646 Queen Street
Zip 96817
Tel: (808) 533-8095

ILLINOIS

Chicago
Cozens & Cudahy Sales Group
John Fluke Mfg. Co., Inc.
10000 Lyndale Ave. S.
Zip 55420
Tel: (612) 884-4336

INDIANA

Indianapolis
Cozens & Cudahy Sales Group
John Fluke Mfg. Co., Inc.
21 Beachway Drive
Zip 46224
Tel: (317) 244-2456

KANSAS

Kansas City, MO
Cozens & Cudahy Sales Group
John Fluke Mfg. Co., Inc.
444 N. Main Street
Zip 64101
Tel: (816) 454-5839

KENTUCKY

Louisville
Cozens & Cudahy Sales Group
John Fluke Mfg. Co., Inc.
1519A Stuyvesant Ave.
Union, NJ 07081
Tel: (201) 687-8737

MARYLAND

Baltimore
John Fluke Mfg. Co., Inc.
11501 Huff Court
Kensington, MD 20795
Tel: (301) 881-3370

MASSACHUSETTS

Boston
Cozens & Cudahy Sales Group
John Fluke Mfg. Co., Inc.
10000 Lyndale Ave. S.
Zip 55420
Tel: (612) 884-4336

MICHIGAN

Detroit
WKM Associates, Inc.
345 Girard
Madison Heights, MI 48071
Tel: (313) 588-2900

MINNESOTA

Minneapolis
Cozens & Cudahy Sales Group
John Fluke Mfg. Co., Inc.
10000 Lyndale Ave. S.
Zip 55420
Tel: (612) 884-4336

MISSOURI

Kansas City
Cozens & Cudahy Sales Group
John Fluke Mfg. Co., Inc.
444 N. Main Street
Zip 64101
Tel: (816) 454-5839
St. Louis
Cozens & Cudahy Sales Group
John Fluke Mfg. Co., Inc.
P.O. Box 1001
Zip 63145
Tel: (314) 423-1234

NEW JERSEY

Newark
SBM Representatives
Sales Group
John Fluke Mfg. Co., Inc.
1519A Stuyvesant Ave.
Union, NJ 07081
Tel: (201) 687-8737

NEW MEXICO

Albuquerque
Barnhill Associates, Inc.
1410 D Wyoming N.E.
Zip 87112
Tel: (505) 299-7658

NEW YORK

New York
Cozens & Cudahy Sales Group
John Fluke Mfg. Co., Inc.
26 Hobbs Avenue
Pleasantville, NY 10570
Tel: (914) 769-1811
Rochester
Cozens & Cudahy Sales Group
John Fluke Mfg. Co., Inc.
10000 Lyndale Ave. S.
Zip 55420
Tel: (612) 884-4336

NORTH CAROLINA

Greensboro
BCS Associates, Inc.
P.O. Box 9619
1310 Beaman Place
Zip 27405
Tel: (919) 273-1918

OHIO

Cleveland
WKM Associates, Inc.
16141 Puritas Ave.
Zip 44135
Tel: (216) 267-0445
Dayton
WKM Associates, Inc.
7913 S. Suburban Road
Zip 45459
Tel: (513) 434-7500

OREGON

Beaverton
Shawalter Instruments Inc.
1800 S.W. Cedar Hills Blvd.
Suite 160
Zip 97005
Tel: (503) 644-5196

PENNSYLVANIA

Philadelphia
Cozens & Cudahy Sales Group
John Fluke Mfg. Co., Inc.
1010 West 8th Avenue
King of Prussia, PA 19406
Tel: (215) 265-4040
Pittsburgh
WKM Associates, Inc.
90 Clairton Blvd.
Zip 15236
Tel: (412) 892-2853

TEXAS

Austin
Barnhill Associates, Inc.
1200 Barton Hill, No. 197
Zip 78704
Tel: (512) 444-2377
Dallas
Barnhill Associates, Inc.
900 Business Parkway
Richardson, TX 75081
Tel: (214) 231-2573
Houston
Barnhill Associates, Inc.
1200 Barton Hill, No. 197
Zip 77092
Tel: (713) 688-9971

VIRGINIA

Williamsburg
BCS Associates, Inc.
107 Rich Neck Road
Zip 23185
Tel: (804) 877-4051

WASHINGTON

Benton City
Shawalter Instruments Inc.
P.O. Box 9619
Zip 99320
Tel: (509) 588-3472

Seattle

Seattle
Barnhill Associates, Inc.
11501 Huff Court
Kensington, MD 20795
Tel: (301) 881-3370

For U.S. areas not listed, contact the regional office nearest you or John Fluke Mfg. Co., Inc., Mountlake Terrace, WA

Canada**ALBERTA**

Calgary
Allan Crawford Assoc., Ltd.
1829 12th Street N.E.
Zip T2E 6M5
Tel: (403) 276-9658

BRITISH COLUMBIA

North Vancouver
Allan Crawford Assoc., Ltd.
116 E. Third St., Suite 203
Zip V7L 1E6
Tel: (604) 980-4831

NOVA SCOTIA

Halifax
Allan Crawford Assoc., Ltd.
Suite 201, Townsend Pl.
800 Windmill Rd.
Burnside Industrial Park
Portsmouth, NS
Zip B3B 1L1
Tel: (902) 469-7865

ONTARIO

Toronto
Allan Crawford Assoc., Ltd.
6427 Northam Ave.
Mississauga, Ont. L4V 1J5
Tel: (416) 678-1500

OTTAWA

Ottawa
Allan Crawford Assoc., Ltd.
1289 Richmond Road
Zip K2B 7Y4
Tel: (613) 829-9651

QUEBEC

Montreal
Allan Crawford Assoc., Ltd.
1000, Marché Victoria Road F
Longueuil, P.Q. J4G 1A2
Tel: (514) 670-1212

For Canadian areas not listed, contact the regional office nearest you or Allan Crawford Assoc., Ltd., Mississauga, Ontario

All of the above Fluke Sales Offices carry local stocks of low-cost Digital Multimeters (Models 8000A, 8030A, 8040A), Counters (Model 1900A), Digital Thermometers (Models

2160A, 2170A, 2165A, 2175A) and the Universal Temperature Probe (Model 801-150). These same products are available from the following distributors:

Brownell Electronics
Atlanta, GA (404) 762-5181
Charlotte, NC (704) 394-4341
Memphis, TN (901) 323-8554
Nashville, TN (615) 889-8230
Orlando, FL (305) 843-6770
Mobile, AL (205) 479-5405

The Mancib Company
Boston, MA (617) 272-9450
Middletown, CT (203) 346-6646

Elmar Electronics
San Francisco, CA (415) 961-3611
Denver, CO (303) 287-9611

Pioneer-Standard
Cleveland, OH (216) 587-3600
Dayton, OH (513) 236-9900
Indianapolis, IN (317) 849-7300
Pittsburgh, PA (412) 782-2300
Detroit, MI (313) 525-1800

Liberty Electronics
El Segundo, CA (213) 322-8100
San Diego, CA (714) 565-9171
Phoenix, AZ (602) 257-1272
Seattle, WA (206) 763-8200
Albuquerque, NM (505) 299-8293
Beaverton, OR (503) 644-4783

Table 7-6. SALES REPRESENTATIVES – INTERNATIONAL

Supplied and supported by Fluke (Nederland) B.V.,
P.O. Box 5053, Zevenheuvelenweg 53, Tilburg, Netherlands.

AUSTRIA

Kontron GmbH & Co. KG
Ameisgasse 43
1140 Vienna, Austria
Tel: 222-945646

BELGIUM

C.N. Rood S/A
37 Place de Jamblinne de Meux
B-1040 Brussels, Belgium
Tel: 02-27352135

CYPRUS

Chris Radiovision Ltd.
P.O. Box 1989
Nicosia, Cyprus
Tel: 66121

DENMARK

Tage Olsen A/S
Teglvaerksgade 37
DK-2100 Copenhagen Ø, Denmark
Tel: 01-294800

FINLAND

Oy Findip AB
Teollisuustie 7
02700 Kauniainen, Finland
Tel: 080-502255

FRANCE

M.B. Electronique S.A.
Rue Fournay
ZAC de BUC
B.P. N° 31
78530 BUC, France
Tel: 9563130

**GERMAN FEDERAL
REPUBLIC**

Fluke (Deutschland) GmbH
4-Dusseldorf
Meineckestrasse 53
West Germany
Tel: 211-450831

Fluke (Deutschland) GmbH
8000 Munich 80
Mutschellestrasse 1
West Germany
Tel: 089-433021

GREECE

Hellenic Scientific
Representations Ltd.
10, Nympheou Street
Athens 615, Greece
Tel: 021-7792320/705960

ISRAEL

R.D.T. Electronics
Engineering Ltd.
46, Sokolov Street
Ramat Hasharon 47235, Israel
Tel: 483211

ITALY

Sistrel S.p.A.
Via Giuseppe Armellini No. 37
00143 Rome, Italy
Tel: 5915551

NETHERLANDS

Sistrel S.p.A.
Via Timavo 66
20099 Sesto S. Giovanni (Milan)
Italy
Tel: 02-2485233

NETHERLANDS

C.N. Rood, B.V.
Cort van der Lindenstraat 11-13
Rijswijk (Z.H.) 2100
Netherlands
Tel: 070-996360

Fluke (Nederland) B.V.
P.O. Box 5053
Zevenheuvelenweg 53
Tilburg, Netherlands
Tel: (13) 673973

NORWAY

Morgenstjerne & Co. A/S
Konghellegate 3
P.O. Box 6688, Rodelokka
Oslo 5, Norway
Tel: 02-356110

PORTUGAL

Equipamentos
De Laboratorio Ltda.
P.O. Box 1100
Lisbon 1, Portugal
Tel: 019-976551

SPAIN

Ataio Ingenieros S.A.
Enrique Larreta 10-12
Madrid 16, Spain
Tel: 01-7330562

SWEDEN

Teleinstrument AB
P.O. Box 490
S-162 Vallingby-4
Sweden
Tel: 08-380370

TURKEY

M. Süheyl Erkman
Necatibey Cad 92/2
Karaköy/Istanbul
Turkey
Tel: 441546, 447651

UNITED KINGDOM

Fluke International Corp.
Garnet Close
Watford, WD2 4TT, England
Tel: 0923-33066

Customers in the following countries:

Bulgaria, Czechoslovakia, Hungary, Poland, Romania,
U.S.S.R. and Yugoslavia

Contact: Amtest Associates Ltd., P.O. Box 55, Addlestone,
Surrey, KT 15 1DU, England. Tel: 0932-52121.

Table 7-6. SALES REPRESENTATIVES — INTERNATIONAL (Continued)

Supplied and supported by Fluke International Corporation,
P.O. Box 43210, Mountlake Terrace, WA 98043

ARGENTINA

Coasin S.A.
Virevedel Pinar 4071
Buenos Aires, Argentina
Tel. 520185

AUSTRALIA

Elmeasco Instruments Pty. Ltd.
P.O. Box 30
Concord, N.S.W.
Australia 2137
Tel. 02/736 2888

Elmeasco Instruments Pty. Ltd.
P.O. Box 107
Mt. Waverly, VIC 3149
Australia
Tel. 233 4044

BOLIVIA

Coasin Bolivia S.R.L.
Casilla 7297
La Paz, Bolivia
Tel. 40662

BRAZIL

Ambirex S.A.
Rua Ceará 104/2 e 3, Aratares
ZC 29
Rio de Janeiro G.R. Brazil
Tel. 264 7406
Ambirex S.A.
Rua Tupi 535
01 244
Sao Paulo SP, Brazil
Tel. 66091/2-66 8047

**CARIBBEAN
& CENTRAL AMERICA**

West Indies Sales Co.
7960 Northwest 66th Street
Miami, FL 33166
Tel. 305-592 8198

CHILE

Coasin Chile Ltd.
Casilla 14598 - Correo 15
Santiago, Chile
Tel. 396713

**CHINA,
PEOPLE'S REPUBLIC OF**
May Lee Industries, Co. Inc.
11 Broadway, Suite 1612
New York, New York 10004
Tel. 212-425 4347

COLOMBIA

Amirex Colombia
Avenida Arce 12310
Bogota 1, Colombia
Tel. 41061

ECUADOR

Proteco Coasin CIA, Ltda.
Apartado 228A
Quito, Ecuador
Tel. 526759

EGYPT

Lotus Engineering Organisation
P.O. Box 1252
Cairo, Egypt
Tel. 71617

HONG KONG

Lotus Engineering Organisation
P.O. Box 1252
Hong Kong
Tel. 71617

INDIA

Elmeasco Instruments Pty. Ltd.
P.O. Box 107
Bombay 400 002, India
Tel. 233 4044

Elmeasco Instruments Pty. Ltd.
Elmeasco Instruments Pty. Ltd.
Bombay 400 002, India
Tel. 233 4044
411 Rajawade Vihar Extension
Bangalore 560 004, India
Tel. 26601

INDONESIA

P.T. Lotus Engineering Co. Ltd.
Jl. M. Pangeran Diponegoro 10A
Jakarta Indonesia
Tel. 41382

IRAN

Lotus Engineering Co. Ltd.
11 Bani Road, Pasargad Avenue
Tehran, Iran
Tel. 55504/55 504

JAPAN

Lotus Engineering Company Ltd.
P.O. Box 1414
Tokyo 100, Japan
Tel. 03-5561 71

Lotus Engineering Company Ltd.
Tokyo 100, Japan
Tel. 03-5561 71
Mitsubishi Co. Osaka Japan
Tel. 06-255 0432

JORDAN

Trading & Agricultural
Development Co.
P.O. Box 107
Amman, Jordan
Tel. 10712

KENYA

Advanced Communications Ltd.
City House, Watara Street
P.O. Box 10605
Nairobi, Kenya
Tel. 31902

KOREA

Amirex Korea & Co.
International P.O. Box 1250
Seoul, Korea
Tel. 76 2781

KUWAIT

Tareq Company
P.O. Box Safat 20506
Kuwait, Arabian Gulf
Tel. 436100, 436045

LIBANON

Lotus Engineering Organisation
Lotus Engineering Organisation
P.O. Box 1252
Beirut, Lebanon
Tel. 71617

MALAYSIA

Elmeasco Instruments Pty. Ltd.
P.O. Box 107
Bangi, Selangor, Sabah
P.O. Box 107
Tel. 233 4044
O'Connor's Pty. Ltd.
P.O. Box 2
Petaling Jaya, Selangor
Wang Majlis
Tel. 40811

MEXICO

Amirex S.A.
Boulevard
Toluca, Mexico
Tel. 256 64

MOROCCO

Lotus Engineering Organisation
Boulevard Mohammed VI
Rabat, Morocco
Tel. 256 64

NEW ZEALAND

Elmeasco Instruments Pty. Ltd.
P.O. Box 4069
Wellington, New Zealand
Tel. 721314

NIGERIA

Lotus Engineering Organisation
P.O. Box 107
Lagos, Nigeria

PAKISTAN

Pha International Operations
305 Mohammed House
Makki Road
P.O. Box 125
Karachi, Pakistan

PERU

Lotus Engineering Organisation
Lotus Engineering Organisation
P.O. Box 125
Lima, Peru
Tel. 28806

SAUDI ARABIA

Electronic Equipment
Marketing Establishment
P.O. Box 3750
Riyadh, Saudi Arabia
Tel. 32700

SINGAPORE

O'Connor's Pty. Ltd.
98 Pasir Panjang Road
Singapore 5, Singapore
Tel. 632944

SOUTH AFRICA

Fluke (Pty.) Ltd.
P.O. Box 13091
Benoni 1511, Transvaal
Republic of South Africa
Tel. 011-449 6811
Fluke (Pty.) Ltd.
24 Fontaine Shopping Ctr.
Main Road
Rondebosch 7700
Cape Town
Republic of South Africa
Tel. 651881

TAIWAN

Lotus Engineering Organisation
241, Xingzhan, North Road
and Sec.
Taipei, Taiwan
Rep. of China
Tel. 241 5652

THAILAND

Lotus Engineering Organisation
P.O. Box 107
No. 49, Ekamai, Sukhumvit 63
Bangkok-11, Thailand
Tel. 914434, 928532

URUGUAY

Coasin Uruguay S.R.L.
Correos 6774, Poso
Montevideo, Uruguay
Tel. 917708

VENEZUELA

Coasin C.A.
APO Postal 50099
Sabaneta Grande No. 1
Caracas 105, Venezuela
Tel. 722311

Section 8

Schematic Diagrams

FIGURE NO.	NAME	DRAWING NO.	PAGE
8-1	Model 8400A Interconnect Diagram.	8400A-1100	8-3
8-2	Model 8400A Wiring Diagram	8400A-1000	8-4
8-3	A1 Power Supply PCB Assembly	8400A-1001	8-5
8-4	A2 Range Delay PCB Assembly	8400A-1006	8-6
8-5	A3 DC External Reference Converter PCB Assembly	8400A-1009	8-7
8-6	A4 AC External Reference Converter PCB Assembly	8400A-1008	8-8
8-7	A5 Remote Control Unit PCB Assembly	8400A-1011	8-9
8-8	A6 Data Output Unit No. 2 PCB Assembly	8400A-1013	8-10
8-9	A7 Data Output Unit No. 1 PCB Assembly	8400A-1012	8-11
8-10	A8 Logic PCB Assembly	8400A-1004	8-12
8-11	A9 A-to-D Converter PCB Assembly.	8400A-1003	8-13
8-12	A10 Active Filter PCB Assembly	8400A-1013	8-14
8-13	A11 Buffer PCB Assembly	8400A-1005	8-15
8-14	A12 Ohms Converter PCB Assembly.	8400A-1010	8-16
8-15	A13 AC Converter PCB Assembly	8400A-1007	8-17
8-16	A14 Display PCB Assembly Sheet 1 of 2	8400A-1002	8-18
8-17	A14 Display PCB Assembly Sheet 2 of 2	8400A-1002	8-19
8-18	A22 True RMS Converter PCB Assembly	8400A-1022	8-20


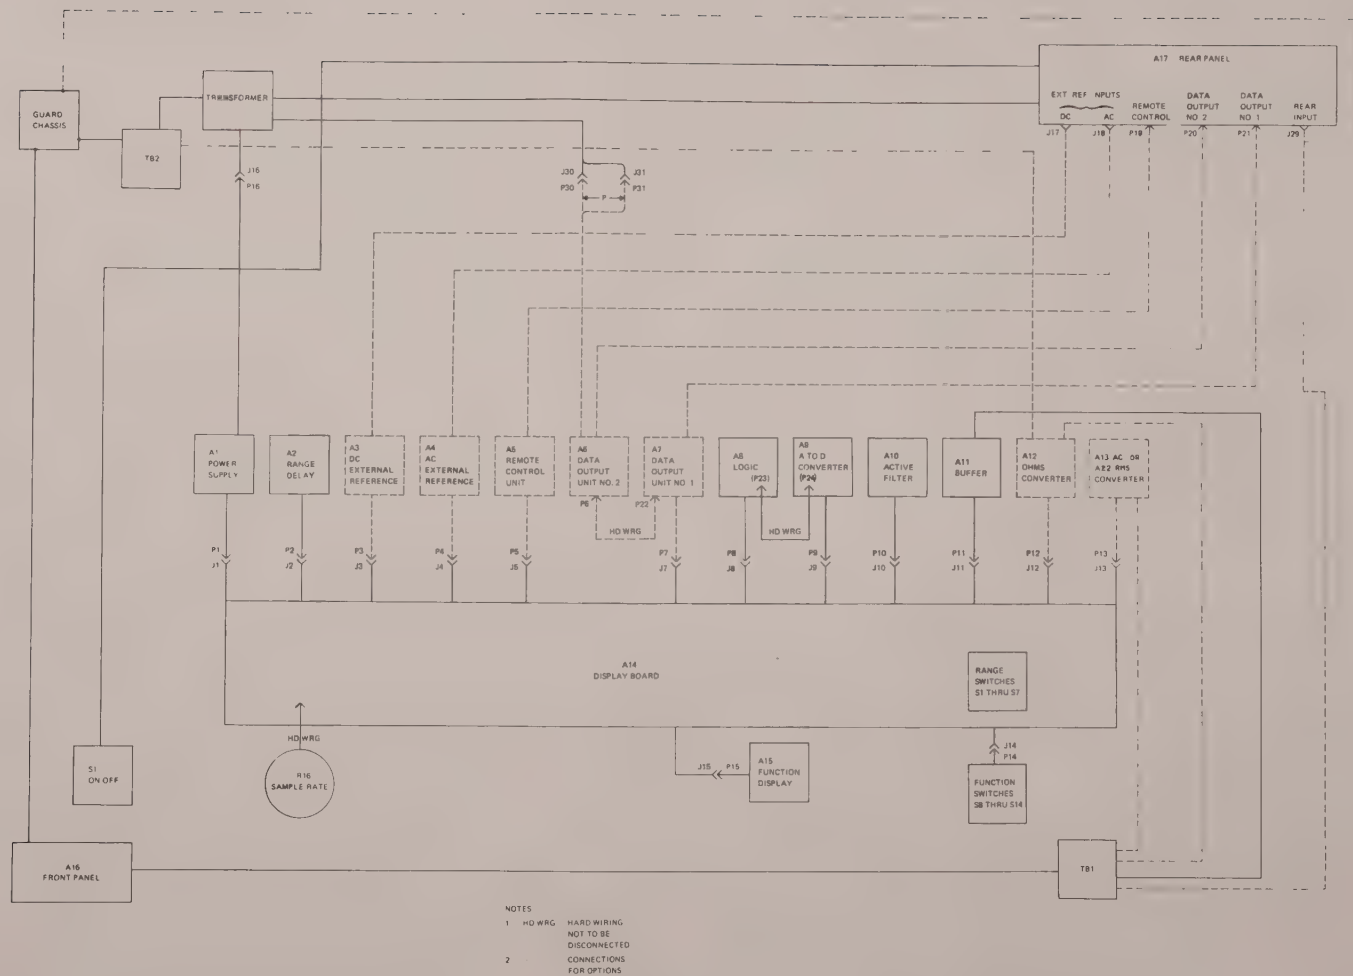



FIGURE 8-1 MODEL 8400A INTERCONNECT DIAGRAM (8400A-1100)

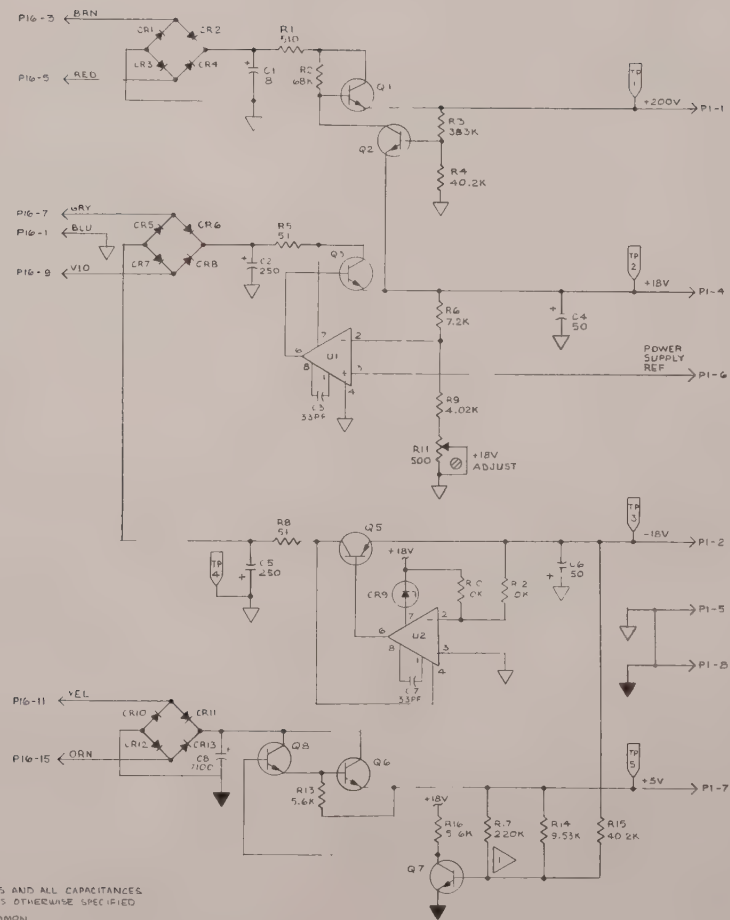

NOTES:

1. ALL RESISTANCES IN OHMS, AND ALL CAPACITANCES IN MICROFARADS, UNLESS OTHERWISE SPECIFIED
2.  DENOTES SIGNAL COMMON
3.  DENOTES LOGIC COMMON
4.  DENOTES INTERNAL ADJUSTMENT
5.  R17 MAY BE OMITTED DURING ADJUSTMENT OF 15V SUPPLY

FIGURE 8-3 A1 POWER SUPPLY PCB ASSEMBLY (8400A-1001)

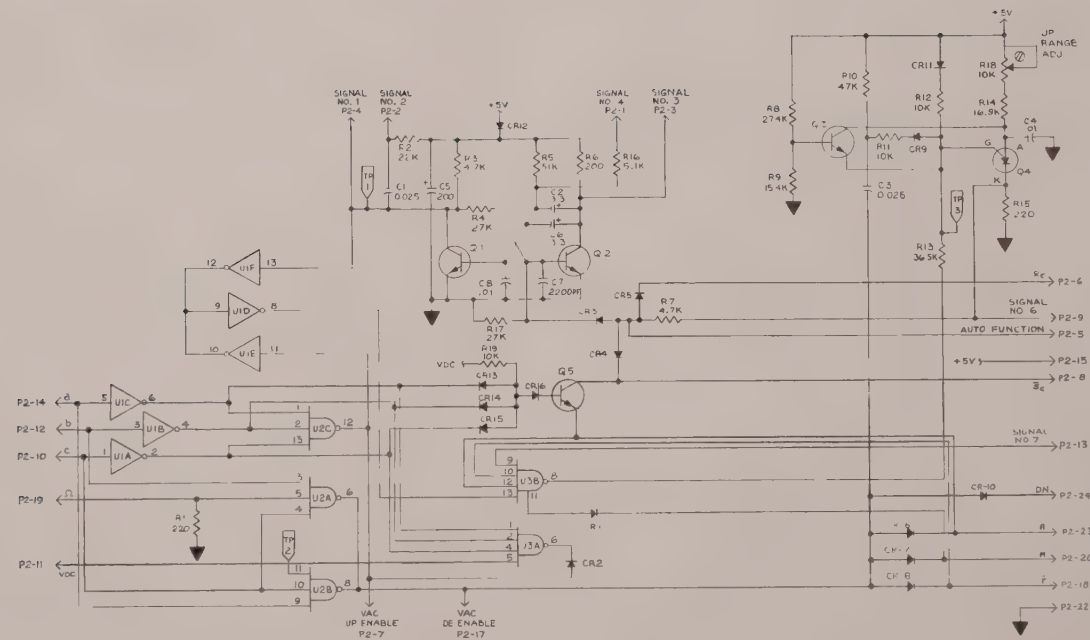


NOTES:

1. ALL RESISTANCES IN OHMS AND ALL CAPACITANCES IN MICROFARADS UNLESS OTHERWISE SPECIFIED.
2.  DENOTES LOGIC COMMON
3.  DENOTES INTERNAL ADJUSTMENT

PIN CONNECTIONS		
IC	15V	COMMON
U1	14	7
U2	14	7
U3	14	7

FIGURE 8-4 A2 RANGE DELAY PCB ASSEMBLY (8400A-1003)

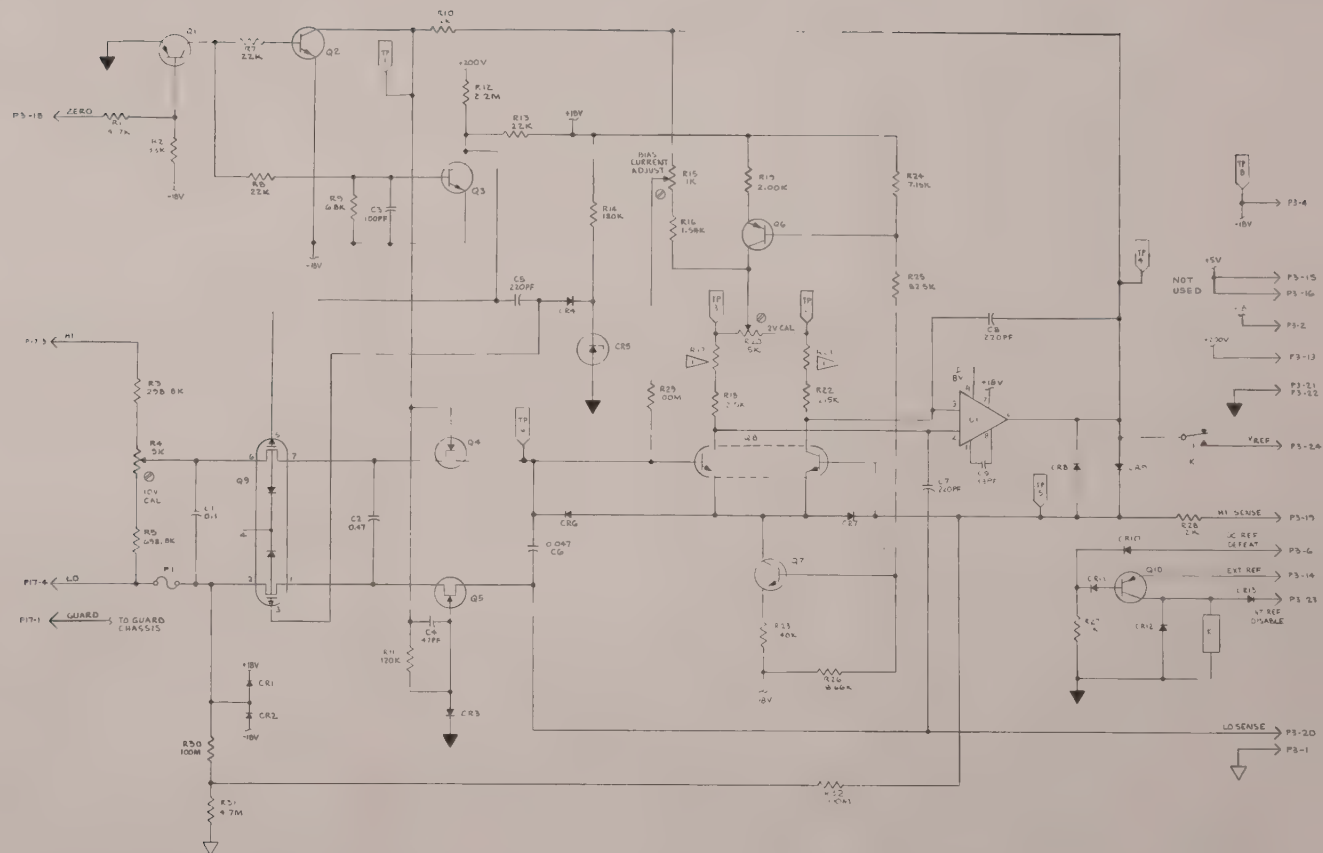

NOTES:

- 1 ALL RESISTANCES IN OHMS AND ALL CAPACITANCES IN MICROFARADS UNLESS OTHERWISE SPECIFIED
- 2 ∇ DENOTES SIGNAL COMMON
- 3 $\blacktriangledown$ DENOTES LOGIC COMMON
- 4 $\odot$ DENOTES INTERNAL ADJUSTMENT
- 5 $\triangleright$ DENOTES FACTORY SELECTED PART

FIGURE 8-5 A3 DC EXTERNAL REFERENCE CONVERTER PCB ASSEMBLY (8400A-1009)

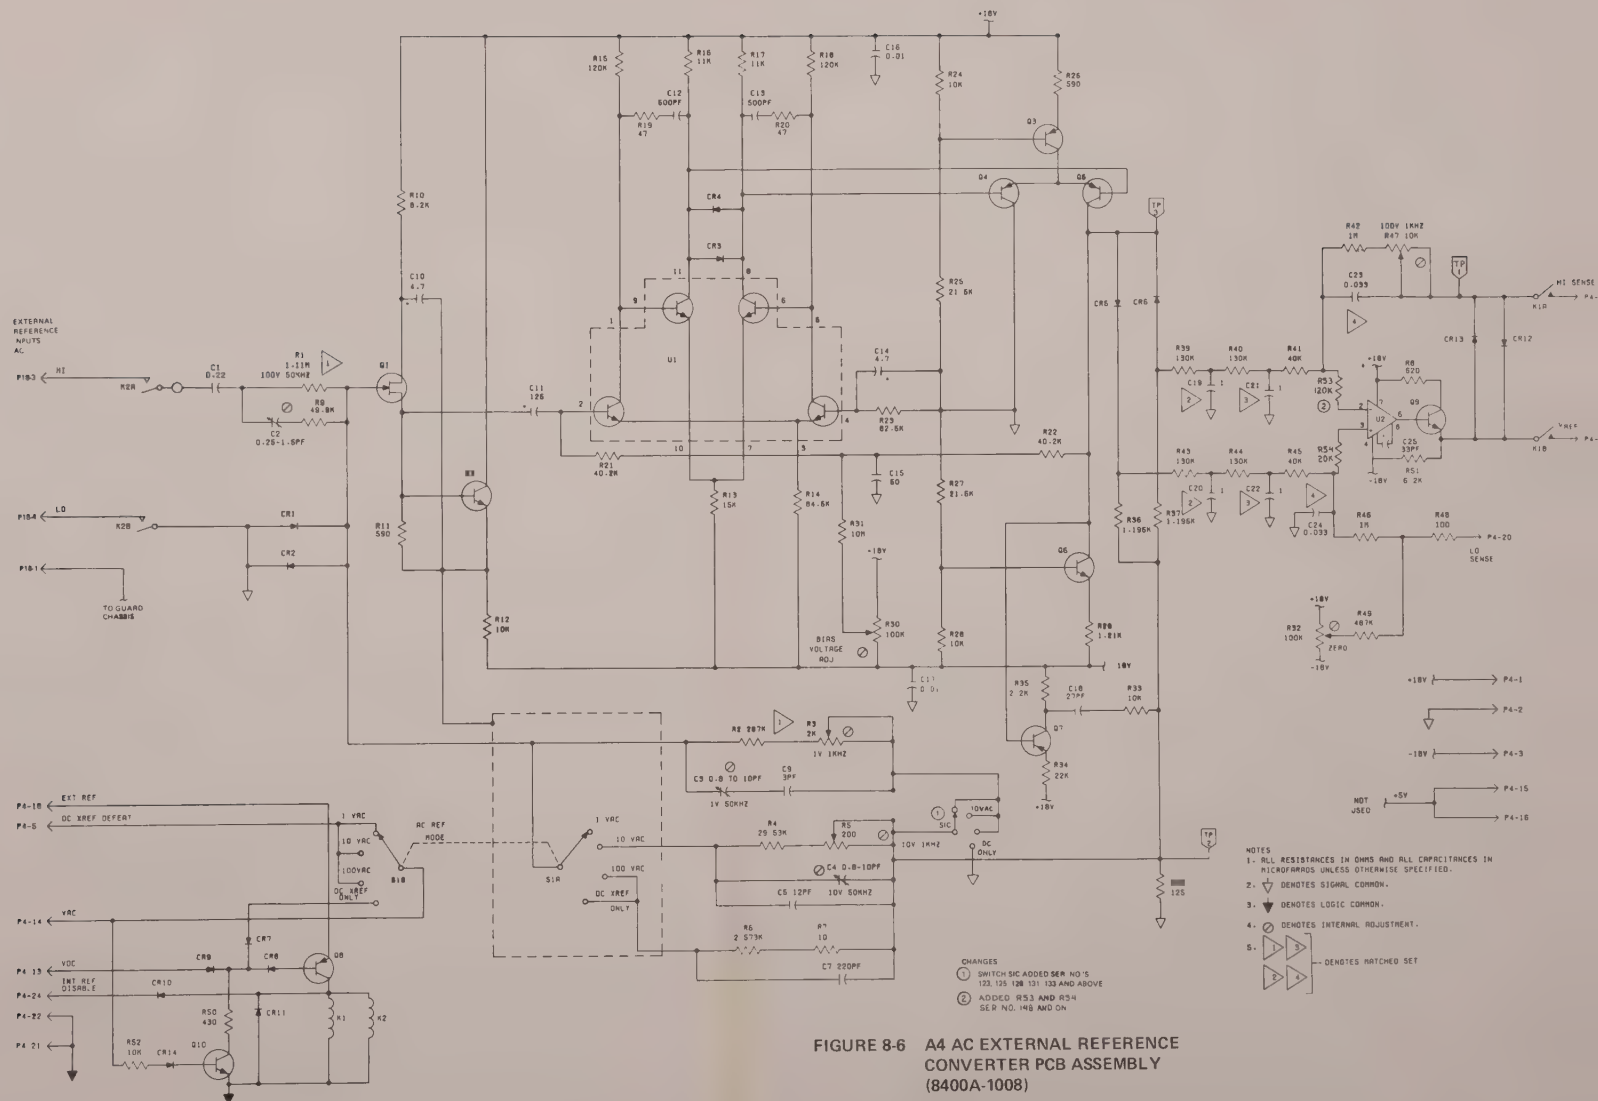


FIGURE 8-6 A4 AC EXTERNAL REFERENCE CONVERTER PCB ASSEMBLY (8400A-1008)

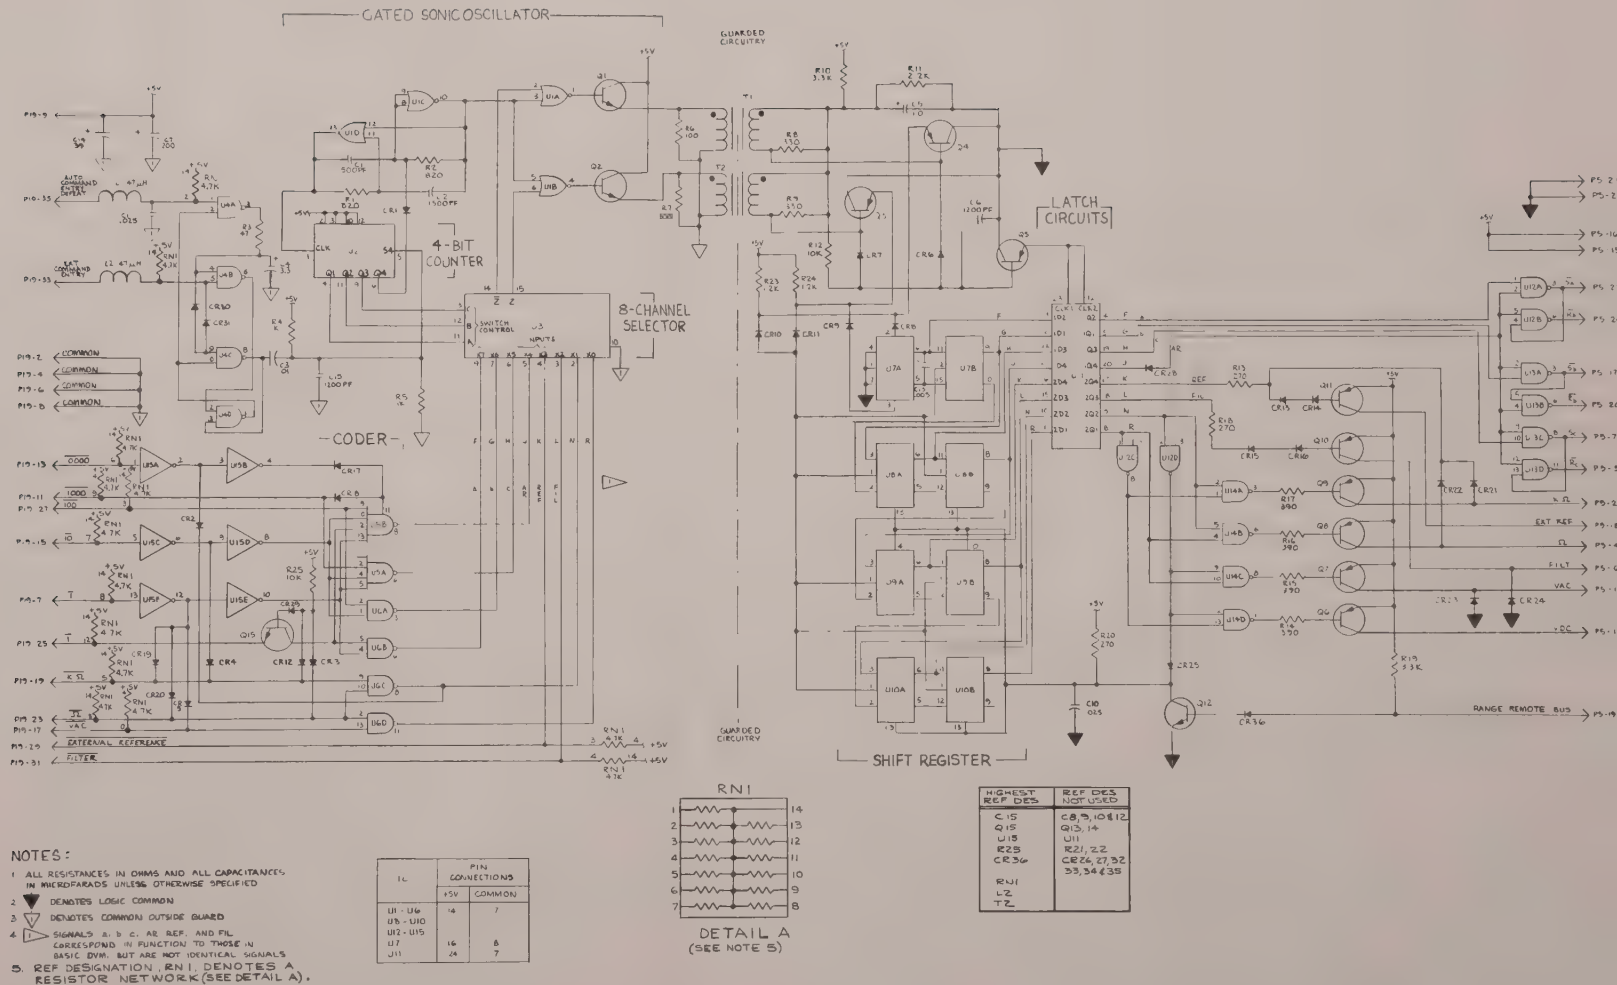


FIGURE 8-7 A5 REMOTE CONTROL UNIT PC3 ASSEMBLY (8400A-1011)

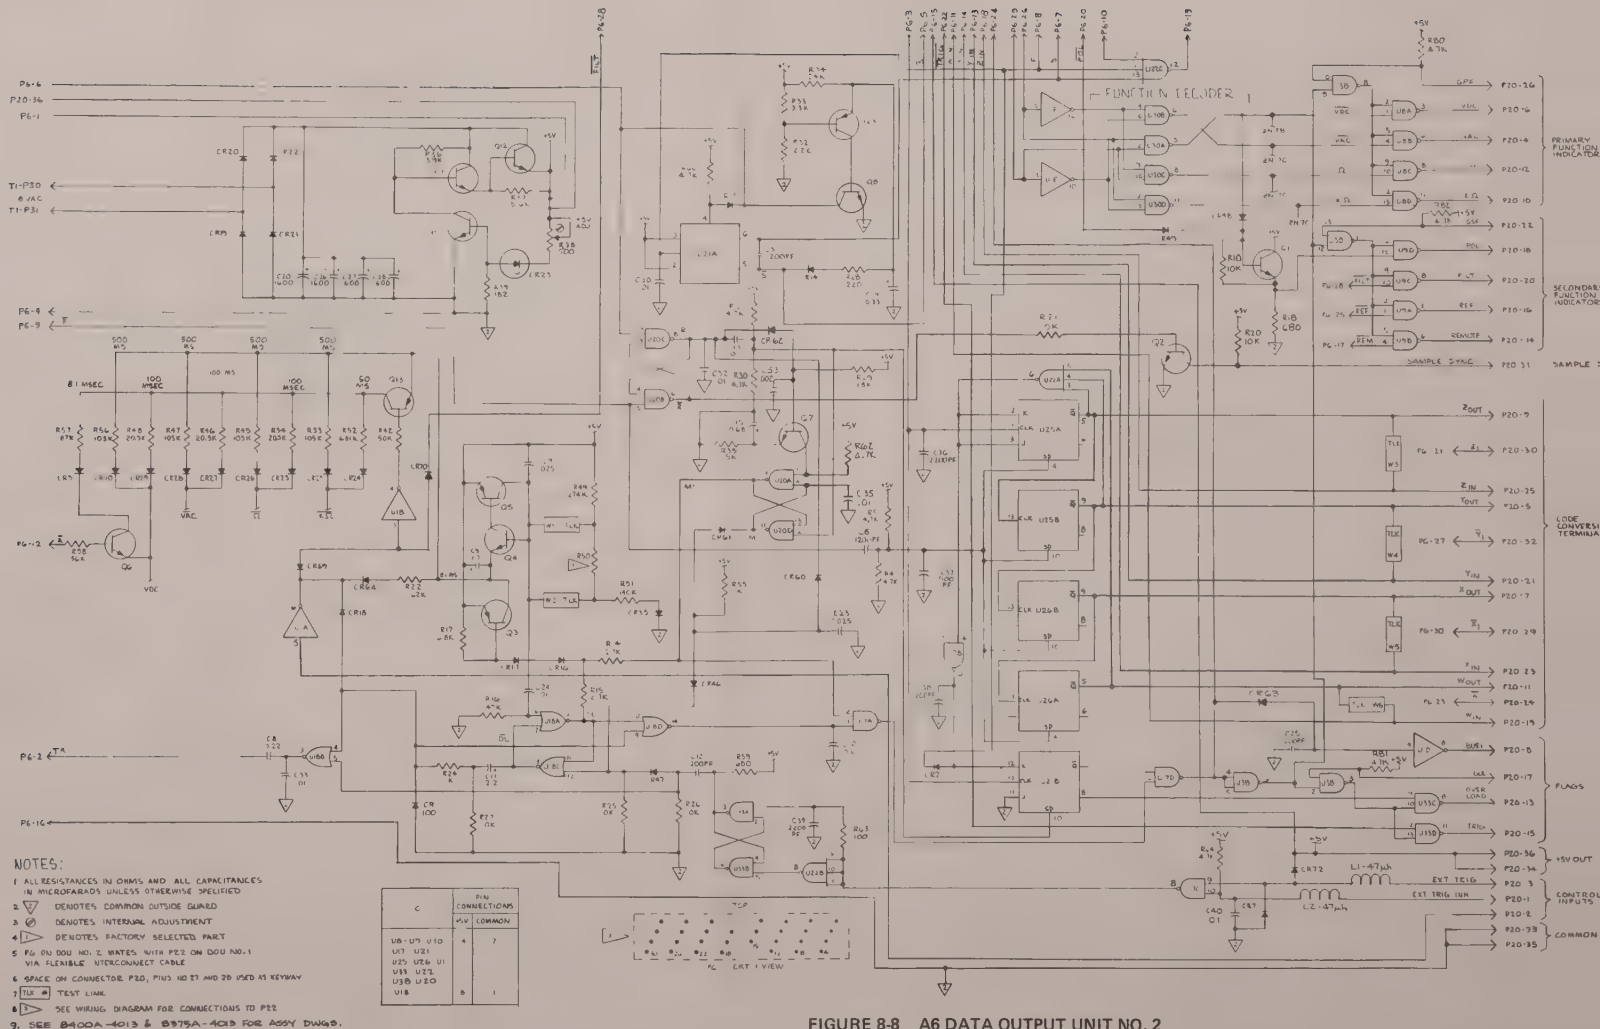
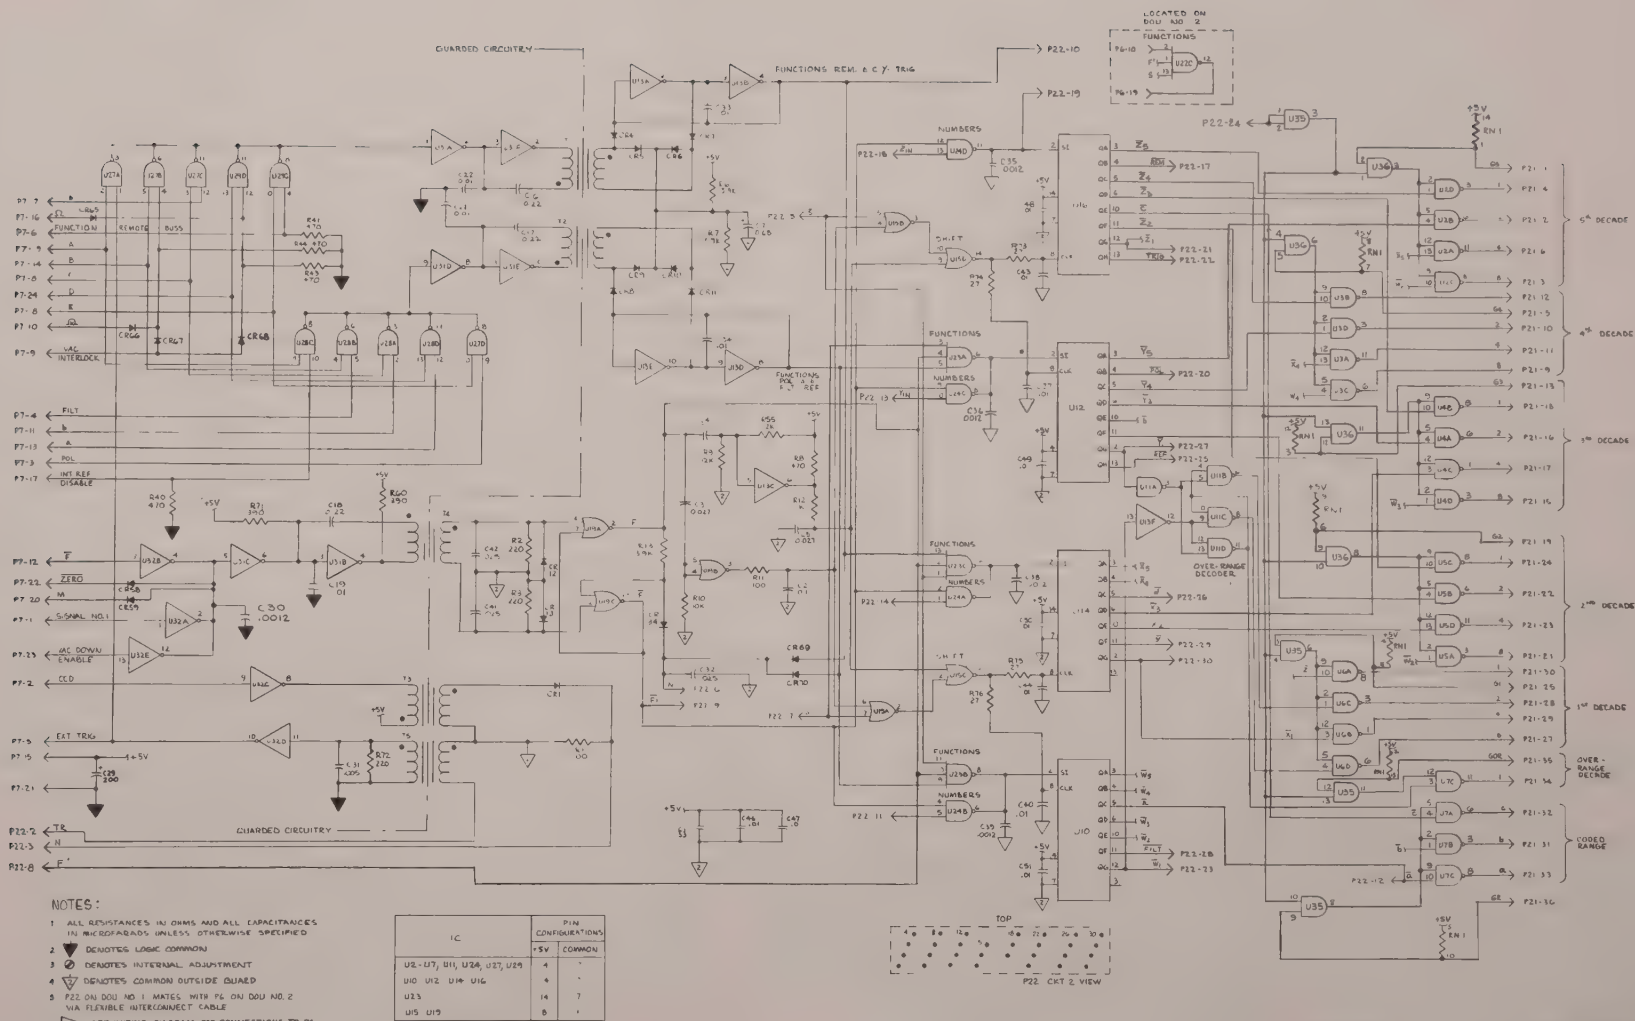


FIGURE 8-8 A6 DATA OUTPUT UNIT NO. 2
PCB ASSEMBLY (8400A-1013)



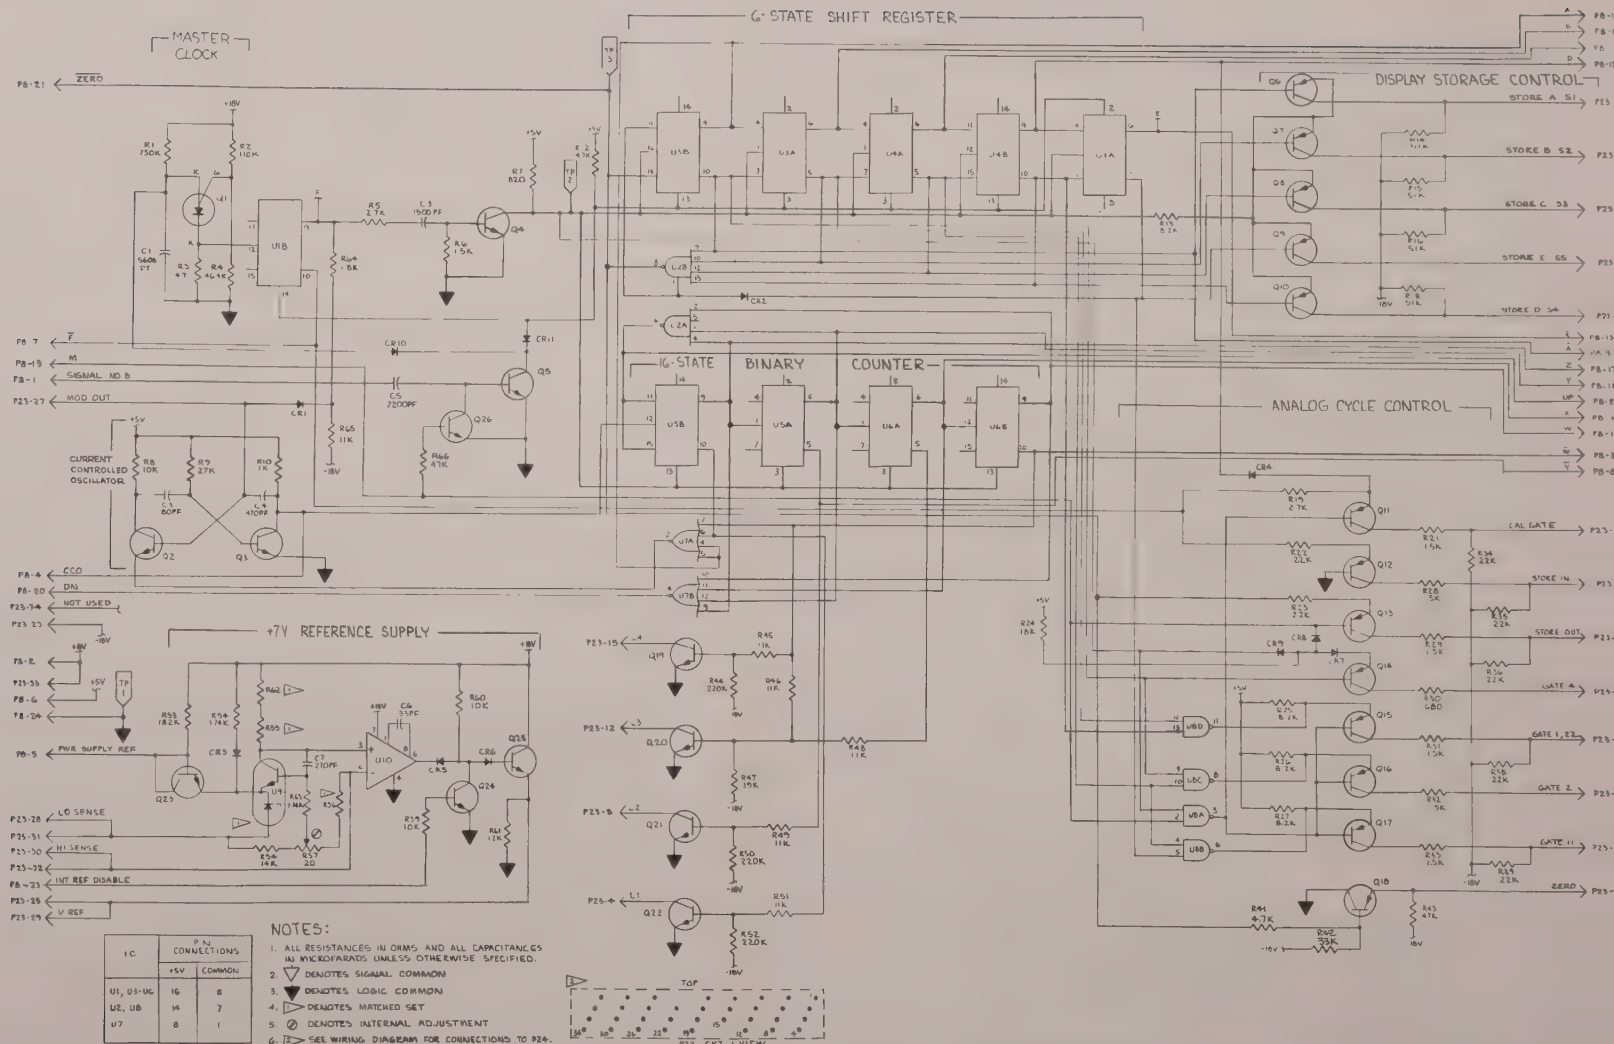


FIGURE 8-10 A8 LOGIC PCB ASSEMBLY
(8400A-1004)


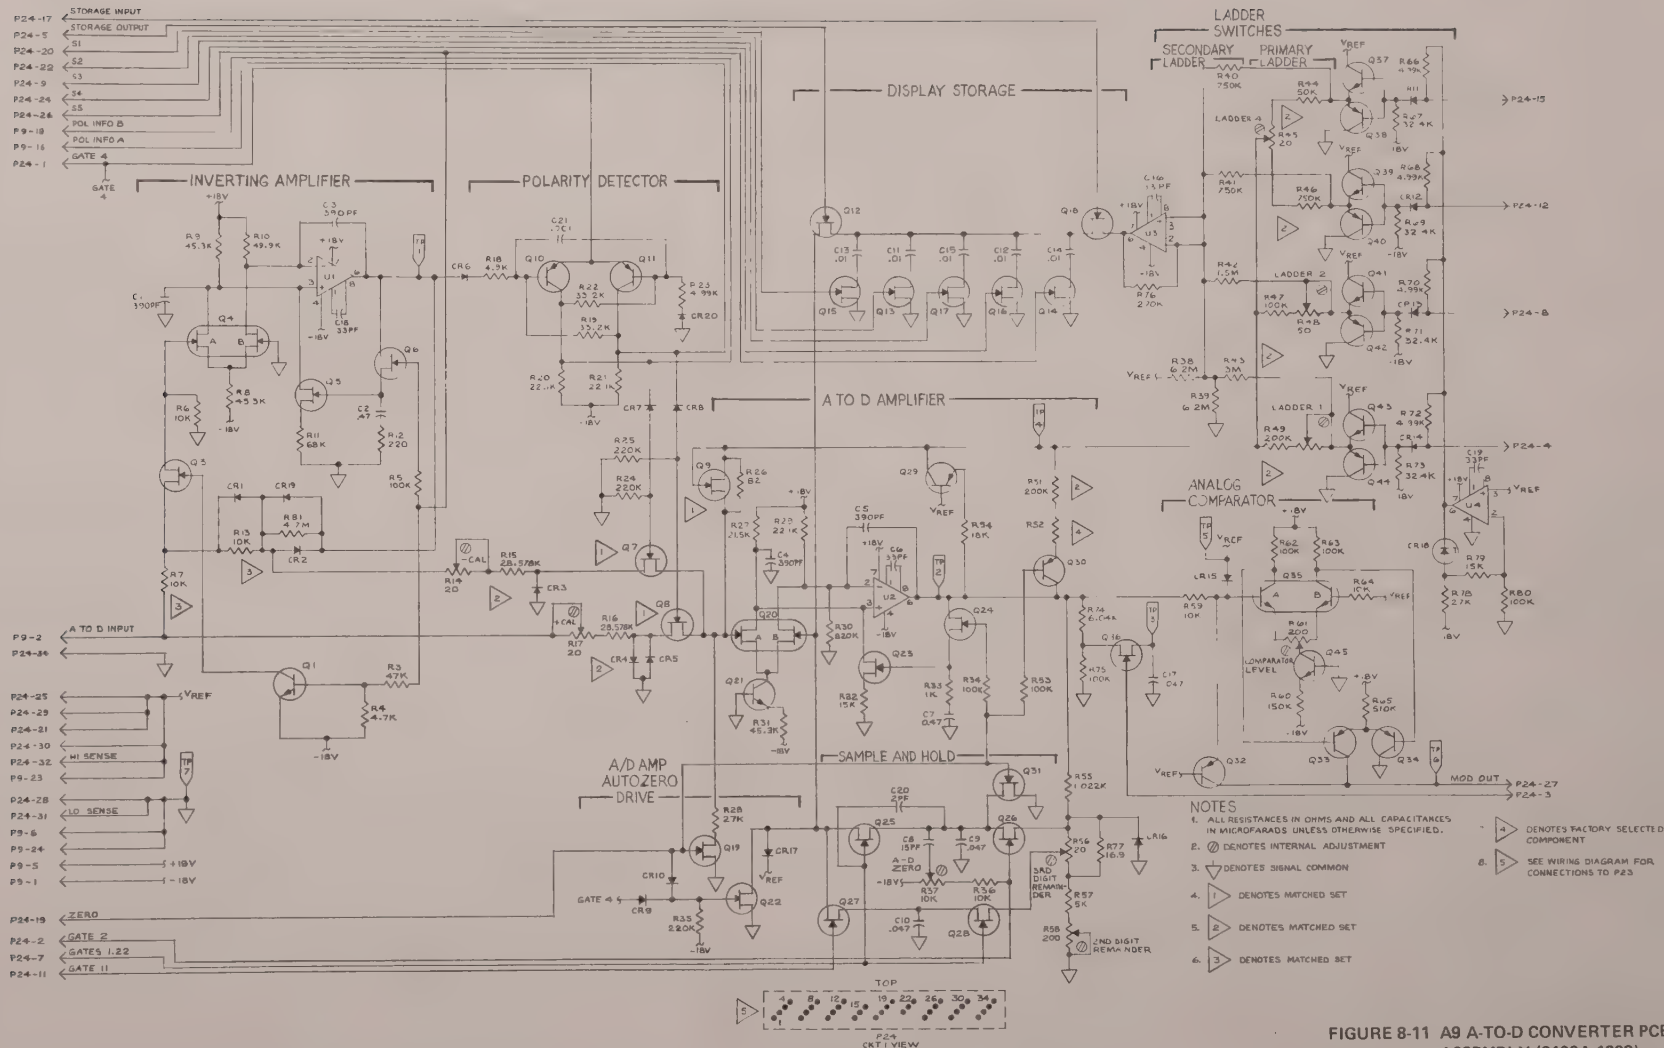


FIGURE 8-11 A9 A-T-O CONVERTER PCB ASSEMBLY (8400A-1003)

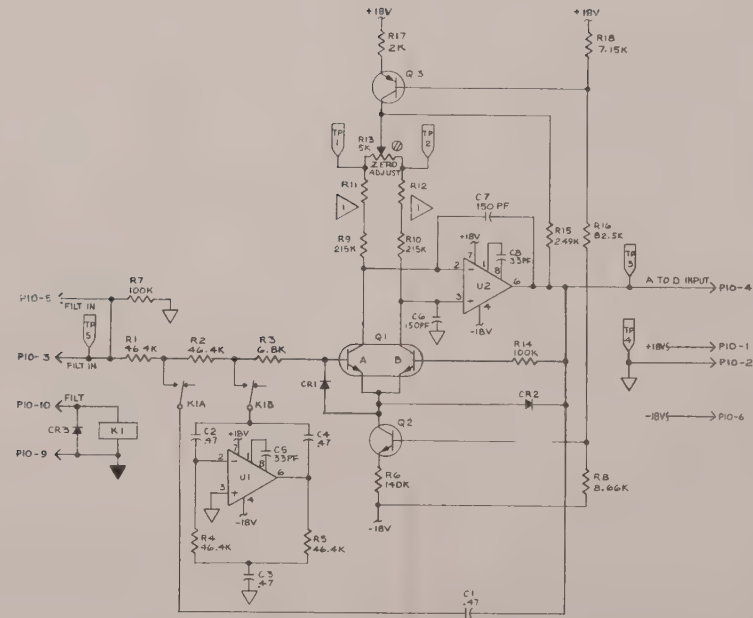


NOTES

1. ALL RESISTANCES IN OHMS AND ALL CAPACITANCES IN MICROFARADS UNLESS OTHERWISE SPECIFIED.
2. ∇ DENOTES COMMON.
3. $\blacktriangledown$ DENOTES LOGIC COMMON.
4. $\triangle$ FACTORY SELECTED
5. $\textcircled{A}$ DENOTES INTERNAL ADJUSTMENT

FIGURE 8-12 A10 ACTIVE FILTER PCB
ASSEMBLY (8400A-1013)



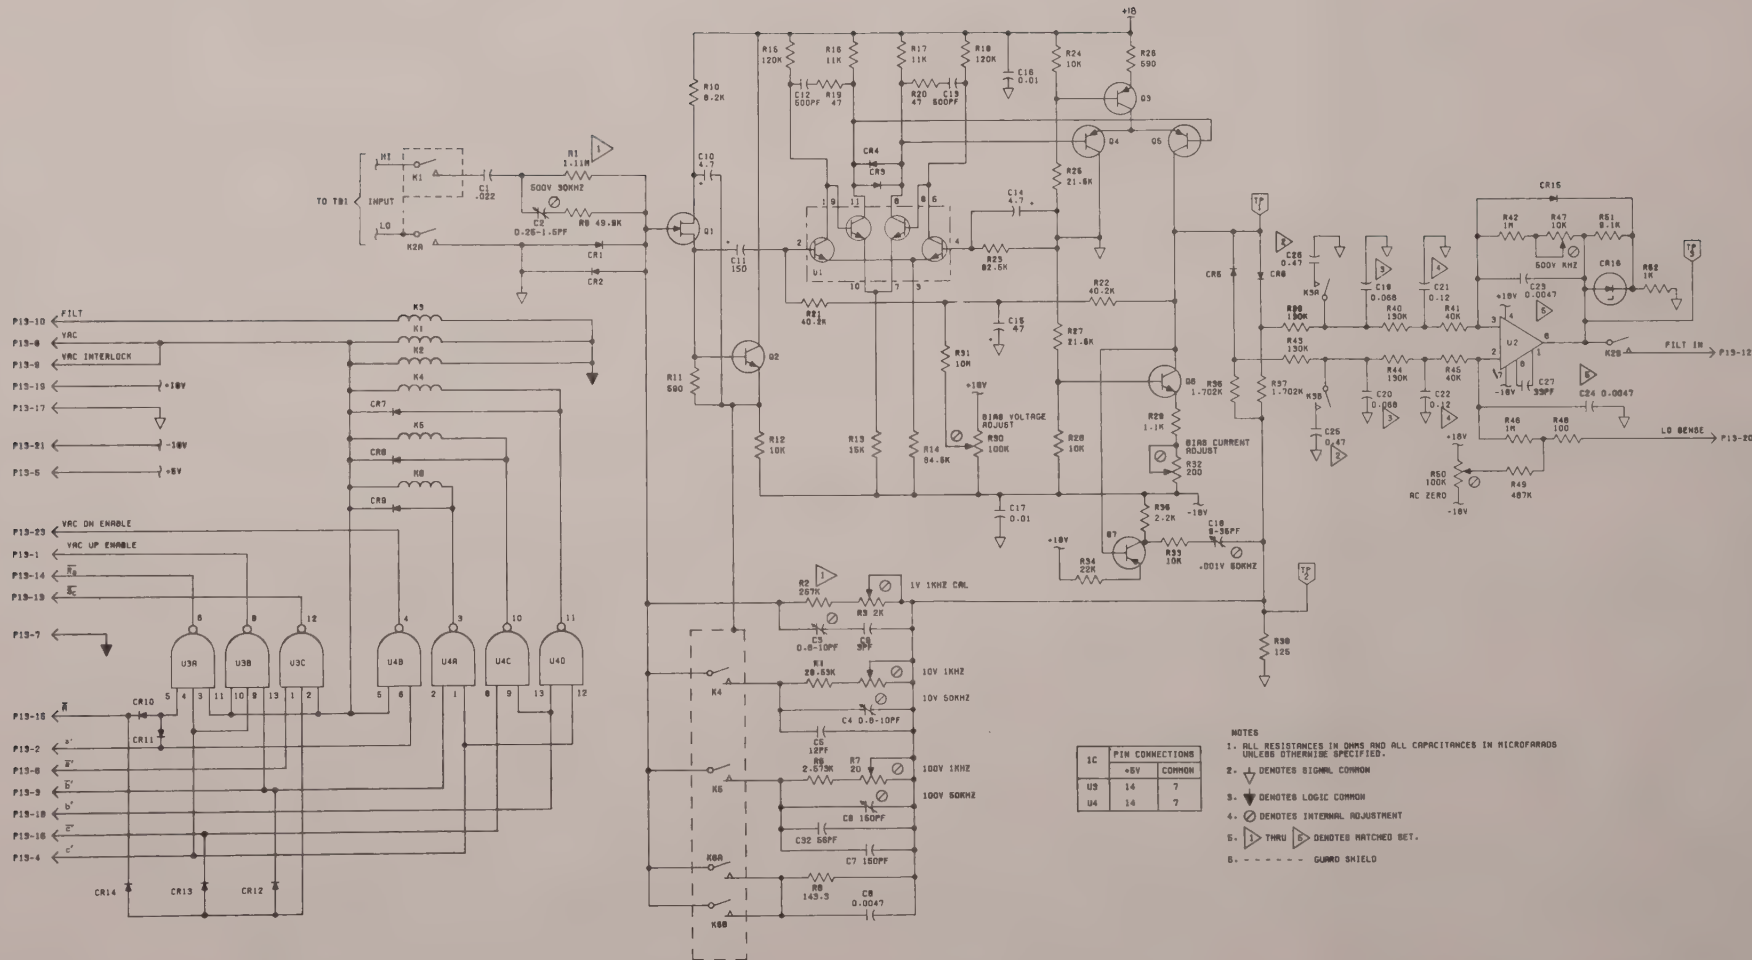

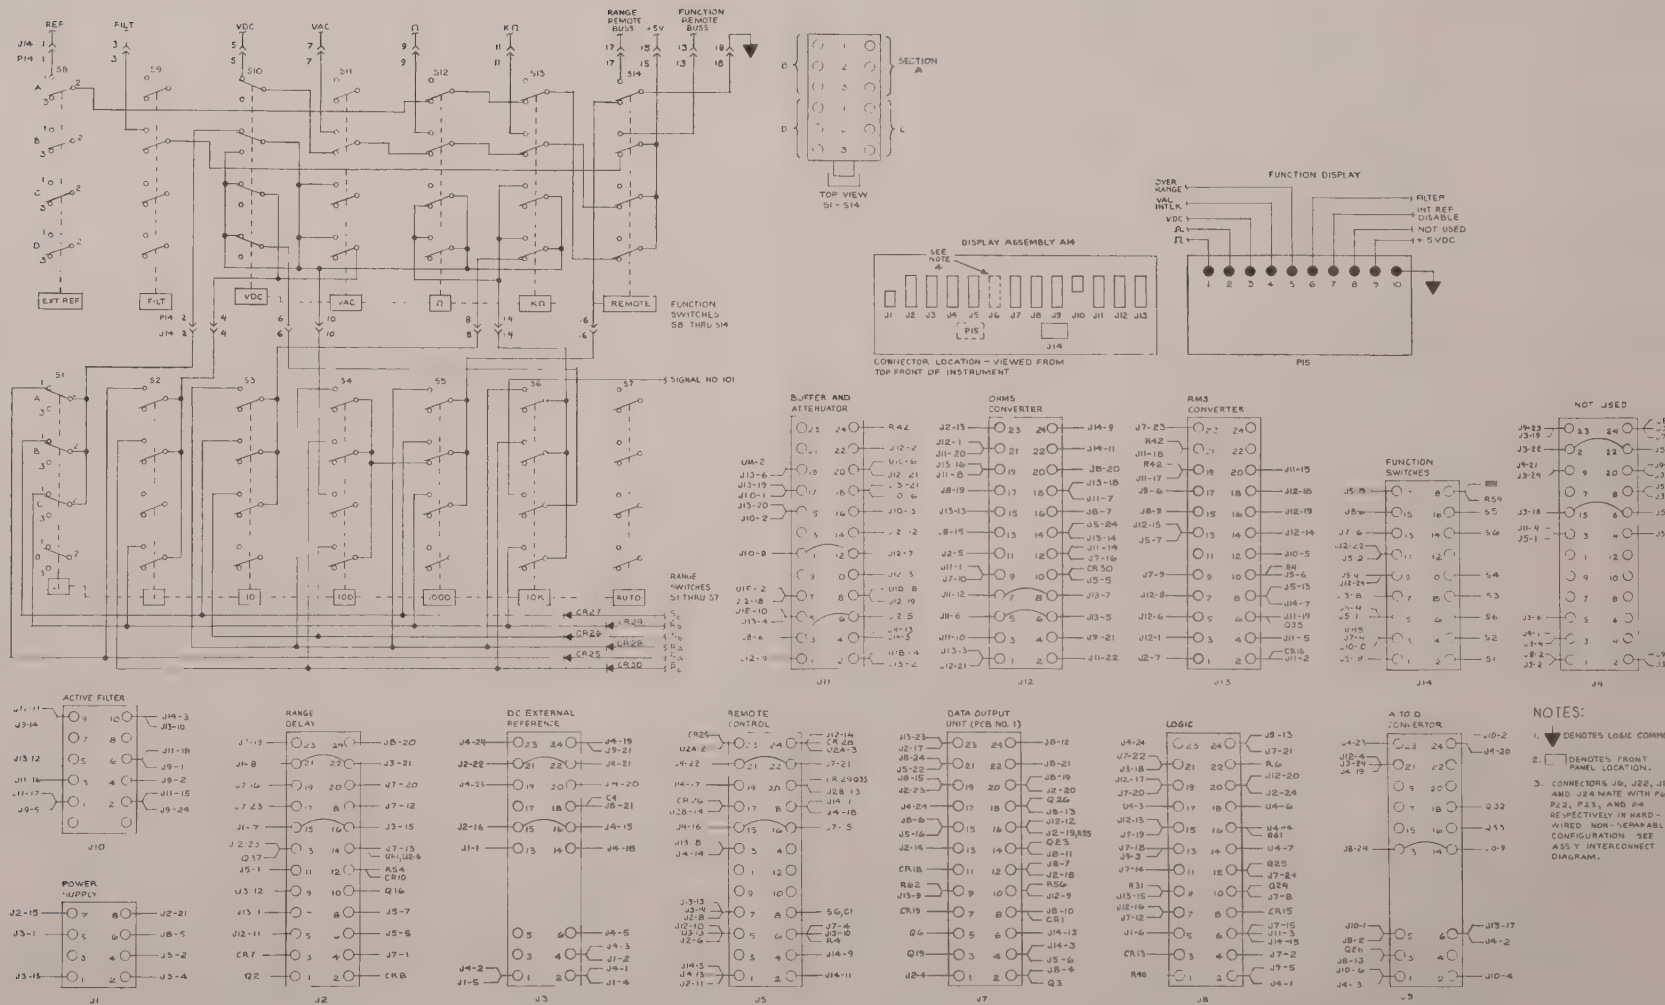


FIGURE 8-16 A14 DISPLAY PCB ASSEMBLY
SHEET 1 of 2 (8400A)

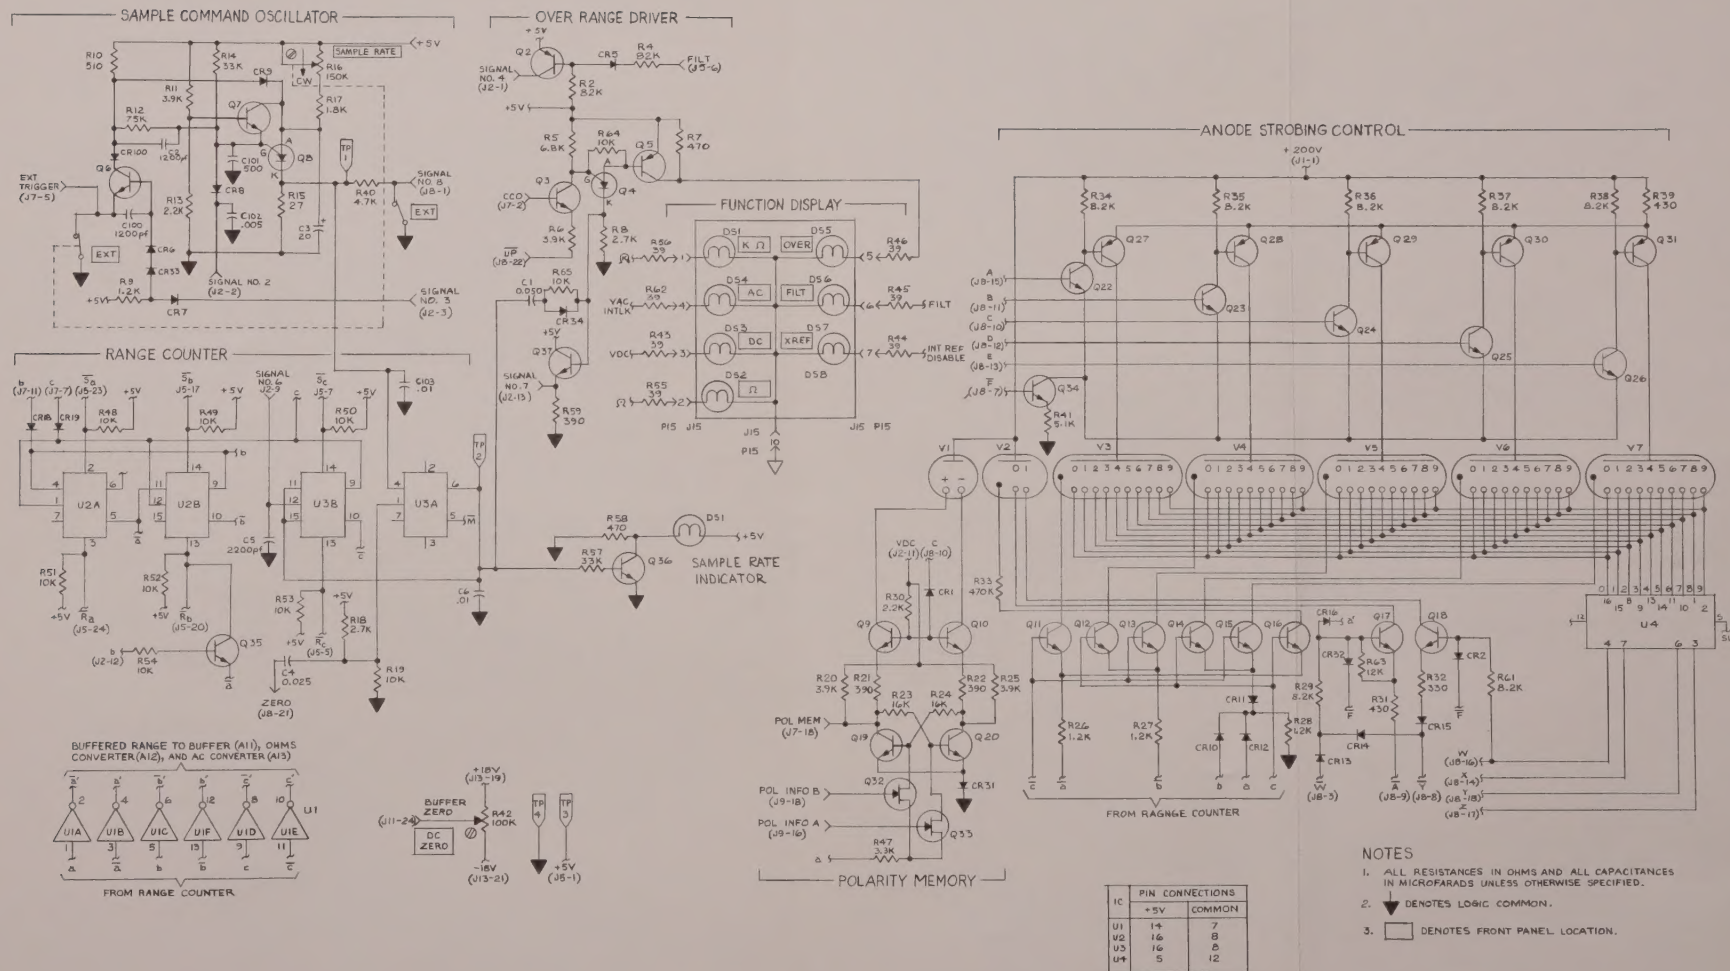


FIGURE 8-17 A14 DISPLAY PCB ASSEMBLY
SHEET 2 of 2 (800A)


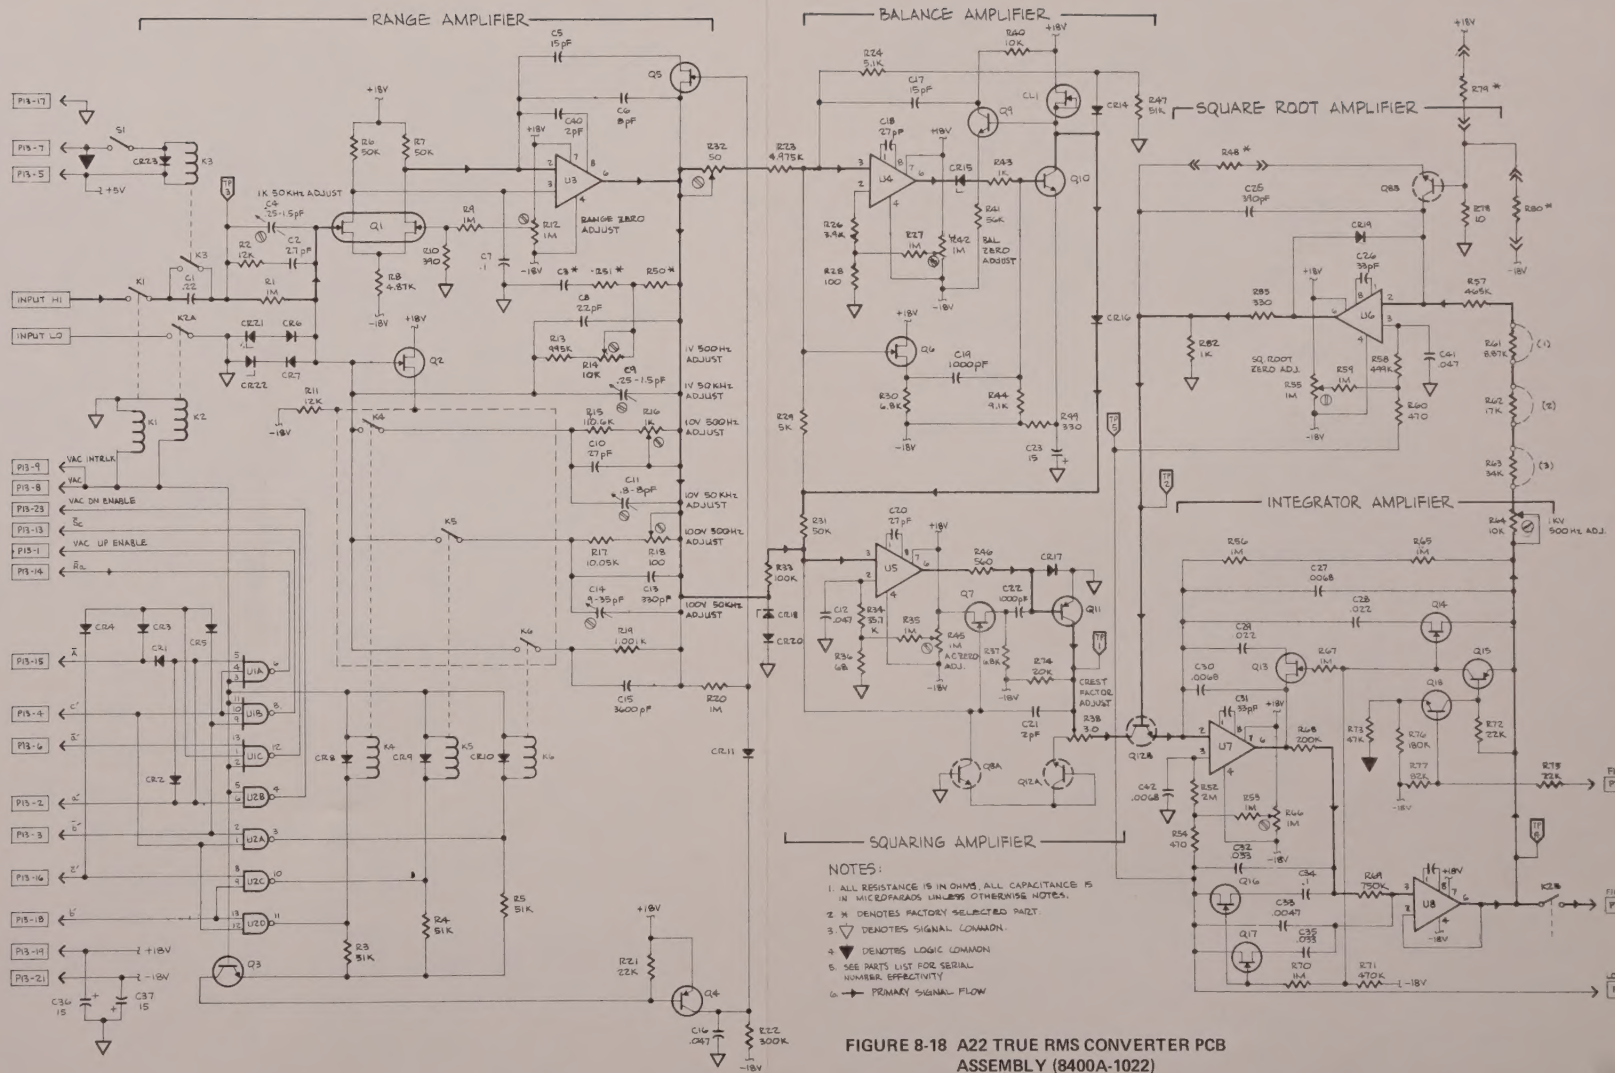


FIGURE 8-18 A22 TRUE RMS CONVERTER PCB ASSEMBLY (8400A-1022)



MP MASTER

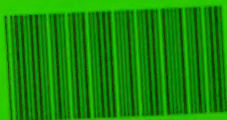

MA23152